

FC6A SERIES

MICROSmart

Communication Manual



SAFETY PRECAUTIONS


- Read the "FC6A Series MICROSmart Communication Manual" to ensure correct operation before starting installation, wiring, operation, maintenance, and inspection of the FC6A Series MICROSmart.
- All FC6A Series MICROSmart modules are manufactured under IDEC's rigorous quality control system, but users must add a backup or failsafe provision to the control system when using the FC6A Series MICROSmart in applications where heavy damage or personal injury may be caused, in case the FC6A Series MICROSmart should fail.
- Care should be taken such that unauthorized access to the FC6A Series MICROSmart does not come from outside network connections. Please note that the Company shall not be liable for any loss, damage or other expenses incurred directly or indirectly by unauthorized access, etc.
- In this manual, safety precautions are categorized in order of importance:

 **Warning** Warning notices are used to emphasize that improper operation may cause severe personal injury or death.

- The FC6A Series MICROSmart is not designed for use in applications requiring a high degree of reliability and safety. The FC6A Series MICROSmart should not be used for such applications.
- When using the FC6A Series MICROSmart in applications (not described above) that require a high degree of reliability in terms of functionality and precision, appropriate measures such as failsafe mechanisms and redundant mechanisms must be taken for the system containing the FC6A Series MICROSmart. The following are specific examples.
 - Emergency stop and interlocking circuits must be configured outside the FC6A Series MICROSmart.
 - If relays or transistors in the FC6A Series MICROSmart output circuits should fail, outputs may remain at on or off state. For output signals which may cause serious accidents, configure monitor circuits outside the FC6A Series MICROSmart.
 - The FC6A Series MICROSmart self-diagnostic function may detect internal circuit or program errors, stop programs, and turn outputs off. Configure circuits so that the system containing the FC6A Series MICROSmart is not jeopardized when outputs turn off.
- Turn off power to the FC6A Series MICROSmart before installation, removal, wiring, maintenance, and inspection of the FC6A Series MICROSmart. Failure to turn power off may cause damage, electrical shocks or fire hazard.
- Special expertise is required to install, wire, program, and operate the FC6A Series MICROSmart. People without such expertise must not use the FC6A Series MICROSmart.
- Install the FC6A Series MICROSmart according to the instructions described in the "FC6A Series MICROSmart User's Manual". Improper installation will result in falling, failure, or malfunction of the FC6A Series MICROSmart.

 **Caution** Caution notices are used where inattention might cause personal injury or damage to equipment.

- The FC6A Series MICROSmart is designed for installation in a cabinet. Do not install the FC6A Series MICROSmart outside a cabinet.
- Install the FC6A Series MICROSmart in environments described in the "FC6A Series MICROSmart User's Manual". If the FC6A Series MICROSmart is used in places where the FC6A Series MICROSmart is subjected to high-temperature, high-humidity, condensation, corrosive gases, excessive vibrations, or excessive shocks, then electrical shocks, fire hazard, or malfunction will result.
- The environment for using the FC6A Series MICROSmart is "Pollution degree 2." Use the FC6A Series MICROSmart in environments of pollution degree 2 (according to IEC 60664-1).
- Prevent the FC6A Series MICROSmart from falling while moving or transporting the FC6A Series MICROSmart, otherwise damage or malfunction of the FC6A Series MICROSmart will result.
- Wiring must use lead sizes that are appropriate for the applied voltage and current. Terminal screws must be tightened with the prescribed tightening torque.
- Prevent metal fragments and pieces of wire from dropping inside the FC6A Series MICROSmart housing. Put a cover on the FC6A Series MICROSmart modules during installation and wiring. Ingress of such fragments and chips may cause fire hazard, damage, or malfunction.
- Use a power supply of the rated value. Use of a wrong power supply may cause fire hazard.
- Use an IEC 60127-approved fuse on the power line outside the FC6A Series MICROSmart. This is required when equipment containing the FC6A Series MICROSmart is destined for Europe.
- Use an IEC 60127-approved fuse on the output circuit. This is required when equipment containing the FC6A Series MICROSmart is destined for Europe.
- Use an EU-approved circuit breaker. This is required when equipment containing the FC6A Series MICROSmart is destined for Europe.
- Make sure of safety before starting and stopping the FC6A Series MICROSmart or when operating the FC6A Series MICROSmart to force outputs on or off. Incorrect operation of the FC6A Series MICROSmart may cause machine damage or accidents.
- Do not connect the ground wire directly to the FC6A Series MICROSmart. Connect a protective ground to the cabinet containing the FC6A Series MICROSmart using an M4 or larger screw. This is required when equipment containing the FC6A Series MICROSmart is destined for Europe.
- Do not disassemble, repair, or modify the FC6A Series MICROSmart modules.
- The FC6A Series MICROSmart contains electronic parts and batteries. When disposing of the FC6A Series MICROSmart, do so in accordance with national and local regulations.

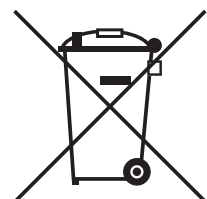

ABOUT THIS MANUAL

Thank you for purchasing the FC6A Series MICROSmart manufactured by IDEC Corporation. This document describes the FC6A Series MICROSmart system configuration, specifications, and installation methods, and it provides descriptions of the various functions. Read this manual to ensure the correct understanding of the entire functions of the FC6A Series MICROSmart. IDEC Corporation makes the latest product manual PDFs available on our website at no additional cost. Please download the latest product manual PDFs from our website. Product manual PDF download page (www.idec.com/FC6Amanuals)

This manual describes the powerful communications tools of the FC6A Series MICROSmart.

Chapter 1: General Information

General information about the FC6A Series MICROSmart with communication interfaces.

Chapter 2: Devices

Descriptions of the allocations of devices such as inputs, outputs, internal relays, registers, timers, and counters that are used in the basic and advanced instructions, as well as details about the allocations of special internal relays and special data registers for communication functions.

Chapter 3: Communication Settings

Functions for the FC6A Series MICROSmart communication, how to configure them, and examples of their use.

Chapter 4 through Chapter 8:

Various communication functions such as maintenance communication, user communication, Modbus communication, data link communication and J1939 communication.

Chapter 9: Bluetooth Communication

Description of the Bluetooth communication of the FC6A Series MICROSmart and how you can make the FC6A Series MICROSmart communicate with other devices with the Bluetooth communication.

Chapter 10: FTP Server/Client

Descriptions of the FTP server that enables you to get the files that are saved in the SD memory card inserted in the FC6A Series MICROSmart with an FTP client tool and the FTP client that enables the FC6A Series MICROSmart to transfer the files between the SD memory card and FTP servers.

Chapter 11: PING Instruction

Descriptions of the PING instruction that sends a ping packet to the specified remote host to check if communication is possible at the Internet Protocol (IP) layer.

Chapter 12: Send E-mail Function

Descriptions of the EMAIL instruction that sends preregistered e-mails.

Chapter 13: Web Server

Description of the Web server functions in the FC6A Series MICROSmart.

Chapter 14: Communication Monitor

Description of the communication monitor that enables you to monitor the communication between the FC6A Series MICROSmart and the connected devices.

Chapter 15: BACnet/IP

Description of the BACnet communication (BACnet/IP) functions in the FC6A Series MICROSmart.

Chapter 16: EtherNet/IP Communication

Description of the EtherNet/IP communication functions in the FC6A Series MICROSmart.

Chapter 17: MQTT Communication

Description of the MQTT communication functions in the FC6A Series MICROSmart.

Chapter 18: MC Protocol Communication

Description of the MC protocol communication functions in the FC6A Series MICROSmart.

Index

Alphabetical listing of key words.

Publication history

December 2015	First Edition
February 2016	Second Edition
April 2016	Third Edition
March 2017	Fourth Edition
August 2017	Fifth Edition
March 2018	Sixth Edition
June 2018	Seventh Edition
November 2018	Eighth Edition
May 2019	Ninth Edition
December 2019	Tenth Edition
April 2020	Eleventh Edition
July 2020	Twelfth Edition
December 2020	Thirteenth Edition
March 2021	Fourteenth Edition
July 2021	Fifteenth Edition
February 2022	Sixteenth Edition
September 2022	Seventeenth Edition

Caution

- All rights in this document belong to IDEC Corporation. It may not be reproduced, reprinted, sold, transferred or rented without our permission.
- The contents of this manual are subject to change without notice.
- Every effort has been made to ensure the content of the product, but if you find any suspicious points or mistakes, please contact the store where you purchased the product or our sales office or branch office.

Trademarks

- FC6A Series MICROSmart is a trademark of IDEC Corporation.
- MELSEC is a trademark of Mitsubishi Electric Corporation.

Regarding laws and compatible standards

This product adheres to the laws and compatible standards of all countries involved, as shown below.

European laws and standards

This product complies with the following EU directives.

- Low Voltage Directive
- EMC Directive
- RoHS Directive
- RE Directive (FC6A-PC4 only)

To comply with these directives, this product has been designed and evaluated on the basis of the following international and European standard.

- IEC/EN 61131-2: 2007
- EN50581:2012
- EN301 489-1 V2.1.1& EN301 489-17 V2.1.1 (FC6A-PC4 only)

For details on the compatible standards and EU Directives, contact the distributor from which you purchased this product or visit our web site.

North America laws and standards

This product complies with the following standards.

- UL508^{*1}
- UL61010-1^{*1}
- UL61010-2-201^{*1}
- CSA C22.2 No.142^{*1}
- CSA C22.2 No.61010-1^{*1}
- CSA C22.2 No.61010-2-201^{*1}
- ANSI/ISA 12.12.01
- CAN/CSA C22.2 No.213

*1 Certain FC6A Series MICROSmart models are not compatible. For details about applicable standards, please contact IDEC Corporation.

Chinese laws and standards

The FC6A-PC4 complies with the following certification.

- SRRC

Marine standards

This product has been certified by the following classification societies.
(Applications have been submitted for certain models.)

- ABS (American Bureau of Shipping)
- DNV GL (Det Norske Veritas Germanischer Lloyd)
- LR (Lloyd's Register)
- NK (Nippon Kaiji Kyokai)

* This product has not been certified for use on the bridge or deck.

For details on applicable standards and EU directives, please contact the dealer where purchased or check the IDEC website.

IMPORTANT INFORMATION

Under no circumstances shall IDEC Corporation be held liable or responsible for indirect or consequential damages resulting from the use of or the application of IDEC PLC components, individually or in combination with other equipment.

All persons using these components must be willing to accept responsibility for choosing the correct component to suit their application and for choosing an application appropriate for the component, individually or in combination with other equipment.

All diagrams and examples in this manual are for illustrative purposes only. In no way does including these diagrams and examples in this manual constitute a guarantee as to their suitability for any specific application. To test and approve all programs, prior to installation, is the responsibility of the end user.

ABOUT THE WARRANTY OF THE PRODUCTS

1. Warranty Period

The Products are warranted for 3 years from the date of purchase, or from the date of delivery completion.

* Consumable/maintenance parts such as batteries and relays if the operation exceeds 100,000 times are excluded from the 3-year warranty.

2. Extent of Warranty

IDEC CORPORATION is responsible for failures or defects of the Products during the above warranty period, either a replacement part will be provided or the defective parts of the Products will be repaired free of charge. If such failure or defects should occur, please offer them to the distributor, dealer or IDEC CORPORATION with the materials in which the date of purchase is specified.

* The expenses for installation and construction at the time of repair will not be borne.

3. Indemnification

IDEC CORPORATION will not be liable under this Warranty and be indemnified and held harmless from any and all demands, suits, expenses, claims, damages and liabilities in the following event that:

- 1) The Products are used or operated beyond the conditions or environment range as described in catalog, specifications or instruction; or
- 2) The failure or defects of the Products arise from the cause other than the Products; or
- 3) The Products are improved, modified or altered by the party other than IDEC; or
- 4) The failure or defects and damages of the Products arise from the usage of the Product in the way that is not intended; or
- 5) The failure or defects and damages of the Products arise from the cause beyond IDEC's control including, but not limited to, fire, earthquake, flood, lightning, other natural disasters, and acts of God; or
- 6) The failure or defects and damages of the Products arise from the relocation, transportation or drop after you purchase the Products; or
- 7) The failure or defects and damages of the Products arise from improper installation; or
- 8) Maintenance and inspection are not carried out in accordance with instruction.

* Customers assume their own risk in programming products, Company will not be held liable for damages as a result of improper programming.

IDEC CORPORATION DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR USE OR PURPOSE, AS WELL AS LIABILITY FOR INCIDENTAL, SPECIAL, INDIRECT, CONSEQUENTIAL OR OTHER DAMAGES RELATING TO THE PRODUCTS

4. Extent of Service

The price of the Products will not include the fee for any service such as sending technicians and engineers, IDEC CORPORATION will charge you the fee for the following:

- 1) Instruction for installment and visiting for test operation, including, but not limited to creating application software and operation tests; and
- 2) Maintenance and inspection, arrangement and repair; and
- 3) Technical assistance and technical education; and
- 4) Product test and inspection based on you request.

RELATED MANUALS

The following manuals related to the FC6A Series MICROSmart are available. Refer to them in conjunction with this manual.

Type No.	Manual Name	Description
FC9Y-B1722	FC6A Series MICROSmart User's Manual	Describes product specifications, installation and wiring instructions, instructions for basic programming operations and special functions, device and instruction lists, and troubleshooting procedures for the FC6A Series MICROSmart.
FC9Y-B1726	FC6A Series MICROSmart Ladder Programming Manual	Describes basic operations for programming with ladders on the FC6A Series MICROSmart, monitoring methods, device and instruction lists, and details of each instruction.
FC9Y-B1730	FC6A Series MICROSmart Communication Manual (this manual)	Describes specifications related to FC6A Series MICROSmart communication, descriptions of functions, configuration methods, and usage examples.
FC9Y-B1734	FC6A Series MICROSmart PID Module User's Manual	Describes PID module specifications and functions.
WindLDR Help		Describes usage instructions for WindLDR, programming software for the FC6A Series MICROSmart.


NAMES AND ABBREVIATIONS USED IN THIS MANUAL

Model Names

Name Used in This Manual		Type Number, Part Code, or Official Name		
FC6A Series MICROSmart		FC6A Series MICROSmart		
CPU module	All-in-One CPU module		FC6A-C****E	
	CAN J1939 All-in-One CPU module		FC6A-C40***EJ	
	Plus CPU module		FC6A-D****CEE	
	16-I/O type		FC6A-C16****	
	24-I/O type		FC6A-C24****	
	40-I/O type		FC6A-C40****	
	Plus 16-I/O type		FC6A-D16****	
	Plus 32-I/O type		FC6A-D32****	
	AC power type		FC6A-C****AE, FC6A-C****AEJ	
	DC power type	24V DC power type	FC6A-C****CE, FC6A-C****CEJ, FC6A-D****CEE	
		12V DC power type	FC6A-C****DE, FC6A-C****DEJ	
	Relay output type		FC6A-C**R**E, FC6A-C**R**E*	
	Transistor output type	Transistor sink output type	FC6A-C**K**E, FC6A-C**K**E*, FC6A-D**K**CEE	
Transistor protection source output type		FC6A-C**P**E, FC6A-C**P**E*, FC6A-D**P**CEE		
Expansion module	I/O module	Digital I/O module	Screw fastened type / push-in type	Digital input module, digital output module, digital mixed I/O module
		Analog I/O module	Screw fastened type / push-in type	Analog input module, analog output module, mixed analog I/O module
	Communication module		Screw fastened type / push-in type	Serial communication module
		Screw fastened type / push-in type	PID module	
Expansion interface module		Screw fastened type / push-in type	Expander, remote master, remote slave	
Cartridge	I/O cartridge	Digital I/O cartridge		Digital input cartridge, digital output cartridge
		Analog I/O cartridge		Analog input cartridge, analog output cartridge
	Communication cartridge		RS232C communication cartridge, RS485 communication cartridge, Bluetooth communication cartridge	
WindLDR		WindLDR application software		
USB cable		USB maintenance cable (HG9Z-XCM42), USB-mini B port extension cable (HG9Z-XCE21)		

CPU module

FC6A - C 40 R 1 A E J

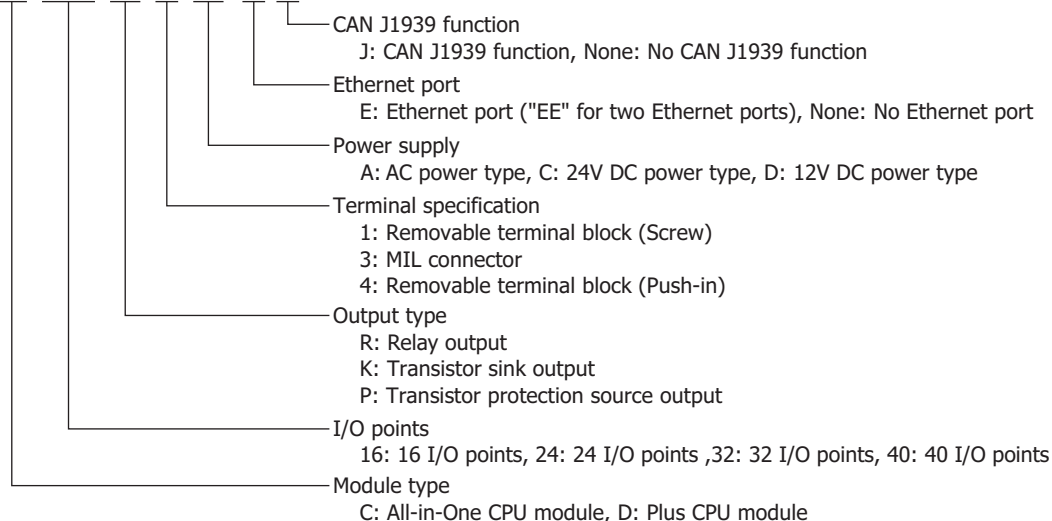

Name Used in this Manual	WindLDR Operating Procedure
Function area settings	Configuration tab > Function Area Settings group
Monitors	Select Online > Monitor > Start Monitor .
PLC status	Select Online > PLC > Status .
Communication settings	Select Online > Communication > Set Up .
Modbus master request table	On the Configuration tab, in Function Area Settings , click Communication Ports , and in the displayed Function Area Settings dialog box, for Communication Mode under Communication Ports , select Modbus RTU Master or Modbus TCP Client
Application button	The button displayed on the left side of the menu bar. Click to display the menu with New , Save , and Save As , recent projects, WindLDR Options , and Exit WindLDR .

TABLE OF CONTENTS

	Safety Precautions.....	Preface-1
	About This Manual.....	Preface-2
	About the Warranty of the Products.....	Preface-5
	Related Manuals.....	Preface-6
	Names and Abbreviations Used in this Manual.....	Preface-7
CHAPTER 1:	General Information	
	Description	1-1
	Communication Functions Overview.....	1-9
	Maintenance Communication.....	1-9
	User Communication.....	1-10
	Modbus Communication.....	1-11
	Data Link Communication	1-11
	MC Protocol Communication.....	1-12
	BACnet Communication.....	1-12
	EtherNet/IP communication.....	1-13
	MQTT Communication	1-14
	J1939 Communication.....	1-14
CHAPTER 2:	Devices	
	Device Addresses	2-1
	Special Internal Relay	2-4
	Special Data Register.....	2-17
CHAPTER 3:	Communication Settings	
	Setting List	3-1
	Communication Port Settings.....	3-2
	Network Settings.....	3-3
	Network Management.....	3-11
	Connection Settings.....	3-14
	Remote Host List.....	3-21
CHAPTER 4:	Maintenance Communication	
	Maintenance Communication via USB Port.....	4-3
	Maintenance Communication via Port 1.....	4-4
	Maintenance Communication via Port 1 (Bluetooth)	4-6
	Maintenance Communication via Ethernet Port 1 and 2	4-7
	Maintenance Communication via Port 2 to 33	4-12
	Maintenance Communication via Port 1 to 3 (Bluetooth).....	4-15
	Maintenance Communication via HMI-Ethernet port	4-16
CHAPTER 5:	User Communication Instructions	
	TXD (Transmit)	5-2
	RXD (Receive).....	5-10
	ETXD (User Communication Transmit over Ethernet)	5-23
	ERXD (User Communication Receive over Ethernet).....	5-23
	User Communication via Serial Communication.....	5-24
	User Communication via Serial Communication (Bluetooth)	5-39
	User Communication via Ethernet Communication	5-40
	User Communication Error	5-52
	ASCII Character Code Table.....	5-53
	Sample Program – User Communication TXD.....	5-54
	Sample Program – User Communication RXD	5-56
CHAPTER 6:	Modbus Communication	
	Overview	6-1
	Modbus RTU Communication via RS232C/RS485.....	6-2
	Modbus RTU Master Communication.....	6-3
	Modbus RTU Slave Communication.....	6-9
	Communication Format.....	6-15
	Modbus TCP Communication via Ethernet Communication	6-21
	Modbus TCP Client	6-22

TABLE OF CONTENTS

	Modbus TCP Server.....	6-27
	Modbus RTU Pass-Through Function	6-31
CHAPTER 7:	Data Link Communication	
	Data Link System Setup	7-3
	Data Link with Other PLCs	7-11
CHAPTER 8:	J1939 Communication	
	Overview of J1939 Communication over CAN	8-1
	J1939 Communication Settings	8-7
CHAPTER 9:	Bluetooth Communication	
	Overview.....	9-1
	Configuring the Bluetooth Communication Cartridge	9-3
	Configuring and Communicating with Bluetooth Devices	9-8
CHAPTER 10:	FTP Server/Client	
	FTP Server	10-1
	FTP Client.....	10-8
CHAPTER 11:	Send PING Function	
	PING (Ping).....	11-1
CHAPTER 12:	Send E-mail Function	
	Overview.....	12-1
	EMAIL Instruction (Send E-mail)	12-1
	E-mail Address Book	12-11
	E-mail Editor.....	12-13
	Attached File Editor.....	12-16
	Attach Log Data.....	12-19
CHAPTER 13:	Web Server	
	Overview.....	13-1
	Supported Models and Communication Ports.....	13-1
	Operating Environment	13-2
	Standard Specifications	13-3
	Plus CPU Module Web Server.....	13-5
	Batch setting of certificate and private key wizard	13-11
	Import of the Certification Authority's root certificate.....	13-18
	HMI Module Web Server.....	13-22
	User Account Settings	13-26
	System Web Page.....	13-29
	User Web Pages	13-33
	Custom Web Pages.....	13-46
	CGI (Common Gateway Interface)	13-58
	Reading from SD Memory Card (Downloading a file).....	13-60
	Restrictions	13-60
CHAPTER 14:	Communication Monitor	
	Overview.....	14-1
	Starting and Stopping the Communication Monitor	14-1
CHAPTER 15:	BACnet/IP	
	Overview.....	15-1
	Communication Ports Used in BACnet/IP	15-1
	BACnet Specifications.....	15-2
	About BACnet.....	15-3
	Function.....	15-5
	BACnet/IP Operation	15-11
	BACnet/IP Settings.....	15-13
	Objects	15-33
	Key Properties	15-41
CHAPTER 16:	EtherNet/IP Communication	

Overview 16-1
 Communication Ports Used in EtherNet/IP 16-2
 EtherNet/IP Specifications 16-3
 EtherNet/IP 16-4
 Function 16-5
 EtherNet/IP Communication Operations 16-13
 EtherNet/IP Communication Settings 16-18
 EtherNet/IP Settings Dialog Box 16-19
 Flow of EtherNet/IP Communication Settings 16-32
 Examples of EtherNet/IP Settings 16-35
 Objects 16-41

CHAPTER 17:

MQTT Communication

Overview 17-1
 Supported Models and Communication Ports 17-2
 Standard Specifications 17-3
 Supported MQTT Broker and Cloud Services 17-3
 MQTT Communication Settings 17-5
 MQTT Settings Dialog Box 17-6
 MQTT Settings 17-6
 Connect to a general purpose MQTT broker 17-7
 Connect to AWS IoT Core 17-12
 Connect to Azure IoT Hub using SAS 17-17
 Connect to Azure IoT Hub using X.509 certificates 17-22
 Connect to Azure IoT Hub via DPS 17-26
 Publish 17-33
 Subscribe 17-38
 Topic Dialog Box 17-41
 Payload Dialog Box 17-43
 Publishing to a Topic 17-51
 Subscribing to a Topic 17-59

CHAPTER 18:

MC Protocol Communication

Overview 18-1
 Standard Specifications 18-1
 MC protocol communication via Ethernet Communication 18-2
 MC Protocol Communication Settings 18-2

INDEX

1: GENERAL INFORMATION

Introduction

This chapter describes an overview of the FC6A Series MICROSmart, which is equipped with a communication interface.

Description

The FC6A Series MICROSmart can perform communication using various communication interfaces.

All-in-One CPU Module/J1939 All-in-One CPU Module

Yes: Can be used as a communication port.

No: Cannot be used as a communication port.

—: Not equipped with the CPU module.

Communication/Function		Port						Cartridge Slot			Expansion module			
		Serial Port 1	USB Port	Ethernet Port 1	Ethernet Port 2	HMI-Ethernet Port	CAN Port	1	2	3	Communication module			
RS232C Communication/RS485 Communication	Maintenance Communication	Yes*1	Yes	Yes	—	Yes*2	—	—	—	—	Yes			
	User Communication		No	No		No						—	—	—
	Modbus RTU Communication (master/slave)													
	Data Link Communication (master station/slave station)													
Bluetooth Communication	User Communication	No	No	—	Yes*2	No	—	—	—	No				
Ethernet Communication	Maintenance Communication (Server)													
	User Communication (server/client)										Yes			
	User Communication (UDP)													
	Modbus TCP Communication (server/client)													
	MC Protocol Communication (client)													
	BACnet/IP Communication										No	No		
	EtherNet/IP Communication										No	No		
	MQTT Communication													
	FTP Server/Client Function										—	—		
	Web Server Function										Yes*2			
	PING Transmission										No			
	EMAIL Transmission										Yes*2			
CAN Communication	J1939 Communication	—	No	—	No	Yes*3	—	—	—	—				

*1 Only the All-in-One CPU module can perform various types of communication using serial port 1.

*2 The HMI-Ethernet port can be expanded and used for communication by connecting the HMI module to the CPU module.

*3 Only the CAN J1939 All-in-One CPU module can perform J1939 communication using the CAN port.

*4 Communication can be performed by connecting a communication cartridge to the cartridge slot.

1: GENERAL INFORMATION

Plus CPU Module

Yes: Can be used as a communication port.

No: Cannot be used as a communication port.

—: Not equipped with the CPU module.

Communication/Function		Port					Cartridge Slot			Expansion module			
		Serial Port 1	USB Port	Ethernet Port 1	Ethernet Port 2	HMI-Ethernet Port	CAN Port	1	2	3	Communication module		
RS232C Communication/RS485 Communication	Maintenance Communication	—	Yes	Yes	Yes	Yes ^{*1}	—	Yes ^{*2}	Yes ^{*2}	Yes ^{*3}	Yes		
	User Communication		No	No	No	No							
	Modbus RTU Communication (master/slave)												
	Data Link Communication (master station/slave station)												
Bluetooth Communication	User Communication		No	Yes	Yes	Yes ^{*1}		—	No	No	No	No	
Ethernet Communication	Maintenance Communication (Server)												
	User Communication (server/client)												
	User Communication (UDP)												
	Modbus TCP Communication (server/client)												
	MC Protocol Communication (client)												
	BACnet/IP Communication												No
	EtherNet/IP Communication												No
	MQTT Communication												
	FTP Server/Client Function	No											
	Web Server Function	Yes					Yes ^{*1}						
	PING Transmission	Yes					No						
EMAIL Transmission	Yes ^{*1}												
CAN Communication	J1939 Communication	No	No	No									

*1 The HMI-Ethernet port can be expanded and used for communication by connecting the HMI module to the CPU module.

*2 Communication can be performed by connecting the cartridge base module to the CPU module and then connecting a communication cartridge to the cartridge slot.

*3 Communication can be performed by connecting the HMI module to the CPU module and then connecting a communication cartridge to the cartridge slot.

Communication Interfaces

An overview and the specifications of the communication interfaces are shown below.

USB Port

Maintenance communication can be performed by using this port to connect to a computer.

Communication Type	USB2.0 Full speed, CDC class
Communication Functions	Capable of maintenance communication with a PC, program downloads via USB power
Connector	USB mini-B
Isolation between Internal Circuit	Not isolated

Serial Port 1

This port can be used to communicate with RS232C/RS485 communication-compatible external devices such as computers, operator interfaces, and printers.

Maintenance communication, user communication, Modbus RTU communication (master/slave), and data link communication (master station/slave station) are possible. Only the All-in-One CPU module is equipped with serial port 1.

Communication Type	EIA RS-232C or RS-485 software selectable
Maximum Communication Speed	115,200 bps
Communication Functions	Maintenance communication, user communication, Modbus RTU communication (master/slave), data link communication (master station/slave station)
Connector	RJ45
Cable	RS232C: Shielded multicore RS485: Shielded twisted-pair
Maximum Cable Length	RS-232C: 5 m RS-485 : 200 m
Isolation between Internal Circuit	Not isolated

Serial Communication Module

Serial communication modules can be used by connecting them to the basic expansion side or expansion interface side of the CPU module.

This port can be used to communicate with RS232C/RS485 communication-compatible external devices such as computers, operator interfaces, and printers. Maintenance communication, user communication, Modbus RTU communication (master/slave), and data link communication (master station/slave station) are possible.

Type No.	FC6A-SIF52, FC6A-SIF524	
Points	2	
Electrical Characteristics	EIA RS232C/EIA RS485*1	
Maximum Communication Speed	115,200 bps	
Communication Functions	Maintenance communication, user communication, Modbus RTU communication (master/slave), data link communication (master station/slave station)	
Maximum Cable Length	15 m (EIA RS232C)/1,200 m (EIA RS485)	
Isolation between Internal Circuit	Between Communication Port and Internal Circuit	Photocoupler
	Between Ports	Transformer
Cable	Recommended Cable	RS-232C: 24 AWG shielded multicore cable RS-485: 24 AWG twisted-pair shielded cable

*1 Specify the values in the WindLDR **Function Area Settings**. The combination of "Data Bits: 7 bits" and "Parity: None" cannot be set.

1: GENERAL INFORMATION

RS232C Communication Cartridge and RS485 Communication Cartridge

The RS232C communication cartridge and RS485 communication cartridge can be used by connecting them to the following cartridge slots.

- Cartridge slot 1 and 2 of the All-in-One CPU module/CAN J1939 All-in-One CPU module
- Cartridge slot 1 and 2 of a cartridge base module added to the Plus CPU module
- Cartridge slot 3 of an HMI module added to the Plus CPU module

This port can be used to communicate with RS232C/RS485 communication-compatible external devices such as computers, operator interfaces, and printers. Maintenance communication, user communication, Modbus RTU communication (master/slave), and data link communication (master station/slave station) are possible.

Type No.	FC6A-PC1	FC6A-PC3
Electrical Characteristics	EIA RS232C	EIA RS485
Maximum Communication Speed	115,200 bps	115,200 bps
Communication Functions	Maintenance communication, user communication, Modbus RTU communication (master/slave), data link communication (master station/slave station)	
Maximum Cable Length	5 m	200 m
Isolation between Internal Circuit	Not isolated	Not isolated
Cable	Recommended Cable	
	Shielded multicore: 24 AWG	Shielded twisted-pair: 24 AWG

Bluetooth Communication Cartridge

The Bluetooth communication cartridge can be used by connecting it to the following cartridge slots.

- Cartridge slot 1 and 2 of the All-in-One CPU module/CAN J1939 All-in-One CPU module
- Cartridge slot 1 and 2 of a cartridge base module added to the Plus CPU module
- Cartridge slot 3 of an HMI module added to the Plus CPU module

Using Bluetooth, the FC6A Series MICROSmart can communicate with external devices that support Bluetooth communication, such as computers, smartphones, and barcode readers. Maintenance communication and user communication are possible.

Type No.	FC6A-PC4
Electrical Characteristics	Bluetooth ver.2.1 + EDR
Profile	SPP (Serial Port Profile) iAP (iPod Accessory Protocol)
Communication Functions	Maintenance communication, user communication
Transmission Distance	10 m (Class 2)

Ethernet Port 1 and 2

This port supports the following communications and functions. This port has multiple connections, and each connection can use different communication protocols at the same time. See "Connection Settings" on page 3-14 for details.

Yes: Can be used as a communication port.

No: Cannot be used as a communication port.

—: Not equipped with the CPU module.

Communication/Function		All-in-One CPU Module/ J1939 All-in-One CPU Module		Plus CPU Module			
		Ethernet Port 1	Ethernet Port 2	Ethernet Port 1	Ethernet Port 2		
Ethernet Communication	Maintenance Communication (Server)	Yes	—	Yes	Yes		
	User Communication (server/client)						
	User Communication (UDP)						
	Modbus TCP Communication (server/client)						
	MC Protocol Communication (client)	No		No	Yes	No	
	BACnet/IP Communication						
	EtherNet/IP Communication						
	MQTT Communication						
	FTP Server/Client Function						
	Web Server Function						
	PING Transmission					Yes	Yes
	EMAIL Transmission					No	No

Communication Type	IEEE 802.3 compliant
Communication Speed	10BASE-T, 100BASE-TX
Number of Connections	All-in-One CPU module/CAN J1939 All-in-One CPU module: 8 Plus CPU module: 16
Communication Functions	Maintenance Communication (Server), user communication (server/client), user communication (UDP), Modbus TCP communication (server/client), MC protocol communication (client)
Web Server Function	Yes
Web Data Storage	FROM
Web Data Capacity*1	5.0 MB
Send E-mail Function	Yes
Connector	RJ45
Cable	CAT 5. or higher STP
Maximum Cable Length	100 m
Isolation between Internal Circuit	Pulse transformer isolated

*1 Among the web data capacity, available storage for the user depends on whether to use the system web page and the web page editor.

		System Web Page	
		Use	Not Use
Web Page Editor	Use	2.5 MB	3.0 MB
	Not Use	4.5 MB	5.0 MB

1: GENERAL INFORMATION

CAN Port

The CAN J1939 All-in-One CPU module can use this port to perform J1939 communication.

Communication Type	CAN bus communication
Communication Speed	250 kbps
Communication Functions	J1939 communication
Connector	FC6A-PMTE05PN02
Cable	SAE-J1939-11 : Shielded twisted-pair
	SAE-J1939-15 : Unshielded twisted-pair
Maximum Cable Length	SAE-J1939-11 : 40 m, stub 1 m maximum
	SAE-J1939-15 : 40 m, stub 3 m maximum
Terminating Resistance	120 Ω (0.5 W or higher)
Isolation between Internal Circuit	Power supply: Transformer isolated
	Signal: Galvanic isolation, photocoupler isolated

HMI-Ethernet Port

The HMI-Ethernet port can only be used when a CPU module and an HMI module are connected.

This port can be used to communicate with Ethernet communication-compatible external devices such as computers and operator interfaces.

This port has eight connections that can be used with Ethernet communication. Each connection can be configured for maintenance communication (server).

This port also supports the web server function and the send E-mail function.

Communication Type	IEEE 802.3 compliant
Communication Speed	10BASE-T, 100BASE-TX
Number of Connections	8 maximum
Communication Mode	Maintenance Communication
Web Server Function	Yes
Web Data Storage	FROM
Web Data Capacity *1	5.0 MB
Send E-mail Function	Yes
Connector	RJ45
Cable	CAT 5. or higher STP
Maximum Cable Length	100 m
Isolation between Internal Circuit	Pulse transformer isolated

*1 Among the web data capacity, available storage for the user depends on whether to use the system web page and the web page editor.

		System Web Page	
		Use	Not Use
Web Page Editor	Use	2.5 MB	3.0 MB
	Not Use	4.5 MB	5.0 MB



Caution

- When accessing the FC6A Series MICROSmart over the Internet, adequate security measures for the network to prevent unauthorized access are required. Be sure to consult your network administrator or Internet service provider. IDEC bears no responsibility for damages or problems caused due to security in Ethernet communication.
- Restrict the access to FC6A Series MICROSmart with IP addresses and ports by using appropriate measures such as the firewall.

List of CPU Modules and Communication Interfaces

The following are the communication interfaces that the CPU modules are equipped with or can be expanded with. For the locations of the communication interfaces in each module, see Chapter 2 "Product Specifications" in the "FC6A Series MICROSmart User's Manual".

Type No.	USB Port	Serial Port 1	Communication Module Port 4 to 33 ^{*1}	Communication Cartridge	Ethernet Port 1	Ethernet Port 2	CAN Port	HMI-Ethernet Port ^{*4}
FC6A-C16***E	1	1	6 maximum	1 maximum ^{*2}	1	—	—	1 maximum
FC6A-C24***E				2 maximum ^{*2}				
FC6A-C40***E		—	30 maximum	3 maximum ^{*3}		1		
FC6A-C40***EJ						1		
FC6A-D***CEE					1	—		

*1 Serial communication modules can be used by connecting them to the basic expansion side or expansion interface side of the CPU module.

The communication ports are assigned to port 4, port 5, and so on in order from the ports closest to the CPU module.

*2 The communication cartridges can be used by connecting them to cartridge slots 1 and 2 of the All-in-One CPU module/CAN J1939 All-in-One CPU module.

*3 Communication cartridges can be used by connecting them to cartridge slot 1 and 2 of a cartridge base module connected to the Plus CPU module and cartridge slot 3 of an HMI module connected to the Plus CPU module.

*4 The HMI-Ethernet port is available on the HMI module.

1: GENERAL INFORMATION

Allocations of the Communication Port Numbers

All-in-One CPU module, CAN J1939 All-in-One CPU module, and Plus CPU module support serial communication with the target device. Serial communication is possible with built-in interface or expanded interface of each CPU module. Interfaces supporting the serial communication are as follows:

All-in-One CPU module	: Serial port 1, cartridge slots 1 and 2, communication module ports
CAN J1939 All-in-One CPU module	: Cartridge slots 1 and 2, communication module ports
Plus CPU module	: Cartridge slots 1 to 3, communication module ports

In order to use each interface as communication port, the communication parameters must be configured according to the communication parameters of the target device. Configure the communication parameters in **Communication Ports** tab in the **Function Area Settings** dialog box. The allocation between each interface and communication port is described below.

For details on each setting, see "Communication Port Settings" on page 3-2.

■ Ports and Cartridge Slots 1 to 3 on the CPU Module and HMI Module

— : Not equipped with the CPU module.

No : Cannot be used as the serial communication ports.

CPU Module		Port						Cartridge Slot		
		Serial Port 1	USB Port	Ethernet Port 1	Ethernet Port 2	HMI-Ethernet Port	CAN Port	1	2	3
All-in-One CPU module	16-I/O type	Port 1	No	No	—	No*1	—	Port 2 *2*5	—	—
	24-I/O type									
	40-I/O type									
CAN J1939 All-in-One CPU module	40-I/O type	—	No	No	—	No	—	Port 3 *2*5	—	—
Plus CPU module	Plus 16-I/O type	—	No	No	No	—	—	Port 1 *3*5	Port 2 *3*5	Port 3 *4*5
	Plus 32-I/O type									

*1 When the HMI module is connected to the CPU module and HMI-Ethernet port is added.

*2 When a communication cartridge is installed on the cartridge slot.

*3 When the cartridge base module is connected to the CPU module and a communication cartridge is installed on the cartridge slot.

*4 When the HMI module is connected to the CPU module and a communication cartridge is installed on the cartridge slot.

*5 The combination of "Data Bits: 7" and "Parity: None" is not possible.

Note: For the locations of serial port 1 and cartridge slots 1 and 2, and for how to wire serial port 1, communication modules, and communication cartridges, see Chapter 2 "Product Specifications" in the FC6A Series MICROSmart User's Manual.

■ Ports on Communication Modules

CPU Module		Communication Module					
		1st	2nd	3rd	4th	...	15th
All-in-One CPU module	16-I/O type	Port 4, 5	Port 6, 7	Port 8, 9	*1	*1	*1
	24-I/O type						
	40-I/O type						
CAN J1939 All-in-One CPU module	40-I/O type	—	—	—	—	—	—
Plus CPU module	Plus 16-I/O type	—	—	—	Port 10, 11	...	Port 32, 33
	Plus 32-I/O type						

*1 Four or more communication modules cannot be connected to the All-in-One CPU module and CAN J1939 All-in-One CPU module.

Communication Functions Overview

The FC6A Series MICROSmart supports maintenance communication, user communication, Modbus communication, data link communication, J1939 communication, and BACnet communication.

This section describes an overview of and connection examples for the communication functions.

Maintenance Communication

The maintenance communication of the FC6A Series MICROSmart enables you to check the operating status and I/O status of the FC6A Series MICROSmart, monitor and change device values, and download and upload user programs with the PLC programming software WindLDR installed on a computer. For details on maintenance communication, see "Maintenance Communication" on page 4-1.

Supported ports*1

USB Port	Serial Port 1	Ethernet Port 1, 2 and HMI-Ethernet Port*2	Communication Cartridge and Communication Module	CAN Port
Yes	Yes	Yes	Yes	No


*1 Depending on the port that will be used, there are restrictions on the maintenance communication methods that can be used. For details on the restrictions, see the "Maintenance Communication" on page 4-1.

*2 Only maintenance communication can be used with the HMI-Ethernet port.

Note: When an HMI module is connected, maintenance communication can be performed by using the HMI-Ethernet port. For details, see Chapter 7 "HMI Function" in "FC6A Series MICROSmart User's Manual".


■ 1:1 Maintenance Communication Using USB Port

This example shows a 1:1 maintenance communication system in which a FC6A Series MICROSmart and a computer are connected with USB. The USB maintenance cable (HG9Z-XCM42) is used.

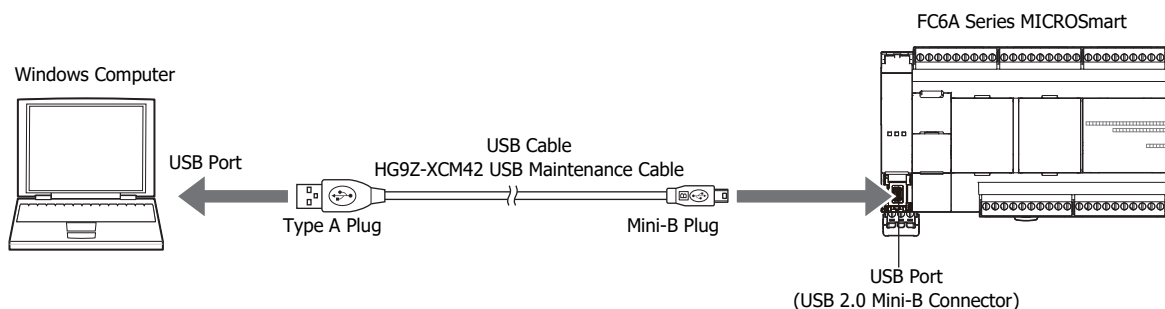

■ 1:1 Maintenance Communication Example with an IDEC Operator Interface Using Serial Port 1

This example shows maintenance communication between the FC6A Series MICROSmart and an operator interface, as well as monitoring and changing FC6A Series MICROSmart device values using the operator interface. An IDEC operator interface is connected to serial port 1 of the FC6A Series MICROSmart.

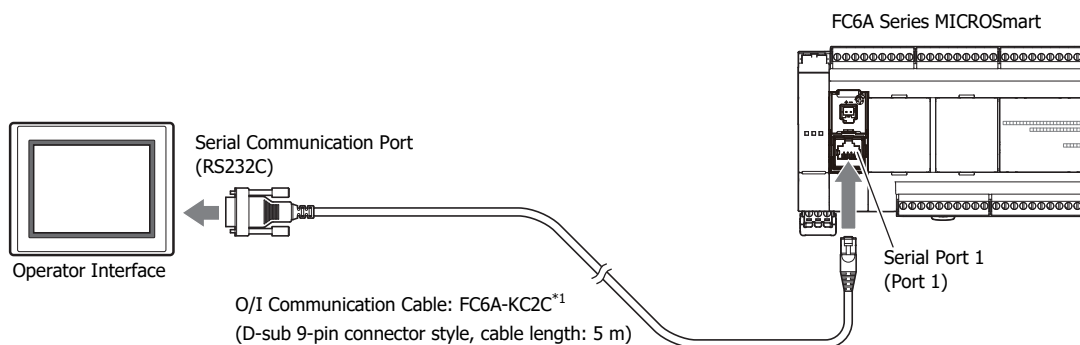


*1 For details on O/I communication cables, see Appendix "Cables" in the "FC6A Series MICROSmart User's Manual".

1: GENERAL INFORMATION

■ 1:N Maintenance Communication Using Ethernet Port 1

This example shows a 1:N maintenance communication system in which three FC6A Series MICROSmart and a computer are connected over Ethernet. The Ethernet cables are connected to the Ethernet port 1 of three FC6A Series MICROSmart, and those FC6A Series MICROSmart are connected to the computer via an Ethernet hub.

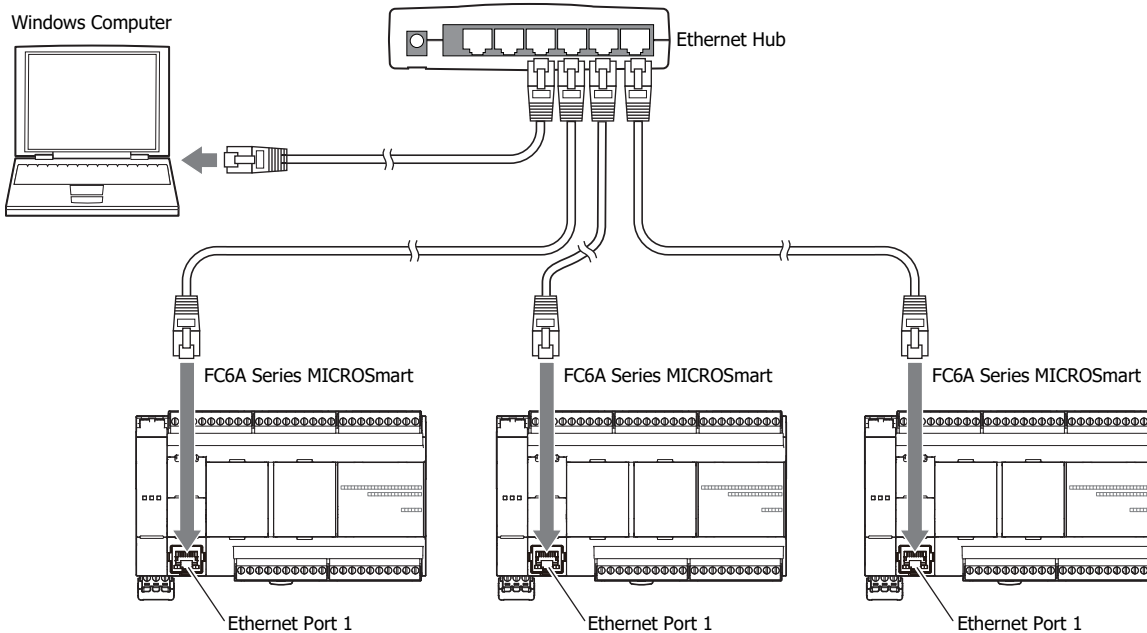

User Communication


The user communication of the FC6A Series MICROSmart enables you to control external devices such as computers, printers, and barcode readers. For details on user communication, see "User Communication Instructions" on page 5-1.

Supported ports

USB Port	Serial Port 1	Ethernet Port 1 and 2	Communication Cartridge and Communication Module	CAN Port
No	Yes	Yes	Yes	No

■ User Communication Using Serial Port 1

This example shows a system in which a FC6A Series MICROSmart receives the data read by a barcode reader. A barcode reader is connected to port 1 of the FC6A Series MICROSmart.

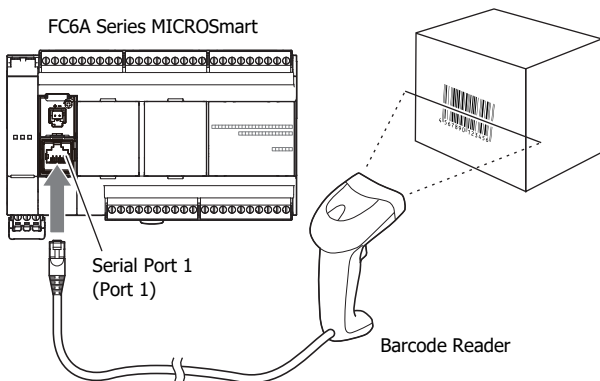

Modbus Communication

The FC6A Series MICROSmart supports Modbus RTU protocol and can be used as either a Modbus communication master or slave. With Modbus communication, the FC6A Series MICROSmart can monitor and modify the data of inverters and temperature controllers.

Ethernet ports 1 and 2 also support the Modbus TCP communication protocol.

For details on Modbus communication, see "Modbus Communication" on page 6-1.


Supported ports

USB Port	Serial Port 1	Ethernet Port 1 and 2	Communication Cartridge*1 and Communication Module	CAN Port
No	Yes	Yes	Yes	No

*1 Only the RS-232C communication cartridge and RS-485 communication cartridge are supported.

■ Modbus RTU Communication Using Serial Port 1

This example shows a system in which a FC6A Series MICROSmart is communicating with a temperature controller and an inverter that support Modbus RTU. The A temperature controller is connected to port 1 of the FC6A Series MICROSmart.

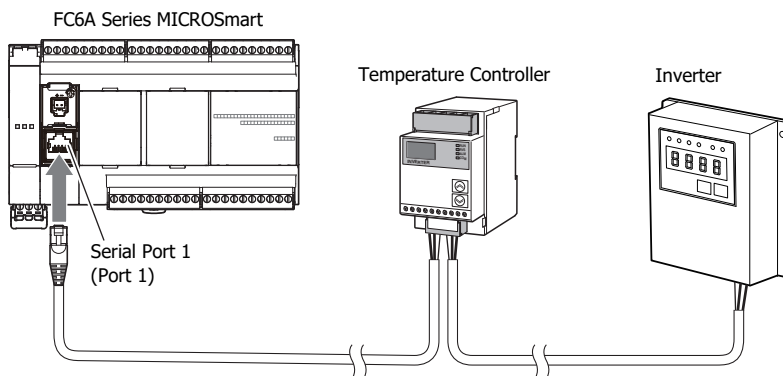

Data Link Communication

The FC6A Series MICROSmart supports data link communication, and it can share data between CPU modules using serial port 1 and cartridge slots. The FC6A Series MICROSmart can also share data with FC5A Series and FC4A Series CPU modules. Configure the settings in WindLDR to enable distributed control of a maximum of 31 CPU modules.

For details about the data link communication, see "Data Link Communication" on page 7-1.


Supported ports

USB Port	Serial Port 1	Ethernet Port 1 and 2	Communication Cartridge*1 and Communication Module	CAN Port
No	Yes	No	Yes	No

*1 Only the RS-232C communication cartridge and RS-485 communication cartridge are supported.

■ Data Link Communication Using Serial Port 1

This example shows communication between multiple CPU modules with the FC6A Series MICROSmart as the master station. A slave station CPU module is connected to port 1 of the FC6A Series MICROSmart.

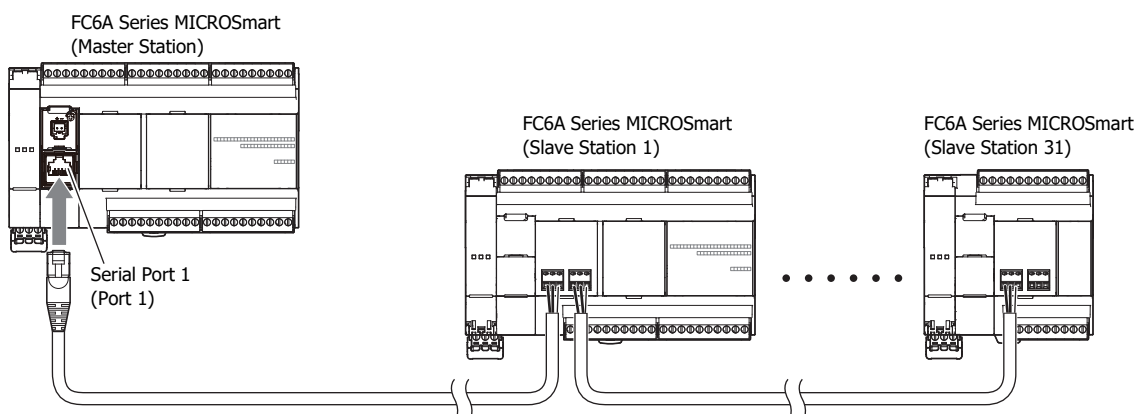


MC Protocol Communication

The Plus CPU module can read and write device values of MC protocol compatible device as client in MC Protocol Communication using Ethernet port 1 or 2. For details, see "MC Protocol Communication" on page 18-1.

Supported ports

USB Port	Serial Port 1	Ethernet Port 1	Ethernet Port 2	Communication Cartridge and Communication Module	CAN Port
No	No	Yes	Yes	No	No

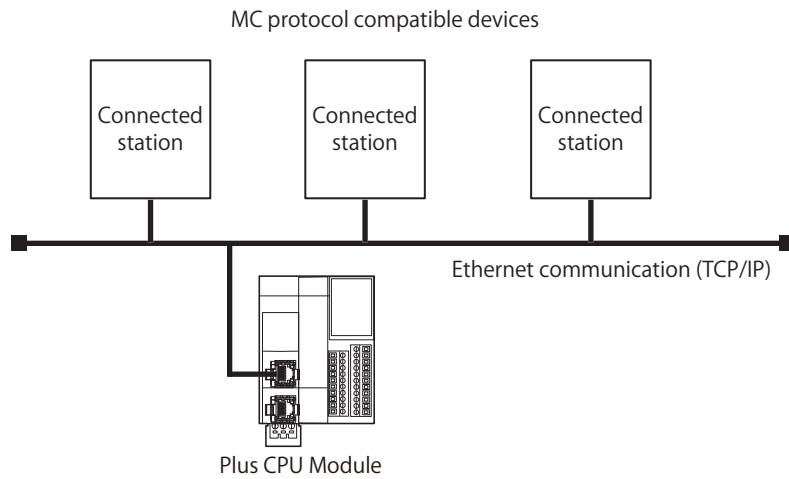

BACnet Communication


The Plus CPU module can be connected to a BACnet/IP network using Ethernet port 1 and communicate with other BACnet communication-compatible external devices. For details on BACnet communication, see "BACnet/IP" on page 15-1.

Supported ports

USB Port	Serial Port 1	Ethernet Port 1	Ethernet Port 2	Communication Cartridge and Communication Module	CAN Port
No	No	Yes	No	No	No

■ BACnet Communication Using Ethernet Port 1

This example shows the Plus CPU module aggregating information from Modbus RTU communication-compatible devices, communicating with a BACnet communication-compatible device connected to a BACnet/IP network, and making that information publicly available.

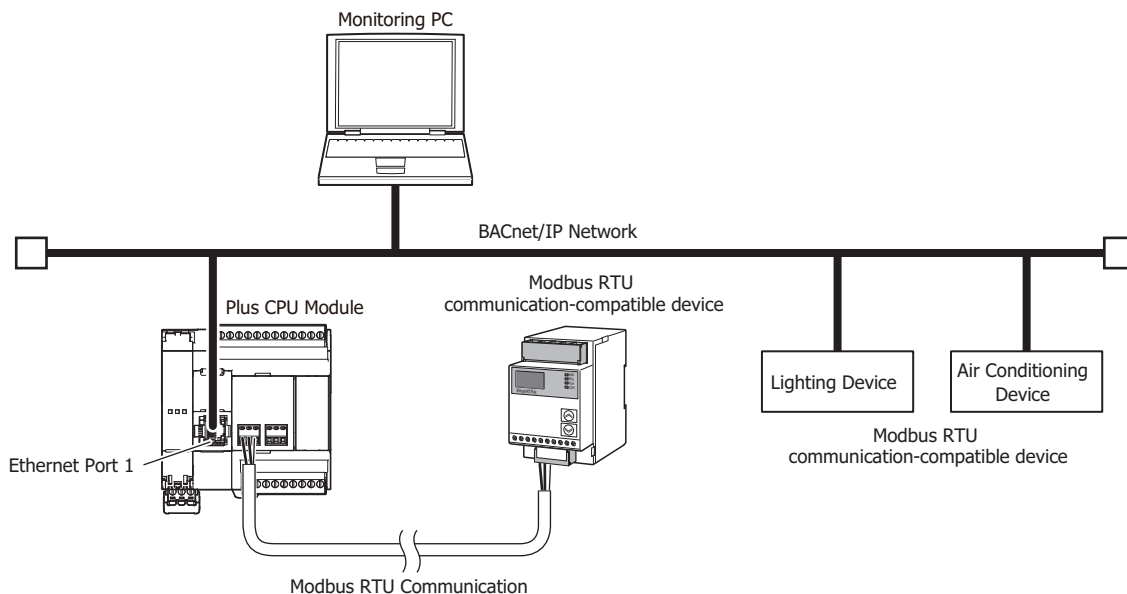

EtherNet/IP communication


The Plus CPU module can be connected to an existing Ethernet network using Ethernet port 2 and communicate with other EtherNet/IP communication-compatible devices. EtherNet/IP communication uses standard Ethernet technologies, which allows networks to be built that include various Ethernet-compatible devices. For details on EtherNet/IP communication, see "EtherNet/IP Communication" on page 16-1.

Supported ports

USB Port	Serial Port 1	Ethernet Port 1	Ethernet Port 2	Communication Cartridge and Communication Module	CAN Port
No	No	No	Yes	No	No

■ EtherNet/IP Communication Using Ethernet Port 2

This example shows the Plus CPU module communicating with EtherNet/IP communication-compatible devices and controlling those devices.

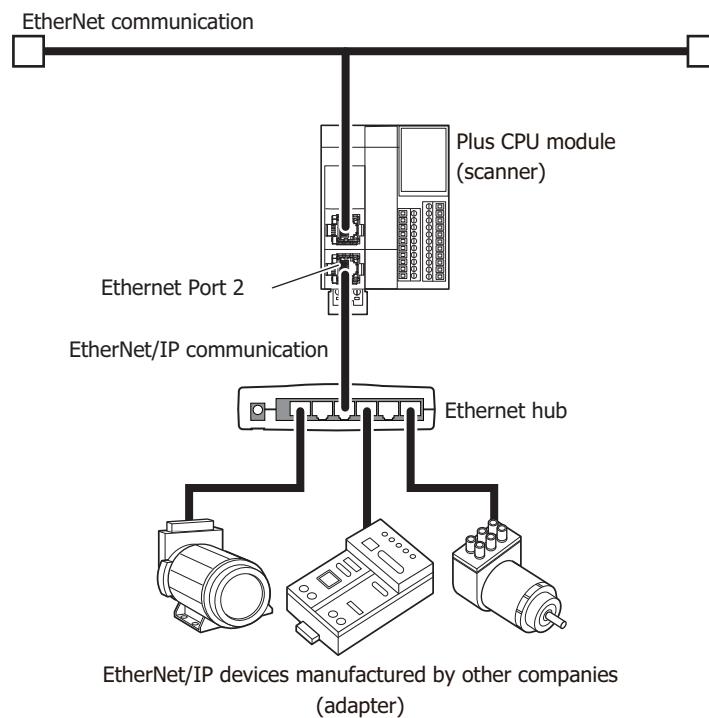


MQTT Communication

The Plus CPU module can communicate with a broker as a client (publisher and subscriber) in MQTT communication using Ethernet port 1. For details on MQTT communication, see "MQTT Communication" on page 17-1.

Supported ports

USB Port	Serial Port 1	Ethernet Port 1	Ethernet Port 2	Communication Cartridge and Communication Module	CAN Port
No	No	Yes	No	No	No

■ MQTT Communication Using Ethernet Port 1

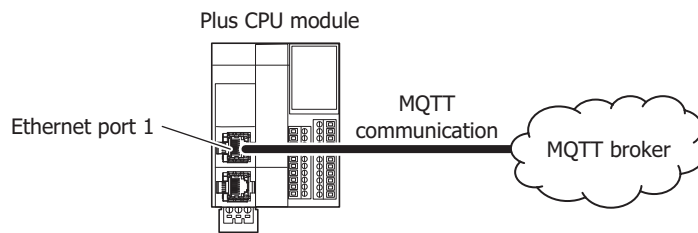

J1939 Communication


The CAN J1939 All-in-One CPU module can be connected to a J1939 communication network using the CAN port and it can communicate with other J1939 communication-compatible devices. Messages that conform to the SAE J1939 standard can be sent and received. For details on J1939 communication, see "J1939 Communication" on page 8-1.

Supported ports

USB Port	Serial Port 1	Ethernet Port 1 and 2	Communication Cartridge	CAN Port
No	No	No	No	Yes

■ J1939 Communication Using CAN Port

This example shows the FC6A Series MICROSmart communicating with a J1939-compatible engine. The CAN port of the CAN J1939 All-in-One CPU module is connected to the engine.

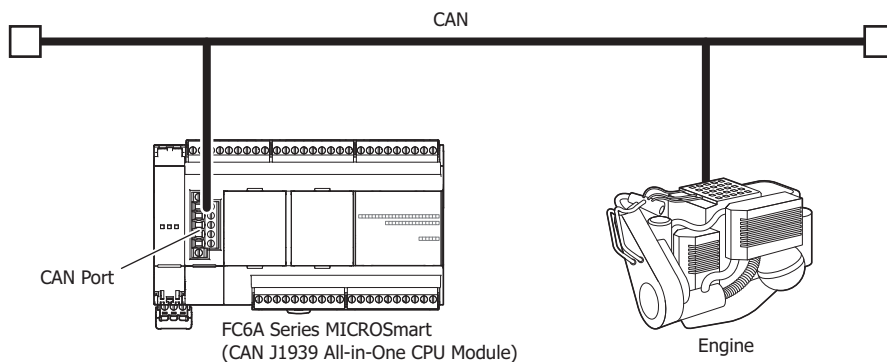

2: DEVICES

This chapter provides detailed descriptions of the allocations of devices such as inputs, outputs, internal relays, registers, timers, and counters that are used in the basic and advanced instructions, as well as details about the allocations of special internal relays and special data registers.

Please use this chapter as a reference for the devices.

Note: The programming and operation of FC6A Series MICROSmart user programs requires specialist knowledge.

Take the time to develop a thorough understanding of the contents and programs in this manual before using the FC6A Series MICROSmart.

Device Addresses

All-in-One CPU Module/J1939 All-in-One CPU Module

Device	Symbol	Unit	Range (Points)		
			16-I/O Type	24-I/O Type	40-I/O Type
Inputs* ¹	I	Bit	I0 - I10 (9 points)	I0 - I15 (14 points)	I0 - I27 (24 points)
Expansion Inputs* ¹	I	Bit	I30 - I187 (128 points) I190 - I507* ² (256 points) I630 - I633* ⁴ (4 points)	I30 - I307 (224 points) I310 - I627* ³ (256 points) I630 - I633* ⁴ (4 points)	I30 - I307 (224 points) I310 - I627* ³ (256 points) I630 - I637* ⁴ (8 points)
Output* ¹	Q	Bit	Q0 - Q6 (7 points)	Q0 - Q11 (10 points)	Q0 - Q17 (16 points)
Expansion Outputs* ¹	Q	Bit	Q30 - Q187 (128 points) Q190 - Q507* ² (256 points) Q630 - Q633* ⁴ (4 points)	Q30 - Q307 (224 points) Q310 - Q627* ³ (256 points) Q630 - Q633* ⁴ (4 points)	Q30 - Q307 (224 points) Q310 - Q627* ³ (256 points) Q630 - Q637* ⁴ (8 points)
Internal Relay* ¹	M	Bit		M0 - M7997 (6,400 points) M10000 - M17497 (6,000 points)	
Special Internal Relay* ¹	M	Bit		M8000 - M8317 (256 points)	
Shift Register	R	Bit		R0 - R255 (256 points)	
Timer	T	Bit/Word		T0 - T1023 (1,024 points)	
Counter	C	Bit/Word		C0 - C511 (512 points)	
Data Register	D	Bit/Word		D0000 - D7999 (8,000 points) D10000 to D55999 (46,000 points)	
Special Data Register	D	Bit/Word		D8000 - D8499 (500 points)	

*¹ The least significant digit of the device address is an octal number (0 to 7).

*² I190 to I507 and Q190 to Q507 are devices that can only be used when expansion modules are connected at the expansion interface side using the expansion interface module (expander).

*³ I310 to I627 and Q310 to Q627 are devices that can only be used when expansion modules are connected at the expansion interface side using the expansion interface module (expander).

*⁴ I630 to I637 and Q630 to Q637 are devices that can be used only when I/O cartridges are connected.

2: DEVICES

Plus CPU module

Device	Symbol	Unit	Range (Points)	
			Plus 16-I/O Type	Plus 32-I/O Type
Inputs* ¹	I	Bit	I0 - I7 (8 points)	I0 - I17 (16 points)
Expansion Inputs* ¹	I	Bit	I30 - I307 (224 points) I310 - I627* ² (256 points) I630 - I643* ³ (12 points) I1000 - I10597* ⁴ (2,016 points)	
Output* ¹	Q	Bit	Q0 - Q7 (8 points)	Q0 - Q17 (16 points)
Expansion Outputs* ¹	Q	Bit	Q30 - Q307 (224 points) Q310 - Q627* ² (256 points) Q630 - Q643* ³ (12 points) Q1000 - Q10597* ⁴ (2,016 points)	
Internal Relay* ¹	M	Bit	M0 - M7997 (6,400 points) M10000 - M21247 (9,000 points)	
Special Internal Relay* ¹	M	Bit	M8000 - M9997 (1,600 points)	
Shift Register	R	Bit	R0 - R255 (256 points)	
Timer	T	Bit/Word	T0 - T1999 (2,000 points)	
Counter	C	Bit/Word	C0 - C511 (512 points)	
Data Register	D	Bit/Word	D0000 - D7999 (8,000 points) D10000 - D61999 (52,000 points)	
Non-retentive Data Register	D	Bit* ⁷ /Word	D70000 - D269999* ⁵ (200,000 points)	
Special Data Register	D	Bit/Word	D8000 - D8899 (900 points)	
Index Register* ⁶	P	2 words	P0 - P15 (16 points)	

*1 The least significant digit of the device address is an octal number (0 to 7).

*2 I1310 to I627 and Q310 to Q627 are devices that can only be used when expansion modules are connected at the expansion interface side using the expansion interface module (expander). (Node 0)

*3 I630 to I643 and Q630 to Q643 are devices that can be used only when I/O cartridges are connected.

*4 I1000 to I10597 and Q1000 to Q10597 are devices that can be used only when expansion modules are connected using the expansion interface modules (remote master and slaves) and the expansion interface modules (expander). (Node 1 to 10)

*5 D70000 to D269999 cannot be designated as "Keep." Data register values are kept when you switch the PLC from Stop to Run, but those values are cleared at power up.

*6 The data type that can be used is L (Long) only.

*7 Usable only in scripts executed by the SCRPT instruction and as argument devices used in UMACRO instructions.

■ Inputs (I), Expansion Inputs (I)

Devices that input on/off information from external devices to the FC6A Series MICROSmart.

■ Outputs (Q), Expansion Outputs (Q)

Devices that output on/off information from the FC6A Series MICROSmart to external devices.

■ Internal Relays (M)

Bit devices used internally on the FC6A Series MICROSmart.

■ Special Internal Relays (M)

Bit devices used internally on the FC6A Series MICROSmart. Special functions are assigned to each bit.

■ Shift Registers (R)

Bit devices that are used with the SFR instruction and the SFRN instruction. The bit sequence of the data is shifted according to pulse input.

■ Timer (T)

Timers used internally in the FC6A Series MICROSmart. There are three devices: Timer bits (symbol: T, unit: bit), timer preset values (symbol: TP, unit: word), and timer current values (symbol: TC, unit: word).

These can be used as an on-delay timer or an off-delay timer. For details on timers (T), see Chapter 3 "Using Timer or Counter as Source Device" in the "FC6A Series MICROSmart Ladder Programming Manual".

■ Counters (C)

Counters used internally in the FC6A Series MICROSmart. There are three devices: Counter bits (symbol: C, unit: bit), counter preset values (symbol: CP, unit: word), and counter current values (symbol: CC, unit: word). These can be used as an adding counter or a reversible counter. For details on counters (C), see Chapter 3 "Using Timer or Counter as Source Device" in the "FC6A Series MICROSmart Ladder Programming Manual".

■ Data Registers (D)

Word devices that are used for writing numerical data internally in the FC6A Series MICROSmart. These can also be used as bit devices.

■ Special Data Registers (D)


Word devices that are used for writing numerical data internally in the FC6A Series MICROSmart. Special functions are assigned to each data register. These can also be used as bit devices.

Notes:

- Although the device symbol for internal relays (M0000 to M7997, M10000 to M21247) and special internal relays (M8000 to M9997) is the same ("M"), the device characteristics are different. Special functions are assigned to each bit of the special internal relays.
- Although the device symbol for the data registers (D0000 to D7999, D10000 to D61999, D70000 to D269999) and special data registers (D8000 to D8899) is the same ("D"), the device characteristics are different. Special functions are assigned to each special data register.

Special Internal Relay

Special Internal Relay Device Addresses

 **Warning** Do not write to data in the area marked as reserved in the special internal relays list. Otherwise the system may not operate correctly.

Note: R/W is an abbreviation for read/write.
 The notation for the R/W field is as follows.
 R/W: The device can be both read from and written to
 R: Read-only
 W: Write-only

Device Address	Description	When Stopped	Power OFF	R/W	
M8000	Start Control	Maintained	Maintained	R/W	
M8001	1-s Clock Reset	Cleared	Cleared	R/W	
M8002	All Outputs OFF	Cleared	Cleared	R/W	
M8003	Carry (Cy) or Borrow (Bw)	Cleared	Cleared	R/W	
M8004	User Program Execution Error	Cleared	Cleared	R/W	
M8005	Communication Error	Maintained	Cleared	R/W	
M8006	Communication Prohibited Flag (When Data Link Master)	Maintained	Maintained	R/W	
M8007	Initialization Flag (When Data Link Master)/Stop Communication Flag (When Data Link Slave)	Cleared	Cleared	R/W	
M8010	Status LED Operation	Operating	Cleared	R/W	
M8011 M8012	— Reserved —	—	—	—	
M8013	Calendar/Clock Data Write/Adjust Error Flag	Operating	Cleared	R/W	
M8014	Calendar/Clock Data Read Error Flag	Operating	Cleared	R/W	
M8015	— Reserved —	—	—	—	
M8016	Calendar Data Write Flag	Operating	Cleared	R/W	
M8017	Clock Data Write Flag	Operating	Cleared	R/W	
M8020	Calendar/Clock Data Write Flag	Operating	Cleared	R/W	
M8021	Clock Data Adjust Flag	Operating	Cleared	R/W	
M8022	User Communication Receive Instruction Cancel Flag (Port 1)	Cleared	Cleared	R/W	
M8023	User Communication Receive Instruction Cancel Flag (Port 2)	Cleared	Cleared	R/W	
M8024	BMOV/WSFT Executing Flag	Maintained	Maintained	R/W	
M8025	Maintain Outputs While Stopped	Maintained	Cleared	R/W	
M8026	User Communication Receive Instruction Cancel Flag (Port 3)	Cleared	Cleared	R/W	
M8027	High-speed Counter (Group 1/I0)	Count Direction Flag	Maintained	Cleared	R/W
M8030		Comparison Output Reset	Cleared	Cleared	R/W
M8031		Gate Input	Maintained	Cleared	R/W
M8032		Reset Input	Maintained	Cleared	R/W
M8033	User Communication Receive Instruction Cancel Flag (Port 4)	Cleared	Cleared	R/W	
M8034	High-speed Counter (Group 3/I3)	Comparison Output Reset	Cleared	Cleared	R/W
M8035		Gate Input	Maintained	Cleared	R/W
M8036		Reset Input	Maintained	Cleared	R/W
M8037	— Reserved —	—	—	—	
M8040	High-speed Counter (Group 4/I4)	Comparison Output Reset	Cleared	Cleared	R/W
M8041		Gate Input	Maintained	Cleared	R/W
M8042		Reset Input	Maintained	Cleared	R/W
M8043	High-speed Counter (Group 5/I6)	Count Direction Flag	Maintained	Cleared	R/W
M8044		Comparison Output Reset	Cleared	Cleared	R/W
M8045		Gate Input	Maintained	Cleared	R/W
M8046		Reset Input	Maintained	Cleared	R/W
M8047 M8050	— Reserved —	—	—	—	

Device Address	Description	When Stopped	Power OFF	R/W
M8051	High-speed Counter (Group 2/I1)	Comparison Output Reset	Cleared	R/W
M8052		Gate Input	Maintained	R/W
M8053		Reset Input	Maintained	R/W
M8054		Comparison ON Status	Maintained	R
M8055		Overflow	Maintained	R
M8056	— Reserved —	—	—	—
M8057	High-speed Counter (Group 6/I7)	Comparison Output Reset	Cleared	R/W
M8060		Gate Input	Maintained	R/W
M8061		Reset Input	Maintained	R/W
M8062		Comparison ON Status	Maintained	R
M8063		Overflow	Maintained	R
M8064 to M8067	— Reserved —	—	—	—
M8070	SD Memory Card Mount Status	Maintained	Cleared	R
M8071	Accessing SD Memory Card	Maintained	Cleared	R
M8072	Unmount SD Memory Card	Operating	Cleared	R/W
M8073	Function Switch Status	Operating	Cleared	R
M8074	Battery Voltage Measurement Flag	Operating	Cleared	R/W
M8075 to M8077	— Reserved —	—	—	—
M8080	Data Link Slave 1 Communication Completed Relay (When Data Link Master)	Operating	Cleared	R
M8081	Data Link Slave 2 Communication Completed Relay	Operating	Cleared	R
M8082	Data Link Slave 3 Communication Completed Relay	Operating	Cleared	R
M8083	Data Link Slave 4 Communication Completed Relay	Operating	Cleared	R
M8084	Data Link Slave 5 Communication Completed Relay	Operating	Cleared	R
M8085	Data Link Slave 6 Communication Completed Relay	Operating	Cleared	R
M8086	Data Link Slave 7 Communication Completed Relay	Operating	Cleared	R
M8087	Data Link Slave 8 Communication Completed Relay	Operating	Cleared	R
M8090	Data Link Slave 9 Communication Completed Relay	Operating	Cleared	R
M8091	Data Link Slave 10 Communication Completed Relay	Operating	Cleared	R
M8092	Data Link Slave 11 Communication Completed Relay	Operating	Cleared	R
M8093	Data Link Slave 12 Communication Completed Relay	Operating	Cleared	R
M8094	Data Link Slave 13 Communication Completed Relay	Operating	Cleared	R
M8095	Data Link Slave 14 Communication Completed Relay	Operating	Cleared	R
M8096	Data Link Slave 15 Communication Completed Relay	Operating	Cleared	R
M8097	Data Link Slave 16 Communication Completed Relay	Operating	Cleared	R
M8100	Data Link Slave 17 Communication Completed Relay	Operating	Cleared	R
M8101	Data Link Slave 18 Communication Completed Relay	Operating	Cleared	R
M8102	Data Link Slave 19 Communication Completed Relay	Operating	Cleared	R
M8103	Data Link Slave 20 Communication Completed Relay	Operating	Cleared	R
M8104	Data Link Slave 21 Communication Completed Relay	Operating	Cleared	R
M8105	Data Link Slave 22 Communication Completed Relay	Operating	Cleared	R
M8106	Data Link Slave 23 Communication Completed Relay	Operating	Cleared	R
M8107	Data Link Slave 24 Communication Completed Relay	Operating	Cleared	R
M8110	Data Link Slave 25 Communication Completed Relay	Operating	Cleared	R
M8111	Data Link Slave 26 Communication Completed Relay	Operating	Cleared	R
M8112	Data Link Slave 27 Communication Completed Relay	Operating	Cleared	R
M8113	Data Link Slave 28 Communication Completed Relay	Operating	Cleared	R
M8114	Data Link Slave 29 Communication Completed Relay	Operating	Cleared	R
M8115	Data Link Slave 30 Communication Completed Relay	Operating	Cleared	R
M8116	Data Link Slave 31 Communication Completed Relay	Operating	Cleared	R
M8117	Data Link All Slaves Communication Completed Relay	Operating	Cleared	R
M8120	Initialize Pulse	Cleared	Cleared	R
M8121	1-s Clock	Operating	Cleared	R
M8122	100-ms Clock	Operating	Cleared	R

2: DEVICES

Device Address	Description	When Stopped	Power OFF	R/W	
M8123	10-ms Clock	Operating	Cleared	R	
M8124	Timer/Counter Preset Value Changed	Maintained	Cleared	R	
M8125	In-operation Output	Cleared	Cleared	R	
M8126	1 Scan ON After Run-Time Download Completes	Cleared	Cleared	R	
M8127	— Reserved —	—	—	—	
M8130	High-speed Counter (Group 1/I0)	Reset Status	Maintained	Cleared	R
M8131		Comparison ON Status	Maintained	Cleared	R
M8132	— Reserved —	—	—	—	
M8133	High-speed Counter (Group 3/I3)	Comparison ON Status	Maintained	Cleared	R
M8134	High-speed Counter (Group 4/I4)	Comparison ON Status	Maintained	Cleared	R
M8135	High-speed Counter (Group 5/I6)	Reset Status	Maintained	Cleared	R
M8136		Comparison ON Status	Maintained	Cleared	R
M8137	Interrupt Input I0 Status (Group 1/I0)	(ON: Allowed, OFF: Prohibited)	Cleared	Cleared	R
M8140	Interrupt Input I1 Status (Group 2/I1)		Cleared	Cleared	R
M8141	Interrupt Input I3 Status (Group 3/I3)		Cleared	Cleared	R
M8142	Interrupt Input I4 Status (Group 4/I4)		Cleared	Cleared	R
M8143	Interrupt Input I6 Status (Group 5/I6)		Cleared	Cleared	R
M8144	Timer Interrupt Status		Cleared	Cleared	R
M8145	User Communication Receive Instruction Cancel Flag (Port 5)	Cleared	Cleared	R/W	
M8146	User Communication Receive Instruction Cancel Flag (Port 6)	Cleared	Cleared	R/W	
M8147	User Communication Receive Instruction Cancel Flag (Port 7)	Cleared	Cleared	R/W	
M8150	Comparison Result 1	Maintained	Cleared	R	
M8151	Comparison Result 2	Maintained	Cleared	R	
M8152	Comparison Result 3	Maintained	Cleared	R	
M8153	Catch Input ON/OFF Status	Group 1/I0	Maintained	Cleared	R
M8154		Group 2/I1	Maintained	Cleared	R
M8155		Group 3/I3	Maintained	Cleared	R
M8156		Group 4/I4	Maintained	Cleared	R
M8157		Group 5/I6	Maintained	Cleared	R
M8160		Group 6/I7	Maintained	Cleared	R
M8161	High-speed Counter (Group 1/I0)	Overflow	Maintained	Cleared	R
M8162		Underflow	Maintained	Cleared	R
M8163	High-speed Counter (Group 5/I6)	Overflow	Maintained	Cleared	R
M8164		Underflow	Maintained	Cleared	R
M8165	High-speed Counter (Group 3/I3)	Overflow	Maintained	Cleared	R
M8166	High-speed Counter (Group 4/I4)	Overflow	Maintained	Cleared	R
M8167	Interrupt Input I7 Status (Group 6/I7)	(ON: Allowed, OFF: Prohibited)	Maintained	Cleread	R
M8170	User Communication Receive Instruction Cancel Flag (Port 8)	Cleared	Cleared	R/W	
M8171	— Reserved —	—	—	—	
M8172	Transistor Source Output Overcurrent Detection	Group 1	Operating	Cleared	R
M8173		Group 2	Operating	Cleared	R
M8174		Group 3	Operating	Cleared	R
M8175		Group 4	Operating	Cleared	R
M8176	User Communication Receive Instruction Cancel Flag (Port 9)	Cleared	Cleared	R/W	
M8177 to M8183	— Reserved —	—	—	—	
M8184	Change HMI Module Network Settings Trigger	Operating	Cleared	R/W	
M8185	In Daylight Saving Time Period	Operating	Cleared	R	
M8186	Ethernet Port 1 Executing Auto Ping	Operating	Cleared	R	
M8187	Ethernet Port 1 Auto Ping Stop Flag	Operating	Cleared	R/W	
M8190	Change CPU Module Ethernet Port 1 Network Settings Trigger	Operating	Cleared	R/W	
M8191	SNTP Acquisition Flag	Operating	Cleared	R/W	

Device Address	Description	When Stopped	Power OFF	R/W
M8192	Interrupt Input I0 Edge	On: Rising Edge Off: Falling Edge	Cleared	R
M8193	Interrupt Input I3 Edge		Cleared	R
M8194	Interrupt Input I4 Edge		Cleared	R
M8195	Interrupt Input I6 Edge		Cleared	R
M8196	Interrupt Input I7 Edge		Cleared	R
M8197	Interrupt Input I1 Edge		Cleared	R
M8200	User Communication Receive Instruction Cancel Flag	Connection 1	Cleared	R/W
M8201		Connection 2	Cleared	R/W
M8202		Connection 3	Cleared	R/W
M8203		Connection 4	Cleared	R/W
M8204		Connection 5	Cleared	R/W
M8205		Connection 6	Cleared	R/W
M8206		Connection 7	Cleared	R/W
M8207		Connection 8	Cleared	R/W
M8210	— Reserved —	—	—	—
M8211	HMI Module Send E-mail Server Settings Initialization	Operating	Cleared	R/W
M8212	Connection Status (ON: Connected, OFF: Not Connected)	Connection 1	Operating	R
M8213		Connection 2	Operating	R
M8214		Connection 3	Operating	R
M8215		Connection 4	Operating	R
M8216		Connection 5	Operating	R
M8217		Connection 6	Operating	R
M8220		Connection 7	Operating	R
M8221		Connection 8	Operating	R
M8222	Disconnect User Communication Connection	Connection 1	Operating	R/W
M8223		Connection 2	Operating	R/W
M8224		Connection 3	Operating	R/W
M8225		Connection 4	Operating	R/W
M8226		Connection 5	Operating	R/W
M8227		Connection 6	Operating	R/W
M8230		Connection 7	Operating	R/W
M8231		Connection 8	Operating	R/W
M8232	HMI Module Connection Information Reference Connection Status	Operating	Cleared	R
M8233 to M8247	— Reserved —	—	—	—
M8250	Download from SD Memory Card Execution Flag	Operating	Cleared	R/W
M8251	Upload to SD Memory Card Execution Flag	Operating	Cleared	R/W
M8252	Executing SD Memory Card Download	Operating	Cleared	R
M8253	Executing SD Memory Card Upload	Operating	Cleared	R
M8254	SD Memory Card Download/Upload Execution Completion Output	Operating	Cleared	R
M8255	SD Memory Card Download/Upload Execution Error Output	Operating	Cleared	R
M8256 M8257	— Reserved —	—	—	—
M8260	Write Recipe Execution Flag	Operating	Cleared	R/W
M8261	Read Recipe Execution Flag	Operating	Cleared	R/W
M8262	Executing Write Recipe	Operating	Cleared	R/W
M8263	Executing Read Recipe	Operating	Cleared	R/W
M8264	Recipe Channel Execution Completed Output	Operating	Cleared	R/W
M8265	Recipe Execution Error Output	Operating	Cleared	R/W
M8266	Recipe Block Execution Completed Output	Operating	Cleared	R/W
M8267	Read Restriction for Recipe Internal Memory (ROM-Range)	Operating	Cleared	R
M8270	— Reserved —	—	—	—
M8271	Download MQTT Basic Settings from SD Memory Card Execution Flag	Operating	Cleared	R/W
M8272	Download MQTT Basic Settings from SD Memory Card Execution Completed Output	Operating	Cleared	R

2: DEVICES

Device Address	Description	When Stopped	Power OFF	R/W	
M8273	Download MQTT Basic Settings from SD Memory Card Error Output	Operating	Cleared	R	
M8274 to M8297	— Reserved —	—	—	—	
M8300	J1939 Communication Permitted Flag	Cleared	Cleared	R/W	
M8301	J1939 Online Status	Cleared	Cleared	R	
M8302	J1939 Local Station Address Confirmation Status	Cleared	Cleared	R	
M8303	J1939 Communication Error Output	Cleared	Cleared	R	
M8304	J1939 Communication Bus Off Occurrence Output	Cleared	Cleared	R	
M8305 to M8310	— Reserved —	—	—	—	
M8311	ESC+Key Input (Up)	ESC+Key Input (↕)	Cleared	Cleared	R
M8312	ESC+Key Input (Down)	ESC+Key Input (↕)	Cleared	Cleared	R
M8313	ESC+Key Input (Left)	ESC+Key Input (↔)	Cleared	Cleared	R
M8314	ESC+Key Input (Right)	ESC+Key Input (↔)	Cleared	Cleared	R
M8315 to M8319	— Reserved —	—	—	—	
M8320	Initialize Expansion Interface Remote Master/Slave	Operating	Cleared	R/W	
M8321 to M8330	— Reserved —	—	—	—	
M8331	Ethernet Port 2 Executing Auto Ping	Operating	Cleared	R	
M8332	Ethernet Port 2 Auto Ping Stop Flag	Operating	Cleared	R/W	
M8333	Change CPU Module Ethernet Port 2 Network Settings Trigger	Operating	Cleared	R/W	
M8334	User Communication Receive Instruction Cancel Flag	Connection 9	Cleared	Cleared	R/W
M8335		Connection 10	Cleared	Cleared	R/W
M8336		Connection 11	Cleared	Cleared	R/W
M8337		Connection 12	Cleared	Cleared	R/W
M8340		Connection 13	Cleared	Cleared	R/W
M8341		Connection 14	Cleared	Cleared	R/W
M8342		Connection 15	Cleared	Cleared	R/W
M8343		Connection 16	Cleared	Cleared	R/W
M8344	Ethernet Port 1 Send E-mail Server Settings Initialization	Operating	Cleared	R/W	
M8345	Connection Status (ON: Connected, OFF: Not Connected)	Connection 9	Operating	Cleared	R
M8346		Connection 10	Operating	Cleared	R
M8347		Connection 11	Operating	Cleared	R
M8350		Connection 12	Operating	Cleared	R
M8351		Connection 13	Operating	Cleared	R
M8352		Connection 14	Operating	Cleared	R
M8353		Connection 15	Operating	Cleared	R
M8354		Connection 16	Operating	Cleared	R
M8355	Disconnect User Communication Connection	Connection 9	Operating	Cleared	R/W
M8356		Connection 10	Operating	Cleared	R/W
M8357		Connection 11	Operating	Cleared	R/W
M8360		Connection 12	Operating	Cleared	R/W
M8361		Connection 13	Operating	Cleared	R/W
M8362		Connection 14	Operating	Cleared	R/W
M8363		Connection 15	Operating	Cleared	R/W
M8364		Connection 16	Operating	Cleared	R/W
M8365	User Communication Receive Instruction Cancel Flag (Port 10)	Cleared	Cleared	R/W	
M8366	User Communication Receive Instruction Cancel Flag (Port 11)	Cleared	Cleared	R/W	
M8367	User Communication Receive Instruction Cancel Flag (Port 12)	Cleared	Cleared	R/W	
M8370	User Communication Receive Instruction Cancel Flag (Port 13)	Cleared	Cleared	R/W	
M8371	User Communication Receive Instruction Cancel Flag (Port 14)	Cleared	Cleared	R/W	
M8372	User Communication Receive Instruction Cancel Flag (Port 15)	Cleared	Cleared	R/W	
M8373	User Communication Receive Instruction Cancel Flag (Port 16)	Cleared	Cleared	R/W	
M8374	User Communication Receive Instruction Cancel Flag (Port 17)	Cleared	Cleared	R/W	

Device Address	Description	When Stopped	Power OFF	R/W
M8375	User Communication Receive Instruction Cancel Flag (Port 18)	Cleared	Cleared	R/W
M8376	User Communication Receive Instruction Cancel Flag (Port 19)	Cleared	Cleared	R/W
M8377	User Communication Receive Instruction Cancel Flag (Port 20)	Cleared	Cleared	R/W
M8380	User Communication Receive Instruction Cancel Flag (Port 21)	Cleared	Cleared	R/W
M8381	User Communication Receive Instruction Cancel Flag (Port 22)	Cleared	Cleared	R/W
M8382	User Communication Receive Instruction Cancel Flag (Port 23)	Cleared	Cleared	R/W
M8383	User Communication Receive Instruction Cancel Flag (Port 24)	Cleared	Cleared	R/W
M8384	User Communication Receive Instruction Cancel Flag (Port 25)	Cleared	Cleared	R/W
M8385	User Communication Receive Instruction Cancel Flag (Port 26)	Cleared	Cleared	R/W
M8386	User Communication Receive Instruction Cancel Flag (Port 27)	Cleared	Cleared	R/W
M8387	User Communication Receive Instruction Cancel Flag (Port 28)	Cleared	Cleared	R/W
M8390	User Communication Receive Instruction Cancel Flag (Port 29)	Cleared	Cleared	R/W
M8391	User Communication Receive Instruction Cancel Flag (Port 30)	Cleared	Cleared	R/W
M8392	User Communication Receive Instruction Cancel Flag (Port 31)	Cleared	Cleared	R/W
M8393	User Communication Receive Instruction Cancel Flag (Port 32)	Cleared	Cleared	R/W
M8394	User Communication Receive Instruction Cancel Flag (Port 33)	Cleared	Cleared	R/W
M8395 to M8400	— Reserved —	—	—	—
M8401	Download Files for Server Functions from SD Memory Card Execution Flag	Operating	Cleared	R/W
M8402	Download Files for Server Functions from SD Memory Card Execution Completed Output	Operating	Cleared	R
M8403	Download Files for Server Functions from SD Memory Card Error Output	Operating	Cleared	R
M8404	Plus CPU Module Web Server Operation Status	Operating	Cleared	R
M8405 to M8447	— Reserved —	—	—	—
M8450	BACnet Communication Bit	Operating	Cleared	R/W
M8451 to M8457	— Reserved —	—	—	—
M8460	EtherNet/IP Communication Bit	Cleared	Cleared	R/W
M8461 to M8597	— Reserved —	—	—	—
M8600	High-speed Counter (Group 3/I3)	Reset Status	Maintained	R
M8601		Underflow	Maintained	R
M8602		Count Direction Flag	Maintained	R
M8603 to M8997	— Reserved —	—	—	—

Supplementary Descriptions of the Special Internal Relays

■ M8000: Start Control

M8000 controls the run/stop status of the FC6A Series MICROSmart. The CPU is set to run when M8000 is turned on, and the CPU is set to off when M8000 is turned off. See Chapter 1 "Start/Stop Operation" in the "FC6A Series MICROSmart Ladder Programming Manual". However, the function switch, stop input, and reset input have precedence over start control. M8000 maintains its status when the CPU is powered down. When data to be maintained during a power failure disappears after the CPU has been off for a period longer than the battery backup duration, the CPU restarts operation as selected in Configuration > Run/Stop Control > Run/Stop Selection at Keep Data Error. For details, see Chapter 5 "Run/Stop Selection at Keep Data Error" in the "FC6A Series MICROSmart User's Manual".

■ M8001: 1-s Clock Reset

While M8001 is on, M8121 (1-s clock) is always off.

■ M8002: All Outputs OFF

While M8002 is on, all outputs are off. The self-holding circuit created in the ladder program is also off.

■ M8003: Carry/Borrow

When a carry (Cy) or borrow (Bw) results from executing an addition or subtraction instruction, M8003 is turned on. For details, see Chapter 3 "Carry and Borrow" in the "FC6A Series MICROSmart Ladder Programming Manual".

■ **M8004: User Program Execution Error**

When an error occurs while executing a user program, M8004 is turned on. For details on user program execution errors, see Chapter 13 "User Program Execution Error" in the "FC6A Series MICROSmart User's Manual".

■ **M8005: Communication Error**

When an error occurs during data link communication, M8005 is turned on. The state is retained even when the error is cleared.

■ **M8006: Communication Prohibited Flag (When Data Link Master)**

During data link communication, communication is stopped while M8006 is on.

■ **M8007: Initialization Flag (When Data Link Master)/Stop Communication Flag (When Data Link Slave)**

When data link master: When this flag is turned on in the run status, the data link is initialized just once to check the connection status. Use this when the slave configured in the data link is powered at a timing slower than the master.

When data link slave : This flag is turned on when communication from the master is interrupted for 10 s or longer. This flag is turned off when communication can be normally received.

■ **M8010: Status LED Operation**

While M8010 is on, the status LED [STAT] is turned on. While off, the status LED [STAT] is turned off.

■ **M8013: Calendar/Clock Data Write/Adjust Error Flag**

When the clock writing or clock adjustment processing could not be executed normally, M8013 is turned on. It is turned off when the processing completes normally.

■ **M8014: Calendar/Clock Data Read Error Flag**

When an error occurs while calendar/clock data is read from the internal clock to the special data registers (D8008 to D8021), M8014 is turned on. It is turned off when reading completes normally.

■ **M8016: Calendar Data Write Flag**

When M8016 is turned on after writing data to the calendar data (write-only) special data registers (D8015 to D8018), the calendar data (year, month, day, day of the week) is written to the internal clock.

■ **M8017: Clock Data Write Flag**

When M8017 is turned on after writing data to the clock data (write-only) special data registers (D8019 to D8021), the clock data (hours, minutes, seconds) is written to the internal clock.

■ **M8020: Calendar/Clock Data Write Flag**

When M8020 is turned on after writing data to the calendar/clock data (write-only) special data registers (D8015 to D8021), the calendar data (year, month, day, day of the week) and the clock data (hours, minutes, seconds) is written to the internal clock.

■ **M8021: Clock Data Adjust Flag**

When M8021 is turned on, the clock is adjusted with respect to seconds.

- When M8021 is turned on, if the seconds are between 0 and 29, the seconds will be set to 0 and the minutes remain the same.
- When M8021 is turned on, if the seconds are between 30 and 59, the seconds will be set to 0 and 1 will be added to the minutes.

■ **M8022: User Communication Receive Instruction Cancel Flag (Port 1)**

While M8022 is on, user communication (receive instruction) executing on Port 1 is canceled.

■ **M8023: User Communication Receive Instruction Cancel Flag (Port 2)**

While M8023 is on, user communication (receive instruction) executing on Port 2 is canceled.

■ **M8024: BMOV/WSFT Executing Flag**

While the WSFT (word shift) instruction or the BMOV (block move) instruction is executing, M8024 is turned on. When completed, M8024 is turned off.

■ **M8025: Maintain Outputs While Stopped**

When the FC6A Series MICROSmart is stopped while running with M8025 turned on, the outputs maintain their runtime status. When set to run again, M8025 is automatically turned off.

■ **M8026: User Communication Receive Instruction Cancel Flag (Port 3)**

While M8026 is on, user communication (receive instruction) executing on Port 3 is canceled.

■ **M8033, M8145 to M8147, M8170, M8176, M8365 to M8394: User Communication Receive Instruction Cancel**

Flag (Port 4 to 33)

While these flags are on, user communication (receive instruction) being executed on the corresponding port is canceled.

M8033 = User Communication Receive Instruction Cancel Flag (Port 4)

M8145 = User Communication Receive Instruction Cancel Flag (Port 5)

M8146 = User Communication Receive Instruction Cancel Flag (Port 6)

M8147 = User Communication Receive Instruction Cancel Flag (Port 7)

M8170 = User Communication Receive Instruction Cancel Flag (Port 8)

M8176 = User Communication Receive Instruction Cancel Flag (Port 9)

M8365 = User Communication Receive Instruction Cancel Flag (Port 10)

M8366 = User Communication Receive Instruction Cancel Flag (Port 11)

M8367 = User Communication Receive Instruction Cancel Flag (Port 12)

M8370 = User Communication Receive Instruction Cancel Flag (Port 13)

M8371 = User Communication Receive Instruction Cancel Flag (Port 14)

M8372 = User Communication Receive Instruction Cancel Flag (Port 15)

M8373 = User Communication Receive Instruction Cancel Flag (Port 16)

M8374 = User Communication Receive Instruction Cancel Flag (Port 17)

M8375 = User Communication Receive Instruction Cancel Flag (Port 18)

M8376 = User Communication Receive Instruction Cancel Flag (Port 19)

M8377 = User Communication Receive Instruction Cancel Flag (Port 20)

M8380 = User Communication Receive Instruction Cancel Flag (Port 21)

M8381 = User Communication Receive Instruction Cancel Flag (Port 22)

M8382 = User Communication Receive Instruction Cancel Flag (Port 23)

M8383 = User Communication Receive Instruction Cancel Flag (Port 24)

M8384 = User Communication Receive Instruction Cancel Flag (Port 25)

M8385 = User Communication Receive Instruction Cancel Flag (Port 26)

M8386 = User Communication Receive Instruction Cancel Flag (Port 27)

M8387 = User Communication Receive Instruction Cancel Flag (Port 28)

M8390 = User Communication Receive Instruction Cancel Flag (Port 29)

M8391 = User Communication Receive Instruction Cancel Flag (Port 30)

M8392 = User Communication Receive Instruction Cancel Flag (Port 31)

M8393 = User Communication Receive Instruction Cancel Flag (Port 32)

M8394 = User Communication Receive Instruction Cancel Flag (Port 33)

- **M8027 to M8032, M8034 to M8036, M8040 to M8046, M8051 to M8055, M8057 to M8063, M8130, M8131, M8133 to M8136, M8161 to M8167, M8600 to M8602: Special Internal Relays for High-speed Counter**

Special internal relays used for the high-speed counter. For details, see Chapter 5 "High-Speed Counter" in the "FC6A Series MICROSmart User's Manual".

M8027 to M8032, M8130, M8131, M8161, M8162 = High-speed counter (group 1/I0)

M8034 to M8036, M8133, M8165, M8600 to M8602 = High-speed counter (group 3/I3)

M8040 to M8042, M8134, M8166 = High-speed counter (group 4/I4)

M8043 to M8046, M8135, M8136, M8163, M8164 = High-speed counter (group 5/I6)

M8051 to M8055 = High-speed counter (group 2/I1)

M8057 to M8063 = High-speed counter (group 6/I7)

- **M8070: SD Memory Card Mount Status**

When an SD memory card is inserted in the FC6A Series MICROSmart and it has been recognized and can be used, M8070 is turned on. M8070 is turned off if no SD memory card has been inserted or if it is not recognized.

- **M8071: Accessing SD Memory Card**

M8071 is turned on while the SD memory card is being accessed. It is turned off when access has finished.

- **M8072: Unmount SD Memory Card**

When M8072 is turned on, access to the SD memory card is stopped. To make an SD memory card accessible that has had access to it stopped, insert the card once again.

- **M8073: Function Switch Status**

This relay indicates the status of the function switch on the front of the CPU module.

M8073 is on when the function switch is 1. M8073 is off when the function switch is 0.

- **M8074: Battery Voltage Measurement Flag**

This relay indicates the battery voltage measurement status of the backup battery.

 
When M8074 is turned on, the battery voltage starts being measured, and it is turned off when the measurement has finished.

■ M8080 to M8117: Data Link Communication Completed Relay

Special internal relays used for data link communication. For details, see "Data Link Communication" on page 7-1.


■ M8120: Initialize Pulse

When operation (RUN) starts, M8120 is turned on for a period of one scan.




■ M8121: 1-s Clock

 While M8001 is off, M8121 generates clock pulses in a 1 s cycle, with a duty ratio of 1:1 (500 ms on and 500 ms off).




■ M8122: 100-ms Clock

M8122 generates clock pulses in a 100 ms cycle, with a duty ratio of 1:1 (50 ms on and 50 ms off).

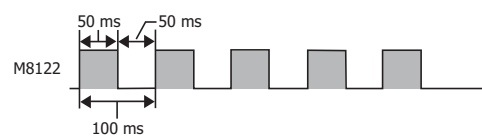

■ M8123: 10-ms Clock

 M8123 generates clock pulses in a 10 ms cycle, with a duty ratio of 1:1 (5 ms on and 5 ms off).



■ M8124: Timer/Counter Preset Value Changed

When timer or counter preset values are changed, M8124 is turned on. When a user program is transferred or when the changed data is cleared, M8124 is turned off.

■ M8125: In-operation Output

M8125 is on during the run status.

■ M8126: Scan ON After Run-Time Download Completes

When the user program is changed during the run status (run-time download), after the download completes, M8126 is turned on for one scan only when the user program starts operation.

■ M8137 to M8143, M8167: Interrupt Input Status

These relays are turned on when the corresponding user interrupt is allowed. These relays are turned off when the user interrupt is prohibited.

M8137 = Interrupt input I0 status

M8140 = Interrupt input I1 status

M8141 = Interrupt input I3 status

M8142 = Interrupt input I4 status

M8143 = Interrupt input I6 status

M8167 = Interrupt input I7 status

■ M8144: Timer Interrupt Status

When the timer interrupt is allowed, M8144 is turned on. When the timer interrupt is prohibited, M8144 is turned off.

■ M8150 to M8152: Comparison Result

M8150 to M8152 turn on according to the comparison results of the CMP= (Compare=) instruction and the ICMP>= (Interval Compare) instruction.

For details, see Chapter 6 "Special Internal Relays M8150, M8151, and M8152 in ICMP>=" in the "FC6A Series MICROSmart Ladder Programming Manual".

■ M8153 to M8160: Catch Input ON/OFF Status

When the rising or falling input edge of the input contact specified as the catch input is detected during a scan, the input contact status is captured. The detectable edges are once per scan.

M8153 = Group 1/I0 status

M8154 = Group 2/I1 status

M8155 = Group 3/I3 status
 M8156 = Group 4/I4 status
 M8157 = Group 5/I6 status
 M8160 = Group 6/I7 status

■ **M8172 to M8175: Transistor Source Output Overcurrent Detection**

When overcurrent output occurs in a transistor protection source output on the CPU module, a special internal relay (M8172 to M8175) is turned on. The following special internal relays have been allocated with four outputs set as one group. If overcurrent output occurs in any of the special internal relays, it is turned on.

Even if the overcurrent output has been cleared, these special internal relays are not reset to off. To reset a special internal relay to off, create programming to do so in the ladder program.

M8172 = Group 1 (Q0 to Q3) status
 M8173 = Group 2 (Q4 to Q7) status
 M8174 = Group 3 (Q10 to Q13) status
 M8175 = Group 4 (Q14 to Q17) status

■ **M8184: Change HMI Module Network Settings Trigger**

When M8184 is turned on, the values stored in D8437 to D8456 are set as the HMI module IP address.

The IP address is not set just by changing the values of D8437 to D8456. For details on changing the HMI module network settings, see "Network settings by HMI module special data registers" on page 3-6.

■ **M8185: In Daylight Saving Time Period**

When the daylight saving time function is enabled, M8185 is on during the daylight saving time period. When outside of the daylight saving time period, M8185 is off.

When the daylight saving time function is disabled, M8185 is off.

■ **M8186: Ethernet Port 1 Executing Auto Ping**

M8186 is on when the auto ping on Ethernet port 1 is operating. M8186 is off when auto ping is stopped. For details on auto ping, see "Auto Ping Function" on page 3-23.

■ **M8187: Ethernet Port 1 Auto Ping Stop Flag**

While M8187 is on, the auto ping on Ethernet port 1 is stopped. While M8187 is off, auto ping is executed. At that time, auto ping is executed from the smallest remote host number specified in the remote host list, regardless of the previous end status.

■ **M8190: Change CPU Module Ethernet Port 1 Network Settings Trigger**

When M8190 is turned on, the values stored in D8303 to D8323 are set as the IP Settings/DNS Settings of Ethernet port 1 on the CPU module.

The IP address is not set just by changing the values of D8303 to D8323. For details on changing the IP Settings/DNS Settings of Ethernet port 1 on the CPU module, see "Network settings by special data registers" on page 3-4.

■ **M8191: SNTP Acquisition Flag**

When M8191 is turned on, the time information is acquired from the SNTP server.

■ **M8192 to M8197: Interrupt Input Edge**

These relays turn on when an interrupt occurs with the rising edge of an interrupt input. They turn off when an interrupt occurs with the falling edge of an interrupt input.

M8192 = Interrupt input I0 edge
 M8193 = Interrupt input I3 edge
 M8194 = Interrupt input I4 edge
 M8195 = Interrupt input I6 edge
 M8196 = Interrupt input I7 edge
 M8197 = Interrupt input I1 edge

■ **M8200 to M8207, M8334 to M8343: User Communication Receive Instruction Cancel Flag**

When M8200 to M8207 or M8334 to M8343 are turned on, the user communication receive instruction being executed is stopped.

M8200 = User communication receive instruction being executed on client connection 1
 M8201 = User communication receive instruction being executed on client connection 2
 M8202 = User communication receive instruction being executed on client connection 3
 M8203 = User communication receive instruction being executed on client connection 4
 M8204 = User communication receive instruction being executed on client connection 5
 M8205 = User communication receive instruction being executed on client connection 6

M8206 = User communication receive instruction being executed on client connection 7
M8207 = User communication receive instruction being executed on client connection 8
M8334 = User communication receive instruction being executed on client connection 9
M8335 = User communication receive instruction being executed on client connection 10
M8336 = User communication receive instruction being executed on client connection 11
M8337 = User communication receive instruction being executed on client connection 12
M8340 = User communication receive instruction being executed on client connection 13
M8341 = User communication receive instruction being executed on client connection 14
M8342 = User communication receive instruction being executed on client connection 15
M8343 = User communication receive instruction being executed on client connection 16

■ **M8211: HMI Module Send E-mail Server Settings Initialization**

When M8211 is turned on, the settings for the send E-mail server on the HMI-Ethernet port are initialized.

■ **M8212 to M8221, M8345 to M8354: Connection Status**

While connected to a network device via the maintenance communication server, user communication server/client, or Modbus TCP server/client, the connection status is turned on. While not connected to a network device, the connection status is turned off.

M8212 = Connection 1
M8213 = Connection 2
M8214 = Connection 3
M8215 = Connection 4
M8216 = Connection 5
M8217 = Connection 6
M8220 = Connection 7
M8221 = Connection 8
M8345 = Connection 9
M8346 = Connection 10
M8347 = Connection 11
M8350 = Connection 12
M8351 = Connection 13
M8352 = Connection 14
M8353 = Connection 15
M8354 = Connection 16

■ **M8222 to M8231, M8355 to M8364: Disconnect User Communication Connection**

When connected to a remote host via user communication, the corresponding connection is disconnected when M8222 to M8231 is turned on. When these special internal relays are on, the connections cannot be established.

M8222 = Connection 1
M8223 = Connection 2
M8224 = Connection 3
M8225 = Connection 4
M8226 = Connection 5
M8227 = Connection 6
M8230 = Connection 7
M8231 = Connection 8
M8355 = Connection 9
M8356 = Connection 10
M8357 = Connection 11
M8360 = Connection 12
M8361 = Connection 13
M8362 = Connection 14
M8363 = Connection 15
M8364 = Connection 16

These relays are enabled only when a user communication client is used.

■ **M8232: HMI Module Connection Information Reference Connection Status**

M8232 is turned on when there is a connection with the connection number specified by D8429. M8232 is turned off when there is no connection.

- **M8250: Download from SD Memory Card Execution Flag**
When M8250 is turned on, a ZLD file is downloaded from the SD memory card. The file that will be downloaded is the ZLD file specified in the autoexec.ini file.
- **M8251: Upload to SD Memory Card Execution Flag**
When M8251 is turned on, a ZLD file is uploaded to the SD memory card.
A ZLD file is created with the file name specified in the autoexec.ini file.
- **M8252: Executing SD Memory Card Download**
M8252 is turned on when starting execution of the download from the SD memory card, and when the download has completed, it is turned off.
- **M8253: Executing SD Memory Card Upload**
M8253 is turned on when starting execution of the upload to the SD memory card, and when the upload has completed, it is turned off.
- **M8254: SD Memory Card Download/Upload Execution Completed Output**
M8254 is turned off when starting execution of the download from the SD memory card or the upload to the SD memory card, and when the download or upload has completed, it is turned on.
- **M8255: SD Memory Card Download/Upload Execution Error Output**
M8255 is updated when execution of the download from the SD memory card or the upload to the SD memory card has completed. M8255 is turned on when D8255 (Download/Upload Execution Status) is a value other than 0.
- **M8260: Write Recipe Execution Flag**
When M8260 is turned on from off, write recipe is executed for all channels of the block number specified by D8260 (Recipe Block Number).
- **M8261: Read Recipe Execution Flag**
When M8261 is turned on from off, read recipe is executed for all channels of the block number specified by D8260 (Recipe Block Number).
- **M8262: Executing Write Recipe**
M8262 is turned on when the write recipe processing starts, and it is turned off when the processing has completed. M8262 also is turned off when read recipe processing starts.
- **M8263: Executing Read Recipe**
M8263 is turned on when the read recipe processing starts, and it is turned off when the processing has completed. M8263 also is turned off when write recipe processing starts.
- **M8264: Recipe Channel Execution Completed Output**
M8264 is turned off when starting to read or write a recipe, and it is turned on when reading or writing a recipe has completed.
- **M8265: Recipe Execution Error Output**
M8265 is turned on when recipe execution has completed and D8264 (Recipe Execution Status) is a value other than 0. For details on recipes, see Chapter 11 "Recipe Function" in the "FC6A Series MICROSmart User's Manual".
- **M8266: Recipe Block Execution Completed Output**
M8266 is turned off when starting to read or write a recipe block, and it is turned on when reading or writing a recipe block has completed.
- **M8267: Read Restriction for Recipe Internal Memory (ROM-Range)**
M8267 is turned on when reading to a recipe block in internal memory (ROM-Range) has completed. When M8267 is on, recipes cannot be read to internal memory (ROM-Range 1) and internal memory (ROM-Range 2). When reading recipes, turn off M8267.
- **M8271: Download MQTT Basic Settings from SD Memory Card Execution Flag**
When M8271 is turned on, the files for MQTT Basic Settings are downloaded. For details on the files for MQTT Basic Settings, see Chapter 11 "SD Memory Card Overview" in the "FC6A Series MICROSmart User's Manual".
- **M8272: Download MQTT Basic Settings from SD Memory Card Execution Completed Output**
M8272 is turned off when downloading the files for MQTT Basic Settings is started, and it is turned on once the download is finished.
- **M8273: Download MQTT Basic Settings from SD Memory Card Error Output**
M8273 is turned off when downloading the files for MQTT Basic Settings is started, and it is turned on if an error occurs during the process.

■ M8300 to M8304: J1939 Communication

Special data registers used in J1939 communication. For details, see "J1939 Communication" on page 8-1.

■ M8311 to M8314: Key Input Status

While the ESC button and direction buttons on the HMI module are simultaneously pressed, the corresponding special internal relays are turned on. When the keys are not pressed, the relays are turned off.

M8311 = ESC key + Up (⬆) key

M8312 = ESC key + Down (⬇) key

M8313 = ESC key + Left (⬅) key

M8314 = ESC key + Right (➡) key

■ M8320: Initialize Expansion Interface Remote Master/Slave

When M8320 is turned on, expansion interface remote master and slave modules along with the expansion modules that are connected to the expansion interface remote slave modules are initialized. Once the initialization is finished, M8320 is automatically turned off and the I/O refresh at the expansion interface remote slave modules will resume.

■ M8331: Ethernet Port 2 Executing Auto Ping

M8331 is on when the auto ping on Ethernet port 2 is operating. M8331 is off when auto ping is stopped. For details on auto ping, see "Auto Ping Function" on page 3-23.

■ M8332: Ethernet Port 2 Auto Ping Stop Flag

While M8332 is on, the auto ping on Ethernet port 2 is stopped. While M8332 is off, auto ping is executed. At that time, auto ping is executed from the smallest remote host number specified in the remote host list, regardless of the previous end status.

■ M8333: Change CPU Module Ethernet Port 2 Network Settings Trigger

When M8333 is turned on, the values stored in D8630 to D8650 are set as the IP Settings/DNS Settings of Ethernet port 2 on the CPU module. The IP address is not set just by changing the values of D8630 to D8650. For details on changing the IP Settings/DNS Settings of Ethernet port 2 on the CPU module, see "Network settings by special data registers" on page 3-4.

■ M8344: Ethernet Port 1 Send E-mail Server Settings Initialization

When M8344 is turned on, the settings for the send E-mail server on the Ethernet port 1 are initialized.

■ M8401: Download Files for Server Functions from SD Memory Card Execution Flag

When M8401 is turned on, the files for Server Functions are downloaded. For details on the files for Server Functions, see Chapter 11 "SD Memory Card" in the "FC6A Series MICROSmart User's Manual".

■ M8402: Download Files for Server Functions from SD Memory Card Execution Completed Output

M8402 is turned off when downloading the files for Server Functions is started, and it is turned on once the download is finished.

■ M8403: Download Files for Server Functions from SD Memory Card Error Output

M8403 is turned off when downloading the files for Server Functions is started, and it is turned on if an error occurs during the process.

■ M8404: Plus CPU Module Web Server Operation Status

M8404 turns on when the Plus CPU module web server starts, and it is turned off in the following cases.

- When the Plus CPU module power is turned on
- At the start of downloading the user program
- At the start of downloading system software
- At the start of downloading the files for the Server Functions

Note: Even if D8303 (CPU Module Ethernet Port 1 IP Settings / DNS Settings Switching) is changed, M8404 is not turned off.

■ M8450: BACnet Communication Bit

While M8450 is on, BACnet communication is performed.

■ M8460: EtherNet/IP Communication Bit

This special internal relay enables or disables EtherNet/IP communication.

OFF: Disable EtherNet/IP communication

ON: Enable EtherNet/IP communication

Special Data Register

Special Data Register Device Addresses



Warning

Do not write to data in the area marked as reserved in the special data registers list. Otherwise the system may not operate correctly.

Note: R/W is an abbreviation for read/write.

The notation for the R/W field is as follows.

R/W: The device can be both read from and written to

R: Read-only

W: Write-only

Device Address	Description	Update Timing	R/W
D8000	Quantity of Inputs	When I/O initialized	R
D8001	Quantity of Outputs	When I/O initialized	R
D8002	CPU Module Type Information	Power-up	R
D8003 D8004	— Reserved —	—	-
D8005	General Error Code	When error occurred	R/W
D8006	User Program Execution Error Code	When error occurred	R
D8007	— Reserved —	—	-
D8008	Calendar/Clock Current Data (Read only)	Year	Every 500 ms
D8009		Month	Every 500 ms
D8010		Day	Every 500 ms
D8011		Day of the Week	Every 500 ms
D8012		Hour	Every 500 ms
D8013		Minute	Every 500 ms
D8014		Second	Every 500 ms
D8015		Calendar/Clock New Data (Write only)	Year
D8016	Month		—
D8017	Day		—
D8018	Day of the Week		—
D8019	Hour		—
D8020	Minute		—
D8021	Second		—
D8022	Scan Time Data	Constant Scan Time Preset Value (1 to 1,000 ms)	—
D8023		Scan Time Current Value (ms)	Every scan
D8024		Scan Time Maximum Value (ms)	At occurrence
D8025		Scan Time Minimum Value (ms)	At occurrence
D8026	Communication Mode Information (Port 1 to Port 3)	Every scan	R
D8027 D8028	— Reserved —	—	-
D8029	System Software Version	Power-up	R
D8030	Communication Cartridge Information	Power-up	R
D8031	Optional Device Connection Information	Power-up	R
D8032	Interrupt Input Jump Destination Label No. (I1)	—	R/W
D8033	Interrupt Input Jump Destination Label No. (I3)	—	R/W
D8034	Interrupt Input Jump Destination Label No. (I4)	—	R/W
D8035	Interrupt Input Jump Destination Label No. (I6)	—	R/W
D8036	Timer Interrupt Jump Destination Label No.	—	R/W
D8037	Number of Connected I/O Modules	When I/O initialized	R
D8038 D8039	— Reserved —	—	—
D8040	Slave Number (Port 4)	—	R/W
D8041	Slave Number (Port 5)	—	R/W
D8042	Slave Number (Port 6)	—	R/W
D8043	Slave Number (Port 7)	—	R/W

2: DEVICES

Device Address	Description	Update Timing	R/W
D8044	Slave Number (Port 8)	—	R/W
D8045	Slave Number (Port 9)	—	R/W
D8046 to D8051	— Reserved —	—	—
D8052	J1939 Communication Error Code	Every scan	R/W
D8053 to D8055	— Reserved —	—	—
D8056	Battery Voltage	—	R
D8057	Analog Volume (AI0)	Every scan	R
D8058	Built-in Analog Input (AI1)	Every scan	R
D8059	Analog Input Status AI0	Every scan	R
D8060	Analog Input Status AI1	Every scan	R
D8061 to D8066	— Reserved —	—	—
D8067	Backlight ON Time	—	R/W
D8068	— Reserved —	—	—
D8069	Slave 1 Communication Status/Error (When Data Link Master Mode) Slave Communication Status/Error (When Data Link Slave Mode)	When error occurred	R
D8070	Slave 2 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8071	Slave 3 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8072	Slave 4 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8073	Slave 5 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8074	Slave 6 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8075	Slave 7 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8076	Slave 8 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8077	Slave 9 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8078	Slave 10 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8079	Slave 11 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8080	Slave 12 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8081	Slave 13 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8082	Slave 14 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8083	Slave 15 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8084	Slave 16 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8085	Slave 17 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8086	Slave 18 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8087	Slave 19 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8088	Slave 20 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8089	Slave 21 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8090	Slave 22 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8091	Slave 23 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8092	Slave 24 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8093	Slave 25 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8094	Slave 26 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8095	Slave 27 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8096	Slave 28 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8097	Slave 29 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8098	Slave 30 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8099	Slave 31 Communication Status/Error (When Data Link Master Mode)	When error occurred	R
D8100	Slave Number (Port 1)	—	R/W
D8101	— Reserved —	—	—
D8102	Slave Number (Port 2)	—	R/W
D8103	Slave Number (Port 3)	—	R/W
D8104	Control Signal Status (Port 1 to 5)	Every scan	R
D8105	RS232C DSR Input Control Signal Option (Port 1 to 5)	Every scan	R/W
D8106	RS232C DTR Output Control Signal Option (Port 1 to 5)	Every scan	R/W

Device Address	Description		Update Timing	R/W	
D8107 to D8119	— Reserved —		—	—	
D8120	HMI Module Information	Type ID/Status	—	R	
D8121		System Software Version	—	R	
D8122	Cartridge Slot 1 Information	Type ID/Status	—	R	
D8123		System Software Version	—	R	
D8124	Cartridge Slot 2 Information	Type ID/Status	—	R	
D8125		System Software Version	—	R	
D8126	Cartridge Slot 3 Information	Type ID/Status	—	R	
D8127		System Software Version	—	R	
D8128 to D8169	— Reserved —		—	—	
D8170	Analog I/O Cartridge I/O AI2/AQ2		Every scan	R	
D8171	Analog I/O Cartridge I/O AI3/AQ3		Every scan	R	
D8172	Analog I/O Cartridge Status AI2/AQ2		Every scan	R	
D8173	Analog I/O Cartridge Status AI3/AQ3		Every scan	R	
D8174	Analog I/O Cartridge I/O AI4/AQ4		Every scan	R	
D8175	Analog I/O Cartridge I/O AI5/AQ5		Every scan	R	
D8176	Analog I/O Cartridge Status AI4/AQ4		Every scan	R	
D8177	Analog I/O Cartridge Status AI5/AQ5		Every scan	R	
D8178	Analog I/O Cartridge I/O AI6/AQ6		Every scan	R	
D8179	Analog I/O Cartridge I/O AI7/AQ7		Every scan	R	
D8180	Analog I/O Cartridge Status AI6/AQ6		Every scan	R	
D8181	Analog I/O Cartridge Status AI7/AQ7		Every scan	R	
D8182 to D8191	— Reserved —		—	—	
D8192	High-speed Counter (Group 2/I1)	High Word	Current Value/Frequency Measurement (I1) Current Value	Every scan	R
D8193		Low Word		Every scan	R
D8194		High Word	Preset Value	—	R/W
D8195		Low Word		—	R/W
D8196		High Word	Reset Value	—	R/W
D8197		Low Word		—	R/W
D8198	High-speed Counter (Group 6/I7)	High Word	Current Value/Frequency Measurement (I7) Current Value	Every scan	R
D8199		Low Word		Every scan	R
D8200		High Word	Preset Value	—	R/W
D8201		Low Word		—	R/W
D8202		High Word	Reset Value	—	R/W
D8203		Low Word		—	R/W
D8204	Control Signal Status (Port 6 to 9)		Every scan	R	
D8205	RS232C DSR Input Control Signal Option (Port 6 to 9)		Every scan	R/W	
D8206	RS232C DTR Output Control Signal Option (Port 6 to 9)		Every scan	R/W	
D8207 to D8209	— Reserved —		—	—	
D8210	High-speed Counter (Group 1/I0)	High Word	Current Value/Frequency Measurement (I0) Current Value	Every scan	R
D8211		Low Word		Every scan	R
D8212		High Word	Preset Value	—	R/W
D8213		Low Word		—	R/W
D8214	Interrupt Input Jump Destination Label No. (I7)		—	R/W	
D8215	Interrupt Input Jump Destination Label No. (I0)		—	R/W	
D8216	High-speed Counter (Group 1/I0)	High Word	Reset Value	—	R/W
D8217		Low Word		—	R/W
D8218	High-speed Counter (Group 3/I3)	High Word	Current Value/Frequency Measurement (I3) Current Value	Every scan	R
D8219		Low Word		Every scan	R
D8220		High Word	Preset Value	—	R/W
D8221		Low Word		—	R/W

2: DEVICES

Device Address	Description			Update Timing	R/W
D8222	High-speed Counter (Group 4/I4)	High Word	Current Value/Frequency Measurement (I4) Current Value	Every scan	R
D8223		Low Word		Every scan	R
D8224	(Group 4/I4)	High Word	Preset Value	—	R/W
D8225		Low Word		—	R/W
D8226	High-speed Counter (Group 5/I6)	High Word	Current Value/Frequency Measurement (I6) Current Value	Every scan	R
D8227		Low Word		Every scan	R
D8228	(Group 5/I6)	High Word	Preset Value	—	R/W
D8229		Low Word		—	R/W
D8230 D8231	— Reserved —			—	—
D8232	High-speed Counter (Group 5/I6)	High Word	Reset Value	—	R/W
D8233		Low Word		—	R/W
D8234	High-speed Counter (Group 3/I3)	High Word	Reset Value	—	R/W
D8235		Low Word		—	R/W
D8236	High-speed Counter (Group 4/I4)	High Word	Reset Value	—	R/W
D8237		Low Word		—	R/W
D8238	— Reserved —			—	—
D8239	Absolute Position Control Status			Every scan	R
D8240	Absolute Position Counter 1	High Word	Absolute Position	Every scan	R
D8241		Low Word		Every scan	R
D8242	Absolute Position Counter 2	High Word	Absolute Position	Every scan	R
D8243		Low Word		Every scan	R
D8244	Absolute Position Counter 3	High Word	Absolute Position	Every scan	R
D8245		Low Word		Every scan	R
D8246	Absolute Position Counter 4	High Word	Absolute Position	Every scan	R
D8247		Low Word		Every scan	R
D8248 D8249	— Reserved —			—	—
D8250	Read SD Memory Card Capacity			Every scan	R
D8251	Read SD Memory Card Free Capacity			Every scan	R
D8252 D8253	— Reserved —			—	—
D8254	SD Memory Card Download/Upload Execution Information			When processing has completed	R
D8255	SD Memory Card Download/Upload Execution Status			When processing has completed	R
D8256	Download MQTT Basic Settings from SD Memory Card Execution Information			When processing has completed	R
D8257	Download MQTT Basic Settings from SD Memory Card Execution Error Information			When processing has completed	R
D8258 to D8259	— Reserved —			—	—
D8260	Recipe Block Number			—	R/W
D8261	Recipe Execution Block Number			When recipe execution has completed	R
D8262	Recipe Execution Channel No.			When recipe execution has completed	R
D8263	Recipe Execution Operation			When recipe execution has completed	R
D8264	Recipe Execution Status			When recipe execution has completed	R
D8265	Recipe Execution Error Information			When recipe execution has completed	R

Device Address	Description	Update Timing	R/W
D8266	Recipe Internal Memory (ROM-Range 1) Read Count	When recipe execution has completed	R
D8267	Recipe Internal Memory (ROM-Range 2) Read Count	When recipe execution has completed	R
D8268	Remote Host Number of Connection 1 (1 to 255)	—	R/W
D8269	Remote Host Number of Connection 2 (1 to 255)	—	R/W
D8270	Remote Host Number of Connection 3 (1 to 255)	—	R/W
D8271	Remote Host Number of Connection 4 (1 to 255)	—	R/W
D8272	Remote Host Number of Connection 5 (1 to 255)	—	R/W
D8273	Remote Host Number of Connection 6 (1 to 255)	—	R/W
D8274	Remote Host Number of Connection 7 (1 to 255)	—	R/W
D8275	Remote Host Number of Connection 8 (1 to 255)	—	R/W
D8276 D8277	— Reserved —	—	—
D8278	Communication Mode Information	Connection 1 to 4	R
D8279		Connection 5 to 8	R
D8280 to D8283	— Reserved —	—	—
D8284	Communication Mode Information (HMI Connection)	HMI Connection 1 to 4	R
D8285		HMI Connection 5 to 8	R
D8286 to D8302	— Reserved —	—	—
D8303	CPU Module Ethernet Port 1 IP Settings/DNS Settings Switching	—	R/W
D8304	CPU Module Ethernet Port 1 IP Address (Write-only)	—	W
D8305		—	W
D8306		—	W
D8307		—	W
D8308		—	W
D8309		—	W
D8310	CPU Module Ethernet Port 1 Subnet Mask (Write-only)	—	W
D8311		—	W
D8312		—	W
D8313	CPU Module Ethernet Port 1 Default Gateway (Write-only)	—	W
D8314		—	W
D8315		—	W
D8316		—	W
D8317	CPU Module Ethernet Port 1 Preferred DNS Server (Write-only)	—	W
D8318		—	W
D8319		—	W
D8320	CPU Module Ethernet Port 1 Alternate DNS Server (Write-only)	—	W
D8321		—	W
D8322		—	W
D8323		—	W
D8324		—	W
D8325	CPU Module Ethernet Port 1 MAC Address (Current Value Read-only)	Every 1 s	R
D8326		Every 1 s	R
D8327		Every 1 s	R
D8328		Every 1 s	R
D8329		Every 1 s	R
D8330		Every 1 s	R
D8331	CPU Module Ethernet Port 1 IP Address (Current Value Read-only)	Every 1 s	R
D8332		Every 1 s	R
D8333		Every 1 s	R

2: DEVICES

Device Address	Description	Update Timing	R/W
D8334	CPU Module Ethernet Port 1 Subnet Mask (Current Value Read-only)	Every 1 s	R
D8335		Every 1 s	R
D8336		Every 1 s	R
D8337		Every 1 s	R
D8338	CPU Module Ethernet Port 1 Default Gateway (Current Value Read-only)	Every 1 s	R
D8339		Every 1 s	R
D8340		Every 1 s	R
D8341		Every 1 s	R
D8342	CPU Module Ethernet Port 1 Preferred DNS Server (Current Value Read-only)	Every 1 s	R
D8343		Every 1 s	R
D8344		Every 1 s	R
D8345		Every 1 s	R
D8346	CPU Module Ethernet Port 1 Alternate DNS Server (Current Value Read-only)	Every 1 s	R
D8347		Every 1 s	R
D8348		Every 1 s	R
D8349		Every 1 s	R
D8350	Connection 1 Connected IP Address	Every 1 s	R
D8351		Every 1 s	R
D8352		Every 1 s	R
D8353	Connection 2 Connected IP Address	Every 1 s	R
D8354		Every 1 s	R
D8355		Every 1 s	R
D8356		Every 1 s	R
D8357	Connection 3 Connected IP Address	Every 1 s	R
D8358		Every 1 s	R
D8359		Every 1 s	R
D8360		Every 1 s	R
D8361	Connection 4 Connected IP Address	Every 1 s	R
D8362		Every 1 s	R
D8363		Every 1 s	R
D8364		Every 1 s	R
D8365	Connection 5 Connected IP Address	Every 1 s	R
D8366		Every 1 s	R
D8367		Every 1 s	R
D8368		Every 1 s	R
D8369	Connection 6 Connected IP Address	Every 1 s	R
D8370		Every 1 s	R
D8371		Every 1 s	R
D8372		Every 1 s	R
D8373	Connection 7 Connected IP Address	Every 1 s	R
D8374		Every 1 s	R
D8375		Every 1 s	R
D8376		Every 1 s	R
D8377	Connection 8 Connected IP Address	Every 1 s	R
D8378		Every 1 s	R
D8379		Every 1 s	R
D8380		Every 1 s	R
D8381	HMI Module MAC Address (Current Value Read-only)	Every 1 s	R
D8382		Every 1 s	R
D8383		Every 1 s	R
D8384		Every 1 s	R
D8385		Every 1 s	R
D8386		Every 1 s	R
D8387	Every 1 s	R	

Device Address	Description	Update Timing	R/W	
D8388	HMI Module IP Address (Current Value Read-only)	Every 1 s	R	
D8389		Every 1 s	R	
D8390		Every 1 s	R	
D8391		Every 1 s	R	
D8392	HMI Module Subnet Mask (Current Value Read-only)	Every 1 s	R	
D8393		Every 1 s	R	
D8394		Every 1 s	R	
D8395		Every 1 s	R	
D8396	HMI Module Default Gateway (Current Value Read-only)	Every 1 s	R	
D8397		Every 1 s	R	
D8398		Every 1 s	R	
D8399		Every 1 s	R	
D8400	HMI Module Preferred DNS Server (Current Value Read-only)	Every 1 s	R	
D8401		Every 1 s	R	
D8402		Every 1 s	R	
D8403		Every 1 s	R	
D8404	HMI Module Alternate DNS Server (Current Value Read-only)	Every 1 s	R	
D8405		Every 1 s	R	
D8406		Every 1 s	R	
D8407		Every 1 s	R	
D8408 to D8412	— Reserved —	—	—	
D8413	Time Zone Offset	—	R/W	
D8414	SNTP Operation Status	—	R	
D8415	SNTP Access Elapsed Time	—	R	
D8416 to D8428	— Reserved —	—	—	
D8429	HMI Module Connection Information Reference	Connection No.	R/W	
D8430		Connected IP Address	Every 1 s	R
D8431			Every 1 s	R
D8432			Every 1 s	R
D8433			Every 1 s	R
D8434	Connected Port No.	Every 1 s	R	
D8435 D8436	— Reserved —	—	—	
D8437	HMI Module IP Address (Write-only)	—	W	
D8438		—	W	
D8439		—	W	
D8440		—	W	
D8441	HMI Module Subnet Mask (Write-only)	—	W	
D8442		—	W	
D8443		—	W	
D8444		—	W	
D8445	HMI Module Default Gateway (Write-only)	—	W	
D8446		—	W	
D8447		—	W	
D8448		—	W	
D8449	HMI Module Preferred DNS Server (Write-only)	—	W	
D8450		—	W	
D8451		—	W	
D8452		—	W	
D8453	HMI Module Alternate DNS Server (Write-only)	—	W	
D8454		—	W	
D8455		—	W	
D8456		—	W	

2: DEVICES

Device Address	Description	Update Timing	R/W
D8457	EMAIL Instruction Detailed Error Information (HMI-Ethernet Port)	—	R
D8458 to D8469	— Reserved —	—	—
D8470	Expansion Module Slot 1 Information	Type ID/Status	R
D8471		System Software Version/Position Information	R
D8472	Expansion Module Slot 2 Information	Type ID/Status	R
D8473		System Software Version/Position Information	R
D8474	Expansion Module Slot 3 Information	Type ID/Status	R
D8475		System Software Version/Position Information	R
D8476	Expansion Module Slot 4 Information	Type ID/Status	R
D8477		System Software Version/Position Information	R
D8478	Expansion Module Slot 5 Information	Type ID/Status	R
D8479		System Software Version/Position Information	R
D8480	Expansion Module Slot 6 Information	Type ID/Status	R
D8481		System Software Version/Position Information	R
D8482	Expansion Module Slot 7 Information	Type ID/Status	R
D8483		System Software Version/Position Information	R
D8484	Expansion Module Slot 8 Information	Type ID/Status	R
D8485		System Software Version/Position Information	R
D8486	Expansion Module Slot 9 Information	Type ID/Status	R
D8487		System Software Version/Position Information	R
D8488	Expansion Module Slot 10 Information	Type ID/Status	R
D8489		System Software Version/Position Information	R
D8490	Expansion Module Slot 11 Information	Type ID/Status	R
D8491		System Software Version/Position Information	R
D8492	Expansion Module Slot 12 Information	Type ID/Status	R
D8493		System Software Version/Position Information	R
D8494	Expansion Module Slot 13 Information	Type ID/Status	R
D8495		System Software Version/Position Information	R
D8496	Expansion Module Slot 14 Information	Type ID/Status	R
D8497		System Software Version/Position Information	R
D8498	Expansion Module Slot 15 Information	Type ID/Status	R
D8499		System Software Version/Position Information	R
D8500	Expansion Module Slot 16 Information	Type ID/Status	R
D8501		System Software Version/Position Information	R
D8502	Expansion Module Slot 17 Information	Type ID/Status	R
D8503		System Software Version/Position Information	R
D8504	Expansion Module Slot 18 Information	Type ID/Status	R
D8505		System Software Version/Position Information	R
D8506	Expansion Module Slot 19 Information	Type ID/Status	R
D8507		System Software Version/Position Information	R
D8508	Expansion Module Slot 20 Information	Type ID/Status	R
D8509		System Software Version/Position Information	R
D8510	Expansion Module Slot 21 Information	Type ID/Status	R
D8511		System Software Version/Position Information	R
D8512	Expansion Module Slot 22 Information	Type ID/Status	R
D8513		System Software Version/Position Information	R
D8514	Expansion Module Slot 23 Information	Type ID/Status	R
D8515		System Software Version/Position Information	R
D8516	Expansion Module Slot 24 Information	Type ID/Status	R
D8517		System Software Version/Position Information	R
D8518	Expansion Module Slot 25 Information	Type ID/Status	R
D8519		System Software Version/Position Information	R
D8520	Expansion Module Slot 26 Information	Type ID/Status	R
D8521		System Software Version/Position Information	R

Device Address	Description	Update Timing	R/W	
D8522	Expansion Module Slot 27	Type ID/Status	—	R
D8523	Information	System Software Version/Position Information	—	R
D8524	Expansion Module Slot 28	Type ID/Status	—	R
D8525	Information	System Software Version/Position Information	—	R
D8526	Expansion Module Slot 29	Type ID/Status	—	R
D8527	Information	System Software Version/Position Information	—	R
D8528	Expansion Module Slot 30	Type ID/Status	—	R
D8529	Information	System Software Version/Position Information	—	R
D8530	Expansion Module Slot 31	Type ID/Status	—	R
D8531	Information	System Software Version/Position Information	—	R
D8532	Expansion Module Slot 32	Type ID/Status	—	R
D8533	Information	System Software Version/Position Information	—	R
D8534	Expansion Module Slot 33	Type ID/Status	—	R
D8535	Information	System Software Version/Position Information	—	R
D8536	Expansion Module Slot 34	Type ID/Status	—	R
D8537	Information	System Software Version/Position Information	—	R
D8538	Expansion Module Slot 35	Type ID/Status	—	R
D8539	Information	System Software Version/Position Information	—	R
D8530	Expansion Module Slot 36	Type ID/Status	—	R
D8541	Information	System Software Version/Position Information	—	R
D8542	Expansion Module Slot 37	Type ID/Status	—	R
D8543	Information	System Software Version/Position Information	—	R
D8544	Expansion Module Slot 38	Type ID/Status	—	R
D8545	Information	System Software Version/Position Information	—	R
D8546	Expansion Module Slot 39	Type ID/Status	—	R
D8547	Information	System Software Version/Position Information	—	R
D8548	Expansion Module Slot 40	Type ID/Status	—	R
D8549	Information	System Software Version/Position Information	—	R
D8550	Expansion Module Slot 41	Type ID/Status	—	R
D8551	Information	System Software Version/Position Information	—	R
D8552	Expansion Module Slot 42	Type ID/Status	—	R
D8553	Information	System Software Version/Position Information	—	R
D8554	Expansion Module Slot 43	Type ID/Status	—	R
D8555	Information	System Software Version/Position Information	—	R
D8556	Expansion Module Slot 44	Type ID/Status	—	R
D8557	Information	System Software Version/Position Information	—	R
D8558	Expansion Module Slot 45	Type ID/Status	—	R
D8559	Information	System Software Version/Position Information	—	R
D8560	Expansion Module Slot 46	Type ID/Status	—	R
D8561	Information	System Software Version/Position Information	—	R
D8562	Expansion Module Slot 47	Type ID/Status	—	R
D8563	Information	System Software Version/Position Information	—	R
D8564	Expansion Module Slot 48	Type ID/Status	—	R
D8565	Information	System Software Version/Position Information	—	R
D8566	Expansion Module Slot 49	Type ID/Status	—	R
D8567	Information	System Software Version/Position Information	—	R
D8568	Expansion Module Slot 50	Type ID/Status	—	R
D8569	Information	System Software Version/Position Information	—	R
D8570	Expansion Module Slot 51	Type ID/Status	—	R
D8571	Information	System Software Version/Position Information	—	R
D8572	Expansion Module Slot 52	Type ID/Status	—	R
D8573	Information	System Software Version/Position Information	—	R
D8574	Expansion Module Slot 53	Type ID/Status	—	R
D8575	Information	System Software Version/Position Information	—	R

2: DEVICES

Device Address	Description	Update Timing	R/W	
D8576	Expansion Module Slot 54	Type ID/Status	—	R
D8577	Information	System Software Version/Position Information	—	R
D8578	Expansion Module Slot 55	Type ID/Status	—	R
D8579	Information	System Software Version/Position Information	—	R
D8580	Expansion Module Slot 56	Type ID/Status	—	R
D8581	Information	System Software Version/Position Information	—	R
D8582	Expansion Module Slot 57	Type ID/Status	—	R
D8583	Information	System Software Version/Position Information	—	R
D8584	Expansion Module Slot 58	Type ID/Status	—	R
D8585	Information	System Software Version/Position Information	—	R
D8586	Expansion Module Slot 59	Type ID/Status	—	R
D8587	Information	System Software Version/Position Information	—	R
D8588	Expansion Module Slot 60	Type ID/Status	—	R
D8589	Information	System Software Version/Position Information	—	R
D8590	Expansion Module Slot 61	Type ID/Status	—	R
D8591	Information	System Software Version/Position Information	—	R
D8592	Expansion Module Slot 62	Type ID/Status	—	R
D8593	Information	System Software Version/Position Information	—	R
D8594	Expansion Module Slot 63	Type ID/Status	—	R
D8595	Information	System Software Version/Position Information	—	R
D8596		Type ID/Status	—	R
D8597	Expansion Interface Remote Master Module Slot Information	System Software Version/ Number of Connected Expansion Interface Remote Slave Modules	—	R
D8598	Expansion Interface Remote Slave Module (Node 1) Slot Information	Type ID/Status	—	R
D8599		System Software Version/ Expansion Module Connection Information	—	R
D8600	Expansion Interface Remote Slave Module (Node 2) Slot Information	Type ID/Status	—	R
D8601		System Software Version/ Expansion Module Connection Information	—	R
D8602	Expansion Interface Remote Slave Module (Node 3) Slot Information	Type ID/Status	—	R
D8603		System Software Version/ Expansion Module Connection Information	—	R
D8604	Expansion Interface Remote Slave Module (Node 4) Slot Information	Type ID/Status	—	R
D8605		System Software Version/ Expansion Module Connection Information	—	R
D8606	Expansion Interface Remote Slave Module (Node 5) Slot Information	Type ID/Status	—	R
D8607		System Software Version/ Expansion Module Connection Information	—	R
D8608	Expansion Interface Remote Slave Module (Node 6) Slot Information	Type ID/Status	—	R
D8609		System Software Version/ Expansion Module Connection Information	—	R
D8610	Expansion Interface Remote Slave Module (Node 7) Slot Information	Type ID/Status	—	R
D8611		System Software Version/ Expansion Module Connection Information	—	R
D8612	Expansion Interface Remote Slave Module (Node 8) Slot Information	Type ID/Status	—	R
D8613		System Software Version/ Expansion Module Connection Information	—	R
D8614	Expansion Interface Remote Slave Module (Node 9) Slot Information	Type ID/Status	—	R
D8615		System Software Version/ Expansion Module Connection Information	—	R
D8616	Expansion Interface Remote Slave Module (Node 10) Slot Information	Type ID/Status	—	R
D8617		System Software Version/ Expansion Module Connection Information	—	R
D8618	Refresh Time of Expansion Interface Remote Master/Slave Modules Current Value	Every scan		R
D8619	Refresh Time of Expansion Interface Remote Master/Slave Modules Maximum Value	Every scan		R

Device Address	Description	Update Timing	R/W
D8620 to D8629	— Reserved —	—	—
D8630	CPU Module Ethernet Port 2 IP Settings/DNS Settings Switching	—	R/W
D8631	CPU Module Ethernet Port 2 IP Address (Write-only)	—	W
D8632		—	W
D8633		—	W
D8634		—	W
D8635	CPU Module Ethernet Port 2 Subnet Mask (Write-only)	—	W
D8636		—	W
D8637		—	W
D8638		—	W
D8639	CPU Module Ethernet Port 2 Default Gateway (Write-only)	—	W
D8640		—	W
D8641		—	W
D8642		—	W
D8643	CPU Module Ethernet Port 2 Preferred DNS Server (Write-only)	—	W
D8644		—	W
D8645		—	W
D8646		—	W
D8647	CPU Module Ethernet Port 2 Alternate DNS Server (Write-only)	—	W
D8648		—	W
D8649		—	W
D8650		—	W
D8651	CPU Module Ethernet Port 2 MAC Address (Current Value Read-only)	Every 1 s	R
D8652		Every 1 s	R
D8653		Every 1 s	R
D8654		Every 1 s	R
D8655		Every 1 s	R
D8656		Every 1 s	R
D8657	CPU Module Ethernet Port 2 IP Address (Current Value Read-only)	Every 1 s	R
D8658		Every 1 s	R
D8659		Every 1 s	R
D8660		Every 1 s	R
D8661	CPU Module Ethernet Port 2 Subnet Mask (Current Value Read-only)	Every 1 s	R
D8662		Every 1 s	R
D8663		Every 1 s	R
D8664		Every 1 s	R
D8665	CPU Module Ethernet Port 2 Default Gateway (Current Value Read-only)	Every 1 s	R
D8666		Every 1 s	R
D8667		Every 1 s	R
D8668		Every 1 s	R
D8669	CPU Module Ethernet Port 2 Preferred DNS Server (Current Value Read-only)	Every 1 s	R
D8670		Every 1 s	R
D8671		Every 1 s	R
D8672		Every 1 s	R
D8673	CPU Module Ethernet Port 2 Alternate DNS Server (Current Value Read-only)	Every 1 s	R
D8674		Every 1 s	R
D8675		Every 1 s	R
D8676		Every 1 s	R
D8677	Connection 9 Connected IP Address	Every 1 s	R
D8678		Every 1 s	R
D8679		Every 1 s	R
D8680		Every 1 s	R

2: DEVICES

Device Address	Description	Update Timing	R/W
D8681	Connection 10 Connected IP Address	Every 1 s	R
D8682		Every 1 s	R
D8683		Every 1 s	R
D8684		Every 1 s	R
D8685	Connection 11 Connected IP Address	Every 1 s	R
D8686		Every 1 s	R
D8687		Every 1 s	R
D8688		Every 1 s	R
D8689	Connection 12 Connected IP Address	Every 1 s	R
D8690		Every 1 s	R
D8691		Every 1 s	R
D8692		Every 1 s	R
D8693	Connection 13 Connected IP Address	Every 1 s	R
D8694		Every 1 s	R
D8695		Every 1 s	R
D8696		Every 1 s	R
D8697	Connection 14 Connected IP Address	Every 1 s	R
D8698		Every 1 s	R
D8699		Every 1 s	R
D8700		Every 1 s	R
D8701	Connection 15 Connected IP Address	Every 1 s	R
D8702		Every 1 s	R
D8703		Every 1 s	R
D8704		Every 1 s	R
D8705	Connection 16 Connected IP Address	Every 1 s	R
D8706		Every 1 s	R
D8707		Every 1 s	R
D8708		Every 1 s	R
D8709 to D8716	— Reserved —	—	—
D8717	Control Signal Status (Port 10 to 13)	Every scan	R
D8718	RS232C DSR Input Control Signal Option (Port 10 to 13)	Every scan	R/W
D8719	RS232C DTR Output Control Signal Option (Port 10 to 13)	Every scan	R/W
D8720	Control Signal Status (Port 14 to 17)	Every scan	R
D8721	RS232C DSR Input Control Signal Option (Port 14 to 17)	Every scan	R/W
D8722	RS232C DTR Output Control Signal Option (Port 14 to 17)	Every scan	R/W
D8723	Control Signal Status (Port 18 to 21)	Every scan	R
D8724	RS232C DSR Input Control Signal Option (Port 18 to 21)	Every scan	R/W
D8725	RS232C DTR Output Control Signal Option (Port 18 to 21)	Every scan	R/W
D8726	Control Signal Status (Port 22 to 25)	Every scan	R
D8727	RS232C DSR Input Control Signal Option (Port 22 to 25)	Every scan	R/W
D8728	RS232C DTR Output Control Signal Option (Port 22 to 25)	Every scan	R/W
D8729	Control Signal Status (Port 26 to 29)	Every scan	R
D8730	RS232C DSR Input Control Signal Option (Port 26 to 29)	Every scan	R/W
D8731	RS232C DTR Output Control Signal Option (Port 26 to 29)	Every scan	R/W
D8732	Control Signal Status (Port 30 to 33)	Every scan	R
D8733	RS232C DSR Input Control Signal Option (Port 30 to 33)	Every scan	R/W
D8734	RS232C DTR Output Control Signal Option (Port 30 to 33)	Every scan	R/W
D8735	Slave Number (Port 10)	—	R/W
D8736	Slave Number (Port 11)	—	R/W
D8737	Slave Number (Port 12)	—	R/W
D8738	Slave Number (Port 13)	—	R/W
D8739	Slave Number (Port 14)	—	R/W
D8740	Slave Number (Port 15)	—	R/W
D8741	Slave Number (Port 16)	—	R/W

Device Address	Description	Update Timing	R/W
D8742	Slave Number (Port 17)	—	R/W
D8743	Slave Number (Port 18)	—	R/W
D8744	Slave Number (Port 19)	—	R/W
D8745	Slave Number (Port 20)	—	R/W
D8746	Slave Number (Port 21)	—	R/W
D8747	Slave Number (Port 22)	—	R/W
D8748	Slave Number (Port 23)	—	R/W
D8749	Slave Number (Port 24)	—	R/W
D8750	Slave Number (Port 25)	—	R/W
D8751	Slave Number (Port 26)	—	R/W
D8752	Slave Number (Port 27)	—	R/W
D8753	Slave Number (Port 28)	—	R/W
D8754	Slave Number (Port 29)	—	R/W
D8755	Slave Number (Port 30)	—	R/W
D8756	Slave Number (Port 31)	—	R/W
D8757	Slave Number (Port 32)	—	R/W
D8758	Slave Number (Port 33)	—	R/W
D8759	EMAIL Instruction Detailed Error Information (Ethernet Port 1)	—	R
D8760	Communication Mode Information	Connection 9 to 12	R
D8761		Connection 13 to 16	R
D8762 to D8773	— Reserved —	—	—
D8774	Remote Host Number of Connection 9 (1 to 255)	—	R/W
D8775	Remote Host Number of Connection 10 (1 to 255)	—	R/W
D8776	Remote Host Number of Connection 11 (1 to 255)	—	R/W
D8777	Remote Host Number of Connection 12 (1 to 255)	—	R/W
D8778	Remote Host Number of Connection 13 (1 to 255)	—	R/W
D8779	Remote Host Number of Connection 14 (1 to 255)	—	R/W
D8780	Remote Host Number of Connection 15 (1 to 255)	—	R/W
D8781	Remote Host Number of Connection 16 (1 to 255)	—	R/W
D8782	BACnet Operation Status	—	R
D8783	BACnet Error Information	—	R
D8784 to D8789	— Reserved —	—	—
D8790	EtherNet/IP Operation Status	—	R
D8791	EtherNet/IP Error Information	—	R
D8792 to D8819	— Reserved —	—	—
D8820	Download Files for Sever Functions from SD Memory Card Execution Information	When processing has completed	R
D8821	Download Files for Sever Functions from SD Memory Card Execution Error Information	When processing has completed	R
D8822	Web Server Current Number of Connections (Plus CPU Module)	Every 1 s	R
D8823 to D8899	— Reserved —	—	—

Supplementary Descriptions of the Special Data Registers

■ D8000: Quantity of Inputs

The number of FC6A Series MICROSmart inputs is written to this register.

The total number of inputs for the CPU module and the expansion modules is written to this register.

■ D8001: Quantity of Outputs

The number of FC6A Series MICROSmart outputs is written to this register.

The total number of outputs for the CPU module and the expansion modules is written to this register.

■ D8002: CPU Module Type Information

CPU module type information is written this register.

- 0 (00h): 16-I/O type
- 1 (01h): 24-I/O type
- 2 (02h): 40-I/O type (All-in-One CPU module)
- 18 (12h): 40-I/O type (CAN J1939 All-in-One CPU module)
- 32 (20h): Plus 16-I/O type
- 33 (21h): Plus 32-I/O type

■ **D8005: General Error Code**

FC6A Series MICROSmart general error information is written to this register. When a general error occurs, the bit corresponding to the error occurred turns on. The general error and user program execution error can be cleared by writing "1" to the most significant bit of D8005. For details on general error codes, see Chapter 13 "General Error Codes" in the "FC6A Series MICROSmart User's Manual".

■ **D8006: User Program Execution Error Code**

FC6A Series MICROSmart user program execution error information is written to this register. When a user program execution error occurs, the error code corresponding to the error that occurred is written to this register. For details on user program execution errors, see Chapter 13 "User Program Execution Error" in the "FC6A Series MICROSmart User's Manual".

■ **D8008 to D8021: Calendar/Clock Data**


D8008 through D8021 are used for reading calendar/clock data from the internal clock and for writing calendar/clock data to the internal clock. For details on the calendar/clock data, see Chapter 5 "Clock Function" in the "FC6A Series MICROSmart User's Manual".

■ **D8022 to D8025: Scan Time Data**

D8022 through D8025 are special data registers for checking the scan time and configuring the constant scan time. For details on the scan time, see Chapter 5 "Constant Scan Time" in the "FC6A Series MICROSmart User's Manual".

■ **D8026: Communication Mode Information (Port 1 to 3)**

This register indicates communication mode information for Port 1 to Port 3. The allocation of communication ports in the device (bit assignment) is as follows.

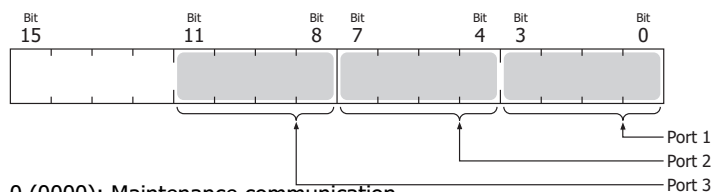


- 0 (0000): Maintenance communication
- 1 (0001): User communication
- 2 (0010): Modbus RTU master
- 3 (0011): Modbus RTU slave
- 4 (0100): Data link communication

■ **D8029: System Software Version**

The CPU module system software version number is written to this register.

■ **D8030: Communication Cartridge Information**


This register indicates information about the communication cartridges in Port 2 and Port 3. The allocation of communication ports in the device (bit assignment) is as follows.

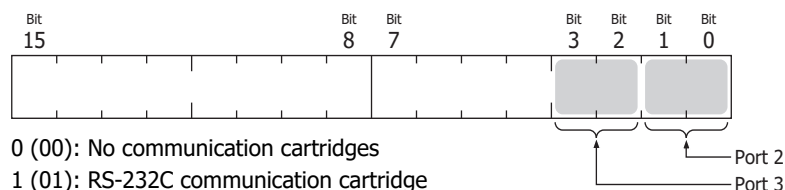

- 0 (00): No communication cartridges
- 1 (01): RS-232C communication cartridge
- 2 (10): RS-485 communication cartridge
- 3 (11): Bluetooth communication cartridge

■ **D8031: Optional Device Connection Information**

Optional device connection information is written to this register. The allocation of bits in the device (bit assignment) is as follows.

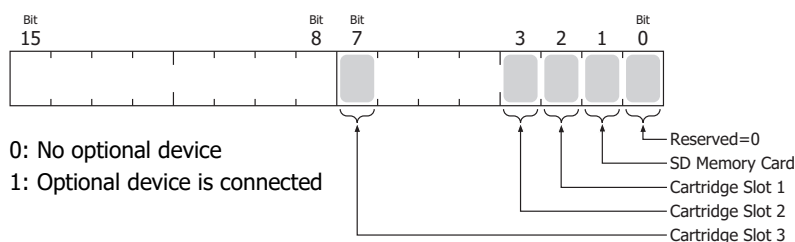

■ **D8032 to D8035, D8214, D8215: Interrupt Input Jump Destination Label No.**

Jump destination label numbers for interrupt inputs are written to these registers. When using interrupt inputs, write the label number that corresponds to the special data register that has been allocated to the interrupt input. For details on interrupt inputs, see Chapter 5 "Interrupt Input" in the "FC6A Series MICROSmart User's Manual".

D8032 = I1

D8033 = I3

D8034 = I4

D8035 = I6

D8214 = I7

D8215 = I0

■ **D8036: Timer Interrupt Jump Destination Label No.**

The jump destination label number when the timer interrupt occurs is written to this register. When using the timer interrupt, store the corresponding label number.

For details on the timer interrupt, see Chapter 5 "Timer Interrupt" in the "FC6A Series MICROSmart User's Manual".

■ **D8037: Number of Connected Expansion Modules**

The number of expansion modules connected to the CPU module (I/O modules, PID modules, and communication modules) is written to this register.

■ **D8052: J1939 Communication Error Code**

When an error occurs in J1939 communication, the error code is written to this register. For details on J1939 communication error codes, see "J1939 Communication Error Code (D8052)" on page 8-5.

■ **D8056: Battery Voltage**

The measurement result of the backup battery voltage is written to this register in 1 mV units.

0: Measurement error

■ **D8057: Analog Volume (AI0)**

The analog volume value is converted to a digital value and written to this register. For details, see Chapter 5 "Analog Potentiometer" in the "FC6A Series MICROSmart User's Manual".

■ **D8058: Built-in Analog Input (AI1)**

The analog input's analog value (0 to 10V DC) is converted to a digital value and written to this register. For details, see Chapter 5 "Analog Voltage Input" in the "FC6A Series MICROSmart User's Manual".

■ **D8059: Analog Input Status AI0**

The analog volume's analog input status is written to this register. For details, see Chapter 5 "Analog Potentiometer" in the "FC6A Series MICROSmart User's Manual".

■ **D8060: Analog Input Status AI1**

The analog input's analog input status is written to this register. For details, see Chapter 5 "Analog Voltage Input" in the "FC6A Series MICROSmart User's Manual".

■ **D8067: Backlight ON Time**

The backlight on time for the HMI module is written to this register. The backlight on time can be set by modifying the value of D8067 in a range between 1 and 65,535 s. When D8067 is 0 s, the backlight is always on. The backlight on time can also be changed with the HMI environment settings. For details, see "Master Station" on page 7-4.

■ **D8069 to D8099: Slave (1 to 31) Communication Status/Error**

Special data registers used in data link communication. For details, see "Master Station" on page 7-4.

■ **D8040 to D8045, D8100, D8102, D8103, D8735 to D8758: Slave Number (Port 1 to 33)**

The slave number is written to these registers when the Port 1 to 33 communication mode is maintenance communication, Modbus RTU slave, or data link communication. The slave number can be changed by changing the value of the corresponding device in **Function Area Settings**.


- | | |
|---------------------------|---------------------------|
| D8100 = Port 1 Slave No. | D8742 = Port 17 Slave No. |
| D8102 = Port 2 Slave No. | D8743 = Port 18 Slave No. |
| D8103 = Port 3 Slave No. | D8744 = Port 19 Slave No. |
| | D8745 = Port 20 Slave No. |
| D8040 = Port 4 Slave No. | D8746 = Port 21 Slave No. |
| D8041 = Port 5 Slave No. | D8747 = Port 22 Slave No. |
| D8042 = Port 6 Slave No. | D8748 = Port 23 Slave No. |
| D8043 = Port 7 Slave No. | D8749 = Port 24 Slave No. |
| D8044 = Port 8 Slave No. | D8750 = Port 25 Slave No. |
| D8045 = Port 9 Slave No. | D8751 = Port 26 Slave No. |
| D8735 = Port 10 Slave No. | D8752 = Port 27 Slave No. |
| D8736 = Port 11 Slave No. | D8753 = Port 28 Slave No. |
| D8737 = Port 12 Slave No. | D8754 = Port 29 Slave No. |
| D8738 = Port 13 Slave No. | D8755 = Port 30 Slave No. |
| D8739 = Port 14 Slave No. | D8756 = Port 31 Slave No. |
| D8740 = Port 15 Slave No. | D8757 = Port 32 Slave No. |
| D8741 = Port 16 Slave No. | D8758 = Port 33 Slave No. |






For details on communication modes, see the following in this manual.

- Maintenance communication: "Maintenance Communication" on page 4-1
- Modbus RTU slave: "Modbus Communication" on page 6-1
- Data link communication: "Data Link Communication" on page 7-1

■ **D8104, D8204, D8717, D8720, D8723, D8726, D8729, D8732: Control Signal Status (Port 1 to 33)**

The signal statuses of the DSR and DTR controls lines are written to this register. This register is updated in END processing when stopped and while running. The allocation of communication ports in the device (bit assignment) is as follows.

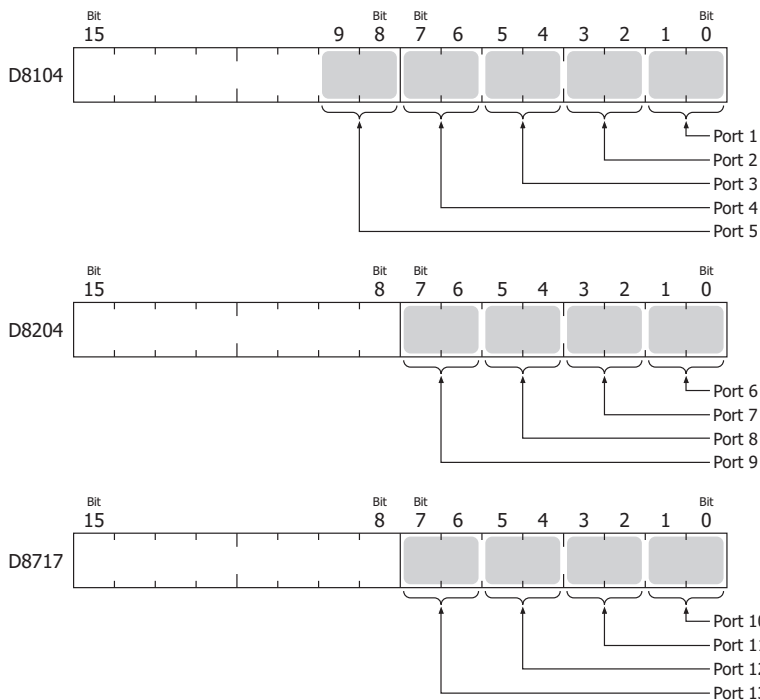


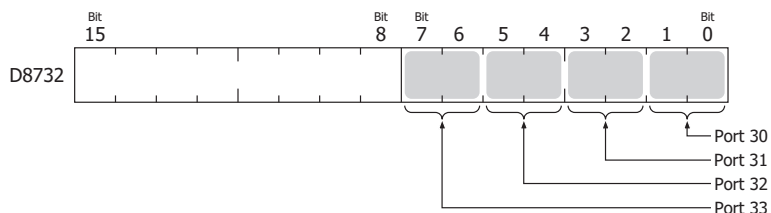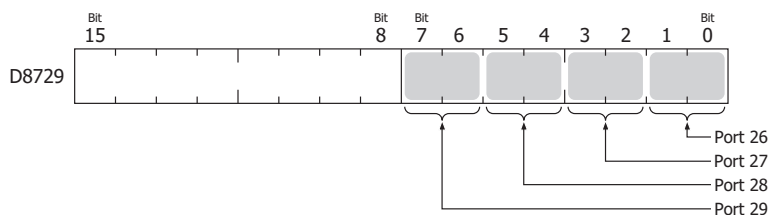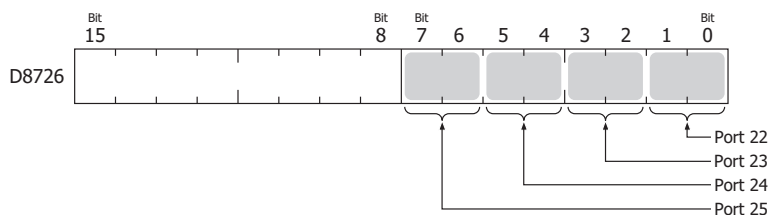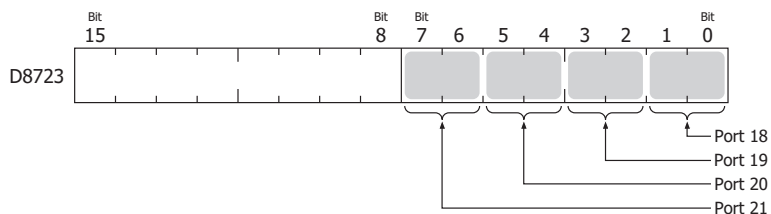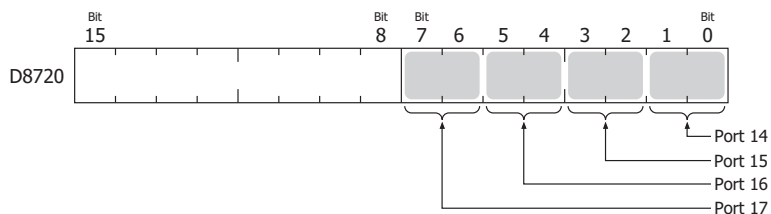


- 0 (00): DTR and DSR are both off.
- 1 (01): DTR is off and DSR is on.
- 2 (10): DTR is on and DSR is off.
- 3 (11): DTR and DSR are both on.

■ **D8105, D8205, D8718, D8721, D8724, D8727, D8730, D8733: RS232C DSR Input Control Signal Option (Port 1 to 33)**

The signal statuses of the DSR and DTR controls lines are written to this register. This register is updated in END processing when stopped and while running. The allocation of communication ports in the device (bit assignment) is as follows.

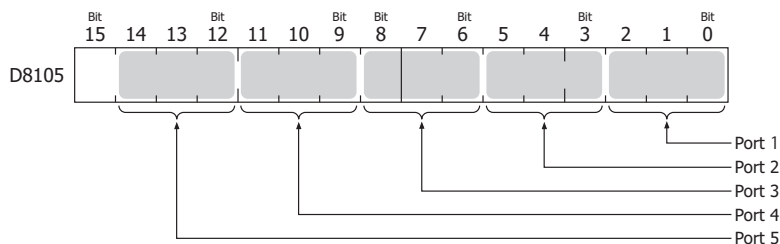


2: DEVICES

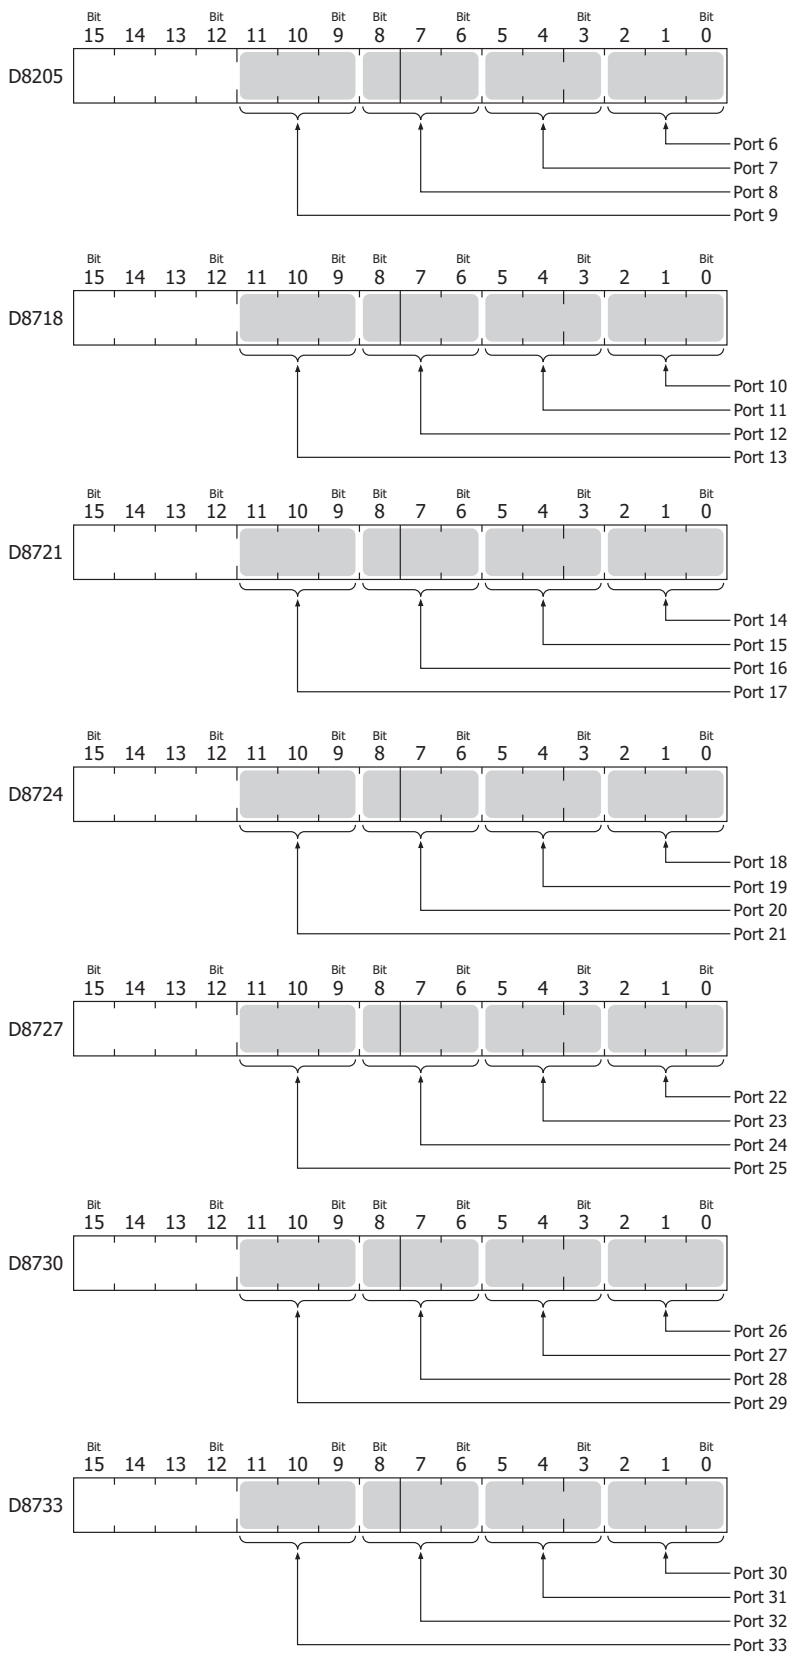


0 (000): The DSR signal status is not used for FC6A Series MICROSmart transmission control. Use this status when DSR signal control is not required.

 
1 (001): When the DSR signal is on, the FC6A Series MICROSmart can transmit and receive.



 2 (010): When the DSR signal is off, the FC6A Series MICROSmart can transmit and receive.



 
3 (011): When the DSR signal is on, transmission is possible (reception is always possible).



This is normally called "busy control" and is used for transmission control for devices with a slow processing speed such as printers.

(As viewed from the connected device, there is a limit on the data that can be input.)

 4 (100): When the DSR signal is off, transmission is possible.




5 or higher: The operation is the same as the setting "000".


■ **D8106, D8206, D8719, D8722, D8725, D8728, D8731, D8734: RS232C DTR Output Control Signal Option (Port 1 to 33)**

This register is used when indicating the FC6A Series MICROSmart control status and the transmit/receive status to the connected device. This control line is an output signal from the FC6A Series MICROSmart to the connected device. This register is only valid during user communication.


The allocation of communication ports in the device (bit assignment) is as follows.

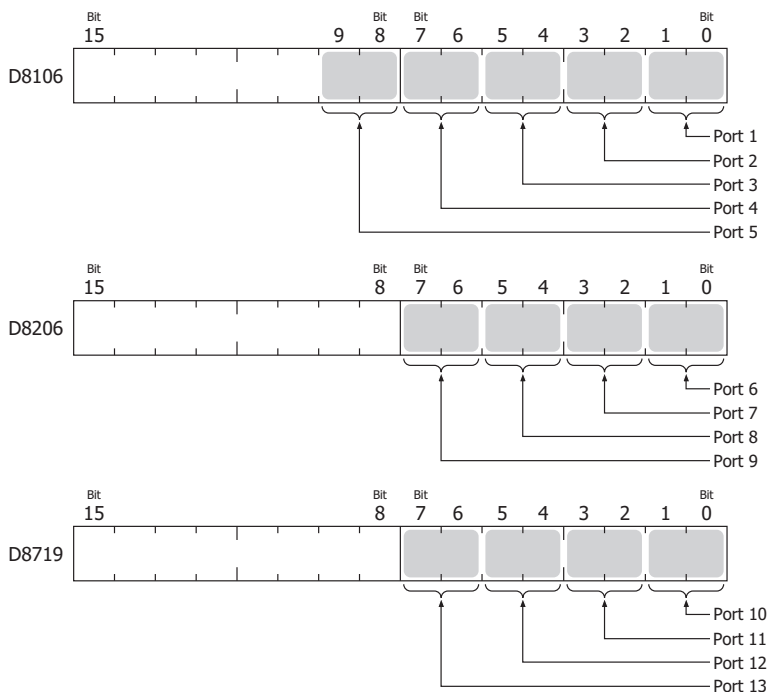


2: DEVICES

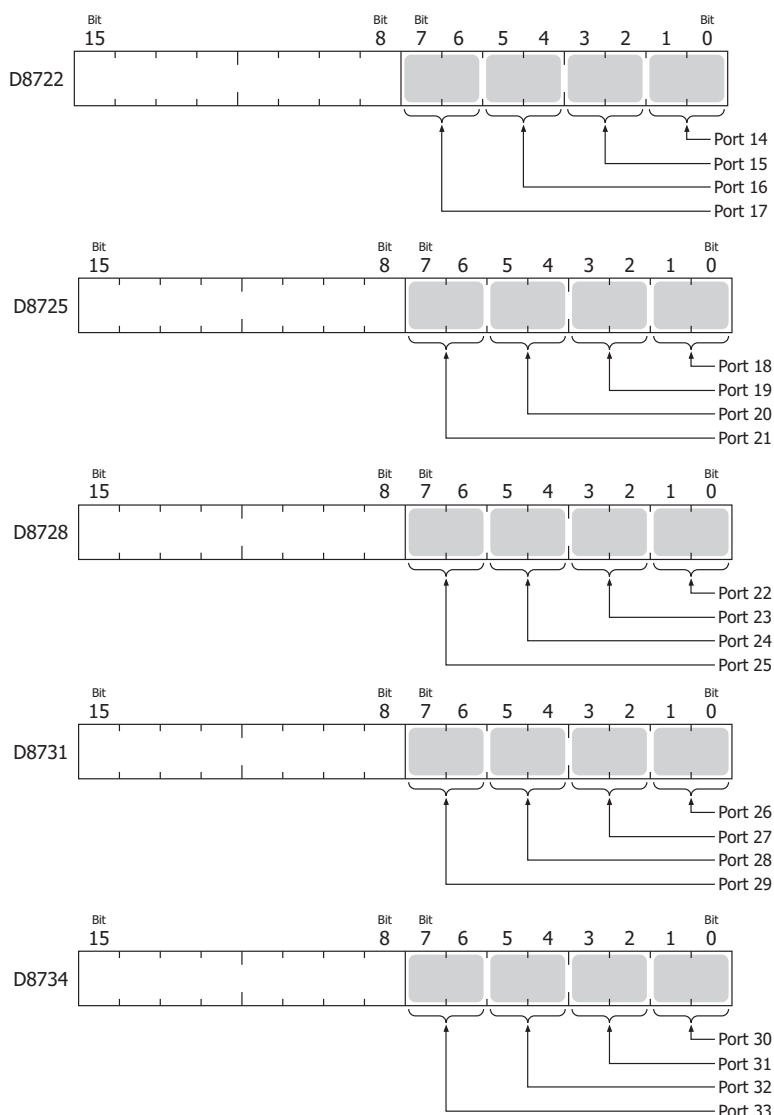

- 0 (00): The signal is on when the FC6A Series MICROSmart is set to run and off when stopped. While running, the signal is always on regardless of transmitting or receiving data. Set this value when it is necessary to indicate the run status.

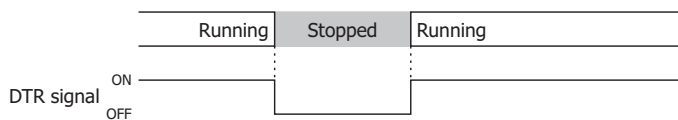

 
- 1 (01): Always off.
- 2 (10): Set this value when performing flow control for received data. The signal is on when data from the connected device can be received. The signal is off when data cannot be received.



- 3 (11): The operation is the same as the setting "0".

■ D8120, D8121: HMI Module Information


HMI module type information is written to these registers.
The allocation of information (bit assignment) is as follows.

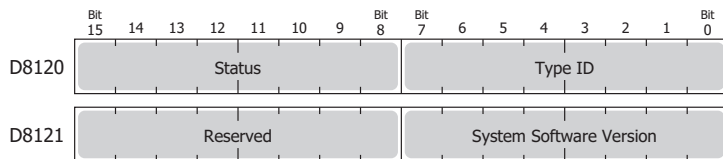

The system software version displays the version of the software written to the device.
For details on the type IDs and statuses, see "List of Type IDs and Status" on page 2-49.

■ D8122 to D8127: Cartridge Slot Information

Cartridge Slot 1 to 3 information is written to these registers.
The allocation of information (bit assignment) is as follows.

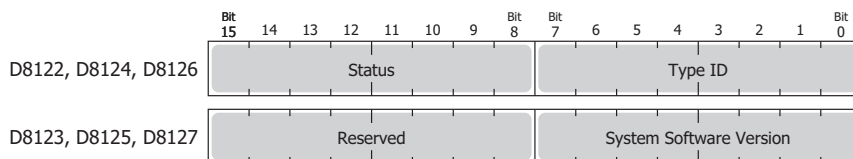

D8122, D8123 = Cartridge Slot 1 Information

D8124, D8125 = Cartridge Slot 2 Information

D8126, D8127 = Cartridge Slot 3 Information

For details on the type IDs and statuses, see "List of Type IDs and Status" on page 2-49.

■ D8170, D8171, D8174, D8175, D8178, D8179: Analog I/O Cartridge I/O

Analog I/O values for the analog I/O cartridges are written to these registers.

For the analog input type : The analog values input to the analog I/O cartridge are converted to digital values and written to the registers.

For the analog output type : The digital values stored as digital values are converted to analog values and output from the analog I/O cartridges.

For details, see Chapter 10 "Analog I/O Cartridge" in the "FC6A Series MICROSmart User's Manual".

D8170 = AI2/AQ2

D8171 = AI3/AQ3

D8174 = AI4/AQ4

D8175 = AI5/AQ5

D8178 = AI6/AQ6

D8179 = AI7/AQ7

■ D8172, D8173, D8176, D8177, D8180, D8181: Analog I/O Cartridge Status

The analog status of analog I/O cartridges is written to these registers.

For details, see Chapter 10 "Analog I/O Cartridge" in the "FC6A Series MICROSmart User's Manual".

D8172 = AI2/AQ2

D8173 = AI3/AQ3

D8176 = AI4/AQ4

D8177 = AI5/AQ5

D8180 = AI6/AQ6

D8181 = AI7/AQ7

■ D8192 to D8203, D8210 to D8213, D8216 to D8229, D8232 to D8237: High-speed Counter

These special data registers are used with the high-speed counter function and the frequency measurement function.

For details on high-speed counters, see Chapter 5 "High-Speed Counter" in the "FC6A Series MICROSmart User's Manual".

D8210 to D8213, D8216, D8217 = High-speed counter (group 1/I0)

D8218 to D8221, D8234, D8235 = High-speed counter (group 3/I3)

D8222 to D8225, D8236, D8237 = High-speed counter (group 4/I4)

D8226 to D8229, D8232, D8233 = High-speed counter (group 5/I6)


D8192 to D8197 = High-speed counter (group 2/I1)

D8198 to D8203 = High-speed counter (group 6/I7)

D8239: Absolute Position Control Status

This register indicates the status of absolute position control.

The allocation of the absolute position counter initialized flags in the device (bit assignment) is as follows. For details on the absolute position control status, see Chapter 18 "ABS (Set Absolute Position)" in the "FC6A Series MICROSmart Ladder Programming Manual".

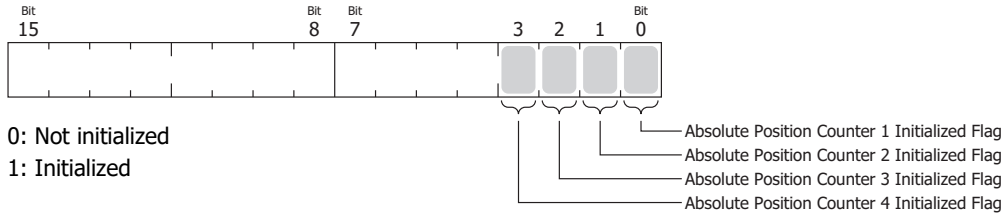

D8240 to D8247: Absolute Position Counter 1 to 4

The absolute position is written to these registers according to pulse output. The absolute position can be initialized with the ABS instruction.

When reversible control is set in the pulse output instructions (RAMP/ARAMP/ZRN/JOG), the absolute position is incremented or decremented according to the output result. For details on absolute position counters, see Chapter 18 "ABS (Set Absolute Position)" in the "FC6A Series MICROSmart Ladder Programming Manual".

- D8240, D8241 = Absolute position counter 1
- D8242, D8243 = Absolute position counter 2
- D8244, D8245 = Absolute position counter 3
- D8246, D8247 = Absolute position counter 4

D8250: Read SD Memory Card Capacity

This register indicates the capacity of the recognized SD or SDHC (maximum size 32 GB) memory card in megabytes. It is 0 when no SD memory card has been inserted or if it is not recognized.

D8251: Read SD Memory Card Free Capacity

This register indicates the free capacity of the SD memory card in megabytes. It is 0 when no SD memory card has been inserted or if it is not recognized.

D8254: SD Memory Card Download/Upload Execution Information


Information about the SD memory card download/upload that was executed. For details, see Chapter 11 "SD Memory Card" in the "FC6A Series MICROSmart User's Manual".

D8255: SD Memory Card Download/Upload Execution Status

The status of the SD memory card download/upload that was executed. For details, see Chapter 11 "SD Memory Card" in the "FC6A Series MICROSmart User's Manual".

D8256: Download MQTT Basic Settings from SD Memory Card Execution Information

Information in executing the download of the files for MQTT Basic Settings. The allocation of bits in the device (bit assignment) is as follows.

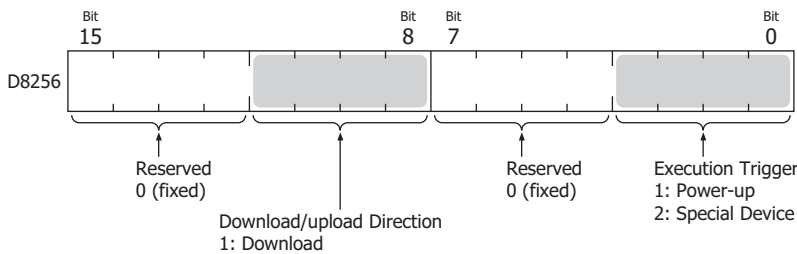

D8257: Download MQTT Basic Settings from SD Memory Card Execution Error Information

Error information in executing the download of the files for MQTT Basic Settings. For details, see "Download the MQTT Basic Settings" in the "FC6A Series MICROSmart User's Manual".

D8260: Recipe Block Number

The recipe block number to read or write using special internal relays. All channels for the specified block number are applicable.

■ **D8261: Recipe Execution Block Number**

The recipe block number of the recipe that was executed.
This is updated when the recipe block starts, and the status is retained when completed.

■ **D8262: Recipe Execution Channel No.**

The channel number of the recipe that was executed.
This is updated when the channel processing starts, and the status is retained when completed.

■ **D8263: Recipe Execution Operation**

Information about the operation of the recipe that was executed.
For details on recipes, see Chapter 11 "Recipe Function" in the "FC6A Series MICROSmart User's Manual".

■ **D8264: Recipe Execution Status**

The status of the recipe that was executed.
For details on recipes, see Chapter 11 "Recipe Function" in the "FC6A Series MICROSmart User's Manual".

■ **D8265: Recipe Execution Error Information**

Error information about the recipe that was executed.
For details on recipes, see Chapter 11 "Recipe Function" in the "FC6A Series MICROSmart User's Manual".

■ **D8266: Recipe Internal Memory (ROM-Range 1) Read Count**

The number of times device values are read to internal memory (ROM-Range 1) as recipe data is stored in this register in units of 100.

■ **D8267: Recipe Internal Memory (ROM-Range 2) Read Count**


The number of times device values are read to internal memory (ROM-Range 2) as recipe data is stored in this register in units of 100.


■ **D8268 to D8275, D8774 to D8781: Remote Host Number 1 to 255 (connection 1 to 16)**

Special data registers that change the communications device when user communications client is set. For details, see "Switching Remote Host Numbers" on page 5-43.

■ **D8278, D8279, D8760, D8761: Communication Mode Information (Connection 1 to 16)**

D8278 = Indicates the communication mode of connections 1 through 4.
D8279 = Indicates the communication mode of connections 5 through 8.
D8760 = Indicates the communication mode of connections 9 through 12.
D8761 = Indicates the communication mode of connections 13 through 16.
The allocation of connections in the device (bit assignment) is as follows.
Connections are allocated in 4-bit units from the lowest digit in ascending order of connection number.

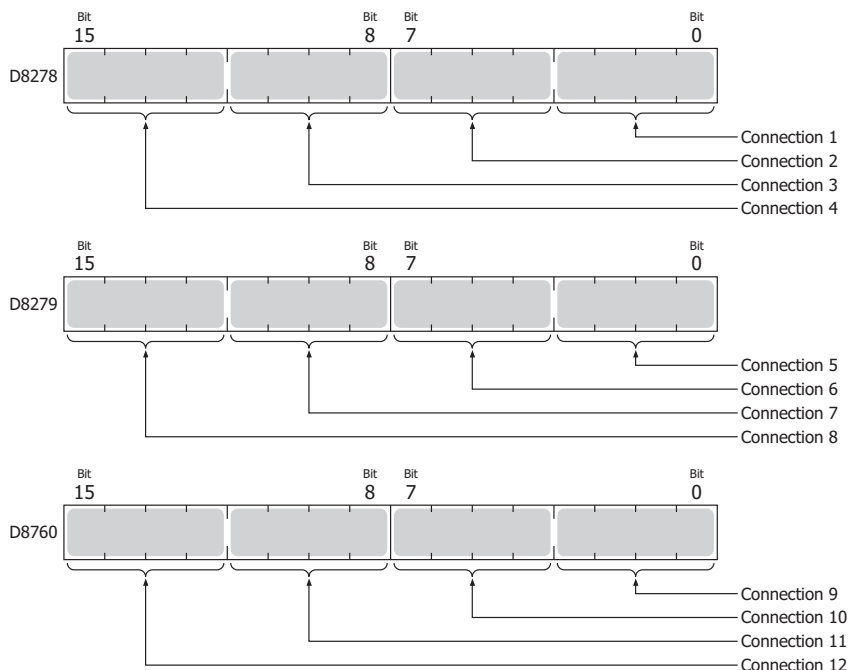

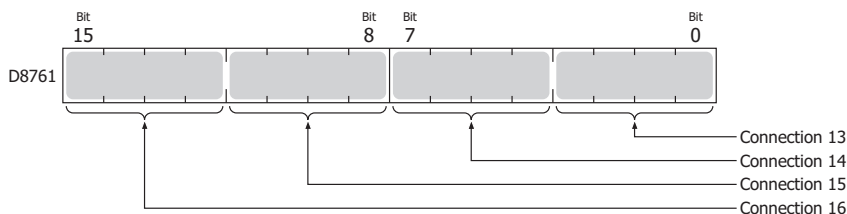

Details for connections (4 bit) are as follow.


- Client connection (most significant bit = 0)
 - 0000: Unused
 - 0001: User Communication
 - 0010: Modbus TCP client
 - 0011: MC Protocol client
 - 0100: User communication UDP
- Server connection (most significant bit = 1)
 - 1000: Maintenance Communication
 - 1001: User Communication
 - 1010: Modbus TCP server

■ **D8284, D8285: Communication Mode Information (HMI Connection) (HMI Connection 1 to 8)**

D8284: Indicates the communication mode of HMI connections 1 through 4.

D8285: Indicates the communication mode of HMI connections 5 through 8.

The allocation of connections in the device (bit assignment) is as follows.

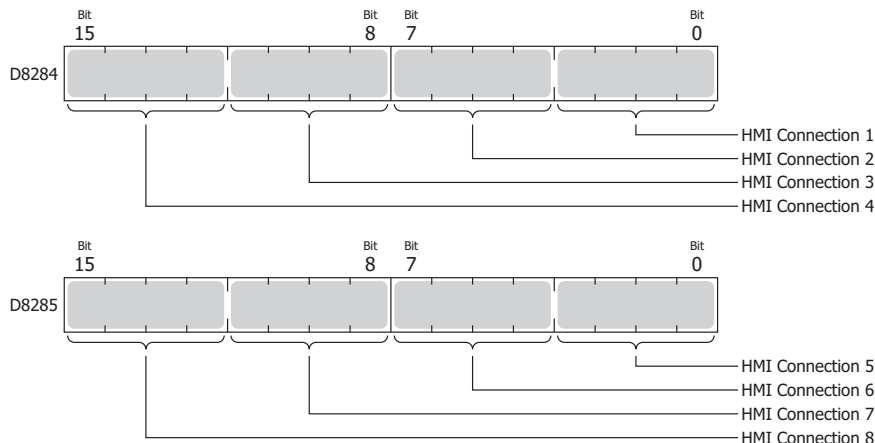

- Client connection (most significant bit = 0)
 - 0000: Unused
- Server connection (most significant bit = 1)
 - 1000: Maintenance Communication

■ **D8303: CPU Module Ethernet Port 1 IP Settings/DNS Settings Switching**

The IP settings/DNS settings for Ethernet Port 1 can be changed by writing one of the setting values in the table on the next page to D8303 and then turning on M8190.

To use this function, enable the following items in **Function Area Settings** of WindLDR.

- All-in-One CPU module/CAN J1939 All-in-One CPU module
 - Enable D8303 (IP Settings / DNS Settings switching) on Network Settings in Function Area Settings**
- Plus CPU module
 - Enable D8303 (IP Settings / DNS Settings switching) on Ethernet Port 1 in Function Area Settings**

The meanings of the setting values are as follows.

Setting Value	IP Settings/DNS Settings
0	Conform to function area settings.
1	Enable DHCP.
2	Conform to special data register (D8304 to D8323) settings.

■ D8304 to D8307: CPU Module Ethernet Port 1 IP Address (Write-only)

These registers are used to write the CPU module's IP address.

IP address: To set as aaa.bbb.ccc.ddd, write the following.

D8304=aaa, D8305=bbb, D8306=ccc, D8307=ddd

■ D8308 to D8311: CPU Module Ethernet Port 1 Subnet Mask (Write-only)

These registers are used to write the CPU module's subnet mask.

Subnet mask: For aaa.bbb.ccc.ddd, write the following.

D8308=aaa, D8309=bbb, D8310=ccc, D8311=ddd

■ D8312 to D8315: CPU Module Ethernet Port 1 Default Gateway (Write-only)

These registers are used to write the CPU module's default gateway.

Default gateway: For aaa.bbb.ccc.ddd, write the following.

D8312=aaa, D8313=bbb, D8314=ccc, D8315=ddd

■ D8316 to D8319: CPU Module Ethernet Port 1 Preferred DNS Server (Write-only)

These registers are used to write the CPU module's preferred DNS server.

Preferred DNS server: For aaa.bbb.ccc.ddd, write the following.

D8316=aaa, D8317=bbb, D8318=ccc, D8319=ddd

■ D8320 to D8323: CPU Module Ethernet Port 1 Alternate DNS Server (Write-only)

These registers are used to write the CPU module's alternate DNS server.

Alternate DNS server: For aaa.bbb.ccc.ddd, write the following.

D8320=aaa, D8321=bbb, D8322=ccc, D8323=ddd

■ D8324 to D8329: CPU Module Ethernet Port 1 MAC Address (Current Value Read-only)

The CPU module's MAC address is written to the special data registers as follows.

Example: MAC address: AA-BB-CC-DD-EE-FF

D8324=AA, D8325=BB, D8326=CC, D8327=DD, D8328=EE, D8329=FF

■ D8330 to D8333: CPU Module Ethernet Port 1 IP Address (Current Value Read-only)

The CPU module's IP address is written to the special data registers as follows.

Example: The CPU module's own IP address aaa.bbb.ccc.ddd

D8330=aaa, D8331=bbb, D8332=ccc, D8333=ddd

■ D8334 to D8337: CPU Module Ethernet Port 1 Subnet Mask (Current Value Read-only)

The CPU module's subnet mask value is written to the special data registers as follows.

Example: Subnet mask: aaa.bbb.ccc.ddd

D8334=aaa, D8335=bbb, D8336=ccc, D8337=ddd

■ D8338 to D8341: CPU Module Ethernet Port 1 Default Gateway (Current Value Read-only)

The CPU module's default gateway address is written to the special data registers as follows.

Example: Default gateway: aaa.bbb.ccc.ddd

D8338=aaa, D8339=bbb, D8340=ccc, D8341=ddd

■ D8342 to D8345: CPU Module Ethernet Port 1 Preferred DNS Server (Current Value Read-only)

The CPU module's preferred DNS server address is written to the special data registers as follows.

Example: Preferred DNS server: aaa.bbb.ccc.ddd

D8342=aaa, D8343=bbb, D8344=ccc, D8345=ddd

■ D8346 to D8349: CPU Module Ethernet Port 1 Alternate DNS Server (Current Value Read-only)

The CPU module's alternate DNS server address is written to the special data registers as follows.

Example: Alternate DNS server: aaa.bbb.ccc.ddd

D8346=aaa, D8347=bbb, D8348=ccc, D8349=ddd

■ **D8350 to D8381, D8677 to D8708: Connection Connected IP Address**

The IP address of the connected device that is being accessed through a connection is written as follows.

Connection 1 Connected IP Address: For aaa.bbb.ccc.ddd
D8350=aaa, D8351=bbb, D8352=ccc, D8353=ddd

Connection 2 Connected IP Address: For aaa.bbb.ccc.ddd
D8354=aaa, D8355=bbb, D8356=ccc, D8357=ddd

Connection 3 Connected IP Address: For aaa.bbb.ccc.ddd
D8358=aaa, D8359=bbb, D8360=ccc, D8361=ddd

Connection 4 Connected IP Address: For aaa.bbb.ccc.ddd
D8362=aaa, D8363=bbb, D8364=ccc, D8365=ddd

Connection 5 Connected IP Address: For aaa.bbb.ccc.ddd
D8366=aaa, D8367=bbb, D8368=ccc, D8369=ddd

Connection 6 Connected IP Address: For aaa.bbb.ccc.ddd
D8370=aaa, D8371=bbb, D8372=ccc, D8373=ddd

Connection 7 Connected IP Address: For aaa.bbb.ccc.ddd
D8374=aaa, D8375=bbb, D8376=ccc, D8377=ddd

Connection 8 Connected IP Address: For aaa.bbb.ccc.ddd
D8378=aaa, D8379=bbb, D8380=ccc, D8381=ddd

Connection 9 Connected IP Address: For aaa.bbb.ccc.ddd
D8677=aaa, D8678=bbb, D8679=ccc, D8680=ddd

Connection 10 Connected IP Address: For aaa.bbb.ccc.ddd
D8681=aaa, D8682=bbb, D8683=ccc, D8684=ddd

Connection 11 Connected IP Address: For aaa.bbb.ccc.ddd
D8685=aaa, D8686=bbb, D8687=ccc, D8688=ddd

Connection 12 Connected IP Address: For aaa.bbb.ccc.ddd
D8689=aaa, D8690=bbb, D8691=ccc, D8692=ddd

Connection 13 Connected IP Address: For aaa.bbb.ccc.ddd
D8693=aaa, D8694=bbb, D8695=ccc, D8696=ddd

Connection 14 Connected IP Address: For aaa.bbb.ccc.ddd
D8697=aaa, D8698=bbb, D8699=ccc, D8700=ddd

Connection 15 Connected IP Address: For aaa.bbb.ccc.ddd
D8701=aaa, D8702=bbb, D8703=ccc, D8704=ddd

Connection 16 Connected IP Address: For aaa.bbb.ccc.ddd
D8705=aaa, D8706=bbb, D8707=ccc, D8708=ddd

■ **D8382 to D8387: HMI Module MAC Address (Current Value Read-only)**

The MAC address is written to the special data registers as follows.

Example: MAC address: AA-BB-CC-DD-EE-FF

D8382=AA, D8383=BB, D8384=CC, D8385=DD, D8386=EE, D8387=FF

■ **D8388 to D8391: HMI Module IP Address (Current Value Read-only)**

The HMI module's IP address is written to the special data registers as follows.

Example: HMI module IP address: aaa.bbb.ccc.ddd

D8388=aaa, D8389=bbb, D8390=ccc, D8391=ddd

■ **D8392 to D8395: HMI Module Subnet Mask (Current Value Read-only)**

The HMI module's subnet mask value is written to the special data registers as follows.

Example: HMI module subnet mask: aaa.bbb.ccc.ddd

D8392=aaa, D8393=bbb, D8394=ccc, D8395=ddd

■ **D8396 to D8399: HMI Module Default Gateway (Current Value Read-only)**

The HMI module's default gateway address is written to the special data registers as follows.

Example: HMI module default gateway: aaa.bbb.ccc.ddd

D8396=aaa, D8397=bbb, D8398=ccc, D8399=ddd

■ **D8400 to D8403: HMI Module Preferred DNS Server (Current Value Read-only)**


The HMI module's preferred DNS server address is written to the special data registers as follows.

Example: HMI module preferred DNS server: aaa.bbb.ccc.ddd

D8400=aaa, D8401=bbb, D8402=ccc, D8403=ddd

- **D8404 to D8407: HMI Module Alternate DNS Server (Current Value Read-only)**
 The HMI module's alternate DNS server address is written to the special data registers as follows.
 Example: HMI module alternate DNS server: aaa.bbb.ccc.ddd
 D8404=aaa, D8405=bbb, D8406=ccc, D8407=ddd
- **D8413: Time Zone Offset**
 The time zone configured in the function area settings can be finely adjusted in 15-minute increments.
 For details, see "SNTP Settings" on page 3-11.
- **D8414: SNTP Operation Status**
 The operation status is written to this register when the time information is acquired through operation of M8191 (SNTP Time Acquisition Flag) or when time information acquisition was executed by automatic acquisition.
 For details, see "SNTP Settings" on page 3-11.
- **D8415: SNTP Access Elapsed Time**
 The elapsed time in minutes from when the time information was last acquired from the SNTP server.
 For details, see "SNTP Settings" on page 3-11.
- **D8429: HMI Module Connection Information Reference Connection Number**
 The connection information for the specified connection number is reflected in D8430 to D8434. When 0 is written, 0 is written to D8430 to D8434. If a connection number that does not exist is specified, 0 is written to D8430 to D8434.
- **D8430 to D8433: HMI Module Connection Information Reference Connected IP Address**
 The IP address of the terminal being accessed through the connection is written to the special data registers as follows.
 Example: IP address to read: aaa.bbb.ccc.ddd
 D8430=aaa, D8431=bbb, D8432=ccc, D8433=ddd
- **D8434: HMI Module Connection Information Reference Connected Port No.**
 The port number of the terminal being accessed through the connection is written to this register.
- **D8437 to D8440: HMI Module IP Address (Write-only)**
 These registers are used to write the HMI module's IP address.
 HMI module IP address: To set as aaa.bbb.ccc.ddd, write the following.
 D8437=aaa, D8438=bbb, D8439=ccc, D8440=ddd
- **D8441 to D8444: HMI Module Subnet Mask (Write-only)**
 These registers are used to write the HMI module's subnet mask.
 HMI module subnet mask: For aaa.bbb.ccc.ddd, write the following.
 D8441=aaa, D8442=bbb, D8443=ccc, D8444=ddd
- **D8445 to D8448: HMI Module Default Gateway (Write-only)**
 These registers are used to write the HMI module's default gateway.
 HMI module default gateway: For aaa.bbb.ccc.ddd, write the following.
 D8445=aaa, D8446=bbb, D8447=ccc, D8448=ddd
- **D8449 to D8452: HMI Module Preferred DNS Server (Write-only)**
 These registers are used to write the HMI module's preferred DNS server.
 HMI module preferred DNS server: For aaa.bbb.ccc.ddd, write the following.
 D8449=aaa, D8450=bbb, D8451=ccc, D8452=ddd
- **D8453 to D8456: HMI Module Alternate DNS Server (Write-only)**
 These registers are used to write the HMI module's alternate DNS server.
 HMI module alternate DNS server: For aaa.bbb.ccc.ddd, write the following.
 D8453=aaa, D8454=bbb, D8455=ccc, D8456=ddd
- **D8457: EMAIL Instruction Detailed Error Information (HMI-Ethernet Port)**
 Detailed error information for the EMAIL instruction is written to this register.
 For details, see "Confirm the error detail of EMAIL instruction" on page 12-3.
- **D8470 to D8595: Expansion Module Slot Information**
 Expansion module type information is written to these registers.
 The allocation of information (bit assignment) is as follows.

2: DEVICES

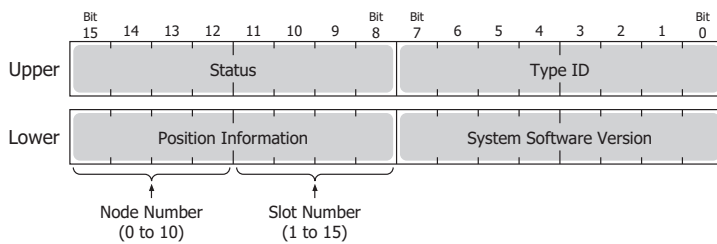

Upper Lower


- D8470, D8471 = Expansion Module Slot 1 Information
- D8472, D8473 = Expansion Module Slot 2 Information
- D8474, D8475 = Expansion Module Slot 3 Information
- D8476, D8477 = Expansion Module Slot 4 Information
- D8478, D8479 = Expansion Module Slot 5 Information
- D8480, D8481 = Expansion Module Slot 6 Information
- D8482, D8483 = Expansion Module Slot 7 Information
- D8484, D8485 = Expansion Module Slot 8 Information
- D8486, D8487 = Expansion Module Slot 9 Information
- D8488, D8489 = Expansion Module Slot 10 Information
- D8490, D8491 = Expansion Module Slot 11 Information
- D8492, D8493 = Expansion Module Slot 12 Information
- D8494, D8495 = Expansion Module Slot 13 Information
- D8496, D8497 = Expansion Module Slot 14 Information
- D8498, D8499 = Expansion Module Slot 15 Information
- D8500, D8501 = Expansion Module Slot 16 Information
- D8502, D8503 = Expansion Module Slot 17 Information
- D8504, D8505 = Expansion Module Slot 18 Information
- D8506, D8507 = Expansion Module Slot 19 Information
- D8508, D8509 = Expansion Module Slot 20 Information
- D8510, D8511 = Expansion Module Slot 21 Information
- D8512, D8513 = Expansion Module Slot 22 Information
- D8514, D8515 = Expansion Module Slot 23 Information
- D8516, D8517 = Expansion Module Slot 24 Information
- D8518, D8519 = Expansion Module Slot 25 Information
- D8520, D8521 = Expansion Module Slot 26 Information
- D8522, D8523 = Expansion Module Slot 27 Information
- D8524, D8525 = Expansion Module Slot 28 Information
- D8526, D8527 = Expansion Module Slot 29 Information
- D8528, D8529 = Expansion Module Slot 30 Information
- D8530, D8531 = Expansion Module Slot 31 Information
- D8532, D8533 = Expansion Module Slot 32 Information
- D8534, D8535 = Expansion Module Slot 33 Information
- D8536, D8537 = Expansion Module Slot 34 Information
- D8538, D8539 = Expansion Module Slot 35 Information
- D8540, D8541 = Expansion Module Slot 36 Information
- D8542, D8543 = Expansion Module Slot 37 Information
- D8544, D8545 = Expansion Module Slot 38 Information
- D8546, D8547 = Expansion Module Slot 39 Information

Upper	Lower	
D8548, D8549		= Expansion Module Slot 40 Information
D8550, D8551		= Expansion Module Slot 41 Information
D8552, D8553		= Expansion Module Slot 42 Information
D8554, D8555		= Expansion Module Slot 43 Information
D8556, D8557		= Expansion Module Slot 44 Information
D8558, D8559		= Expansion Module Slot 45 Information
D8560, D8561		= Expansion Module Slot 46 Information
D8562, D8563		= Expansion Module Slot 47 Information
D8564, D8565		= Expansion Module Slot 48 Information
D8566, D8567		= Expansion Module Slot 49 Information
D8568, D8569		= Expansion Module Slot 50 Information
D8570, D8571		= Expansion Module Slot 51 Information
D8572, D8573		= Expansion Module Slot 52 Information
D8574, D8575		= Expansion Module Slot 53 Information
D8576, D8577		= Expansion Module Slot 54 Information
D8578, D8579		= Expansion Module Slot 55 Information
D8580, D8581		= Expansion Module Slot 56 Information
D8582, D8583		= Expansion Module Slot 57 Information
D8584, D8585		= Expansion Module Slot 58 Information
D8586, D8587		= Expansion Module Slot 59 Information
D8588, D8589		= Expansion Module Slot 60 Information
D8590, D8591		= Expansion Module Slot 61 Information
D8592, D8593		= Expansion Module Slot 62 Information
D8594, D8595		= Expansion Module Slot 63 Information

The system software version displays the version of the software written to the device.
 For details on the type IDs and statuses, see "List of Type IDs and Status" on page 2-49.

■ **D8596, D8597: Expansion Interface Remote Master Module Slot Information**


Expansion interface remote master module type information is written to these registers.
 The allocation of information (bit assignment) is as follows.

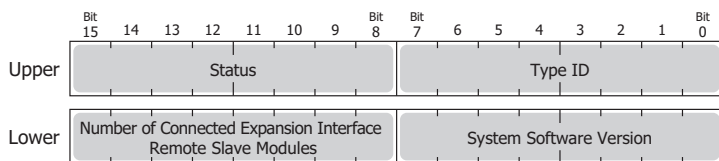

The system software version displays the version of the software written to the device.
 For details on the type IDs and statuses, see "List of Type IDs and Status" on page 2-49.

■ **D8598 to D8617: Expansion Interface Remote Slave Module Slot Information**

Expansion interface remote slave module type information is written to these registers.
 The allocation of information (bit assignment) is as follows.

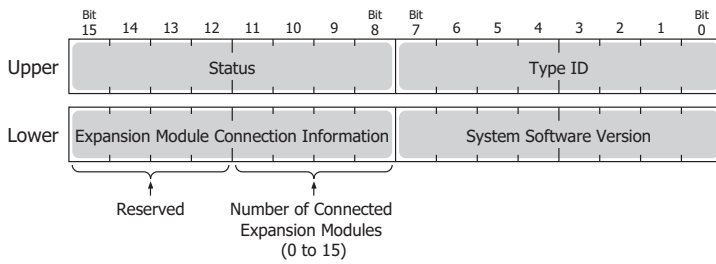

Upper Lower

- D8598, D8599 = Expansion Interface Remote Slave Module (Unit 1) Slot Information
- D8600, D8601 = Expansion Interface Remote Slave Module (Unit 2) Slot Information
- D8602, D8603 = Expansion Interface Remote Slave Module (Unit 3) Slot Information
- D8604, D8605 = Expansion Interface Remote Slave Module (Unit 4) Slot Information
- D8606, D8607 = Expansion Interface Remote Slave Module (Unit 5) Slot Information
- D8608, D8609 = Expansion Interface Remote Slave Module (Unit 6) Slot Information
- D8610, D8611 = Expansion Interface Remote Slave Module (Unit 7) Slot Information
- D8612, D8613 = Expansion Interface Remote Slave Module (Unit 8) Slot Information
- D8614, D8615 = Expansion Interface Remote Slave Module (Unit 9) Slot Information
- D8616, D8617 = Expansion Interface Remote Slave Module (Unit 10) Slot Information

The system software version displays the version of the software written to the device. For details on the type ID and status, see "List of Type IDs and Status" on page 2-49.

■ **D8618: Refresh Time of Expansion Interface Remote Master/Slave Modules Current Value**

The current value of the I/O refresh time of the expansion modules connected with the expansion interface remote master/slave modules is stored in increments of 1 ms.

■ **D8619: Refresh Time of Expansion Interface Remote Master/Slave Modules Maximum Value**

The maximum value of the I/O refresh time of the expansion modules connected with the expansion interface remote master/slave modules is stored in increments of 1 ms.

■ **D8630: CPU Module Ethernet Port 2 IP Settings/DNS Settings Switching**

The IP settings/DNS settings for Ethernet Port 2 can be changed by writing one of the setting values in the following table to D8630 and then turning on M8333.

To use this function, enable **Enable D8630 (IP Settings / DNS Settings switching)** on **Ethernet Port 2** in **Function Area Settings** of WindLDR.

The meanings of the setting values are as follows.

Setting Value	IP Settings/DNS Settings
0	Conform to function area settings.
1	Enable DHCP.
2	Conform to special data register (D8631 to D8650) settings.

■ **D8631 to D8634: CPU Module Ethernet Port 2 IP Address (Write-only)**

These registers are used to write the IP address of Ethernet port 2 on the Plus CPU module.

IP address: To set as aaa.bbb.ccc.ddd, write the following.

D8631 = aaa, D8632 = bbb, D8633 = ccc, D8634 = ddd

■ **D8635 to D8638: CPU Module Ethernet Port 2 Subnet Mask (Write-only)**

These registers are used to write the subnet mask of Ethernet port 2 on the Plus CPU module.

Subnet mask: For aaa.bbb.ccc.ddd, write the following.

D8635 = aaa, D8636 = bbb, D8637 = ccc, D8638 = ddd

■ **D8639 to D8642: CPU Module Ethernet Port 2 Default Gateway (Write-only)**

These registers are used to write the default gateway of Ethernet port 2 on the Plus CPU module.

Default gateway: For aaa.bbb.ccc.ddd, write the following.

D8639 = aaa, D8640 = bbb, D8641 = ccc, D8642 = ddd

■ **D8643 to D8646: CPU Module Ethernet Port 2 Preferred DNS Server (Write-only)**

These registers are used to write the preferred DNS server of Ethernet port 2 on the Plus CPU module.

Preferred DNS server: For aaa.bbb.ccc.ddd, write the following.

D8643 = aaa, D8644 = bbb, D8645 = ccc, D8646 = ddd

■ **D8647 to D8650: CPU Module Ethernet Port 2 Alternate DNS Server (Write-only)**

These registers are used to write the alternate DNS server of Ethernet port 2 on the Plus CPU module.

Alternate DNS server: For aaa.bbb.ccc.ddd, write the following.

D8647 = aaa, D8648 = bbb, D8649 = ccc, D8650 = ddd

■ **D8651 to D8656: CPU Module Ethernet Port 2 MAC Address (Current Value Read-only)**

The MAC address of Ethernet port 2 on the Plus CPU module is written to the special data registers as follows.

Example: MAC address: AA-BB-CC-DD-EE-FF

D8651 = AA, D8652 = BB, D8653 = CC, D8654 = DD, D8655 = EE, D8656 = FF

■ **D8657 to D8660: CPU Module Ethernet Port 2 IP Address (Current Value Read-only)**

The IP address of Ethernet port 2 on the Plus CPU module is written to the special data registers as follows.

Example: The CPU module's own IP address: aaa.bbb.ccc.ddd

D8657 = aaa, D8658 = bbb, D8659 = ccc, D8660 = ddd

■ **D8661 to D8664: CPU Module Ethernet Port 2 Subnet Mask (Current Value Read-only)**

The subnet mask value of Ethernet port 2 on the Plus CPU module is written to the special data registers as follows.

Example: Subnet mask: aaa.bbb.ccc.ddd

D8661 = aaa, D8662 = bbb, D8663 = ccc, D8664 = ddd

■ **D8665 to D8668: CPU Module Ethernet Port 2 Default Gateway (Current Value Read-only)**

The default gateway address of Ethernet port 2 on the Plus CPU module is written to the special data registers as follows.

Example: Default gateway: aaa.bbb.ccc.ddd

D8665 = aaa, D8666 = bbb, D8667 = ccc, D8668 = ddd

■ **D8669 to D8672: CPU Module Ethernet Port 2 Preferred DNS Server (Current Value Read-only)**

The preferred DNS server address of Ethernet port 2 on the Plus CPU module is written to the special data registers as follows.

Example: Preferred DNS server: aaa.bbb.ccc.ddd

D8669 = aaa, D8670 = bbb, D8671 = ccc, D8672 = ddd

■ **D8673 to D8676: CPU Module Ethernet Port 2 Alternate DNS Server (Current Value Read-only)**

The alternate DNS server address of Ethernet port 2 on the Plus CPU module is written to the special data registers as follows.

Example: Alternate DNS server: aaa.bbb.ccc.ddd

D8673 = aaa, D8674 = bbb, D8675 = ccc, D8676 = ddd

■ **D8759: EMAIL Instruction Detailed Error Information (Ethernet Port 1)**

Detailed error information for the EMAIL instruction (Ethernet port 1) is written to this register.

For details, see "Confirm the error detail of EMAIL instruction" on page 12-3.

■ **D8782: BACnet Operation Status**

The operating status of BACnet communication is written to this special data register.

For details, see "Special Devices Used in BACnet/IP" on page 15-11.

■ **D8783: BACnet Error Information**

Information for the error that last occurred in BACnet communication is written to this special data register.

For details, see "Special Devices Used in BACnet/IP" on page 15-11.

■ **D8790: EtherNet/IP Operation Status**

The operating status of EtherNet/IP communication is written to this special data register.

For details, see "Special Devices Used in EtherNet/IP Communication" on page 16-13.


■ **D8791: BACnet Error Information**

Information for the error that last occurred in EtherNet/IP communication is written to this special data register.

For details, see "Special Devices Used in EtherNet/IP Communication" on page 16-13.

■ **D8820: Download Files for Server Functions from SD Memory Card Execution Information**

Information in executing the download of the files for Server Functions. The allocation of bits in the device (bit assignment) is as follows.

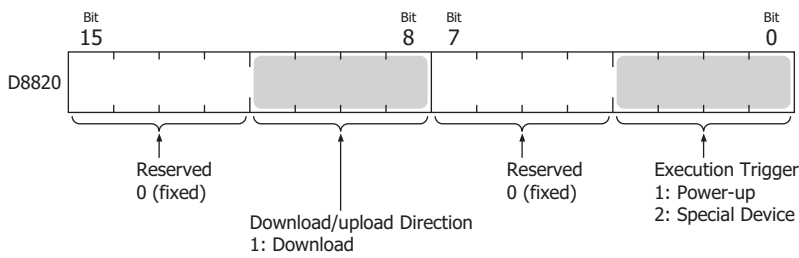

■ **D8821: Download Files for Sever Functions from SD Memory Card Execution Error Information**

Error information in executing the download of the files for sever functions. For details, see Chapter 11 "SD Memory Card" in the "FC6A Series MICROSmart User's Manual".

■ **D8822: Web Server Current Number of Connections (Plus CPU Module)**

The current number of connections for the web server function. D8822 is only supported on Plus CPU module. For details, see Chapter 11 "SD Memory Card" in the "FC6A Series MICROSmart User's Manual".

List of Type IDs and Status

■ Type ID

Expansion module and HMI module

Type ID		Type No.
Hexadecimal	Binary	
0x00	0000 0000	FC6A-N16B1, FC6A-N16B4, FC6A-N16B3
0x01	0000 0001	FC6A-R161, FC6A-R164, FC6A-T16K1, FC6A-T16K4, F6A-T16P1, FC6A-T16P4, F6A-T16K3, FCA-T16P3
0x02	0000 0010	FC6A-N32B3
0x03	0000 0011	FC6A-T32K3, FC6A-T32P3
0x04	0000 0100	FC6A-N08B1, FC6A-N08B4, FC6A-N08A11, FC6A-N08A14
0x05	0000 0101	FC6A-R081, FC6A-R084, FC6A-T08K1, FC6A-T08K4, FC6A-T08P1, FC6A-T08P4
0x06	0000 0110	FC6A-M08BR1, FC6A-M08BR4
0x07	0000 0111	FC6A-M24BR1, FC6A-M24BR4
0x18	0001 1000	FC6A-PH1
0x19	0001 1001	FC6A-EXM2, FC6A-EXM24
0x1A	0001 1010	FC6A-EXM1S, FC6A-EXM1S4
0x20	0010 0000	FC6A-J2C1, FC6A-J2C4
0x21	0010 0001	FC6A-J4A1, FC6A-J4A4
0x22	0010 0010	FC6A-J8A1, FC6A-J8A4
0x23	0010 0011	FC6A-K2A1, FC6A-K2A4
0x24	0010 0100	FC6A-K4A1, FC6A-K4A4
0x25	0010 0101	FC6A-L06A1, FC6A-L06A4
0x26	0010 0110	FC6A-L03CN1, FC6A-L03CN4
0x27	0010 0111	FC6A-J4CN1, FC6A-J4CN4
0x28	0010 1000	FC6A-J8CU1, FC6A-J8CU4
0x29	0010 1001	FC6A-F2M1, FC6A-F2M4
0x2A	0010 1010	FC6A-F2MR1, FC6A-F2MR4
0x2B	0010 1011	FC6A-J4CH1Y, FC6A-J4CH4Y
0x2C	0010 1100	FC6A-EXM1M
0x2E	0010 1110	FC6A-SIF52, FC6A-SIF524
0xFF	1111 1111	Not connected

Cartridge

Type ID		Type No.
Hexadecimal	Binary	
0x00	0000 0000	FC6A-PJ2A
0x01	0000 0001	FC6A-PK2AV
0x02	0000 0010	FC6A-PK2AW
0x03	0000 0011	FC6A-PJ2CP
0x06	0000 0110	FC6A-PC1
0x07	0000 0111	FC6A-PC3
0x09	0000 1001	FC6A-PTS4, FC6A-PTK4
0x0A	0000 1010	FC6A-PN4
0x0C	0000 1100	FC6A-PC4
0xFF	1111 1111	Not connected

2: DEVICES

■ Status

Status		Description
Hexadecimal	Binary	
0x00	0000 0000	Normal
0x81	1000 0001	Communication error (An error has occurred in the communication between the CPU module and an expansion module, HMI module, or cartridge.)
0x82	1000 0010	Unknown device detected (A device other than the FC6A Series MICROSmart is connected.)
0x83	1000 0011	Device setting error (No device is connected or the connected device is different from that set in the user program.)
0x84	1000 0100	Device writing error (The attempt to set the operation of the device failed.)
0x85	1000 0101	System update error (The system update failed.)
0x86	1000 0110	Expansion interface remote master module communication error (An error is occurring in the communication between the expansion interface remote master and slave modules.)

3: COMMUNICATION SETTINGS

Introduction

This chapter describes how to configure the settings to use the communication functions of the FC6A Series MICROSmart and examples of using these functions.

For functions that require advanced setup including the communication ports and network settings, first configure those settings in the **Function Area Settings** dialog box in WindLDR, and then download the user program to the FC6A Series MICROSmart.

For the way to configure settings related to CAN J1939 communication, see "J1939 Communication" on page 8-1.

Setting List

Function Name	Overview	Reference	Setup Location
Communication ports	Configures the communication function, parameters and the ports to match the communication device.	3-2	Function area settings
Network settings	Configures information for connecting the FC6A Series MICROSmart to a network.	3-3	
Network Management	Configures SNTP settings and the PING instruction timeout time.	3-11	
Connection settings	Communication mode and parameters for the Ethernet communication can be configured for each connection so that the FC6A Series MICROSmart can communicate with other network devices over the Ethernet.	3-14	
Remote host list	The remote host devices on the network that the FC6A Series MICROSmart communicates with can be registered and managed in the Remote Host List.	3-21	Remote host list
Auto Ping Function	Configures the auto ping function to monitor the network connection status of remote hosts.	3-23	


Communication Port Settings

This section describes how to configure the communication ports when using communication port 1 to 33 to communicate with communication devices.


Programming WindLDR

Configure the communication format according to the communication specifications of the device.

1. From the WindLDR menu bar, select **Configuration > Communication Ports**.
The **Function Area Settings** dialog box is displayed.
2. Click **Communication Mode** for the port to use and select the communication mode to use.
The configuration dialog that corresponds to the communication mode is displayed.

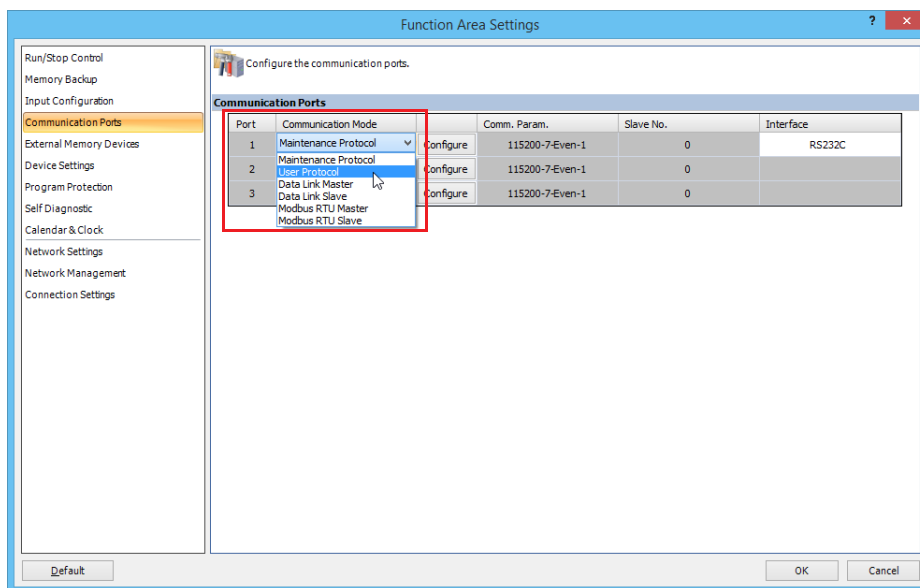

3. Change the settings on the configuration dialog according to the communication format for the destination device.
A user communication example is shown below.

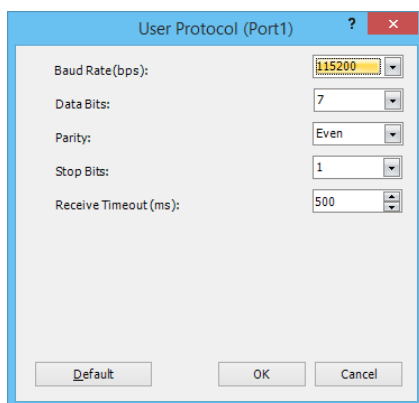

4. Click **OK**.
This concludes configuring the settings.

Network Settings

This section describes the settings for using Ethernet port 1, Ethernet port 2, or the HMI-Ethernet port to connect the FC6A Series MICROSmart to a network.

Description

The following table presents the Ethernet ports and configuration items that can be configured in the FC6A Series MICROSmart network settings in order for the FC6A Series MICROSmart to connect to an Ethernet network.

FC6A Series MICROSmart	Ethernet Port	Settings								
		IP Settings	DNS Settings	SNTP Settings	Ping Settings	E-mail Settings	Web Server Settings	BACnet Settings	FTP Settings	EtherNet/IP Settings
All-in-One CPU module	Ethernet port 1	Yes	Yes	Yes	Yes	—	—	—	—	—
Plus CPU module	Ethernet port 1	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	—
	Ethernet port 2	Yes	Yes	—	Yes	—	—	—	—	Yes
HMI module	HMI-Ethernet port	Yes	Yes	—	—	Yes	Yes	—	—	—

Network Settings

IP Settings

The specification method for the FC6A Series MICROSmart IP address, subnet mask, and default gateway can be selected as the following three types.

Specification Method	Description
Obtain an IP Address Automatically (DHCP)	The FC6A Series MICROSmart will automatically acquire the IP address, subnet mask, and default gateway from the DHCP server when the user program download has finished and when the FC6A Series MICROSmart power is turned on. However, a DHCP server must be present on the network where the FC6A Series MICROSmart is located.
Use Special Data Register to Configure the IP Address	Specify the IP address, subnet mask, and default gateway of Ethernet port 1, Ethernet port 2, and HMI-Ethernet port using the special data registers. These values are set on the FC6A Series MICROSmart when the FC6A Series MICROSmart power is turned on and when special internal relay M8190, M8333, or M8184 is turned on.
Use the Following IP Address	Specify a fixed IP address, subnet mask, and default gateway. The values specified here are reflected in the FC6A Series MICROSmart when the user program download has finished.

Notes:

- The default FC6A Series MICROSmart settings are: IP address 192.168.1.5, subnet mask 255.255.255.0, default gateway 0.0.0.0.
- The FC6A Series MICROSmart IP address, subnet mask, and default gateway can be changed using the HMI module. For details, see Chapter 7 "HMI Function" in the "FC6A Series MICROSmart User's Manual".

DNS Settings

The specification method for the DNS server addresses can be selected as the following three types.

Specification Method	Description
Obtain DNS Server Address Automatically (DHCP)	The FC6A Series MICROSmart will automatically acquire the DNS server addresses from the DHCP server when the user program download has finished and when the FC6A Series MICROSmart power is turned on. However, a DHCP server must be present on the network where the FC6A Series MICROSmart is located.
Use Special Data Registers to Configure the DNS Server Addresses	Specify the preferred DNS server address and the alternate DNS server address of Ethernet port 1, Ethernet port 2, and HMI-Ethernet port using the special data registers. These values are set on the FC6A Series MICROSmart when the FC6A Series MICROSmart power is turned on and when special internal relay M8190, M8333, or M8184 is turned on.
Use the Following DNS Server Addresses	Specify a fixed preferred DNS server address and alternate DNS server address. The values specified here are reflected in the FC6A Series MICROSmart when the user program download has finished.

Notes:

- When an IP address cannot be obtained from the preferred DNS server, the alternate DNS server is accessed.
- The DNS server addresses can be changed using the HMI module. For details, see Chapter 7 "HMI Function" in the "FC6A Series MICROSmart User's Manual".

3: COMMUNICATION SETTINGS

Network settings by special data registers

When configuring the IP Settings and DNS server addresses using special data registers, values stored in the special data registers are applied as those settings when the power to the FC6A Series MICROSmart is turned on or when special internal relay M8190 or M3333 is turned on.

Examples:

- When M8190 (Change CPU Module Ethernet Port 1 Network Settings Trigger) is turned on, values stored in D8304 to D8323 are applied as IP settings and DNS server addresses of Ethernet port 1.
- When M8333 (Change CPU Module Ethernet Port 2 Network Settings Trigger) is turned on, values stored in D8631 to D8650 are applied as IP settings and DNS server addresses of Ethernet port 2.

Special Data Register	Description	Read/Write
D8304-D8307	Setting value of IP address set for Ethernet port 1. Example: When the IP address is 192.168.0.1 D8304=192, D8305=168, D8306=0, D8307=1	R/W
D8308-D8311	Setting value of subnet mask set for Ethernet port 1. Example: When the subnet mask is 255.255.255.0 D8308=255, D8309=255, D8310=255, D8311=0	R/W
D8312-D8315	Setting value of default gateway set for Ethernet port 1. Example: When the default gateway is 192.168.0.24 D8312=192, D8313=168, D8314=0, D8315=24	R/W
D8316-D8319	Setting value of preferred DNS server address used by Ethernet port 1. Example: When the preferred DNS address is 192.168.0.100 D8316=192, D8317=168, D8318=0, D8319=100	R/W
D8320-D8323	Setting value of alternate DNS server address used by Ethernet port 1. Example: When the alternate DNS address is 192.168.0.101 D8320=192, D8321=168, D8322=0, D8323=101	R/W
D8631-D8634	Setting value of IP address set for Ethernet port 2. Example: When the IP address is 192.168.1.1 D8631=192, D8632=168, D8633=1, D8634=1	R/W
D8635-D8638	Setting value of subnet mask set for Ethernet port 2. Example: When the subnet mask is 255.255.255.0 D8635=255, D8636=255, D8637=255, D8638=0	R/W
D8639-D8642	Setting value of default gateway set for Ethernet port 2. Example: When the default gateway is 192.168.1.24 D8639=192, D8640=168, D8641=1, D8642=24	R/W
D8643-D8646	Setting value of preferred DNS server address used by Ethernet port 2. Example: When the preferred DNS address is 192.168.1.100 D8643=192, D8644=168, D8645=1, D8646=100	R/W
D8647-D8650	Setting value of alternate DNS server address used by Ethernet port 2. Example: When the alternate DNS address is 192.168.1.101 D8647=192, D8648=168, D8649=1, D8650=101	R/W

Checking the network settings

The current IP address, subnet mask, default gateway, and DNS server addresses of Ethernet port 1 and Ethernet port 2 of the FC6A Series MICROSmart can be checked with special data registers.

Special Data Register	Description	Read/Write
D8330-D8333	Current value of IP address used by Ethernet port 1. Example: When the IP address is 192.168.0.1 D8330=192, D8331=168, D8332=0, D8333=1	R
D8334-D8337	Current value of subnet mask used by Ethernet port 1. Example: When the subnet mask is 255.255.255.0 D8334=255, D8335=255, D8336=255, D8337=0	R
D8338-D8341	Current value of default gateway used by Ethernet port 1. Example: When the default gateway is 192.168.0.24 D8338=192, D8339=168, D8340=0, D8341=24	R
D8342-D8345	Current value of preferred DNS server address used by Ethernet port 1. Example: When the preferred DNS address is 192.168.0.100 D8342=192, D8343=168, D8344=0, D8345=100	R
D8346-D8349	Current value of alternate DNS server address used by Ethernet port 1. Example: When the alternate DNS address is 192.168.0.101 D8346=192, D8347=168, D8348=0, D8349=101	R
D8657-D8660	Current value of IP address used by Ethernet port 2. Example: When the IP address is 192.168.1.1 D8657=192, D8658=168, D8659=1, D8660=1	R
D8661-D8664	Current value of subnet mask used by Ethernet port 2. Example: When the subnet mask is 255.255.255.0 D8661=255, D8662=255, D8663=255, D8664=0	R
D8665-D8668	Current value of default gateway used by Ethernet port 2. Example: When the default gateway is 192.168.1.24 D8665=192, D8666=168, D8667=1, D8668=24	R
D8669-D8672	Current value of preferred DNS server address used by Ethernet port 2. Example: When the preferred DNS address is 192.168.1.100 D8669=192, D8670=168, D8671=1, D8672=100	R
D8673-D8676	Current value of alternate DNS server address used by Ethernet port 2. Example: When the alternate DNS address is 192.168.1.101 D8673=192, D8674=168, D8675=1, D8676=101	R

3: COMMUNICATION SETTINGS

Network settings by HMI module special data registers

When configuring the IP Settings and DNS server addresses using special data registers, values stored in the special data registers are applied as those settings when the power to the FC6A Series MICROSmart is turned on or when special internal relay M8184 is turned on.

Example:

- When M8184 (Change HMI Module Network Settings Trigger) is turned on, values stored in D8437 to D8456 are applied as IP settings and DNS server addresses of HMI-Ethernet port.

Special Data Register	Description	Read/Write
D8437-D8440	The HMI module IP address setting value. Example: When the IP address is 192.168.0.1 D8437=192, D8438=168, D8439=0, D8440=1	R/W
D8441-D8444	The HMI module subnet mask setting value. Example: When the subnet mask is 255.255.255.0 D8441=255, D8442=255, D8443=255, D8444=0	R/W
D8445-D8448	The HMI module default gateway setting value. Example: When the default gateway is 192.168.0.24 D8445=192, D8446=168, D8447=0, D8448=24	R/W
D8449-D8452	The setting value of the preferred DNS server address used by the HMI module. Example: When the preferred DNS address is 192.168.0.100 D8449=192, D8450=168, D8451=0, D8452=100	R/W
D8453-D8456	The setting value of the alternate DNS server address used by the HMI module. Example: When the alternate DNS address is 192.168.0.101 D8453=192, D8454=168, D8455=0, D8456=101	R/W

Checking the HMI module network settings

The current HMI module IP address, subnet mask, default gateway, and DNS server addresses can be checked with special data registers.

Special Data Register	Description	Read/Write
D8388-D8391	The HMI module IP address current value. Example: When the IP address is 192.168.0.1 D8388=192, D8389=168, D8390=0, D8391=1	R
D8392-D8395	The HMI module subnet mask current value. Example: When the subnet mask is 255.255.255.0 D8392=255, D8393=255, D8394=255, D8395=0	R
D8396-D8399	The HMI module default gateway current value. Example: When the default gateway is 192.168.0.24 D8396=192, D8397=168, D8398=0, D8399=24	R
D8400-D8403	The current value of the preferred DNS server address used by the HMI module. Example: When the preferred DNS address is 192.168.0.100 D8400=192, D8401=168, D8402=0, D8403=100	R
D8404-D8407	The current value of the alternate DNS server address used by the HMI module. Example: When the alternate DNS address is 192.168.0.101 D8404=192, D8405=168, D8406=0, D8407=101	R

Programming WindLDR

1. On the **Configuration** tab, in the **Function Area Settings** group, click the following item.

- All-in-One CPU module/CAN J1939 All-in-One CPU module
- **Network Settings**


• Plus CPU module

Ethernet Port 1 to configure Ethernet port 1

Ethernet Port 2 to configure Ethernet port 2

The **Function Area Settings** dialog box appears.

2. Configure **IP Settings** and **DNS Settings**.

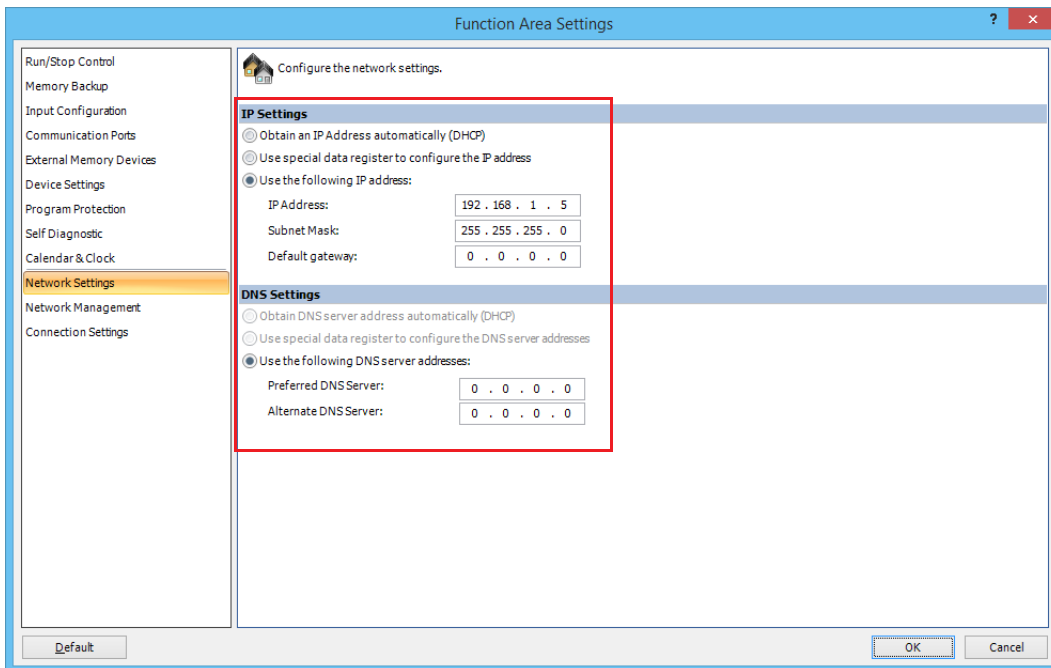

3. Click **OK**.


4. Use the Module Configuration Editor to configure the HMI module network settings.

On the **Configuration** tab, in the **PLCs** group, select **Expansion Modules**.


5. Click the inserted HMI module in the module configuration area and click **Configure**.

The **HMI Module Configuration** dialog box is displayed.

Note: You can also display the **HMI Module Configuration** dialog box by double-clicking **HMI Module** in the Project Window.

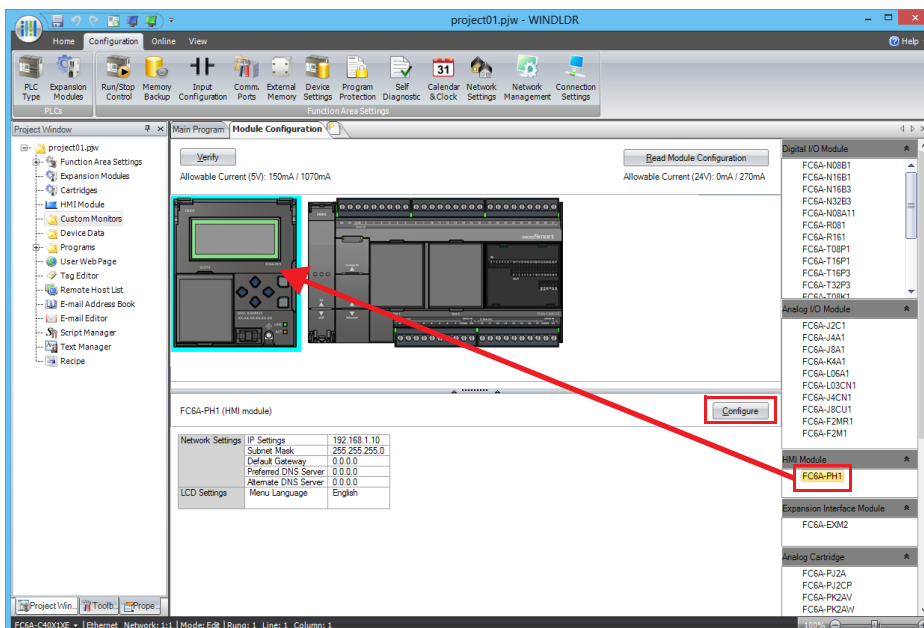

- Click the **Network Settings** tab, and then configure the **IP Settings** and **DNS Settings**.

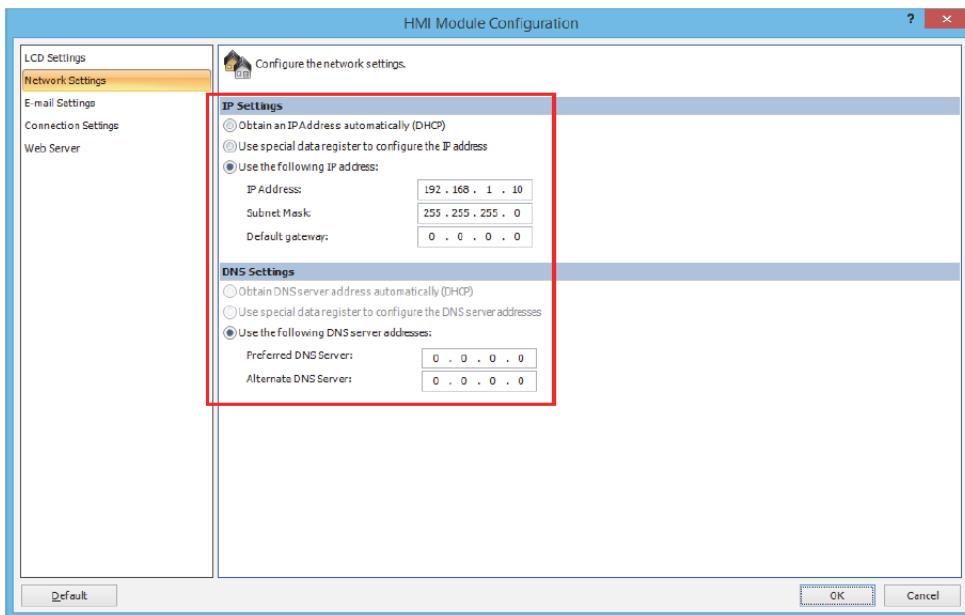

This concludes configuring the settings.

IP Settings and DNS Settings Switching

The IP settings and DNS settings for Ethernet port 1 and Ethernet port 2 of the CPU module can be switched by using special data registers (D8303 and D8630) and special internal relays (M8190 and M8333). The switching procedure is as follows.

Programming WindLDR

- On the **Configuration** tab, in the **Function Area Settings** group, click the following item.

- All-in-One CPU module/CAN J1939 All-in-One CPU module

Network Settings

- Plus CPU module


Ethernet Port 1 to configure Ethernet port 1

Ethernet Port 2 to configure Ethernet port 2


The **Function Area Settings** dialog box appears.

- Configure **IP Settings** and **DNS Settings**.

3. To set Ethernet port 1, select the **Enable D8303 (IP Settings / DNS Settings switching)** check box.
 - All-in-One CPU module/CAN J1939 All-in-One CPU module

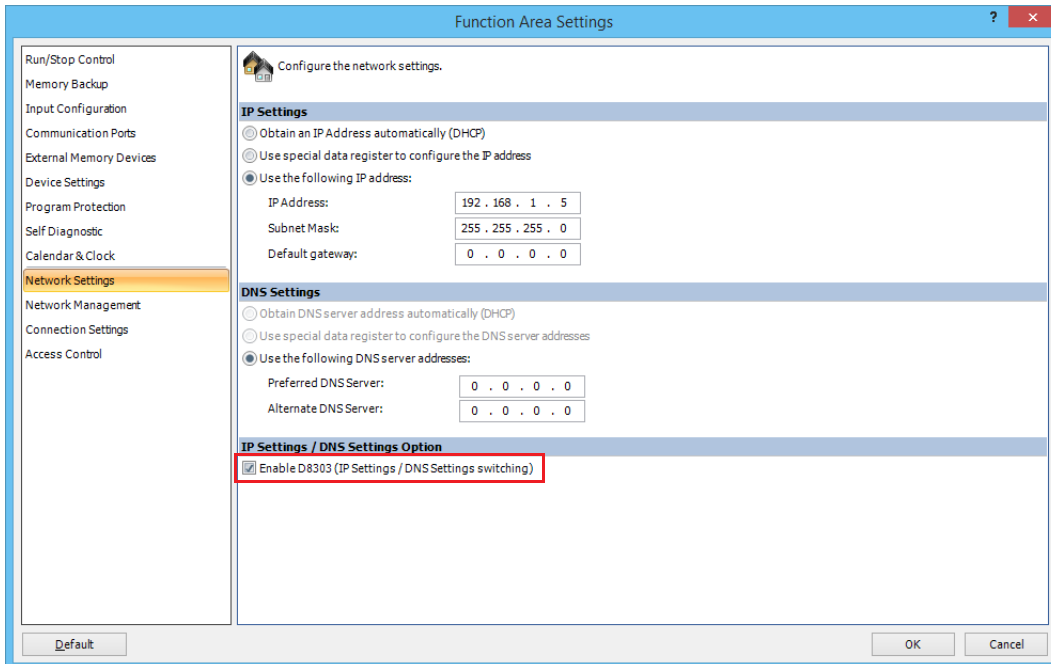


- Plus CPU module

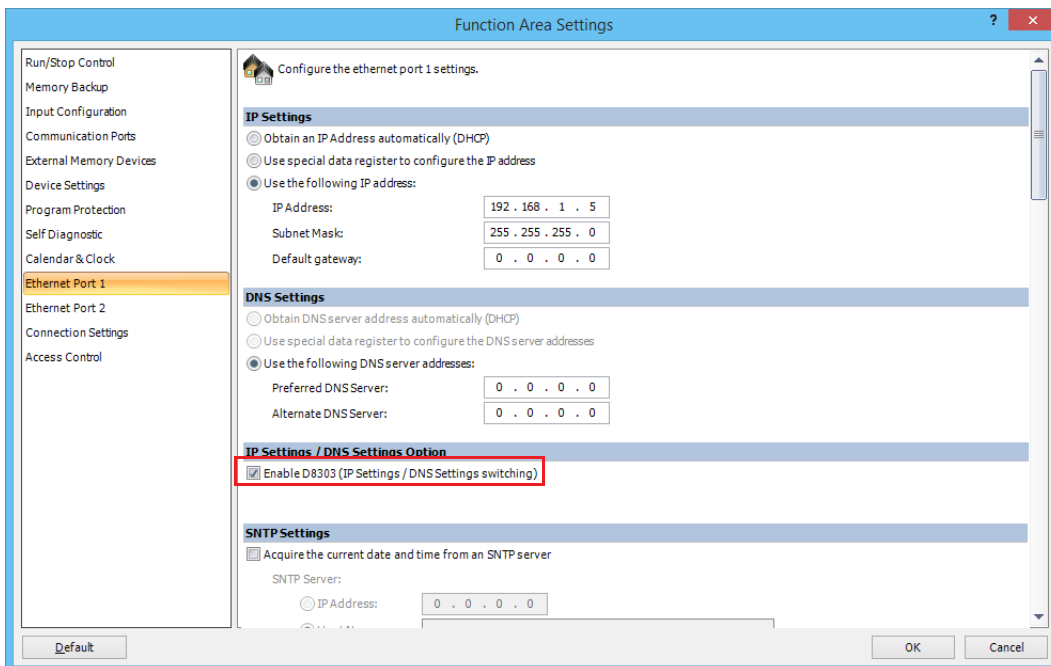

3: COMMUNICATION SETTINGS

4. To set Ethernet port 2, select the **Enable D8630 (IP Settings / DNS Settings switching)** check box.
 - Plus CPU module

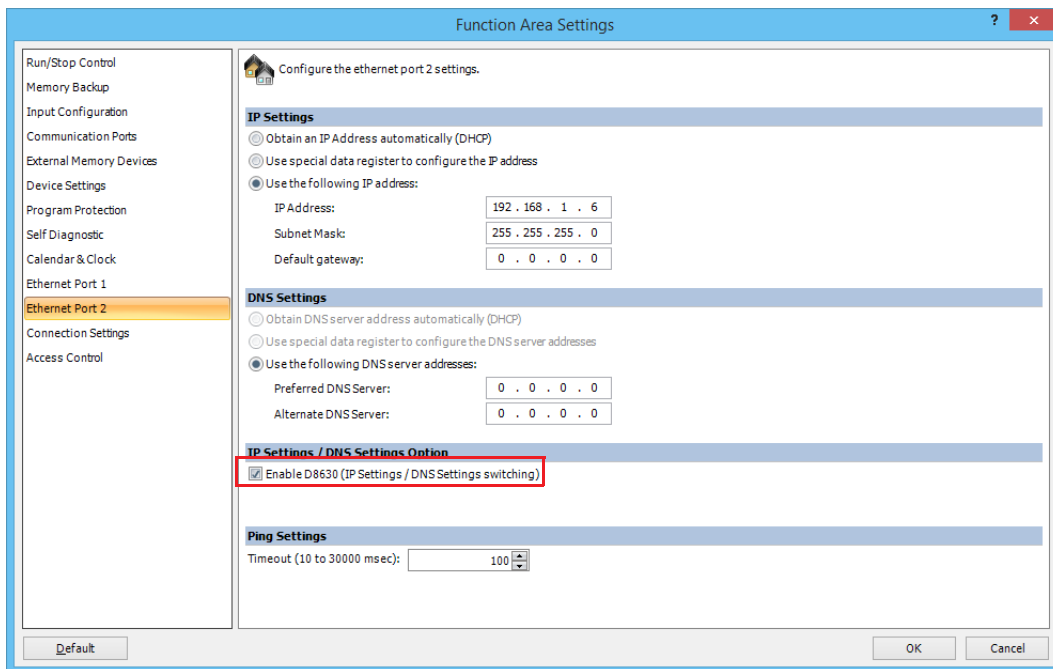

5. Click **OK**.

This concludes configuring the settings.

When the user program is downloaded, the IP settings and DNS settings are switched according to the setting value of D8303 or D8630.

The meanings of the setting values of D8303 and D8630 are as follows.

Meanings of the values stored in D8303 or D8630

Setting Value	IP Settings/DNS Settings
0	Conform to function area settings.
1	Enable DHCP.
2	Conform to special data register (D8304 to D8323 or D8631 to D8650) settings.

Notes:

- Regardless of the function area settings, the IP settings and DNS settings can be forcibly set using special data registers by setting the value of D8303 or D8630 to 2 (conform to special data register settings), and then switching M8190 or M8333 from off to on or turning the power supply off and then on again.
- Regardless of the function area settings, DHCP can be forcibly set by setting the value of D8303 or D8630 to 1 (enable DHCP), and then switching M8190 or M8333 from off to on or turning the power supply off and then on again.
- To restore the function area settings, set the value of D8303 or D8630 to 0, and then switch M8190 or M8333 from off to on or turn the power supply off and then on again.

Network Management

SNTP Settings

This section describes the settings to adjust the clock in the FC6A Series MICROSmart by acquiring the current time (UTC) from an SNTP server on the network.

Description

The FC6A Series MICROSmart acquires the current time (UTC) from an SNTP server on the network automatically or at the set interval and adjusts the internal clock according to the time zone setting. If the daylight savings time setting has been enabled, the current time (UTC) acquired from the SNTP server is corrected for daylight savings time during the daylight savings time period. The time zone can be adjusted and the operation status of the SNTP server can be checked using special data registers.


Programming WindLDR

Configure the SNTP server used to acquire the current time and the acquisition method of the current time.

1. On the WindLDR **Configuration** tab, in the **Function Area Settings** group, click the following item.

- All-in-One CPU module/CAN J1939 All-in-One CPU module
Network Management
- Plus CPU module
Ethernet Port 1

2. Select the **Acquire the current date and time from an SNTP server** check box.

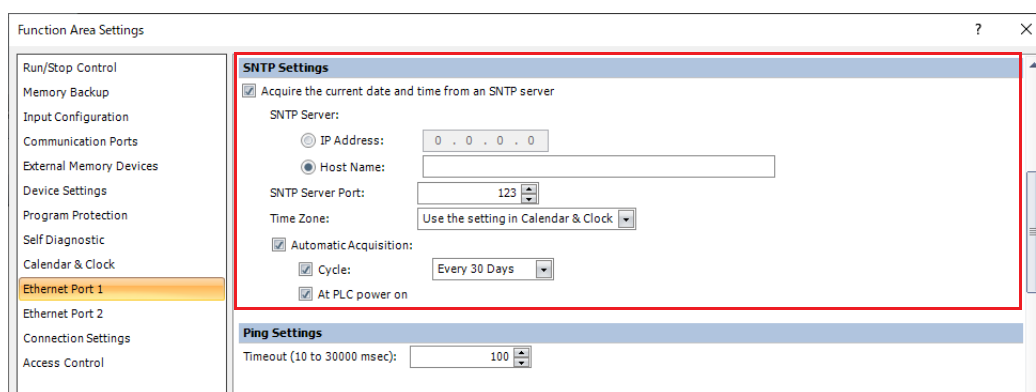

3. Configure the SNTP server, time zone, and acquisition method of the current time.

Item	Setting Value
SNTP Server (IP Address)	Specify the IP address of the SNTP server used to acquire the current time. The format is "xxx.xxx.xxx.xxx". "xxx" stands for a numeric value from 0 to 255.
SNTP Server (Host Name)	Specify the host name of the SNTP server used to acquire the current time. The host name can be entered up to 40 single-byte alphanumeric characters.
SNTP Server Port	Specify the SNTP server port number (0 to 65535).
Time Zone	Select the difference of the regional time zone in regard to the standard time (UTC) acquired from the SNTP server. The time zone can be selected in the range of "Use the setting in Calendar & Clock" ^{*1} or "UTC-12:00" to "UTC+14:00".

*1 The time zone set in the **Calendar & Clock** tab of the **Function Area Settings** dialog box is used. For details, see Chapter 5 "Time Zone" in the "FC6A Series MICROSmart User's Manual".

Note: The time zone can be adjusted in 15 minute increments using special data register D8413. For details, see "Adjusting the time zone (D8413)" on page 3-12.

4. To automatically acquire the current time, select the **Automatic Acquisition** check box.

When a keep data error occurs and when the user program is downloaded and automatic acquisition is changed from off to on, the current time is automatically acquired from the SNTP server.

To periodically acquire the current time at a timing other than the above, select the **Cycle** check box and select the cycle as "Every 10 Minutes", "Every Hour", "Every Day", or "Every 30 Days".

To acquire the current time from the SNTP server when the FC6A Series MICROSmart power is turned on, select the **At PLC power on** check box.

When the **Automatic Acquisition** check box is cleared, if special internal relay M8191 is turned from off to on, the current time is acquired from the SNTP server.

3: COMMUNICATION SETTINGS

5. Click **OK**.

This concludes configuring the settings.

Adjusting the time zone (D8413)


The selected time zone (UTC-12:00 to UTC+14:00) can be adjusted in 15 minute increments with the value of special data register D8413 (time zone offset).

For example, when UTC+09:00 is selected, storing +1 in D8413 advances the time by 15 minutes to make the time zone "UTC+09:15". Storing -2 in D8413 sets the time back by -30 minutes to make the time zone "UTC+08:30".

Checking the operation status (D8414)

The SNTP Operation Status is stored in special data register D8414 (SNTP Operation Status). The operation status indicates the operation status (status code) and the error details (error code).

The operation status (status code) is stored in the upper 12 bits of D8414 and the error details (error code) is stored in the lower 4 bits of D8414.

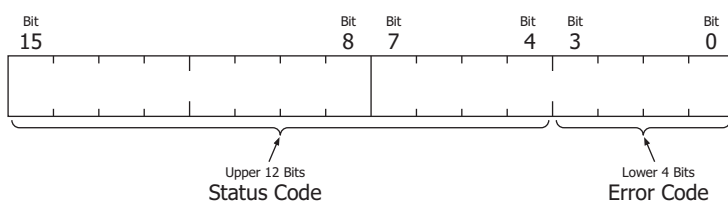

Status Code	Operation Status	Status Description
0 (000000000000)	No operation	When there is no access to the SNTP server
32 (000001000000)	Waiting for response	When the SNTP server has been accessed and waiting for the response from the SNTP server
64 (000010000000)	Time information acquisition successful	When the response from the SNTP server was normally received

Error Code	Error Details
0 (0000)	Normal
2 (0010)	Timeout error
3 (0011)	The set SNTP server IP address could not be resolved by DNS
9 (1001)	Invalid data was received

Acquire the current time at an arbitrary timing (M8191)

When special internal relay M8191 (SNTP time acquisition flag) is turned on, the current time is acquired from the SNTP server.

Elapsed time since acquiring the current time (D8415)

The elapsed time (0 to 65,535) in minutes since last acquiring the current time from the SNTP server is stored in special data register D8415 (elapsed time since SNTP access). Since the values that can be stored are between 0 and 65,535, 65,535 minutes / 60 minutes / 24 hours = approximately 45 days, so the maximum value that can be measured is 45 days.

For example, when the date and time that the current time was last acquired from the SNTP server is January 1 at 12:00, if the value of D8415 is checked on January 1 at 15:00, the value stored is "180" because 3 hours = 180 minutes have elapsed.

D8415 is reset to 0 when the current time is successfully acquired, then the elapsed time count starts. If acquiring the current time from the SNTP server was not successful even once, the value of D8415 is not updated.

Ping Settings


This section describes the ping timeout setting for the PING instruction and when the auto ping function is being executed.

Description

When sending pings with the PING instruction or auto ping function, a ping packet is sent to the specified remote host to check whether or not communication is possible at the IP level. Set the time from when this ping is sent until the timeout occurs.

Programming WindLDR

- On the **Configuration** tab, in the **Function Area Settings** group, click the following item.
 - All-in-One CPU module/CAN J1939 All-in-One CPU module
Network Management
 - Plus CPU module
Ethernet Port 1 to configure Ethernet port 1
Ethernet Port 2 to configure Ethernet port 2
- With **Timeout (10 to 30000 msec)**, set the PING instruction timeout between 10 and 30,000 ms. The default is 100 ms.

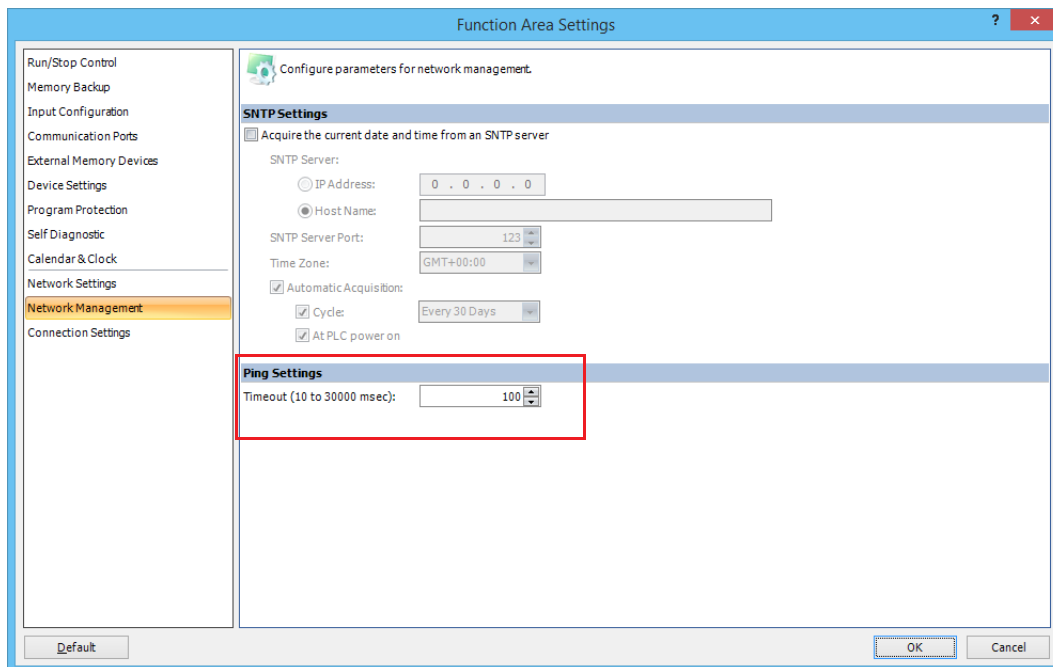

- Click **OK**.

This concludes configuring the settings.

Connection Settings

This section describes the settings for client/server communication on TCP/IP communication using Ethernet port 1, Ethernet port 2, or the HMI-Ethernet port of the FC6A Series MICROSmart.

Applications

The All-in-One CPU module/CAN J1939 All-in-One CPU module allows up to eight connections to be configured on Ethernet port 1. The Plus CPU module can configure up to 16 connections to Ethernet port 1 and Ethernet port 2. Refer to the table below for the communication that can be set for each connection.

When using the HMI module, you can configure up to eight connections to the HMI-Ethernet port. However, only maintenance communication can be set for the connection.

Use the **Function Area Settings** dialog box to set the connections required for communication.

If you use the connection as a server, you can configure filtering by IP address for the connection. Only external devices with a specific IP address can communicate with the FC6A MicroSmart, and you can restrict access from unspecified clients.

Communication Modes Available with the Ethernet Ports

The communication modes supported by each Ethernet port are as follows.

Communication Mode	All-in-One CPU Module/ CAN J1939 All-in-One CPU module	Plus CPU Module		HMI Module
	Ethernet Port 1	Ethernet Port 1	Ethernet Port 2	HMI-Ethernet Port
Maintenance communication server (Default)	Yes	Yes	Yes	Yes
User communication server	Yes	Yes	Yes	—
User communication client	Yes	Yes	Yes	—
User communication (UDP)	—	Yes	Yes	—
Modbus TCP server	Yes	Yes	Yes	—
Modbus TCP client	Yes	Yes	Yes	—
MC Protocol client	Yes	—	—	Yes
Unused	Yes	Yes	Yes	Yes

Number of Connections

CPU Module	Amount
All-in-One CPU module	8 maximum
Plus CPU module	16 maximum *1
HMI module	8 maximum

*1 When using Modbus TCP client, up to 255 communication targets can be registered in one connection setting. Up to 16 connection settings can be set at the same time. Among the communication targets registered in each connection setting, the Plus CPU module can maintain up to 128 connections and communicate with each target one by one. See "Modbus TCP Client" on page 6-22. When using the MC protocol, up to 255 communication targets can be registered in one connection setting, and every time the target is changed, the Plus CPU module disconnect and establish connection.

Overview of Communication Modes

The following table presents an overview of the communication modes.

Communication Mode	Overview	Reference
Maintenance communication server (Default)	This mode allows monitoring and changing devices and user program uploading and downloading from WindLDR.	4-7
User communication server	This mode enables communication with client devices according to the ETXD (User Communication Transmit over Ethernet) instruction and the ERXD (User Communication Receive over Ethernet) instruction.	5-47
User communication client	This mode enables communication with server devices according to the ETXD (User Communication Transmit over Ethernet) instruction and the ERXD (User Communication Receive over Ethernet) instruction.	5-43
User communication (UDP) *1	This mode enables communication with UDP communication devices according to the ETXD (User Communication Transmit over Ethernet) instruction and the ERXD (User Communication Receive over Ethernet) instruction.	5-50
Modbus TCP server	When the FC6A Series MICROSmart is configured as a Modbus TCP server, FC6A Series MICROSmart data monitoring and modifications can be executed from Modbus TCP client-compatible devices.	6-27
Modbus TCP client	Modbus TCP server-compatible device data monitoring and modifications can be executed from Modbus TCP clients.	6-22
MC Protocol client	The Plus CPU module can monitor and change data of the device that supports MC protocol.	18-2
Unused	The connection is not used. This option stops the internal control processing, which improves the responsiveness of the other connections.	—

*1 Can be selected for only the Plus CPU module.

Connection Status and Connected IP Address

The connection status of connections with remote hosts can be confirmed with special internal relays M8212 to M8231 and M8345 to M8364. When a connection with a remote host is established, the corresponding special internal relay is turned on. When the connection is disconnected, the corresponding special internal relay is turned off. The IP addresses of the remote hosts can be confirmed with special data registers D8350 to D8381.

Note: R/W is the abbreviation for read/write. When R/W, it can be read and written. When R, it can only be read. When W, it can only be written.

Special Internal Relays

Device Address	Description	Details	Read/Write
M8212	Connection 1 Status	While a connection is established with a remote host, the special internal relay will be on. When no connection is established, it will be off.	R
M8213	Connection 2 Status		
M8214	Connection 3 Status		
M8215	Connection 4 Status		
M8216	Connection 5 Status		
M8217	Connection 6 Status		
M8220	Connection 7 Status		
M8221	Connection 8 Status		
M8345*1	Connection 9 Status		
M8346*1	Connection 10 Status		
M8347*1	Connection 11 Status		
M8350*1	Connection 12 Status		
M8351*1	Connection 13 Status		
M8352*1	Connection 14 Status		
M8353*1	Connection 15 Status		
M8354*1	Connection 16 Status		

3: COMMUNICATION SETTINGS

Device Address	Description	Details	Read/Write
M8222	Connection 1 disconnected flag	<p>When turned on, the connection to the server is forcibly disconnected to stop communication. When turned off, the connection to the server is established and communication is restarted.</p> <p>This flag is only valid in user communication client.</p>	R/W
M8223	Connection 2 disconnected flag		
M8224	Connection 3 disconnected flag		
M8225	Connection 4 disconnected flag		
M8226	Connection 5 disconnected flag		
M8227	Connection 6 disconnected flag		
M8230	Connection 7 disconnected flag		
M8231	Connection 8 disconnected flag		
M8355 ^{*1}	Connection 9 disconnected flag		
M8356 ^{*1}	Connection 10 disconnected flag		
M8357 ^{*1}	Connection 11 disconnected flag		
M8360 ^{*1}	Connection 12 disconnected flag		
M8361 ^{*1}	Connection 13 disconnected flag		
M8362 ^{*1}	Connection 14 disconnected flag		
M8363 ^{*1}	Connection 15 disconnected flag		
M8364 ^{*1}	Connection 16 disconnected flag		

*1 Can be used only with the Plus CPU module.

Connected IP addresses

Special Data Register	Description	Read/Write
D8350-D8353	Connection 1 Connected IP Address	R
D8354-D8357	Connection 2 Connected IP Address	
D8358-D8361	Connection 3 Connected IP Address	
D8362-D8365	Connection 4 Connected IP Address	
D8366-D8369	Connection 5 Connected IP Address	
D8370-D8373	Connection 6 Connected IP Address	
D8374-D8377	Connection 7 Connected IP Address	
D8378-D8381	Connection 8 Connected IP Address	
D8677-D8680 ^{*1}	Connection 9 Connected IP Address	
D8681-D8684 ^{*1}	Connection 10 Connected IP Address	
D8685-D8688 ^{*1}	Connection 11 Connected IP Address	
D8689-D8692 ^{*1}	Connection 12 Connected IP Address	
D8693-D8696 ^{*1}	Connection 13 Connected IP Address	
D8697-D8700 ^{*1}	Connection 14 Connected IP Address	
D8701-D8704 ^{*1}	Connection 15 Connected IP Address	
D8705-D8708 ^{*1}	Connection 16 Connected IP Address	

*1 Can be used only with the Plus CPU module.

HMI module connection status information and connected IP address

The connection status for the HMI module connection number specified by D8429 is stored in special internal relays and special data registers.

The status of the connection to an HMI module external device can be checked with special internal relay M8232.

The relay is on when connected to the external device and off when not connected.

The connected IP address can be checked with special data registers D8430 to D8433.

Read specified target connection number

Special Internal Relays	Description	Read/Write
D8429	HMI module read target connection number Reflects the connection information for the specified number to D8430 through D8434 and M8232. When 0 is specified, the target devices are all set to 0. If a connection not that does not exist is specified, the operation is the same as when 0 is specified.	R/W

Status information

Special Internal Relays	Description	Read/Write
M8232	HMI module connection status On when the connection specified with D8429 is connected to an external device and off when there is no connection.	R


Connected IP Address

Special Internal Relays	Description	Read/Write
D8430-D8433	HMI connection Connected IP Address When communication has been established between an external device and the connection specified by D8429, the IP address of the connected external device is stored in special data registers as shown below. Example: IP Address: aaa.bbb.ccc.ddd, D8430=aaa, D8431=bbb, D8432=ccc, D8433=ddd	R

3: COMMUNICATION SETTINGS

Programming WindLDR


1. From the WindLDR menu bar, select **Configuration > Connection Settings**. The **Function Area Settings** dialog box is displayed.
2. Click **Communication Mode** for the port to be used and select communication mode of the connection to use.

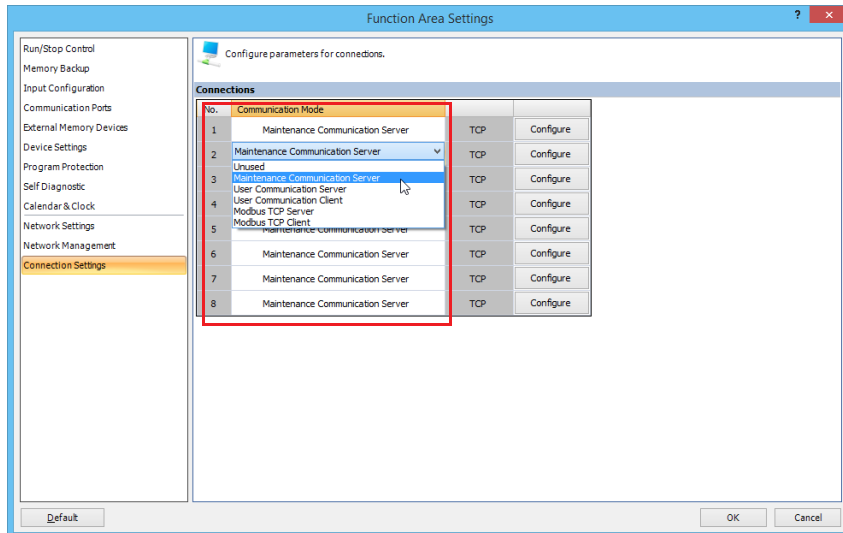

Configure the communication modes allocated to a maximum of eight connections for the All-in-One CPU module and 16 connections for the Plus CPU module that can be used as client or server. Each connection can be set to a different port number. Set connections that are not used to **Unused**.

A dialog box is displayed according to the communication mode.


3. Specify the parameters according to the communication format of the destination device.

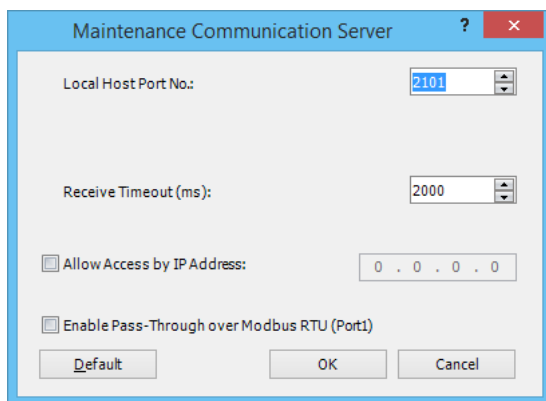


4. Click **OK**.
5. Use the Module Configuration Editor to configure the HMI module network settings. On the **Configuration** tab, in the **PLCs** group, select **Expansion Modules**.

- Click the inserted HMI module in the module configuration area and click **Configure**. The **HMI Module Configuration** dialog box is displayed.

Note: You can also display the **HMI Module Configuration** dialog box by double-clicking **HMI Module** in the Project Window.

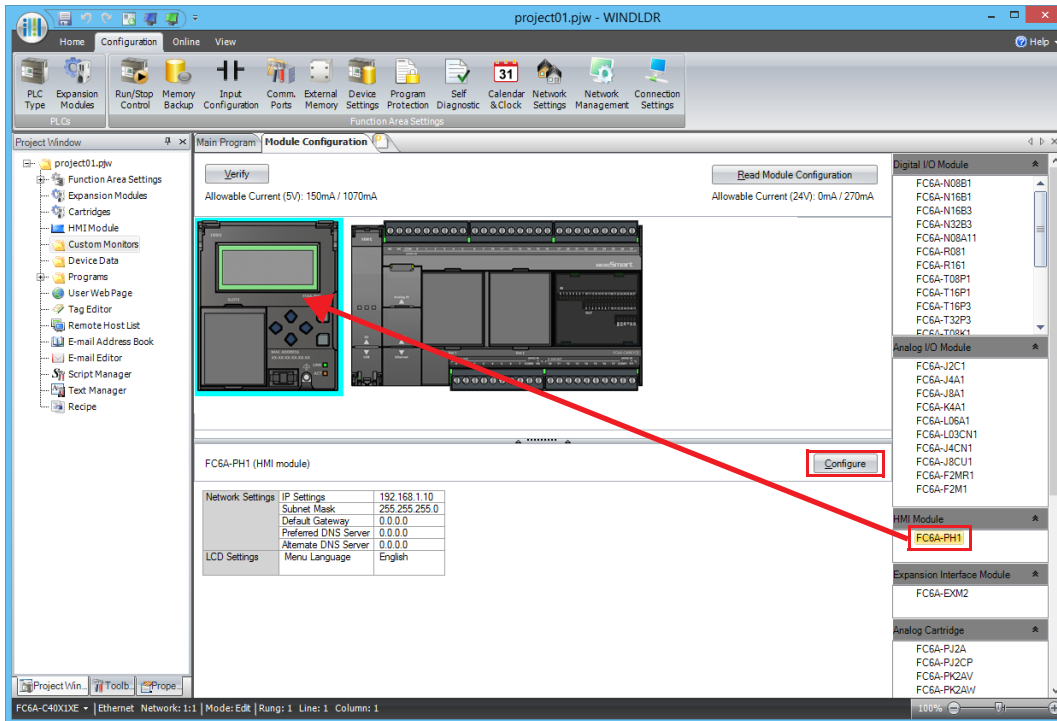


- Click **Connection Settings**.
- Click **Communication Mode** for the port to be used and select communication mode of the connection to use.

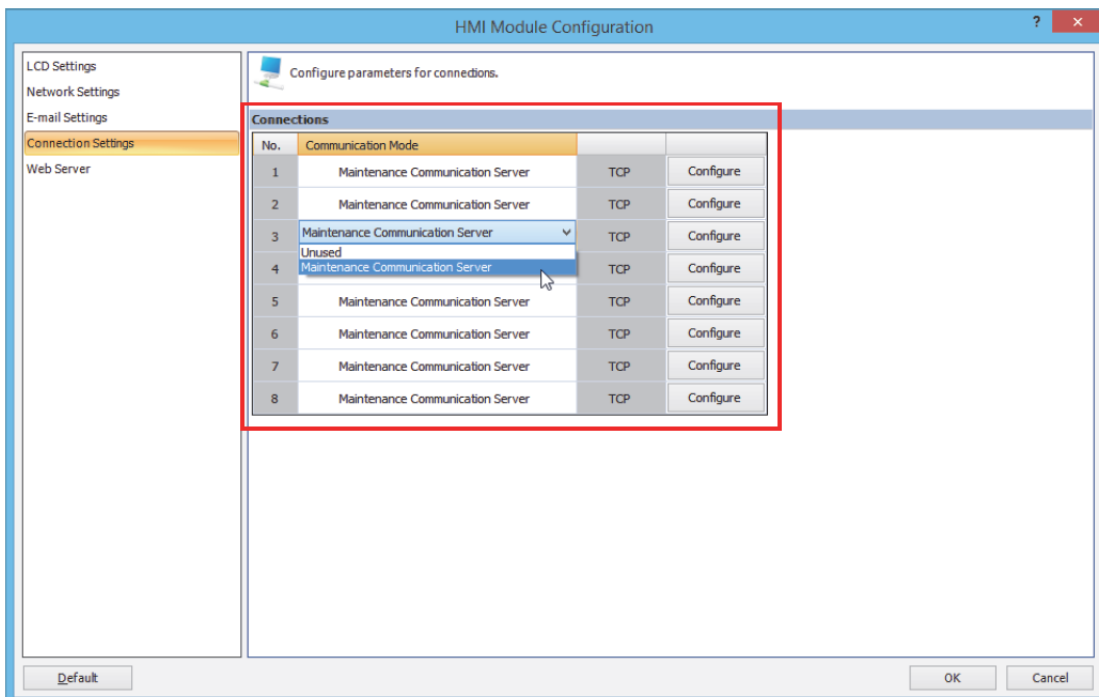

3: COMMUNICATION SETTINGS

9. Specify the parameters according to the communication format of the destination device.

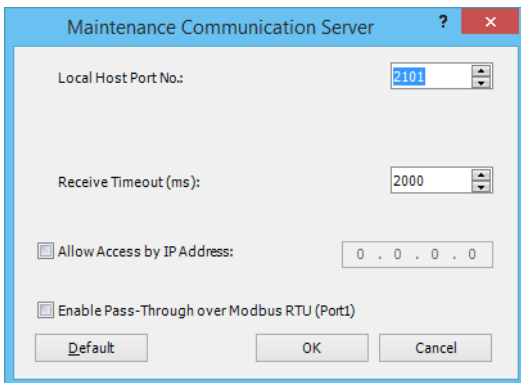

10. Click **OK**.

This concludes configuring the settings.

Remote Host List

This chapter describes how to configure a list of network devices (remote hosts) in the network to which the FC6A Series MICROSmart communicates.

Description

When the FC6A Series MICROSmart accesses and communicates with other network devices in the network, the remote host device should be specified. The remote host list is required to use the following functions:

- PING Instruction
- ETXD/ERXD Instructions (User communication over Ethernet)
- Modbus TCP Client
- MC Protocol Client

Description of Functions

The remote host consists of an **IP Address** or a **Host Name** and a **Port Number**.


When a remote host is specified with an IP address, and the FC6A Series MICROSmart establishes connection with the remote host that has the specified IP address and the corresponding port number, then communication is started.

When a remote host is specified with a host name, the FC6A Series MICROSmart tries to obtain the IP address from the specified host name using the DNS server. If the IP address is successfully obtained, the FC6A Series MICROSmart establishes connection with the remote host that has the specified IP address and the corresponding port number, then communication is started.

For details about DNS server settings, see Network Settings in the **Function Area Settings**.


Programming WindLDR

1. Click **Project Window** in the **Work Space** on the **View** tab.
The Project Window is displayed on the left side of the screen.
2. Double-click on the Remote Host List in the **Project Window**.
The **Remote Host List** dialog box appears.
3. Click **New** button.
The **Remote Host List** dialog box appears.

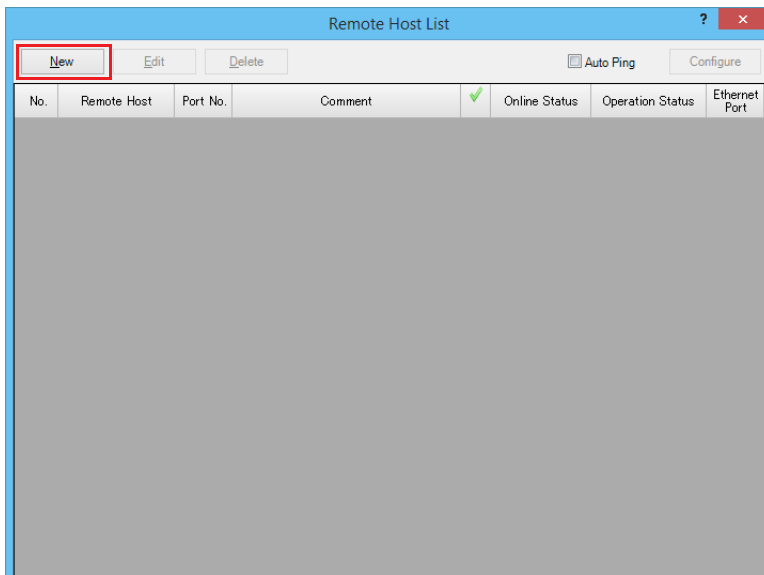

3: COMMUNICATION SETTINGS

4. Configure the parameters in the **Remote Host** dialog box and then click on **Add** button.

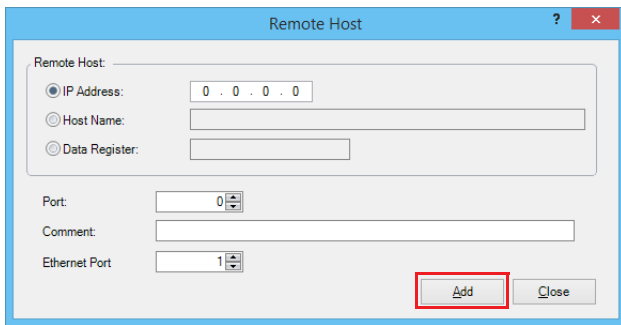


The remote host is composed of the following items.

Item	Setting Value
IP Address	Specify the remote host with an IP address. The FC6A Series MICROSmart will communicate by establishing a connection to the set IP address and port number.
Host Name	Specifies the remote host as a host name. Up to 40 single-byte alphanumeric characters can be entered.
Data Register	Specify the IP address of the remote host as data registers (4 words).
Port	Specify the port number of the remote host. This port number is the TCP communication port number. It differs from the numbers of the FC6A Series MICROSmart USB port and port 1 through port 3.
Comment	The comment for the remote host can be assigned. The contents or the length of the comment has no effect on the FC6A Series MICROSmart operation.
Ethernet Port	Select the Ethernet port to communicate with the remote host.

A new remote host will be added in the Remote Host List dialog box. If you want to add additional remote hosts, repeat the same procedure.

- To periodically ping the specified remote host, configure auto ping.
For details, see "Auto Ping Function" on page 3-23.
- After adding remote hosts has been completed, click on **Close** button.

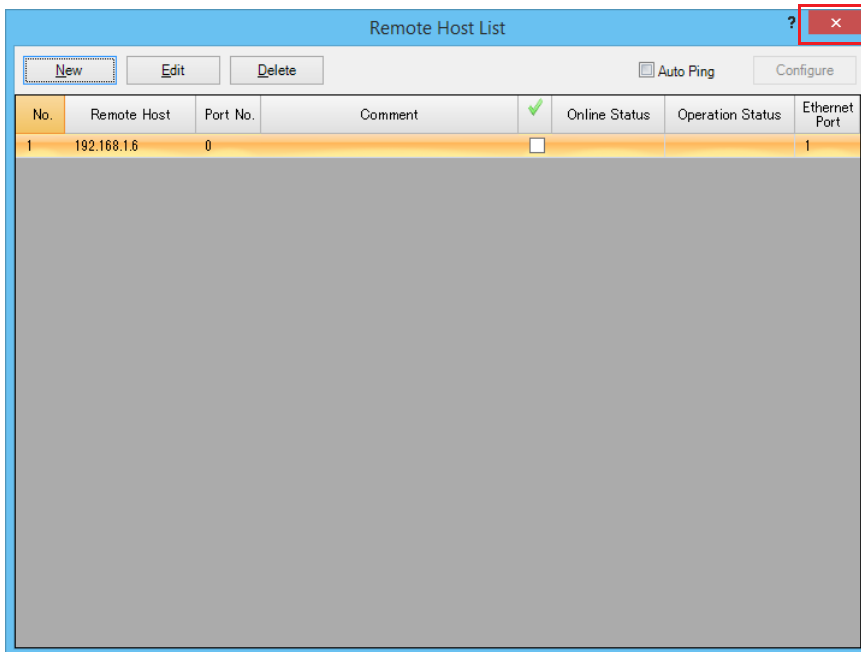

7. If you want to delete an unused remote host, select that remote host in the **Remote Host List** dialog box and click on **Delete** button.
This concludes configuring the settings.

Note: Once a remote host is deleted, the remote host numbers of the following remote hosts are changed. As a result, there is an effect on the operation of the PING instruction, Modbus TCP client, and user communication client that refer to these remote host list numbers.

Auto Ping Function

This section describes the auto ping function that periodically pings the specified remote host.

Function Description

The function to periodically ping the specified remote host is called the auto ping function. This function can be used to check whether or not communication is possible with the specified remote host by sending a packet to that host. The result of the Auto Ping function can be linked with Modbus TCP and MC protocol client request processing. For details see "Modbus TCP Client" on page 6-22. For details see "MC protocol communication via Ethernet Communication" on page 18-2.

The remote host is specified with the remote host list.


While the FC6A Series MICROSmart is turned on, once the user program in which the auto ping is enabled is downloaded, the auto ping is started. The CPU pings remote hosts in order from the smallest remote host number. There is no impact from the FC6A run and stop statuses and the ladder program.

On Ethernet port 1, when M8186 (Ethernet port 1 Auto Ping is running) is ON and M8187 (Ethernet port 1 Auto Ping stop flag) is ON, Auto Ping is stopped. When M8187 turns OFF, Auto Ping execution will be executed.

For Ethernet port 2, when M8331 (Ethernet port 2 Auto Ping is running) is ON and M8332 (Ethernet port 2 Auto Ping stop flag) is ON, Auto Ping is stopped. When M8332 turns OFF, Auto Pinging starts. Ethernet port 2 can only be used with Plus CPU modules.


Programming WindLDR

1. In the **Remote Host List** dialog box, select the **Auto Ping** check box and click **Configure**. The **Auto Ping Settings** dialog box is displayed.

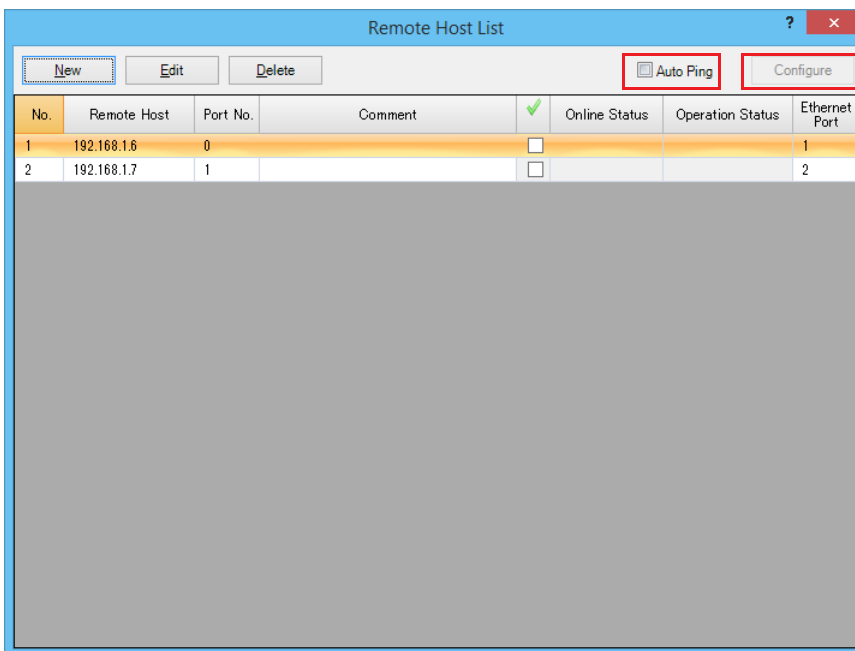

3: COMMUNICATION SETTINGS

2. Specify the auto ping function items and click **OK**.

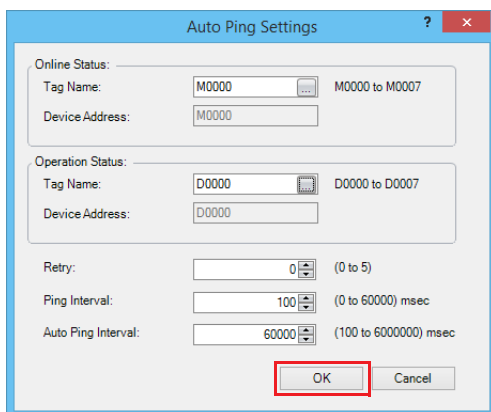

The auto ping function is composed of the following items.

Item	Setting Value
Online Status*1:	Configure the internal relay to store the results of pings sent with the auto ping. Starting with the configured internal relay, the internal relays are automatically assigned in the order of remote host numbers.
Operation Status:	Specify the data register that stores the operation status of the pings sent with the auto ping. Starting with the configured data register, the data registers are automatically assigned in the order of remote host numbers. The operation status indicates the operation status (status code) and the error details (error code). The status code is stored in the upper 12 bits and the error code is stored in the lower 4 bits. For the status code details, see "Operation status" on page 3-26. There is no impact on the operation of the PING instruction.
Retry:	Specify the retry count (0 to 5 times) of the ping sent with the auto ping function.
Ping Interval:	Specify the send interval (0 to 60,000 ms) of the pings sent with the auto ping function in 10 ms increments.
Auto Ping Interval:	Specify the interval (100 to 6,000,000 ms) until the next auto ping is executed after the auto ping was executed in 100 ms increments.

*1 **Online status** is automatically turned OFF when the Auto Ping function starts executing. After sending a Ping, **Online status** turns ON when a response is received, and automatically turns OFF when a response cannot be received. When Auto Ping is stopped, the ON / OFF status of **Online status** is retained. The status of the special internal relay and **Online status** used by the Auto Ping function are as follows.

Ethernet port to communicate with remote host	Status of Online status
Ethernet port 1	When Ethernet port 1 Auto Ping is being executed (M8186 is ON), when the Ethernet port 1 Auto Ping stop flag (M8187) is turned ON from OFF and Auto Ping stops, the previous ON / OFF state is retained. When Auto Ping is stopped (M8186 is OFF), if you change the Ethernet port 1 Auto Ping stop flag (M8187) from ON to OFF, [Online status] is OFF and the OFF status is maintained.
Ethernet port 2 (Only Plus CPU module)	When Ethernet port 2 Auto Ping is being executed (M8331 is ON), when the Ethernet port 2 Auto Ping stop flag (M8332) is turned ON from OFF and Auto Ping stops, the previous ON / OFF state is retained. When Auto Ping is stopped (M8331 is OFF), if you change the Ethernet port 2 Auto Ping stop flag (M8332) from ON to OFF, [Online status] is OFF and the OFF status is maintained.

3. In the **Remote Host List** dialog box, select the check box of the remote hosts to ping when auto ping executes.

No.	Remote Host	Port No.	Comment	Online Status	Operation Status	Ethernet Port	
1	192.168.1.6	0		<input checked="" type="checkbox"/>	M0000	D0000	1
2	192.168.1.7	1		<input type="checkbox"/>	M0001	D0001	2

4. Click **Close**.

This concludes configuring the settings.

3: COMMUNICATION SETTINGS

Operation status


The operation status indicates the operation status (status code) and the error details (error code).

The operation status (status code) is stored in the upper 12 bits of D8414 and the error details (error code) is stored in the lower 4 bits of D8414.

When the value of the operation status data register is divided by 16, the remainder is the error code.

If the value of the operation status data register is 66:

$66 \div 16 = 4$ with a remainder of 2, so the error code is 2.

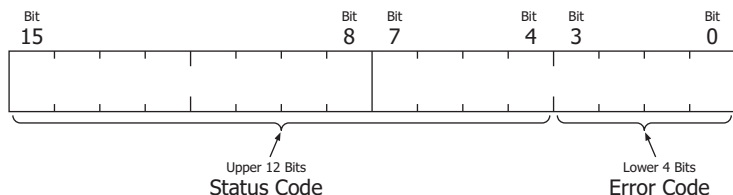


Status Code	Operation Status
16 (00000010000)	Status after ping executed and before the packet is sent
32 (00000100000)	Status after packet send processing has completed and waiting for a response from the host
64 (00001000000)	Status where receiving the response for the packet completed normally or a timeout error occurred and the next ping can be executed

Error Code	Error Details
0 (0000)	Normal
2 (0010)	Timeout error
3 (0011)	The destination host name could not be resolved by DNS

Auto ping operation example 1

This example describes the operation when auto ping is executed for three remote hosts under the following conditions.

Settings	Setting Details
Ping settings	Timeout: 1,000 ms
Auto ping settings	Online Status: M0000
	Retry: 0 times
	Ping Interval: 1,000 ms
	Auto Ping Interval: 60,000 ms

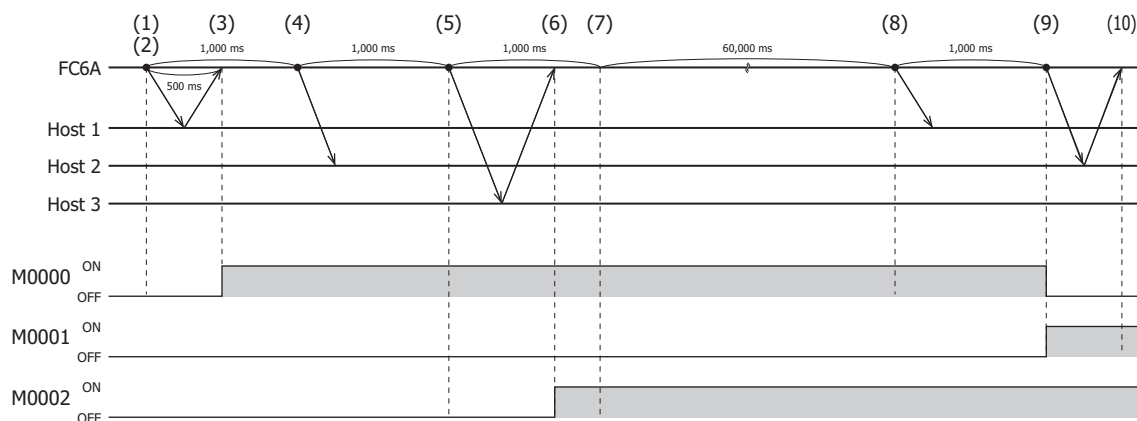


- (1) : Auto ping operation starts
- (2) to (3) : Response from Host 1 within the timeout
- (4) : No response from Host 2 within the timeout
- (5) to (6) : Response from Host 3 within the timeout
- (7) to (8) : Auto Ping Interval
- (8) : No response from Host 1 within the timeout
- (9) to (10) : Response from Host 2 within the timeout

Auto ping operation example 2

This example describes the operation when auto ping is executed for three remote hosts under the following conditions.

Settings		Setting Details
Ping settings	Timeout	2,000 ms
	Online Status	M0000
Auto ping settings	Retry	1 time
	Ping Interval	500 ms
	Auto Ping Interval	30,000 ms

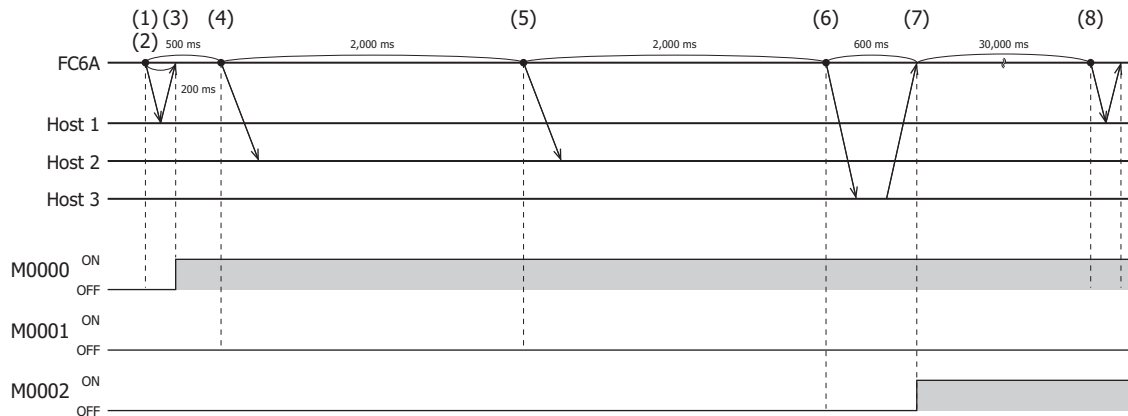

- (1) : Auto ping operation starts
- (2) to (3) : Response from Host 1 within the timeout
- (4) to (5) : No response from Host 2 within the timeout, no response even for retries
When the timeout is longer than the ping interval, there is no ping interval wait time.
- (6) : Response from Host 3 was late, but within the timeout
- (7) to (8) : Auto Ping Interval

4: MAINTENANCE COMMUNICATION

Introduction

This chapter describes the FC6A Series MICROSmart maintenance communication function.

Maintenance communication is a communication protocol dedicated for IDEC programmable controllers. It is used when WindLDR or an IDEC operator interface communicates with the FC6A Series MICROSmart.

The FC6A Series MICROSmart supports maintenance communication on each communication port, allowing the optimum communication method to be selected for a variety of system configurations.

Maintenance Communication Functions

When performing maintenance communication with the FC6A Series MICROSmart, the following functions can be used:

Function	Description
Download user programs	User programs created in WindLDR can be downloaded to the FC6A Series MICROSmart. See Chapter 4 "Download Program" in the "FC6A Series MICROSmart User's Manual".
Upload user programs	User programs stored in the FC6A Series MICROSmart can be uploaded to WindLDR.
Monitor/change device values	The user program and the device values of the FC6A Series MICROSmart can be monitored and the device values can be changed using WindLDR. See Chapter 4 "Monitor Operation" in the "FC6A Series MICROSmart User's Manual".
Download system software	System software can be downloaded to the FC6A Series MICROSmart. See Appendix "Upgrade FC6A Series MICROSmart System Software" in the "FC6A Series MICROSmart User's Manual".

Note: To use maintenance communication, see Chapter 4 "Start WindLDR" in the "FC6A Series MICROSmart User's Manual" and perform setup.

Communication Ports Used For Maintenance Communication

Supported models, ports, and slots are as follows.

Port	All-in-One CPU Module			CAN J1939 All-in-One CPU Module	Plus CPU Module	
	16-I/O Type	24-I/O Type	40-I/O Type		Plus 16-I/O Type	Plus 32-I/O Type
USB Port	Yes	Yes	Yes	Yes	Yes	Yes
Port 1	Yes	Yes	Yes	—	Yes ^{*2}	Yes ^{*2}
Port 2	Yes ^{*1}	Yes ^{*1}	Yes ^{*1}	Yes ^{*1}	Yes ^{*2}	Yes ^{*2}
Port 3	—	—	Yes ^{*1}	Yes ^{*1}	Yes ^{*3}	Yes ^{*3}
Port 4 to 33	Yes (Port 4 to 9) ^{*4}				Yes (Port 4 to 33) ^{*5}	
Ethernet Port 1	Yes	Yes	Yes	Yes	Yes	Yes
Ethernet Port 2	—	—	—	—	Yes	Yes
HMI-Ethernet Port ^{*6}	Yes	Yes	Yes	Yes	Yes	Yes

*1 When a communication cartridge is connected.

*2 When a cartridge base module and communication cartridge are connected.

*3 When the HMI module and a communication cartridge are connected.

*4 Up to three communication modules can be connected to the All-in-One CPU module and CAN J1939 All-in-One CPU module, expanding the communication ports 4 to 9.

*5 Up to 15 communication modules can be connected to the Plus CPU module, expanding the communication ports 4 to 33.

*6 HMI-Ethernet port can be expanded by connecting the HMI module to the CPU module.

4: MAINTENANCE COMMUNICATION

Maintenance communication methods that are supported by the communication ports are as follows.

Communication Method		USB Port	Port 1	Port 2 and Port 3	Port 4 to 33	Ethernet Port 1	Ethernet Port 2	HMI-Ethernet Port
Maintenance Communication	Download system software	Yes	Yes ^{*1}	No	No	Yes	Yes	Yes
	Download/upload user programs	Yes	Yes ^{*1}	No	No	Yes	Yes	Yes
	Run-time download	Yes	Yes ^{*1}	No	No	Yes	Yes	Yes
	Monitor/change device values	Yes	Yes	Yes	Yes	Yes	Yes	Yes

*1 Not supported with a communication cartridge.

Maintenance communication functions that are supported by the communication ports and slots are as follows.

All-in-One CPU module/CAN J1939 All-in-One CPU module

Communication Port	Standard/Expansion	Communication Settings
USB Port	Standard	None
Port 1	Standard ^{*1}	Function area settings. See "Maintenance Communication via Port 1" on page 4-4.
Port 2	Expansion ^{*2}	When using a RS232C/RS485 communication cartridge: Function area settings. See "Maintenance Communication via Port 2 to 33" on page 4-12.
Port 3		When using a Bluetooth communication cartridge: Function area settings. See "Maintenance Communication via Port 1 to 3 (Bluetooth)" on page 4-15.
Port 4 to 9	Expansion ^{*3}	Function area settings. See "Maintenance Communication via Port 2 to 33" on page 4-12.
Ethernet Port 1	Standard	Function area settings. See "Maintenance Communication via Ethernet Port 1 and 2" on page 4-7.
Ethernet Port 2	—	—
HMI-Ethernet Port	Standard ^{*4}	Function area settings. See "Maintenance Communication via HMI-Ethernet port" on page 4-16.

*1 The CAN J1939 All-in-One CPU module does not have port 1.

*2 The ports can be expanded by connecting a communication cartridge to the CPU module.

*3 The ports can be expanded by using a communication module.

*4 The ports can be expanded by using the HMI module.

Plus CPU module

Communication Port	Standard/Expansion	Communication Settings
USB Port	Standard	None
Port 1	Expansion ^{*1}	When using a RS232C/RS485 communication cartridge: Function area settings. See "Maintenance Communication via Port 1" on page 4-4.
Port 2		When using a Bluetooth communication cartridge: Function area settings. See "Maintenance Communication via Port 1 (Bluetooth)" on page 4-6.
Port 2	Expansion ^{*2}	When using a RS232C/RS485 communication cartridge: Function area settings. See "Maintenance Communication via Port 2 to 33" on page 4-12.
Port 3		When using a Bluetooth communication cartridge: Function area settings. See "Maintenance Communication via Port 1 to 3 (Bluetooth)" on page 4-15.
Port 4 to 33	Expansion ^{*3}	Function area settings. See "Maintenance Communication via Port 2 to 33" on page 4-12.
Ethernet Port 1	Standard	Function area settings. See "Maintenance Communication via Ethernet Port 1 and 2" on page 4-7.
Ethernet Port 2		
HMI-Ethernet Port	Expansion ^{*4}	Function area settings. See "Maintenance Communication via HMI-Ethernet port" on page 4-16.

*1 The ports can be expanded by connecting a communication cartridge to a cartridge base module.

*2 The ports can be expanded by connecting a communication cartridge to the HMI module.


*3 The ports can be expanded by using a communication module.

*4 The ports can be expanded by using the HMI module.

Maintenance Communication via USB Port

Using the USB port, it is possible to connect FC6A Series MICROSmart to a computer on which WindLDR is installed, and monitor and change device values, download and upload user programs, and download system software. Connect the computer and the FC6A Series MICROSmart using a USB cable (recommended cable: HG9Z-XCM42).

FC6A Series MICROSmart USB Port

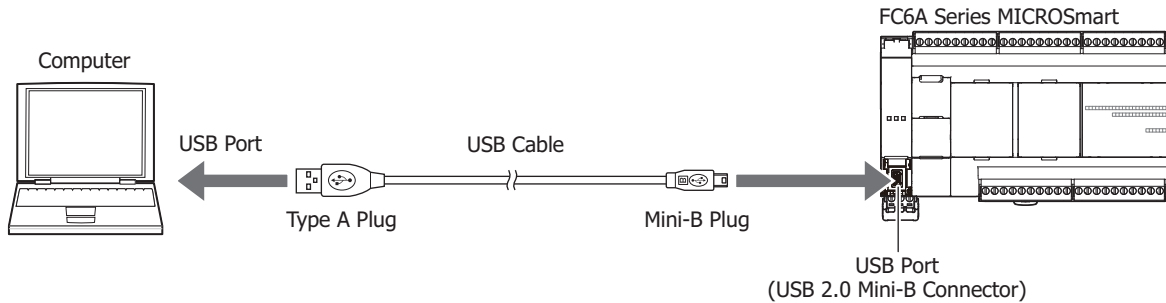

Maintenance Communication Specifications

Item	Specifications/Functions
Cable	Recommended cable: USB maintenance cable (HG9Z-XCM42)
Maintenance communication functions	Monitor/change device values Download/upload user programs Download system software Run-time download

Detailed Operations for Maintenance Communication Functions

See the following in the "FC6A Series MICROSmart User's Manual".

- Monitor/change device values: Chapter 4 "Monitor Operation"
- Download/upload user programs: Chapter 4 "Download Program"
- Download system software: Appendix "Upgrade FC6A Series MICROSmart System Software"
- Run-time download: Chapter 5 "Online Edit"


Maintenance Communication via Port 1

Computers in which WindLDR is installed or IDEC operator interfaces can be connected to the FC6A Series MICROSmart, and monitoring and changing device values, downloading or uploading the user program, and downloading the system software are possible.

Maintenance communication on port 1 is possible by using the serial port 1 of the All-in-One CPU module or using the communication cartridge installed to the cartridge slot 1 of the cartridge base module that is connected to the Plus CPU module.

For details on communication cables, see Appendix "Cables" in the "FC6A Series MICROSmart User's Manual".


All-in-One CPU Module Port 1

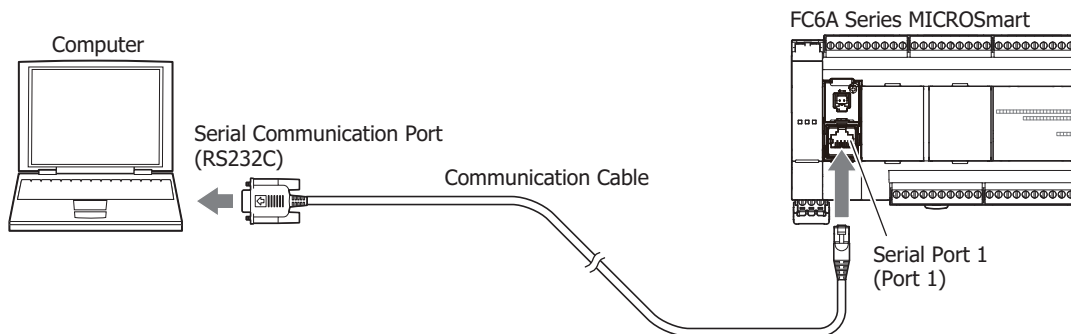

Maintenance Communication Specifications

Item	Specifications/Functions
Cable	O/I communication cable (FC6A-KC2C)
Maintenance communication functions	Monitor/change device values Download/upload user programs Download system software Run-time download

Plus CPU Module Port 1

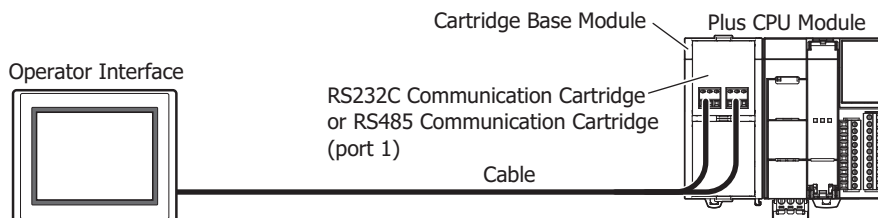

Maintenance Communication Specifications

Item	Specifications/Functions
Cable	RS232C communication cartridge: Shielded multicore cable RS485 communication cartridge: Shielded twisted-pair cable
Maintenance communication functions	Monitor/change device values

Note:

The following functions are not supported by maintenance communication using an RS232C communication cartridge or RS485 communication cartridge.

- Download/upload user programs
- Download system software
- Run-time download

Detailed Operations for Maintenance Communication Functions

See the following in the "FC6A Series MICROSmart User's Manual".


- Monitor/change device values: Chapter 4 "Monitor Operation"

Programming WindLDR


Configure the settings for maintenance communication.

1. From the WindLDR menu bar, select **Configuration > Comm. Ports**.
The **Function Area Settings** dialog box appears.

- Click **Communication Mode** for port 1 and select **Maintenance Protocol**.
The **Maintenance Protocol (Port1)** dialog box appears.

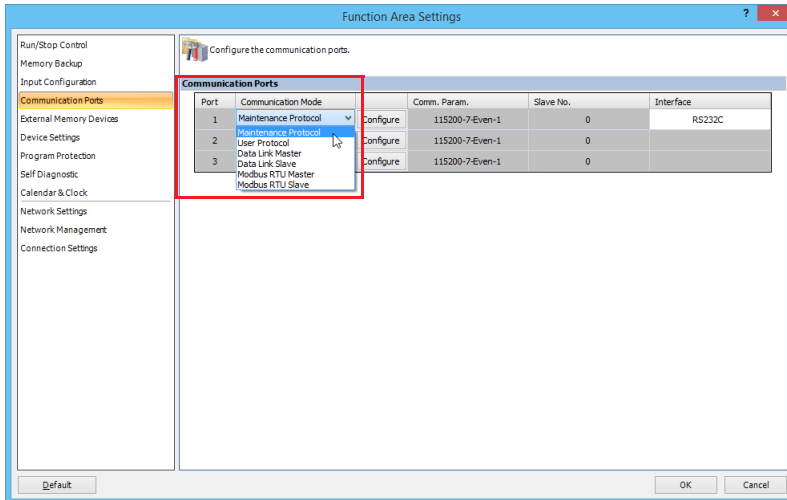

- Configure the parameters to match the communication settings of the computer or operator interface.

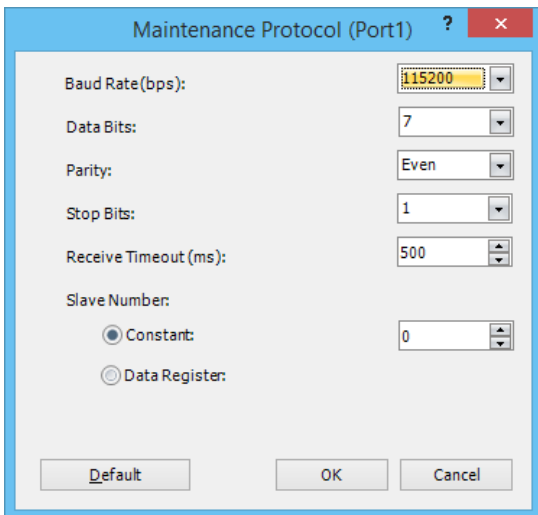

Baud Rate (bps): 115200 bps (1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200)
 Data Bits: 7 (7 or 8)
 Parity: Even (None, Even, Odd)
 Stop Bits: 1 (1 or 2)
 Receive Timeout (ms): 500 (10 to 2550)
 Slave Number: 0 (0 to 31)

Slave number can be specified by either a constant or a data register.

Type	Details
Constant	Set within the range of 0 to 31
Data register	Store the slave numbers 0 to 31 in the following special data registers Port 1: D8100 Port 2: D8102 Port 3: D8103 Port 4 to 9*1: D8040 to D8045 Port 10 to 33*1*2: D8735 to D8758

*1 When using a communication module.

*2 Plus CPU module only.

* Values not in parentheses are the default settings.

* Set **Data Bits** to **8** when downloading the system software over port 1.


- Click **OK**.

Configuring the maintenance communication for the expansion communication port is now complete.

Maintenance Communication via Port 1 (Bluetooth)

Connect a Bluetooth communication cartridge to cartridge slot 1 of a cartridge base module added to the Plus CPU module to connect to computers or smartphones equipped with Bluetooth and allow device values to be monitored and changed.

Plus CPU Module Bluetooth

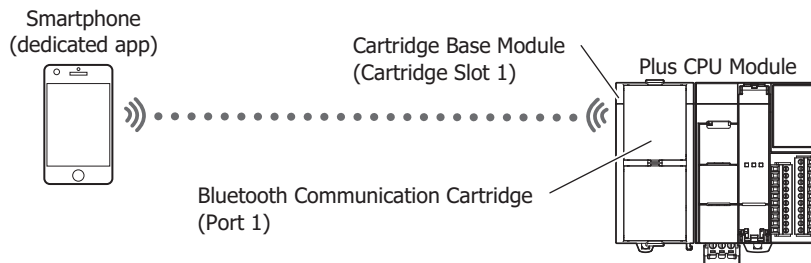

Maintenance Communication Specifications

Item	Specifications/Functions
Maintenance Communication Function	Monitor/change device values Download/upload user programs

Notes:

- The following functions are not supported by maintenance communication using a Bluetooth communication cartridge.
 - Download system software
 - Run-time download
- Bluetooth communication may fail and a download error may occur after a user program is downloaded and Bluetooth communication cartridge settings are changed.

Detailed Operations for Maintenance Communication Functions

See the following in the "FC6A Series MICROSmart User's Manual".

- Monitor/change device values: Chapter 4 "Monitor Operation"

Programming WindLDR


For details, see "Bluetooth Communication" on page 9-1.

Maintenance Communication via Ethernet Port 1 and 2

The FC6A Series MICROSmart can communicate with network devices such as computers or IDEC operator interfaces using Ethernet port 1 of the All-in-One CPU module/CAN J1939 All-in-One CPU module and Ethernet port 1 and 2 of the Plus CPU module. External devices on the network can monitor or change the device values and download or upload user programs.

The FC6A Series MICROSmart can use the maintenance communication server and other communications functions simultaneously by assigning a separate communication function, such as a maintenance communication server or Modbus TCP communication, to a maximum of eight connections on the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections on the Plus CPU module.

FC6A Series MICROSmart Ethernet Port 1 and 2

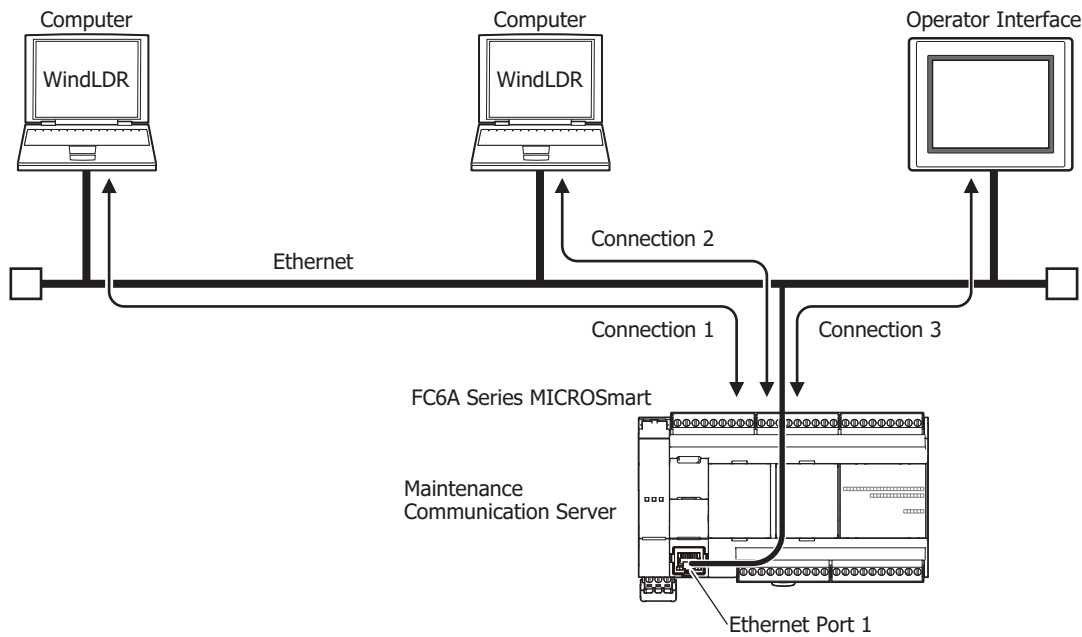

Maintenance Communication Specifications

Item	Specifications/Functions
Cable	LAN cable (Cat 5. STP)
Maintenance communication functions	Monitor/change device values Download/upload user programs Download system software Run-time download

Detailed Operations for Maintenance Communication Functions

See the following in the "FC6A Series MICROSmart User's Manual".

- Monitor/change device values: Chapter 4 "Monitor Operation"
- Download/upload user programs: Chapter 4 "Download Program"
- Download system software: Appendix "Upgrade FC6A Series MICROSmart System Software"
- Run-time download: Chapter 5 "Online Edit"

Programming WindLDR

This section describes the procedures to configure the maintenance communication server for the Ethernet port 1 and 2, and to communicate with the FC6A Series MICROSmart via Ethernet.


Configure Maintenance Communication Server

1. On the **Configuration** tab, in the **Function Area Settings** group, click the following item.

- All-in-One CPU module/CAN J1939 All-in-One CPU module
Network Settings
- Plus CPU module
Ethernet Port 1 to configure Ethernet port 1
Ethernet Port 2 to configure Ethernet port 2


The **Function Area Settings** dialog box appears.

2. Enter the IP address, subnet mask, and default gateway.

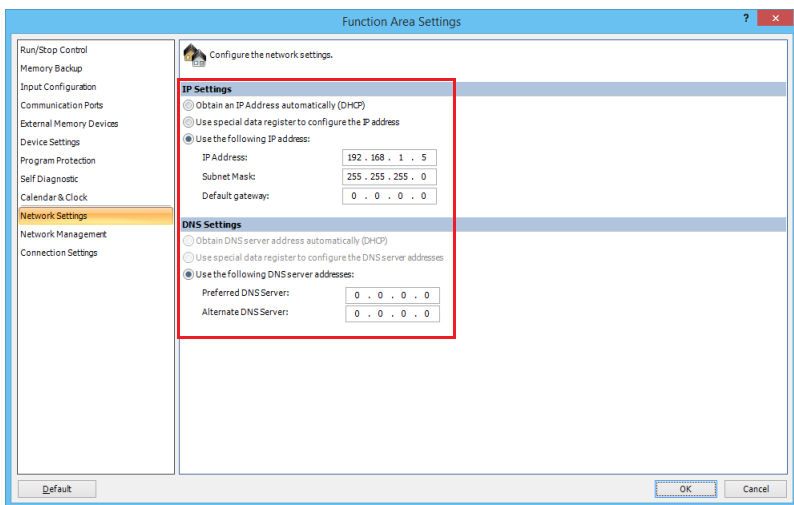


3. Click **Connection Settings**.

4. Click **Communication Mode** for the connection that will be used and select **Maintenance Communication Server**. The Maintenance Communication Server dialog box appears.

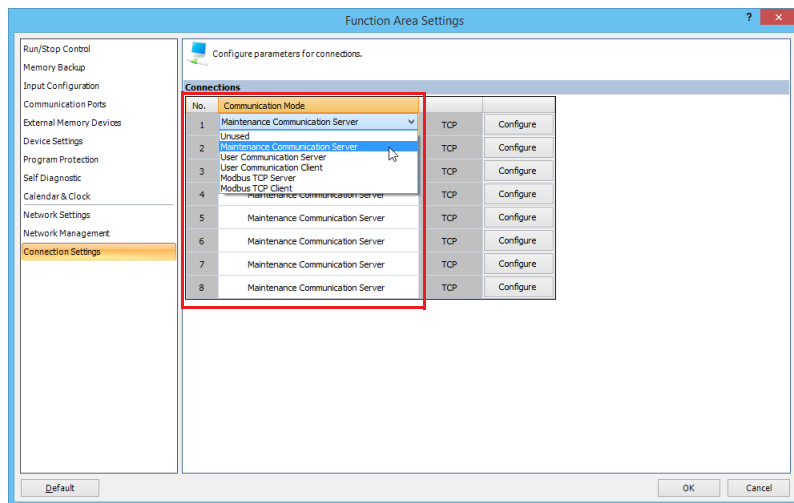

- Set the parameters to match the communication settings of the PC or operator interface.

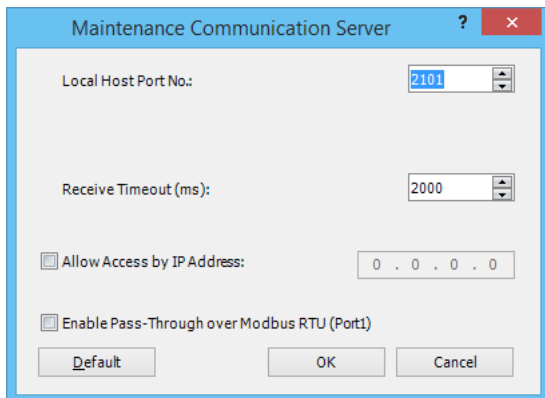

- Local Host Port No.: 2101 (The port number that the FC6A Series MICROSmart uses for the maintenance communication server)
- Receive Timeout (ms): 2000 (100 to 25500)
- Allow Access by IP Address: Disabled (Enabling this option makes it possible to prevent access from devices having any IP addresses other than the one entered.)
- Enable Pass-Through over Modbus RTU (Port1):
Port 1 can be used as the pass-through port. In this case, set **Communication Mode** for port 1 to **Modbus RTU Master**. Specify a port number different from the port numbers of the other server connections as the local host port number of the connection used for the pass-through.

Note: The number of clients that can be connected to the FC6A Series MICROSmart simultaneously is one client per connection. If connections 1 to 8 are all set to the maintenance communication server, eight clients can connect to the FC6A Series MICROSmart at the same time.


- Click **OK**.

This completes maintenance communications settings.

Download User Program and Confirm IP Addresses via USB Port

Before starting Ethernet communication, configure the function area settings and download the user program to the FC6A Series MICROSmart via USB.

- Connect the PC and the FC6A Series MICROSmart using a USB cable.
- From the WindLDR menu bar, select **Online > Transfer > Download**. The **Download** dialog box appears.
- Click **OK**. The user program is downloaded to the FC6A Series MICROSmart.

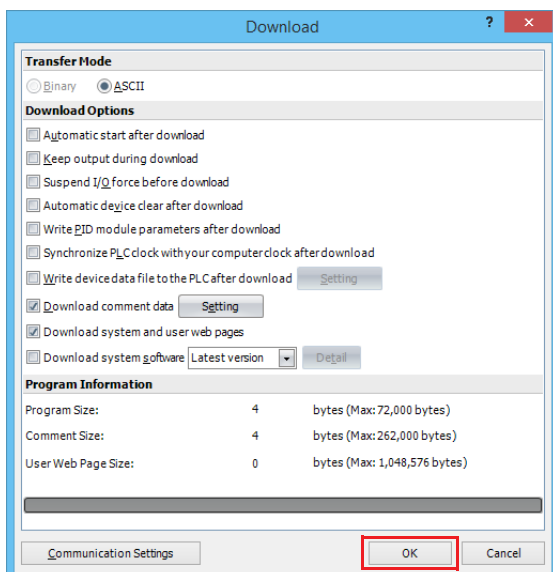


- After the user program has been successfully downloaded, go to Monitor Mode to check the status of the FC6A Series MICROSmart. Select **Online > Monitor > Monitor** from the WindLDR menu bar.

4: MAINTENANCE COMMUNICATION

11. From the WindLDR menu bar, select **Online > Monitor > Batch**.

The **Batch Monitor** dialog box appears.

12. Confirm that the IP address entered in step 2 is correctly shown in D8330 to D8333.

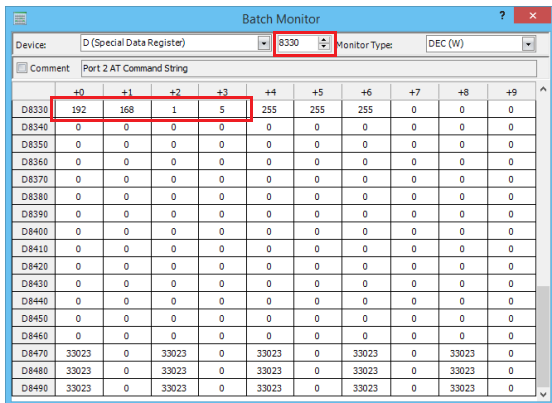

	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9
D8330	192	168	1	5	255	255	255	0	0	0
D8340	0	0	0	0	0	0	0	0	0	0
D8350	0	0	0	0	0	0	0	0	0	0
D8360	0	0	0	0	0	0	0	0	0	0
D8370	0	0	0	0	0	0	0	0	0	0
D8380	0	0	0	0	0	0	0	0	0	0
D8390	0	0	0	0	0	0	0	0	0	0
D8400	0	0	0	0	0	0	0	0	0	0
D8410	0	0	0	0	0	0	0	0	0	0
D8420	0	0	0	0	0	0	0	0	0	0
D8430	0	0	0	0	0	0	0	0	0	0
D8440	0	0	0	0	0	0	0	0	0	0
D8450	0	0	0	0	0	0	0	0	0	0
D8460	0	0	0	0	0	0	0	0	0	0
D8470	33023	0	33023	0	33023	0	33023	0	33023	0
D8480	33023	0	33023	0	33023	0	33023	0	33023	0
D8490	33023	0	33023	0	33023	0	33023	0	33023	0

This concludes downloading the user program via the USB port and checking the IP address.

Monitor FC6A Series MICROSmart via the Ethernet Port 1 and 2


Monitor the FC6A Series MICROSmart via Ethernet using WindLDR.

13. From the WindLDR menu bar, select **Online > Communication > Set Up**.

The **Communication Settings** dialog box appears.

14. Select the **Ethernet** tab and click **Browse**.

The **IP Address Settings** dialog box appears.

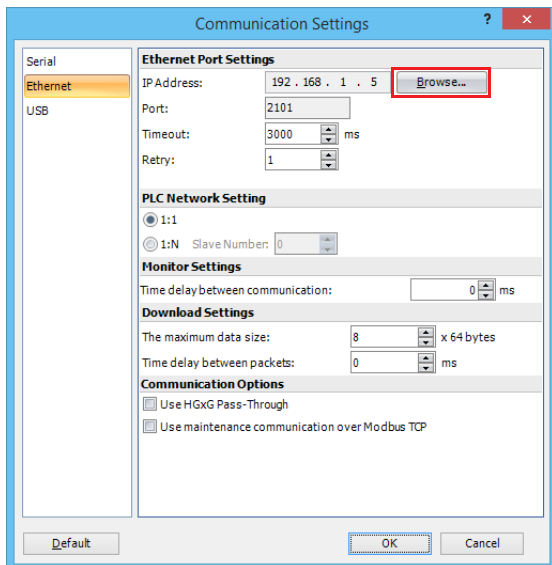

Communication Settings

Serial
Ethernet
USB

Ethernet Port Settings

IP Address: 192.168.1.5 **Browse...**

Port: 2101

Timeout: 3000 ms

Retry: 1

PLC Network Setting

1:1
 1:N Slave Number: 0

Monitor Settings

Time delay between communication: 0 ms

Download Settings

The maximum data size: 8 x 64 bytes

Time delay between packets: 0 ms


Communication Options

Use HGxG Pass-Through
 Use maintenance communication over Modbus TCP

Default OK Cancel

15. Click **New**.

The **Input IP address** dialog box appears.

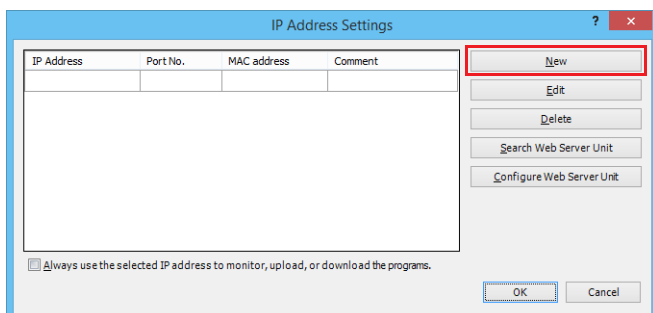

IP Address Settings


IP Address	Port No.	MAC address	Comment
------------	----------	-------------	---------

New
Edit
Delete
Search Web Server Unit
Configure Web Server Unit

Always use the selected IP address to monitor, upload, or download the programs.


OK Cancel

16. Enter the IP address entered in step 2 and click **OK**.

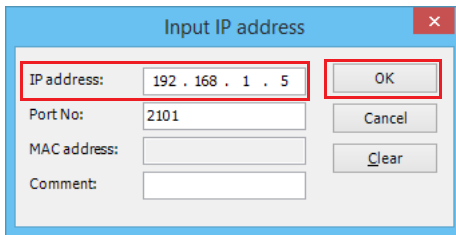


17. From the WindLDR menu bar, select **Online > Monitor > Monitor**.
The **IP Address Settings** dialog box appears.

18. Select the IP address you entered and click **OK**.

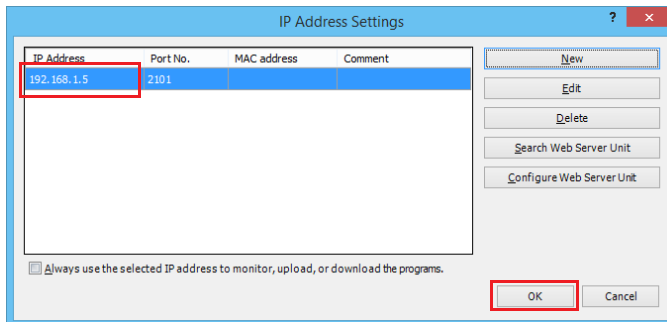

19. From the WindLDR menu bar, select **Online > PLC > Status**.
The **PLC Status** dialog box appears.

20. Check that the FC6A Series MICROSmart module type and system software version are displayed correctly.

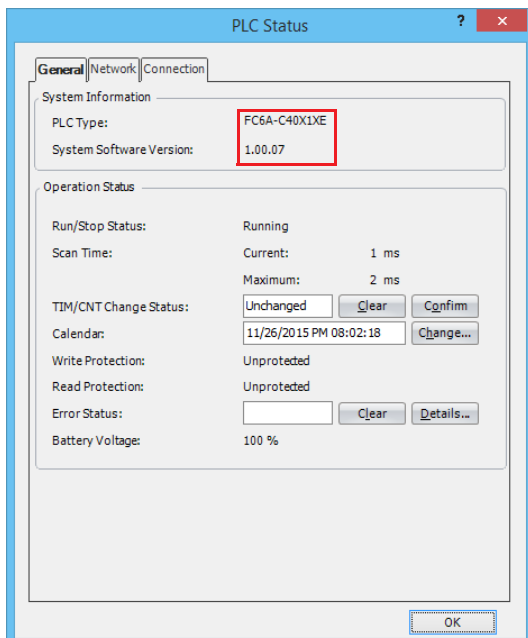

Configuring the initial Ethernet setup for the maintenance communication server is now complete. You can download and upload user programs and monitor and change device values via Ethernet.


Maintenance Communication via Port 2 to 33

Expand the FC6A Series MICROSmart in the following manner to allow the FC6A Series MICROSmart to connect to a computer or operator interface with an RS232C or RS485 port and monitor and change device values.

- Connect an RS232C communication cartridge or RS485 communication cartridge to the cartridge slot of the All-in-One CPU module/CAN J1939 All-in-One CPU module.
- Connect an RS232C communication cartridge or RS485 communication cartridge to cartridge slot 2 of a cartridge base module added to the Plus CPU module.
- Connect an RS232C communication cartridge or RS485 communication cartridge to the cartridge slot of the HMI module added to the Plus CPU module.
- Connect a communication module to the FC6A Series MICROSmart.

For the communication cable, see Appendix "Cables" in the "FC6A Series MICROSmart User's Manual".


All-in-One CPU Module/CAN J1939 All-in-One CPU Module Port 2 and 3

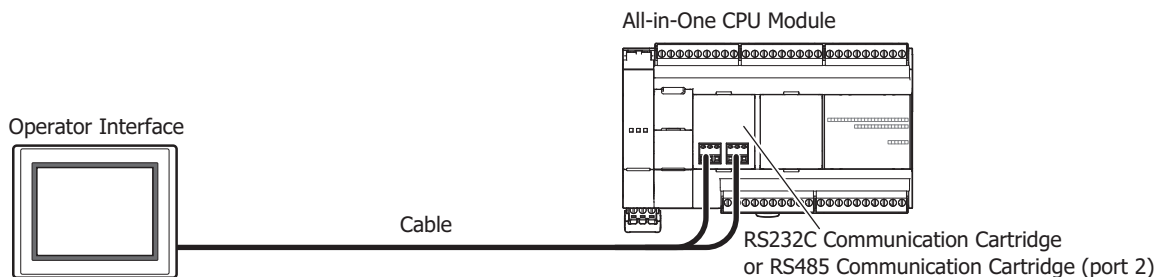

Maintenance Communication Specifications

Item	Specifications/Functions
Cable	RS232C communication cartridge: Shielded multicore cable RS485 communication cartridge: Shielded twisted-pair cable
Maintenance Communication Function	Monitor/change device values


Plus CPU Module Port 2 and 3

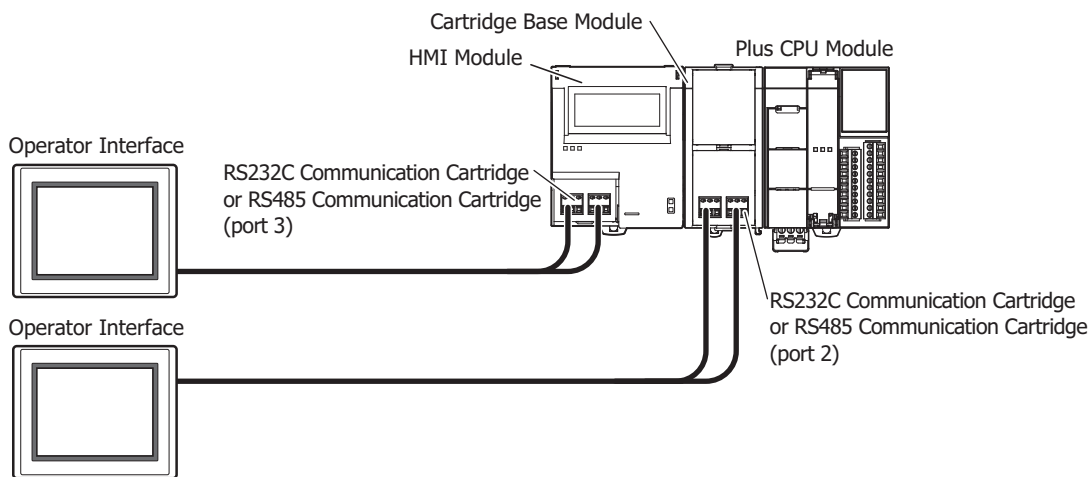

Maintenance Communication Specifications

Item	Specifications/Functions
Cable	RS232C communication cartridge: Shielded multicore cable RS485 communication cartridge: Shielded twisted-pair cable
Maintenance Communication Function	Monitor/change device values

FC6A Series MICROSmart Port 4 to 33

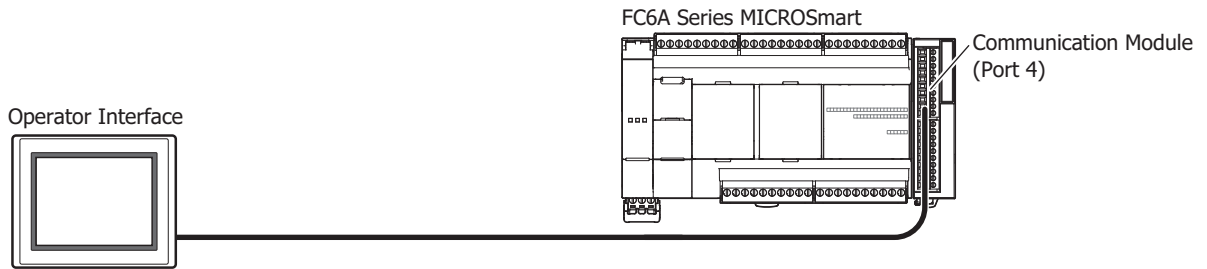

The All-in-One CPU module and CAN J1939 All-in-One CPU module can be expanded with up to three communication modules to add ports 4 to 9.

The Plus CPU module can be expanded with up to 15 communication modules to add ports 4 to 33. For details on communication modules, see Chapter 2 "Communication Modules" in the "FC6A Series MICROSmart User's Manual".

Maintenance Communication Specifications

Item	Specifications/Functions
Cable	RS232C communication cartridge: Shielded multicore cable RS485 communication cartridge: Shielded twisted-pair cable
Maintenance Communication Function	Monitor/change device values

Detailed Operations for Maintenance Communication Functions


See the following in the "FC6A Series MICROSmart User's Manual".

- Monitor/change device values: Chapter 4 "Monitor Operation"

Programming WindLDR


Configure the settings for maintenance communication.

1. On the **Configuration** tab, in the **Function Area Settings** group, click **Comm. Ports**. The **Function Area Settings** dialog box is displayed.
2. Click **Communication Mode** for port 2 to 33 and select **Maintenance Protocol**. The **Maintenance Protocol (Port n)** dialog box is displayed.

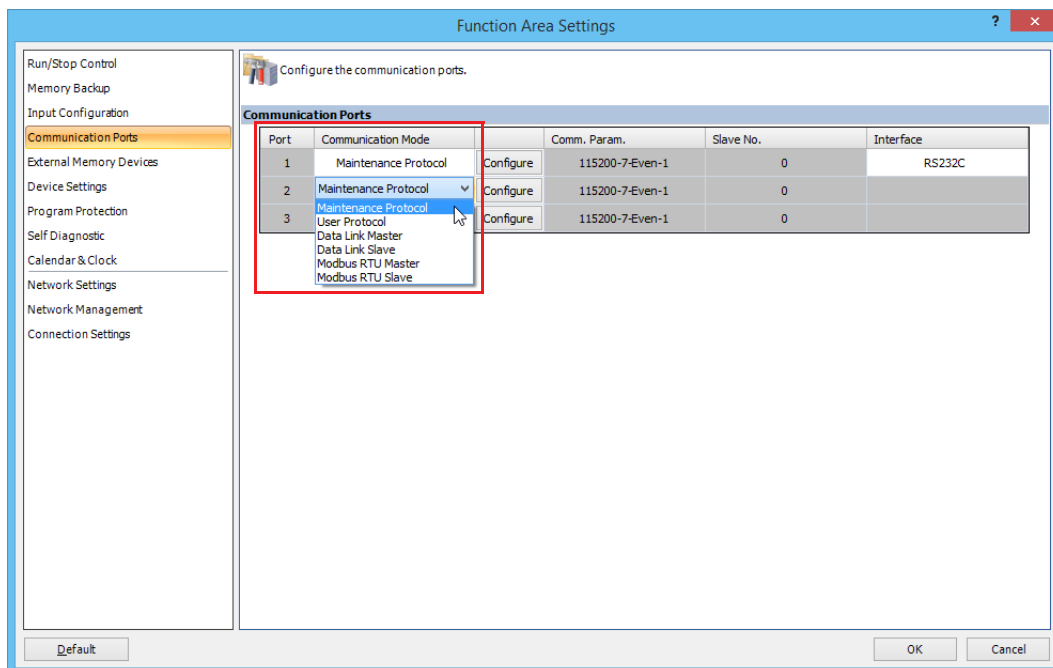

4: MAINTENANCE COMMUNICATION

3. Set the parameters to match the communication format used by the computer or operator interface.

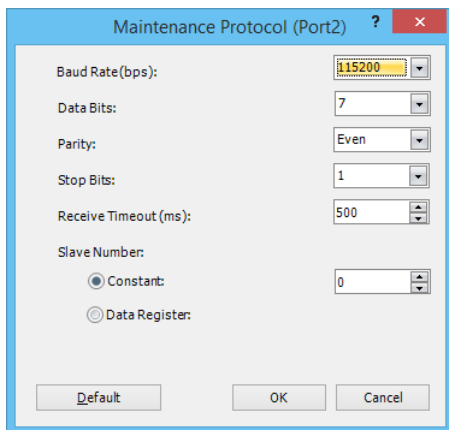

Baud Rate (bps) : 115200 bps (1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200)
 Data Bits : 7 (7 or 8)
 Parity : Even (None, Even, Odd)
 Stop Bit : 1 (1 or 2)
 Receive Timeout : 500 ms (10 ms to 2550 ms)
 Slave Number : 0 (0 to 31)

Slave numbers are specified by constants or data registers.

Type	Details
Constant	Set within the range of 0 to 31
Data Register	Store the slave numbers 0 to 31 in the following special data registers Port 1: D8100 Port 2: D8102 Port 3: D8103 Port 4 to 9 ^{*1} : D8040 to D8045 Port 10 to 33 ^{*1*2} : D8735 to D8758

*1 When using a communication module.

*2 Plus CPU module only.

* Values not in parentheses are the default settings.

4. Click **OK**.

This concludes configuring the maintenance communications settings.

Maintenance Communication via Port 1 to 3 (Bluetooth)

Computers or smart phones having Bluetooth interface can be connected to the FC6A Series MICROSmart, and monitoring and changing device values are possible. Bluetooth communication is possible by inserting a Bluetooth communication cartridge on the cartridge slot 1, 2, or 3 (Plus CPU module only).


All-in-One CPU Module/CAN J1939 All-in-One CPU Module Bluetooth



Maintenance Communication Specifications

Item	Specifications/Functions
Maintenance Communication Function	Monitor/change device values Download/upload user programs

Plus CPU Module Bluetooth

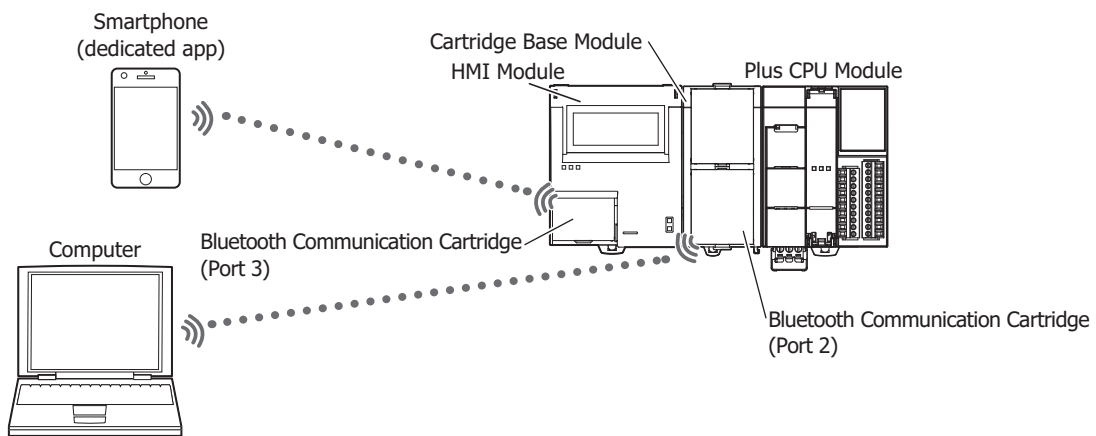

Maintenance Communication Specifications

Item	Specifications/Functions
Maintenance Communication Function	Monitor/change device values Download/upload user programs

Notes:

- The following functions are not supported by maintenance communication using a Bluetooth communication cartridge.
 - Download system software
 - Run-time download
- Bluetooth communication may fail and a download error may occur after a user program is downloaded and Bluetooth communication cartridge settings are changed.

Detailed Operations for Maintenance Communication Functions

For details, see the following in the "FC6A Series MICROSmart User's Manual".

- Monitor/change device values: Chapter 4 "Monitor Operation"

Programming WindLDR

For details, see "Bluetooth Communication" on page 9-1.

Maintenance Communication via HMI-Ethernet port


It is possible to use the HMI-Ethernet port of an HMI module connected to the CPU module to perform maintenance communication with network-enabled devices such as computers and operator interfaces.

It is possible to monitor and change FC6A Series MICROSmart device values from, download user programs from, and upload user programs to an external device connected to the network.

The HMI-Ethernet port can be used to add a maximum of eight connections to the connections of Ethernet port 1 (eight connections maximum), which is standard equipment on the All-in-One CPU module, and the connections of Ethernet port 1 and 2 (16 connections maximum), which are standard equipment on the Plus CPU module.

The maintenance communication server can be assigned to the expanded connections (up to eight) provided by the HMI-Ethernet port.

HMI Module HMI-Ethernet Port 1

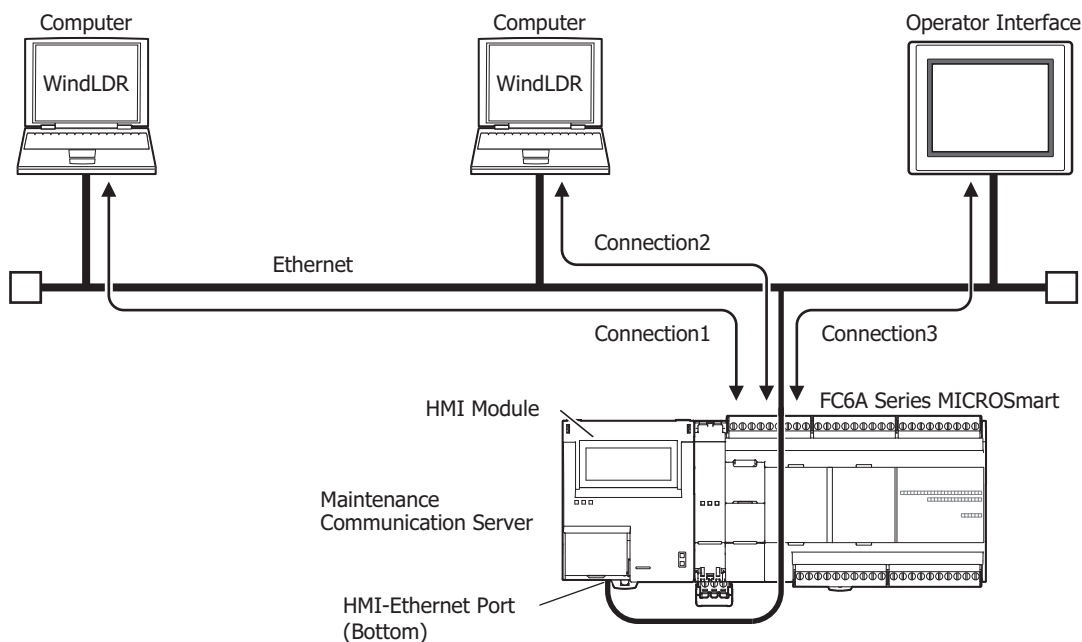

Maintenance Communication Specifications

Item	Specifications/Functions
Cable	Ethernet cable (Cat 5. STP)
Maintenance communication functions	Monitor/change device values Download/upload user programs Download system software Run-time download

Detailed Operations for Maintenance Communication Functions

See the following in the "FC6A Series MICROSmart User's Manual".


- Monitor/change device values: Chapter 4 "Monitor Operation"
- Download/upload user programs: Chapter 4 "Download Program"
- Download system software: Appendix "Upgrade FC6A Series MICROSmart System Software"
- Run-time download: Chapter 5 "Online Edit"

Programming WindLDR


Configure the settings for maintenance communication.

1. Use the Module Configuration Editor to configure the HMI module network settings and connection settings. On the **Configuration** tab, in the **PLCs** group, select **Expansion Modules**.
2. Click the inserted HMI module in the module configuration area and click **Configure**. The **HMI Module Configuration** dialog box is displayed.

Note: You can also display the **HMI Module Configuration** dialog box by double-clicking **HMI Module** in the Project Window.

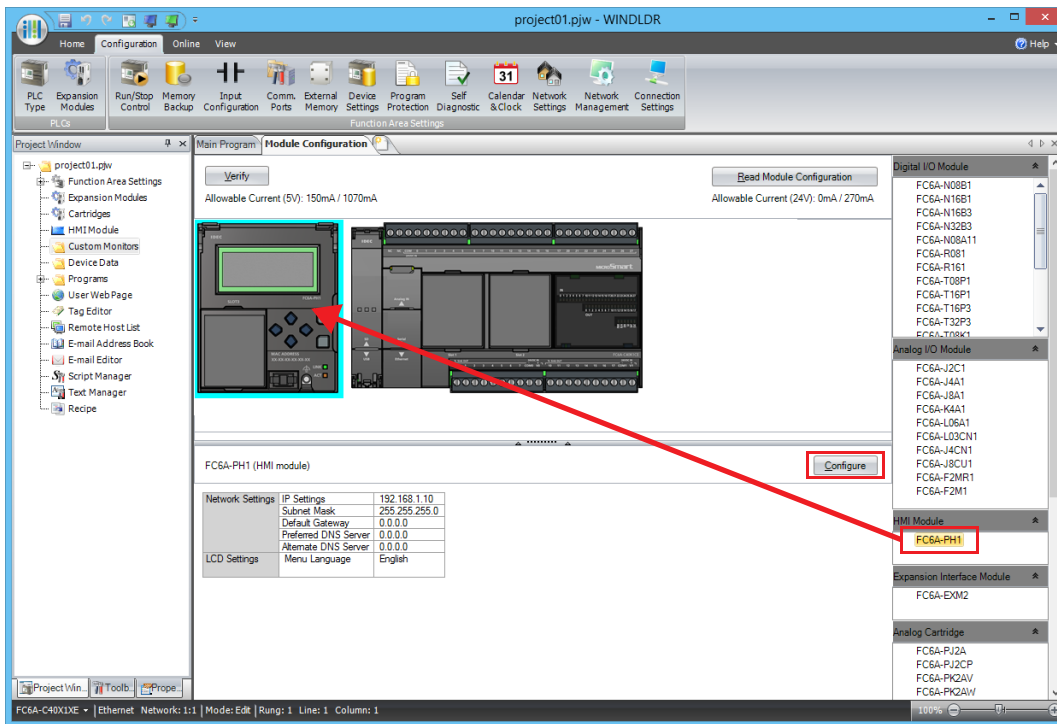


3. Click the **Network Settings** tab, and then configure the **IP Settings** and **DNS Settings**.

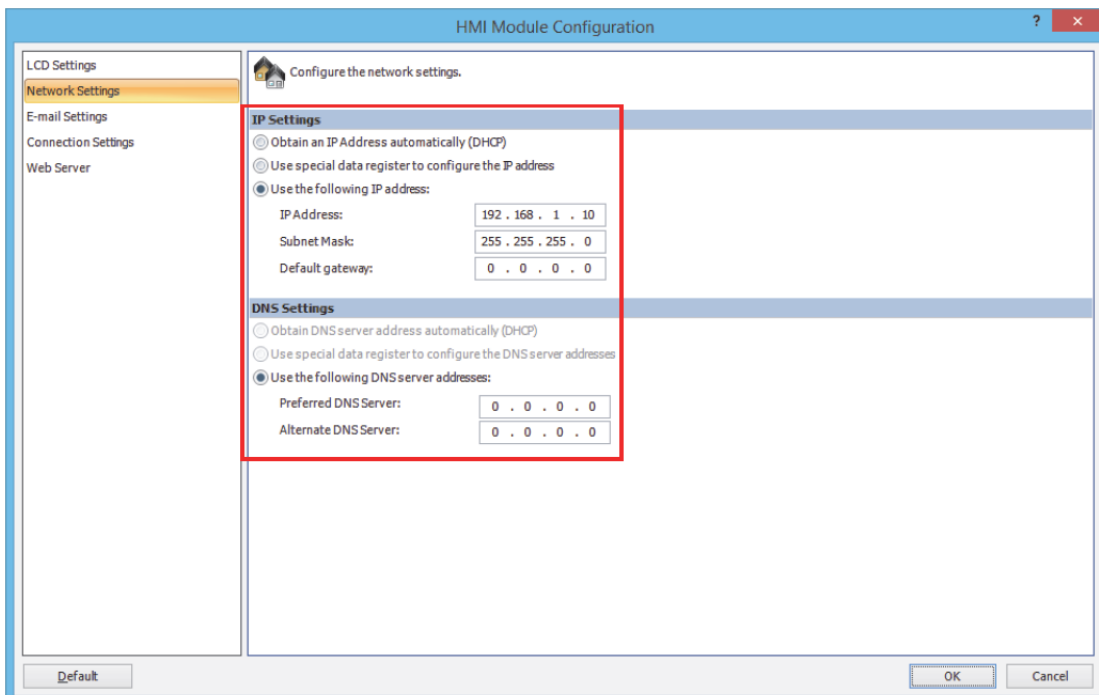


4: MAINTENANCE COMMUNICATION

4. Click **Connection Settings**.
5. Click **Communication Mode** for the port to be used and select communication mode of the connection to use.

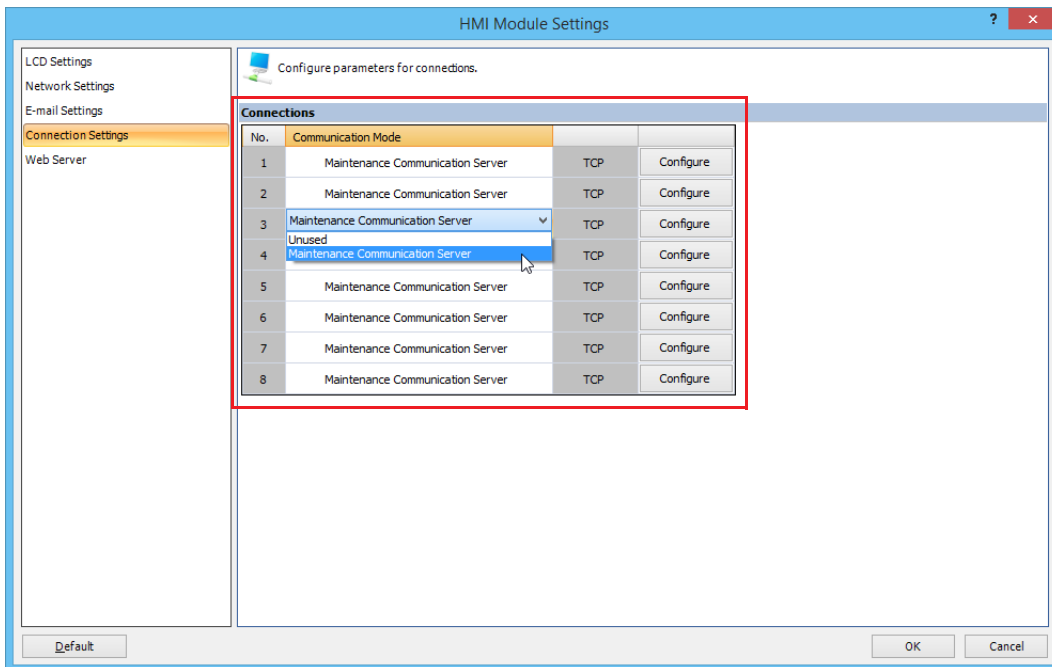

6. Set the parameters to match the communication format used by the computer or operator interface.

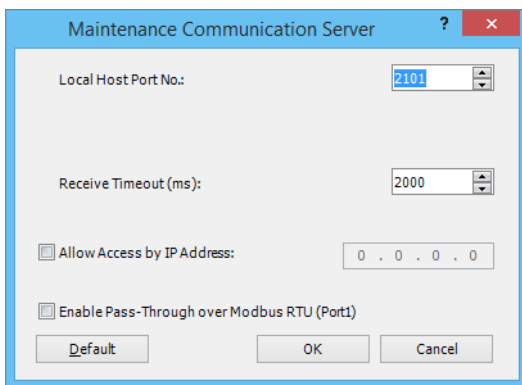

- Local Host Port No. : 2101 (The port number that the FC6A Series MICROSmart uses for the maintenance communication server)
- Receive Timeout (ms) : 2000 (100 to 25500)
- Allow Access by IP Address : Disabled (Enabling this option makes it possible to prevent access from devices having any IP addresses other than the one entered.)

Note: The number of clients that can be connected to the FC6A Series MICROSmart simultaneously is one client per connection. If connections 1 to 8 are all set to the maintenance communication server, eight clients can connect to the FC6A Series MICROSmart at the same time.

7. Click **OK**.

This completes maintenance communications settings.

5: USER COMMUNICATION INSTRUCTIONS

Introduction

This chapter describes user communication to send and receive specific data by converting it to data types for external devices connected to the FC6A Series MICROSmart.

The user communication instructions are used to execute user communication.

The user communication instructions differ according to the communication interface that will be used.

- When performing user communication with an external device using port 1 to port 33 via serial communication (RS232C/RS485)
When performing user communication with an external device using port 1 to port 3 via serial communication (Bluetooth)
"TXD (Transmit)" on page 5-2
"RXD (Receive)" on page 5-10
- When performing user communication with an external device using Ethernet port 1 and 2 via Ethernet communication
"ETXD (User Communication Transmit over Ethernet)" on page 5-23
"ERXD (User Communication Receive over Ethernet)" on page 5-23

Communication Ports Used in User Communication

Supported models and communication ports are as follows.

Communication Port	All-in-One CPU Module			CAN J1939 All-in-One CPU Module	Plus CPU Module	
	16-I/O Type	24-I/O Type	40-I/O Type		Plus 16-I/O Type	Plus 32-I/O Type
Port 1	Yes	Yes	Yes	—	Yes ^{*2}	Yes ^{*2}
Port 2	Yes ^{*1}	Yes ^{*1}	Yes ^{*1}	Yes ^{*1}	Yes ^{*2}	Yes ^{*2}
Port 3	—	—	Yes ^{*1}	Yes ^{*1}	Yes ^{*3}	Yes ^{*3}
Port 4 to 33	Yes (Port 4 to 9) ^{*4}			—	Yes (Port 4 to 33) ^{*5}	
Ethernet Port 1	Yes	Yes	Yes	Yes	Yes	Yes
Ethernet Port 2	—	—	—	—	Yes	Yes
HMI-Ethernet Port	—	—	—	—	—	—

*1 When a communication cartridge is connected.

*2 When a cartridge base module and communication cartridge are connected.

*3 When the HMI module and a communication cartridge are connected.

*4 Up to three communication modules can be connected to the All-in-One CPU module and CAN J1939 All-in-One CPU module, expanding the communication ports 4 to 9.

 
*5 Up to 15 communication modules can be connected to the Plus CPU module, expanding the communication ports 4 to 33.

User Communication Settings

The user communication settings supported by each communication port are as follows.

- Serial communication with an external device connected to port 1 to port 33 (RS232C/RS485)
Serial communication with an external device connected to port 1 to port 3 (Bluetooth)
"User Communication via Serial Communication" on page 5-24
- Ethernet communication with an external device connected by the Ethernet port 1 and 2
"User Communication via Ethernet Communication" on page 5-40

TXD (Transmit)



The transmit data is converted to the set data type and transmitted to the external device using port 1 to 33.

Valid Devices

Device	Function	I	Q	M	R	T	C	D	P	Constant	Repeat
S1 (Source 1)	Transmit data	—	—	—	—	—	—	X	—	X	—
D1 (Destination 1)	Transmit completion output	—	X	X ^{*1}	—	—	—	—	—	—	—
D2 (Destination 2)	Transmit status register	—	—	—	—	—	—	X ^{*2}	—	—	—

For valid device address ranges, see "Devices" on page 2-1.

*1 Special internal relays cannot be designated as D1.

*2 Special data registers cannot be used.

Transmit data designated by device S1 can be a maximum of 1,536 bytes.

When transmission is complete, an output or internal relay, designated by device D1, is turned on.

Destination 2 occupies two consecutive data registers starting with the device designated by D2. The transmit status data register stores the status of transmission and error code. The next data register stores the byte count of transmitted data. The same data registers cannot be used as transmit status registers for TXD1 through TXD33 instructions and receive status registers for RXD1 through RXD33 instructions.

The TXD instructions cannot be used in an interrupt program. If used, a user program execution error will result, turning on special internal relay M8004 and the ERR LED on the FC6A Series MICROSmart. For details about the user program execution errors, see Chapter 3 "User Program Execution Errors" in the "FC6A Series MICROSmart Ladder Programming Manual".


Notes:

- For details on user communication over serial communication, see "User Communication via Serial Communication" on page 5-24.
- For details on user communication over Bluetooth communication, see "User Communication via Serial Communication (Bluetooth)" on page 5-39.

Precautions for Programming TXD Instruction

- The FC6A Series MICROSmart has five formatting areas each for executing TXD1 through TXD33 instructions, so five instructions each of TXD1 through TXD33 can be processed at the same time. If inputs to more than five of the same TXD instructions are turned on at the same time, an error code is set to the transmit status data register, designated by device D2, in the excessive TXD instructions that cannot be executed.
- If the input for a TXD instruction turns on while another TXD instruction is executed, the subsequent TXD instruction is executed 2 scan times after the preceding TXD instruction is completed.
- Since TXD instructions are executed in each scan while input is on, a pulse input from a SOTU or SOTD instruction should be used.
- The data register used to store the transmit/receive status and the transmit/receive data byte count must be different for the TXD instruction and the RXD instruction.
- The TXD instruction cannot be used in an interrupt program. If used, a user program execution error occurs, the execution of the instruction is canceled, and the next instruction is executed. For details about the user program execution errors, see Chapter 3 "User Program Execution Errors" in the "FC6A Series MICROSmart Ladder Programming Manual".

User Communication Transmit Instruction Dialog Box in WindLDR

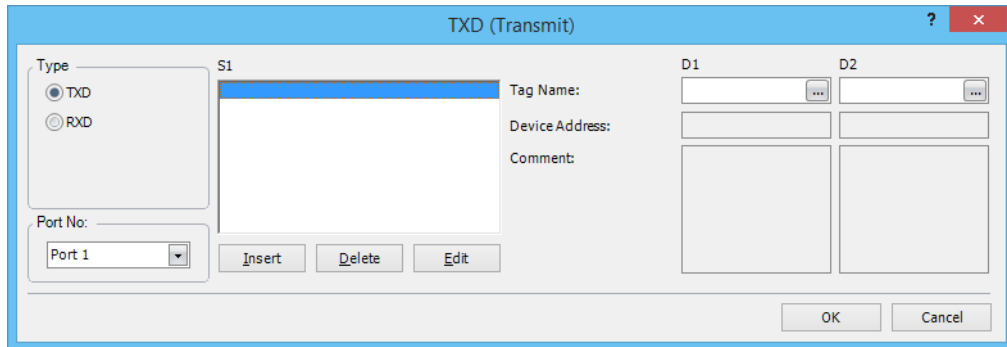

Selections and Devices in Transmit Instruction Dialog Box

Type	TXD	Transmit instruction
	RXD	Receive instruction
Port No.	Port 1 - Port 33	Transmit user communication from port 1 (TXD1) through port 33 (TXD33)
S1	Source 1	Enter the data to transmit in this area. Transmit data can be constant values (character or hexadecimal), data registers, or BCC.
D1	Destination 1	Transmit completion output can be an output or internal relay.
D2	Destination 2	Transmit status register can be data register. The next data register stores the byte count of transmitted data.

Transmit Data

Transmit data is designated by source device S1 using constant values or data registers. BCC code can also be calculated automatically and appended to the transmit data. One TXD instruction can transmit a maximum of 1,500 bytes of data.

S1 (Source 1)

Transmit Data	Conversion Type	Transmit Digits (Bytes)	Repeat	BCC Calculation	Calculation Start Position
Constant (Character)	No conversion	1	—	—	—
Constant (Hexadecimal)					
Data Register	A: Binary to ASCII B: BCD to ASCII —: No conversion	1-4 1-5 1-2	1-99	—	—
BCC	A: Binary to ASCII —: No conversion	1-2	—	X: XOR A: ADD C: Add-2comp M: Modbus ASCII M: Modbus RTU	1-15

Note: Total byte count of the transmit data is shown in S1 of TXD instruction on the ladder diagram of WindLDR.

Designating Constant as S1

When a constant value is designated as source device S1, one-byte data is transmitted without conversion. The valid transmit data value depends on the data bits selected in the Communication Parameters dialog box. These data bits are set in **Configuration > Comm. Ports**, followed by selecting **User Protocol** in Port 1 through Port 33 list box and clicking the **Configure** button. When 7 data bits are selected as default, 00h through 7Fh is transmitted. When 8 data bits are selected, 00h through FFh is transmitted. Constant values are entered in character or hexadecimal notation into the source data.

Constant (Character)

Any character available on the computer keyboard can be entered. One character is counted as one byte.



Constant (Hexadecimal)

Use this option to enter the hexadecimal code of any ASCII character. ASCII control codes NUL (00h) through US (1Fh) can also be entered using this option.



Example:

The following example shows two methods to enter 3-byte ASCII data "1" (31h), "2" (32h), "3" (33h).

(1) Constant (Character)

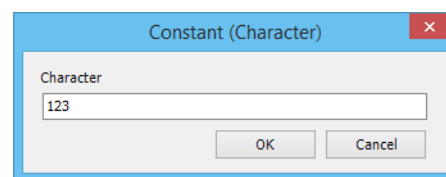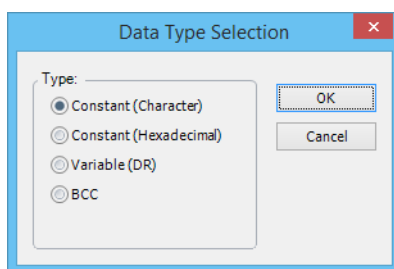

(2) Constant (Hexadecimal)

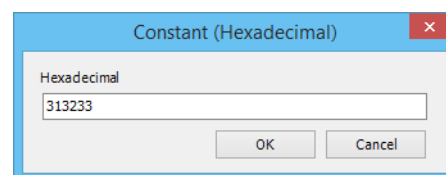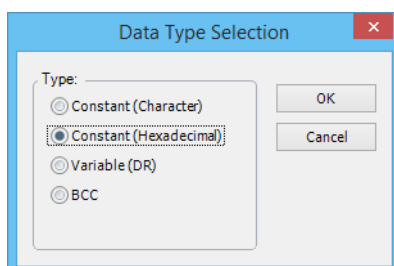

Designating Data Register as S1

When a data register is designated as source device S1, conversion type and transmit digits must also be assigned. The data stored in the designated data register is converted and the assigned quantity of digits of the resultant data is transmitted. The conversion types that are available are: Binary to ASCII, BCD to ASCII, and no conversion.


When repeat is designated, data of data registers as many as the repeat cycles are transmitted, starting with the designated data register. Repeat cycles can be up to 99.

Conversion Type


The transmit data is converted according to the designated conversion type as described below:

Example: D10 stores 000Ch (12)


(1) Binary to ASCII conversion

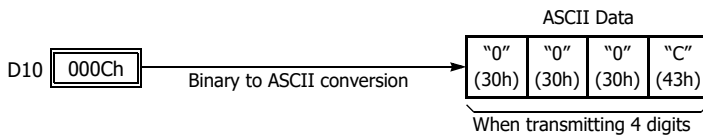

(2) BCD to ASCII conversion

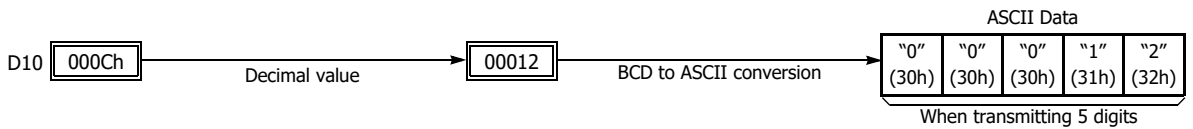

(3) No conversion

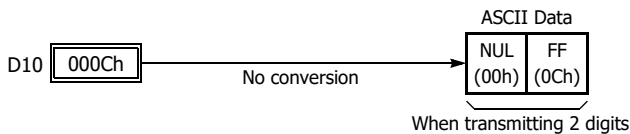


Transmit Digits (Bytes)


After conversion, the transmit data is taken out in specified digits. Possible digits depend on the selected conversion type.

Example: D10 stores 010Ch (268)


(1) Binary to ASCII conversion, Transmit digits = 2

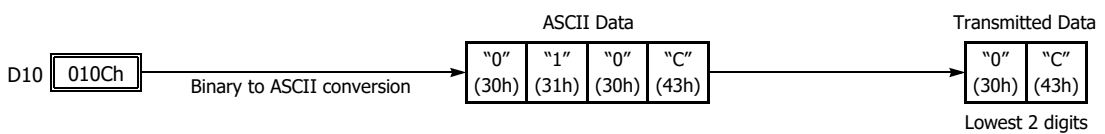

 (2) BCD to ASCII conversion, Transmit digits = 3



(3) No conversion, Transmit digits = 1

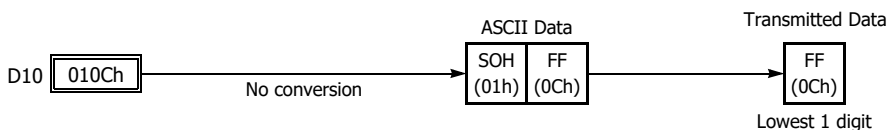

5: USER COMMUNICATION INSTRUCTIONS

Repeat Cycles


When a data register is assigned to repeat, as many consecutive data registers, as the repeat cycles, are used to transmit data in the same conversion type and transmit digits.

Example:


D10	000Ch	Data register No.:	D10
D11	0022h	Transmit digits:	2
D12	0038h	Conversion type:	BCD to ASCII

Data from data registers starting with D10 is converted in BCD to ASCII and is transmitted according to the designated repeat cycles.

(1) Repeat cycles = 2

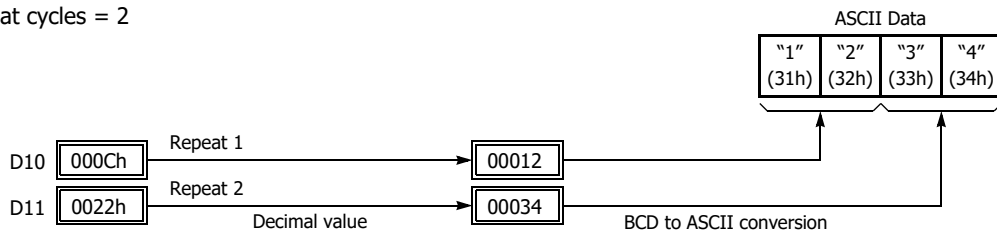


(2) Repeat cycles = 3

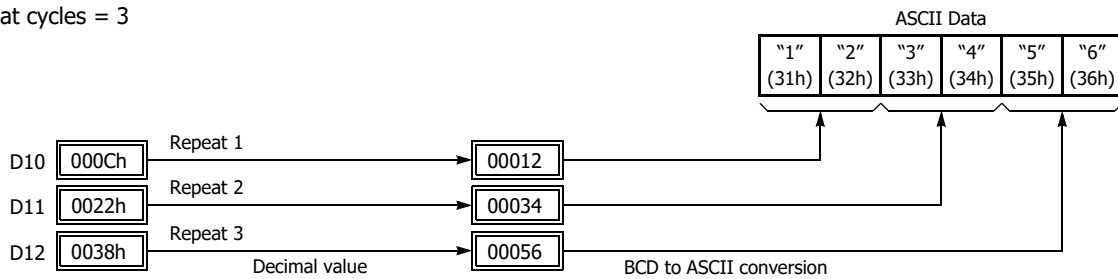

BCC (Block Check Character)

Block check characters can be appended to the transmit data. The start position for the BCC calculation can be selected from the first byte through the 15th byte. The BCC can be 1 or 2 digits.

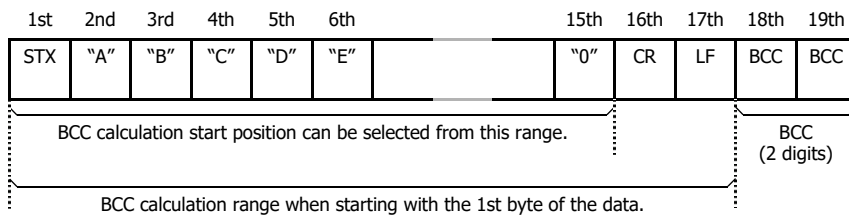


BCC Calculation Start Position


The start position for the BCC calculation can be specified from the first byte through the 15th byte. The BCC is calculated for the range starting at the designated position up to the byte immediately before the BCC of the transmit data.

Example: Transmit data consists of 17 bytes plus 2 BCC digits.

(1) Calculation start position = 1

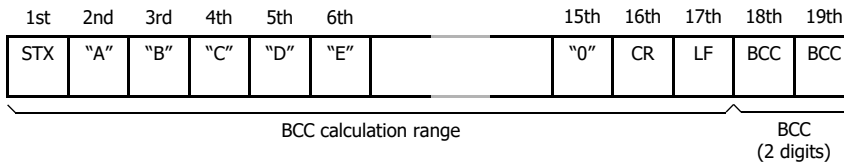

(2) Calculation start position = 2

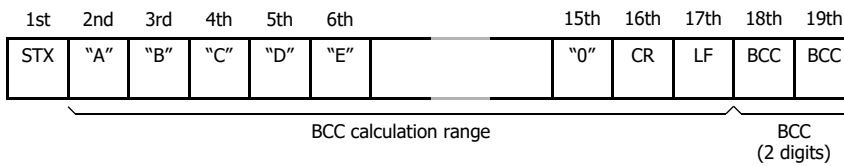

BCC Calculation Formula

BCC calculation formula can be selected from XOR (exclusive OR), ADD (addition), ADD-2comp, Modbus ASCII, or Modbus RTU.

Example: Conversion results of transmit data consist of 41h, 42h, 43h, and 44h.

ASCII Data			
"A" (41h)	"B" (42h)	"C" (43h)	"D" (44h)

(1) BCC calculation formula = XOR

Calculation result = 41h ⊕ 42h ⊕ 43h ⊕ 44h = 04h

(2) BCC calculation formula = ADD

Calculation result = 41h + 42h + 43h + 44h = 10Ah → 0Ah (Only the last 1 or 2 digits are used as BCC.)

(3) BCC calculation formula = ADD-2comp

Calculation result = FEh, F6h (2 digits without conversion)

(4) BCC calculation formula = Modbus ASCII

Calculation result = 88 (ASCII)

(5) BCC calculation formula = Modbus RTU

Calculation result = 85h 0Fh (binary)


5: USER COMMUNICATION INSTRUCTIONS

Conversion Type

The BCC calculation result is converted or not according to the designated conversion type as described below:


Example: BCC calculation result is 0041h.

(1) Binary to ASCII conversion

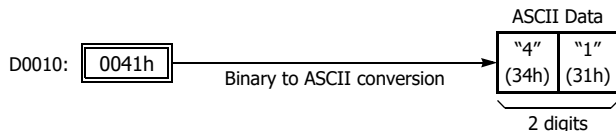

Note: On WindLDR, Modbus ASCII is defaulted to binary to ASCII conversion.

(2) No conversion

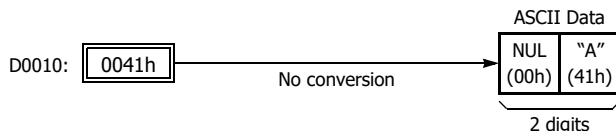


Note: On WindLDR, Modbus RTU is defaulted to no conversion.

BCC Digits (Bytes)

The quantity of digits (bytes) of the BCC code can be selected from 1 or 2.

Example:

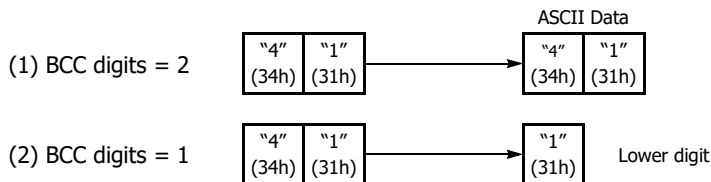

Note: On WindLDR, Modbus ASCII and Modbus RTU are defaulted to 2 digits.

D1 (Destination 1)

Set an internal relay or an output for the transmit completion output.

When the start input for a TXD instruction is turned on, preparation for transmission is initiated, followed by data transmission. When this sequence of operations is complete, the transmit completion output is turned on.

D2 (Destination 2)

Set the data register in which to store the transmit status and the transmit data byte count.

The transmit status is stored in D2+0 and the transmit data byte count is stored in D2+1.

D2+0 (Transmit Status)

Transmit Status Code	Status	Description
16	Preparing transmission	From turning on the start input for a TXD instruction, until the transmit data is stored in the internal transmit buffer
32	Transmitting data	From enabling data transmission by an END processing, until all data transmission is completed
48	Data transmission complete	From completing all data transmission, until the END processing is completed for the TXD instruction
64	Transmit instruction complete	All transmission operation is completed and the next transmission is made possible

 
If the transmit status code is other than shown above, a transmit instruction error is suspected. See "User Communication Error" on page 5-52.

D2+1 (Transmit Digits (Bytes))


The transmit data byte count is stored in the data register after that set with D2 (D2+1). BCC data is also included in the transmit data byte count.

The data register next to the device designated for transmit status stores the byte count of data transmitted by the TXD instruction. When BCC is included in the transmit data, the byte count of the BCC is also included in the transmit data byte count.

Example: Data register D100 is designated as a device for transmit status.



RXD (Receive)

 

When input is on, data from an RS232C/RS485 remote terminal received by port 1 through port 33 is converted and stored in data registers according to the receive format assigned by S1.

Valid Devices

Device	Function	I	Q	M	R	T	C	D	P	Constant	Repeat
S1 (Source 1)	Receive format	—	—	—	—	—	—	X	—	X	—
D1 (Destination 1)	Receive completion output	—	X	X ^{*1}	—	—	—	—	—	—	—
D2 (Destination 2)	Receive status	—	—	—	—	—	—	X ^{*2}	—	—	—

For valid device address ranges, see "Devices" on page 2-1.

*1 Special internal relays cannot be designated as D1.

*2 Special data registers cannot be used.

Receive format designated by device S1 can be a maximum of 1,536 bytes.

When data receive is complete, an output or internal relay, designated by device D1, is turned on.

Destination 2 occupies two consecutive data registers starting with the device designated by D2. The receive status data register stores the status of data receive and error code. The next data register stores the byte count of received data. The same data registers can not be used as transmit status registers for TXD1 through TXD33 instructions and receive status registers for RXD1 through RXD33 instructions.

The RXD instructions cannot be used in an interrupt program. If used, a user program execution error will result, turning on special internal relay M8004 and the ERR LED on the FC6A Series MICROSmart. For details about the user program execution errors, see Chapter 3 "User Program Execution Errors" in the "FC6A Series MICROSmart Ladder Programming Manual".


Notes:

- For details on user communication over serial communication, see "User Communication via Serial Communication" on page 5-24.
- For details on user communication over Bluetooth communication, see "User Communication via Serial Communication (Bluetooth)" on page 5-39.

Precautions for Programming the RXD Instruction

- The FC6A Series MICROSmart can execute a maximum of five instructions each of RXD1 through RXD33 that have a start delimiter at the same time. If a start delimiter is not programmed in RXD1 through RXD33 instructions, the FC6A Series MICROSmart can execute only one instruction each of RXD1 through RXD33 at a time. If the start input for a RXD1 through RXD33 instruction is turned on while another RXD1 through RXD33 instruction, without a start delimiter is executed, a user communication error occurs.
- Since RXD instructions are executed in each scan while input is on, a pulse input from a SOTU or SOTD instruction should be used.
- Once the input to the RXD instruction is turned on, the RXD is activated and ready for receiving incoming communication even after the input is turned off. When the RXD completes data receiving, the RXD is deactivated if the input to the RXD is off. Or, if the input is on, the RXD is made ready for receiving another communication. Special internal relays are available to deactivate all RXD instructions waiting for incoming communication. For user communication receive instruction cancel flags, see "User Communication Receive Instruction Cancel Flag" on page 5-22.

User Communication Receive Instruction Dialog Box in WindLDR

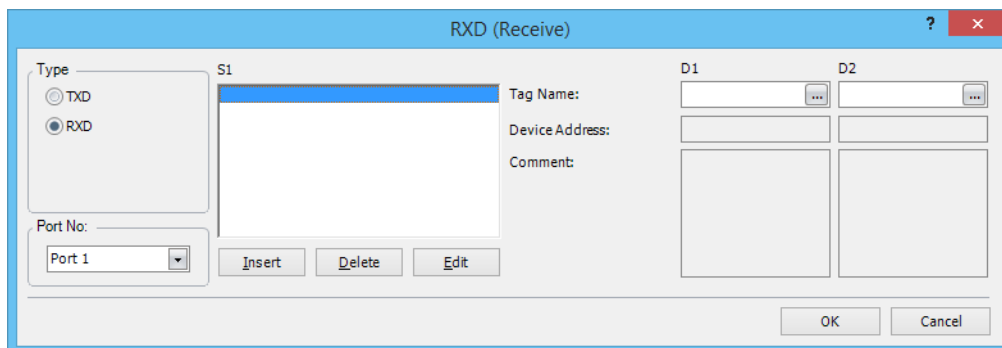

Selections and Devices in Receive Instruction Dialog Box

Type	TXD	Transmit instruction
	RXD	Receive instruction
Port No.	Port 1 - Port 33	Receive user communication to port 1 (RXD1) through port 33 (RXD33)

S1	Source 1	Enter the receive format in this area. The receive format can include a start delimiter, data register to store incoming data, constants, end delimiter, BCC, and skip.
D1	Destination 1	Receive completion output can be an output or internal relay.
D2	Destination 2	Receive status register can be data register. The next data register stores the byte count of received data.

Receive Format

Receive format, designated by source device S1, specifies data registers to store received data, data digits for storing data, data conversion type, and repeat cycles. A start delimiter and an end delimiter can be included in the receive format to discriminate valid incoming communication. When some characters in the received data are not needed, "skip" can be used to ignore a specified number of characters. BCC code can also be appended to the receive format to verify the received data. One RXD instruction can receive 1,500 bytes of data at the maximum.

S1 (Source 1)

Receive Format	Receive Digits (Bytes)	Conversion Type	Repeat	BCC Calculation	Calculation Start Position	Skip Bytes	Delimiter
Data Register	1-4 1-5 1-2	A:ASCII to Binary B:ASCII to BCD -:No conversion	1-99	—	—	—	Hex ASCII
Start Delimiter	—	No conversion	—	—	—	—	
End Delimiter	—	No conversion	—	—	—	—	
Constant for Verification	—	No conversion	—	—	—	—	
BCC	1-2	A:Binary to ASCII -:No conversion	—	X:XOR A:ADD C:Add-2comp M:Modbus ASCII M:Modbus RTU	1-15	—	
Skip	—	—	—	—	—	1-99	



Note: Total byte count of the receive format is shown in S1 of RXD instruction on the ladder diagram of WindLDR.

Designating Data Register as S1

When a data register is designated as source device S1, receive digits and conversion type must also be assigned. The received data is divided into blocks of specified receive digits, converted in a specified conversion type, and stored to the designated data registers. Conversion types are available in ASCII to Binary, ASCII to BCD, and no conversion.

When repeat is designated, received data is divided, converted, and stored into as many data registers as the repeat cycles, starting with the designated data register. There can be up to 99 repeat cycles.

When a data register is designated as source device S1, a delimiter can be included in the data register designation to end receiving communication.

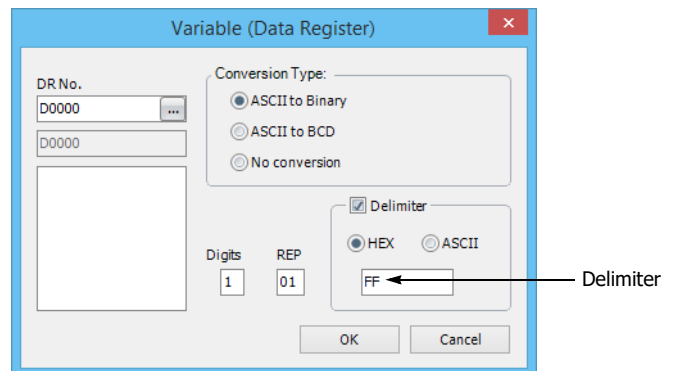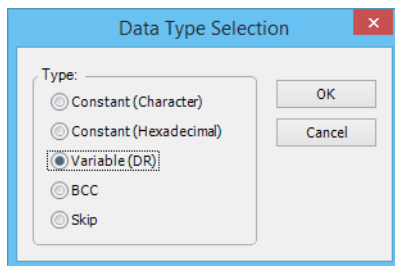


5: USER COMMUNICATION INSTRUCTIONS

Receive Digits


The received data is divided into blocks of specified receive digits before conversion as described below:

Example: Received data of 6 bytes are divided in different receive digits. (Repeat is also designated.)

(1) Receive digits = 2

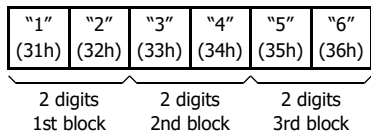

(2) Receive digits = 3

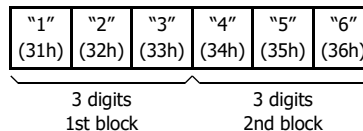


Conversion Type


The data block of the specified receive digits is then converted according to the designated conversion type as described below:

Example: Received data has been divided into a 2-digit block.

 
(1) ASCII to Binary conversion



 (2) ASCII to BCD conversion



 (3) No conversion




Repeat Cycles


When a data register is assigned to repeat, the received data is divided and converted in the same way as specified, and the converted data is stored to as many consecutive data registers as repeat cycles.

Example: Received data of 6 bytes is divided into 2-digit blocks, converted in ASCII to Binary, and stored to data registers starting at D20.

(1) Repeat cycles = 2

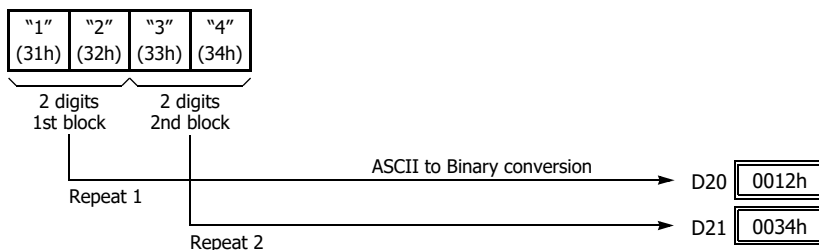

(2) Repeat cycles = 3

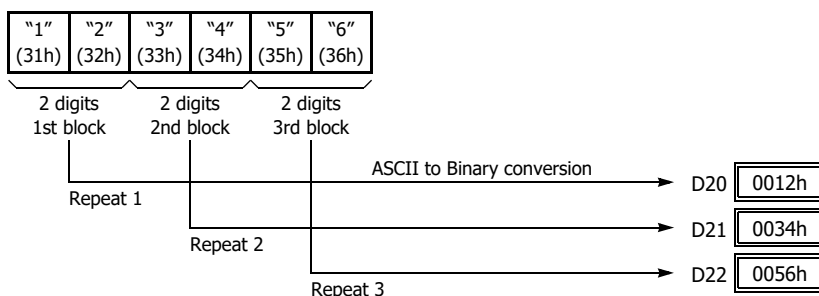

Delimiter

A delimiter for the data register in the receive format can be assigned. Using a delimiter, incoming data of variable length can be received and stored to data registers.

Delimiter	How the incoming data is stored to data registers
Designated	The incoming data is stored to data registers until all the data specified with receive digits, conversion type, and repeat is processed or the specified delimiter is received.
No delimiter	The incoming data is stored to data registers until all the data specified with receive digits, conversion type, and repeat is processed.

Note: Delimiters for data registers can be used in the receive format of RXD instructions only.

Designating Constant as Start Delimiter

A start delimiter can be programmed at the first byte in the receive format of a RXD instruction; the FC6A Series MICROSmart will recognize the beginning of valid communication, although a RXD instruction without a start delimiter can also be executed.


When a constant value is designated at the first byte of source device S1, the one-byte data serves as a start delimiter to start the processing of the received data.

A maximum of five instructions each of RXD1 through RXD3 with different start delimiters can be executed at the same time. When the first byte of the incoming data matches the start delimiter of a RXD instruction, the received data is processed and stored according to the receive format specified in the RXD instruction. If the first byte of the incoming data does not match the start delimiter of any RXD instruction that is executed, the FC6A Series MICROSmart discards the incoming data and waits for the next communication.

When a RXD instruction without a start delimiter is executed, any incoming data is processed continuously according to the receive format. Only one instruction each of RXD1 through RXD3 without a start delimiter can be executed at a time. If start inputs to two or more RXD instructions without a start delimiter are turned on simultaneously, the one at the smallest address is executed and the corresponding completion output is turned on.


Example:

(1) When a RXD instruction without a start delimiter is executed

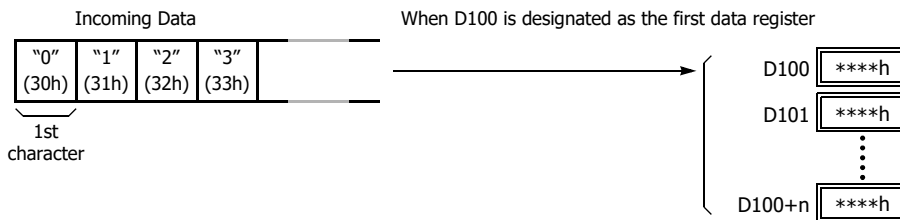

The incoming data is divided, converted, and stored to data registers according to the receive format.

(2) When RXD instructions with start delimiters STX (02h) and ENQ (05h) are executed

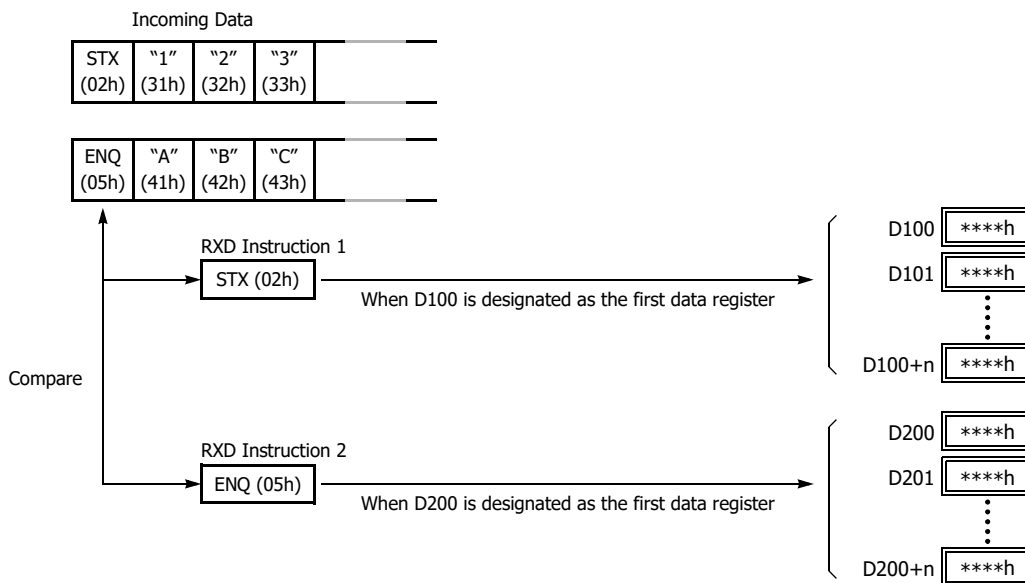

The incoming data is divided, converted, and stored to data registers according to the receive format. Start delimiters are not stored to data registers.

Multi-byte Start Delimiter

A start delimiter can be programmed at the first bytes in the receive format of a RXD instruction; the FC6A Series MICROSmart will recognize the beginning of valid communication, although a RXD instruction without a start delimiter can also be executed. A maximum of 5 consecutive constants that are either character or hexadecimal from the first byte of the receive format are considered a multi-byte start delimiter.

If a RXD instruction with a start delimiter is executed and another RXD instruction with the same start delimiter is executed, user communication error code 5 is stored in the data register designated as the receive status of the second RXD instruction. When the error occurs, the second RXD instruction is canceled, and the first RXD instruction executed is kept.



If a multi-byte start delimiter is assigned, and the incoming data does not match the entire multi-byte start delimiter, the FC6A Series MICROSmart discards the incoming data and waits for the next communication.

When the first one byte is received, a timer is started to monitor the interval between incoming data even when a multi-byte start delimiter is assigned. If data is not received in the period specified for the receive timeout value after receiving one byte of data, a receive timeout error occurs, and user communication error code 11 is stored in the status data register.

Examples: Multi-byte Start Delimiter


Multi-byte start delimiter is determined in the structure of the Receive Format. The following examples show how multi-byte start delimiter is determined.

- Constants are followed by data register, skip, or BCC

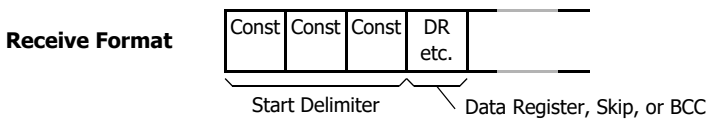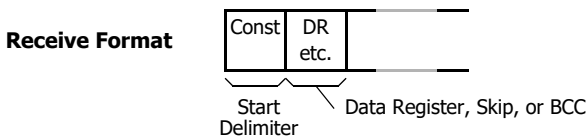

Note: Constants following data register, skip, or BCC are not considered start delimiter even if these are in the first five bytes of the receive format.


 
- More than 5 constants are specified from the first byte






Note: Constants that are neither start delimiters or end delimiters are considered constants for verification. See "Constant for Verification" on page 5-17.

Example: Start Delimiter Duplication Error

 
When input I0 is turned on, the first RXD instruction is executed and status code 32 is stored in the receive status D200, indicating the RXD instruction is waiting for the incoming data. When input I1 is turned on, another RXD instruction is executed, but since two RXD instructions have the same start delimiter, the second RXD instruction is not executed, and user communication error code 5 is stored in the receive status D300.

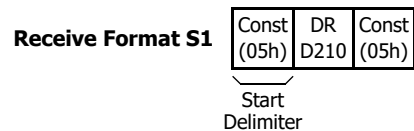





 
 
Communication port: Port 1
 Receive completion output: M20
 Receive status register: D200
 Receive data byte count: D201

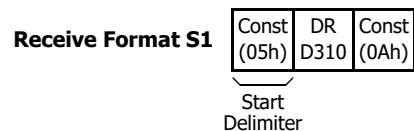

 Communication port: Port 1
 Receive completion output: M30
 Receive status register: D300
 Receive data byte count: D301



Note: If you execute two or more RXD instructions with multi-byte start delimiters simultaneously, the start delimiters of those RXD instructions must be unique from the others. When the length of the multi-byte start delimiters of the RXD instructions is different, the length of the shortest one is applied to check the duplicated start delimiters. The start delimiter of any of two RXD instructions in the following RXD instructions are considered the same.

    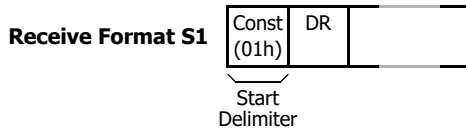 


Example: Using Multi-byte Start Delimiter

The following example shows the advantages of using a multi-byte start delimiter rather than a single-byte start delimiter. A RXD instruction processes incoming data from the master station. The incoming data is sent to multiple slave stations 0 through 9, and the local slave station number is 1. Therefore, incoming data from the master station must be received only when the incoming data is sent for the slave station 1.


• **Incoming data**

Incoming data consists of start delimiter STX, a slave station number which can be 0 through 9, data 0000 through 9999, and end delimiter CR.

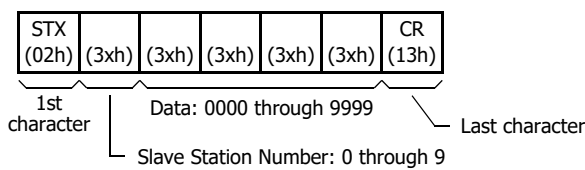

• **Single-byte start delimiter**


Only the first byte can be the start delimiter. The second byte of the incoming data, which is the slave station number, has to be stored to data register D0, and extra ladder programming is needed to see whether the slave station number of the incoming communication is 1 or not. Only when the slave station number is 1, received data stored in D1 is valid for the local PLC.

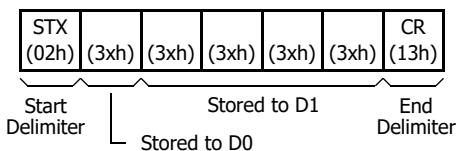

5: USER COMMUNICATION INSTRUCTIONS

• Multi-byte start delimiter

First two bytes can be configured as a multi-byte start delimiter. The incoming data is processed according to the receive format only when the first two bytes of the incoming data match the start delimiter. Therefore, only the incoming data sent to slave station 1 is processed. No extra ladder programming is needed to check the slave station number.

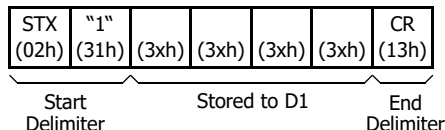

Designating Constant as End Delimiter

An end delimiter can be programmed at the end of the receive format of a RXD instruction; the FC6A Series MICROSmart will recognize the end of valid communication, although RXD instructions without an end delimiter can also be executed.

When a constant value is designated at the end of source device S1, the one-byte data serves as an end delimiter to end the processing of the received data. If data bits are set to 7 bits, the end delimiters will be between 00h and 7Fh. If data bits are set to 8 bits, the end delimiters will be between 00h and FFh. Constant values are entered in character or hexadecimal notation into the source data. When using the same RXD instruction repeatedly in a user program, assign different end delimiters for each RXD instruction.


If a character in incoming data matches the end delimiter, the RXD instruction ends receiving data at this point and starts subsequent receive processing as specified. Even if a character matches the end delimiter at a position earlier than expected, the RXD instruction ends receiving data there.

If a BCC code is included in the receive format of a RXD instruction, an end delimiter can be positioned immediately before or after the BCC code. If a data register or skip is designated between the BCC and end delimiter, correct receiving is not ensured.

When a RXD instruction without an end delimiter is executed, data receiving ends when the specified bytes of data in the receive format, such as data registers and skips, have been received. In addition, data receiving also ends when the interval between incoming data characters exceeds the receive timeout value specified in the Communication Parameters dialog box whether the RXD has an end delimiter or not. The character interval timer is started when the first character of incoming communication is received and restarted each time the next character is received. When a character is not received within a predetermined period of time, timeout occurs and the RXD ends data receive operation.


Example:

(1) When a RXD instruction without an end delimiter is executed

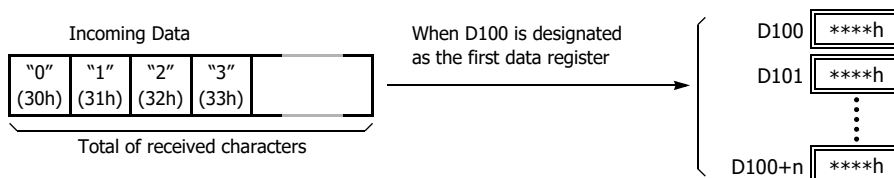


The incoming data is divided, converted, and stored to data registers according to the receive format. Receive operation is completed when the total characters programmed in RXD are received.

(2) When a RXD instruction with end delimiter ETX (03h) and without BCC is executed

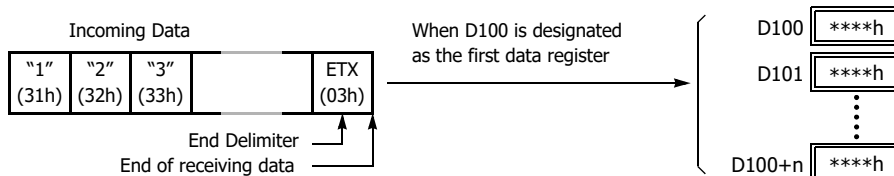

The incoming data is divided, converted, and stored to data registers according to the receive format. The end delimiter is not stored to a data register. Any data arriving after the end delimiter is discarded.

(3) When a RXD instruction with end delimiter ETX (03h) and one-byte BCC is executed

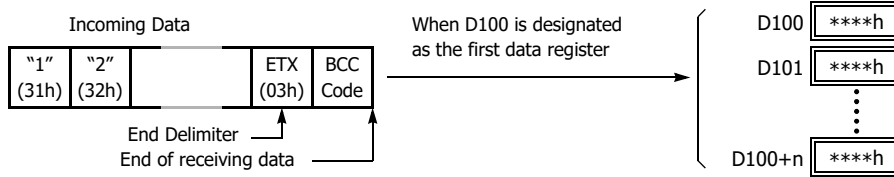

The incoming data is divided, converted, and stored to data registers according to the receive format. The end delimiter and BCC code are not stored to data registers. After receiving the end delimiter, the FC6A Series MICROSmart receives only the one-byte BCC code.

Constant for Verification


Constants excluding start and end delimiters can be configured in the receive format to verify the incoming data with the constants, which are either characters or hexadecimal values. As many constants can be configured for the verification as required. The verification result is stored in the receive status of the RXD instruction.

Example: Programming Constant for Verification

The following example shows the advantage of using constant for verification. The incoming data contains a constant value "1" in the middle, and that constant value needs to be verified to see whether the incoming data is valid.


• **Using Data Register**

The incoming data including the constant value needs to be stored in data registers. When the RXD instruction completes receiving the incoming data, the receive status contains 64, meaning the RXD instruction has completed without errors, even if the constant value is not an expected value. Extra ladder programming is needed to see whether the constant value in the incoming data is correct or not.

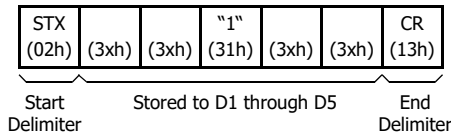

• **Using Constant for Verification**

A constant to verify the constant value in the incoming data is designated in the receive format. If the constant value is not an expected value when the RXD instruction completes receiving the incoming data, the receive status contains 74, meaning the RXD instruction has completed but user communication error code 5 occurred. No extra ladder programming is needed to see whether the constant value in the received data is correct or not.

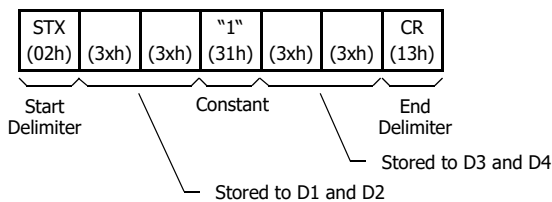

Note: When configuring constants, which are either characters or hexadecimal values, in the receive format, and the incoming data does not match the constants in the receive format, then a user communication error code is stored in the receive status. The error code contained in the receive status depends on whether the constants are used as a start delimiter or as constants for verification. If used as a start delimiter, user communication error code 7 is stored in the receive status, and the RXD instruction keeps waiting for valid incoming data. On the other hand, if used as constants for verification, the receive status contains 74, and the RXD instruction finishes the execution. To repeat receiving incoming communication, turn on the input for the RXD instruction.

5: USER COMMUNICATION INSTRUCTIONS

- Start delimiter of incoming data does not match the receive format

Incoming Data	Const (02h)	(xxh)	(FFh)	(xxh)	(0Dh)		
Receive Format	Const (05h)	DR	Const (FFh)	DR	Const (0Dh)	Receive status: 7	RXD instruction keeps waiting for valid incoming data, and completes data receiving after receiving valid data including a correct start delimiter.
						Receive completion output: 0	

Start Delimiter

- Constant for verification of incoming data does not match the receive format

Incoming Data	(05h)	(xxh)	(0Fh)	(xxh)	(0Dh)		
Receive Format	Const (05h)	DR	Const (FFh)	DR	Const (0Dh)	Receive status: 74	Receive status stores 74 (= 64 + 10) RXD instruction completes data receiving. To repeat receiving incoming communication, turn on the input for the RXD instruction.
						Receive completion output: 1	

Constant for Verification

Note: Constants configured in the beginning of receive formats have different functions as shown below:

- More than five constants are configured in the beginning of the receive format

Byte	1st	2nd	3rd	4th	5th	6th			200th
Receive Format	Const	Const	Const	Const	Const	Const			Const

Start Delimiter Up to 5th byte Constant for Verification 6th byte and after

- Other than constants (data register, skip, or BCC) are included in the first five bytes of the receive format


Byte	1st	2nd	3rd	4th	5th	6th			200th
Receive Format	Const	DR etc.	Const	Const	Const				

Start Delimiter Consecutive first 5 bytes only Data register, skip, or BCC Constant for Verification Not consecutive in the first 5 bytes

Skip

When "skip" is designated in the receive format, a specified quantity of digits in the incoming data are skipped and not stored to data registers. A maximum of 99 digits (bytes) of characters can be skipped continuously.

Example: When a RXD instruction with skip for 2 digits starting at the third byte is executed

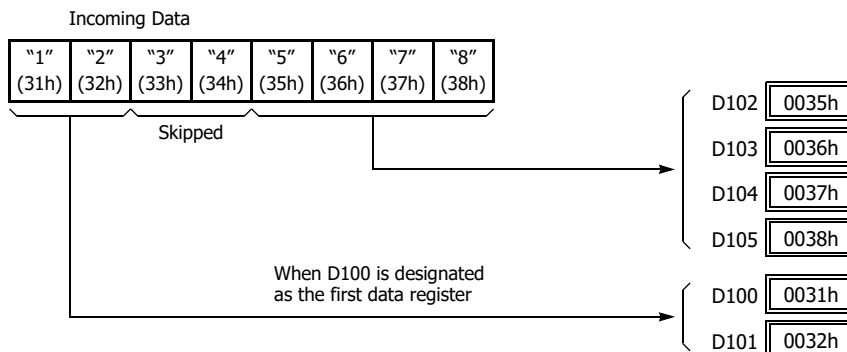

BCC (Block Check Character)

The FC6A Series MICROSmart has an automatic BCC calculation function to detect a communication error in incoming data. If a BCC code is designated in the receive format of a RXD instruction, the FC6A Series MICROSmart calculates a BCC value for a specified starting position through the position immediately preceding the BCC. It then compares the calculation result with the BCC code in the received incoming data. The start position for the BCC calculation can be specified from the first byte through the 15th byte. The BCC can be 1 or 2 digits.


When an end delimiter is not used in the RXD instruction, the BCC code must be positioned at the end of the receive format designated in Source 1 device. When an end delimiter is used, the BCC code must be immediately before or after the end delimiter. The FC6A Series MICROSmart reads a specified number of BCC digits in the incoming data according to the receive format to calculate and compare the received BCC code with the BCC calculation results.

BCC Calculation Start Position


The start position for the BCC calculation can be specified from the first byte through the 15th byte. The BCC is calculated for the range starting at the designated position up to the byte immediately before the BCC of the receive data.

Example: Received data consists of 17 bytes plus 2 BCC digits.

(1) Calculation start position = 1

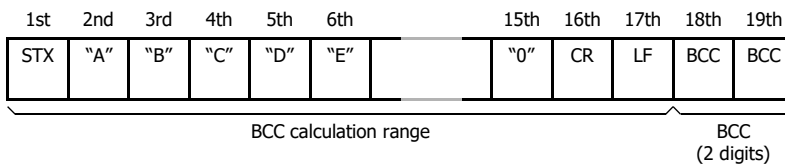

(2) Calculation start position = 2

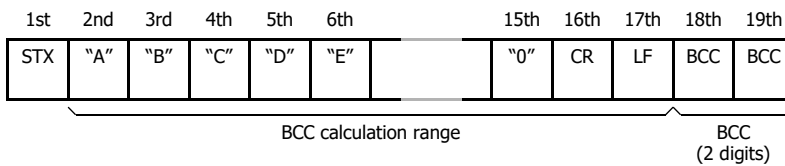

BCC Calculation Formula

BCC calculation formula can be selected from XOR (exclusive OR), ADD (addition), ADD-2comp, Modbus ASCII, or Modbus RTU.

Example: Incoming data consists of 41h, 42h, 43h, and 44h.

(1) BCC calculation formula = XOR

$$\text{Calculation result} = 41\text{h} \oplus 42\text{h} \oplus 43\text{h} \oplus 44\text{h} = 04\text{h}$$

(2) BCC calculation formula = ADD

$$\text{Calculation result} = 41\text{h} + 42\text{h} + 43\text{h} + 44\text{h} = 10\text{Ah} \rightarrow 0\text{Ah} \text{ (Only the last 1 or 2 digits are used as BCC.)}$$

(3) BCC calculation formula = ADD-2comp

$$\text{Calculation result} = \text{FEh, F6h (2 digits without conversion)}$$

(4) BCC calculation formula = Modbus ASCII

$$\text{Calculation result} = 88 \text{ (ASCII)}$$

(5) BCC calculation formula = Modbus RTU

$$\text{Calculation result} = 85\text{h } 0\text{Fh (binary)}$$

 
5: USER COMMUNICATION INSTRUCTIONS

Conversion Type

The BCC calculation result can be converted or not according to the assigned conversion type as described below:


Example: BCC calculation result is 0041h.

(1) Binary to ASCII conversion



Note: On WindLDR, Modbus ASCII defaults to binary to ASCII conversion.

 (2) No conversion




Note: On WindLDR, Modbus RTU defaults to no conversion.

BCC Digits (Bytes)

The quantity of digits (bytes) of the BCC code can be selected from 1 or 2.

Example:

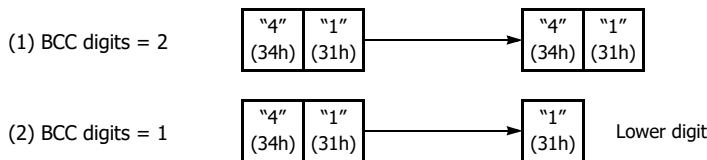


Note: On WindLDR, Modbus ASCII and Modbus RTU default is set to 2 digits.


Comparing BCC Codes

The FC6A Series MICROSmart compares the BCC calculation result with the BCC code in the received incoming data to check for any error in the incoming communication due to external noises or other causes. If a disparity is found in the comparison, an error code is stored in the data register designated as receive status in the RXD instruction. For user communication error code, see "User Communication Error" on page 5-52.

Example 1: BCC is calculated for the first byte through the sixth byte using the XOR format, converted in binary to ASCII, and compared with the BCC code appended to the seventh and eighth bytes of the incoming data.

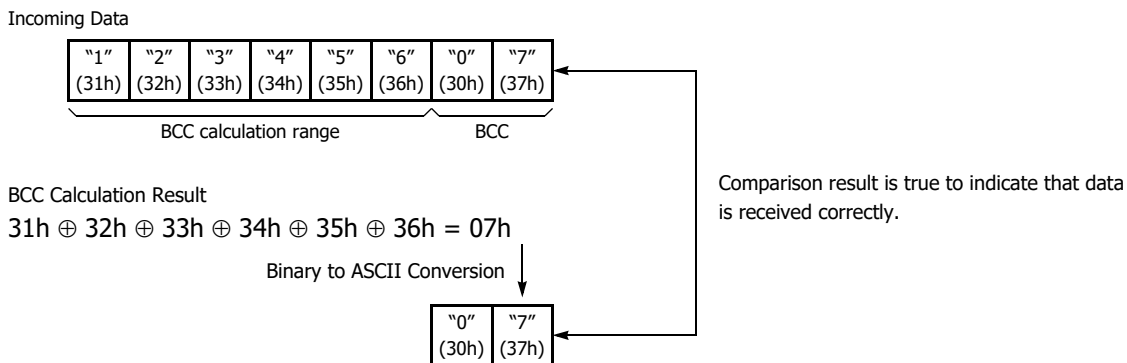

Example 2: BCC is calculated for the first byte through the sixth byte using the ADD format, converted in binary to ASCII, and compared with the BCC code appended to the seventh and eighth bytes of the incoming data.

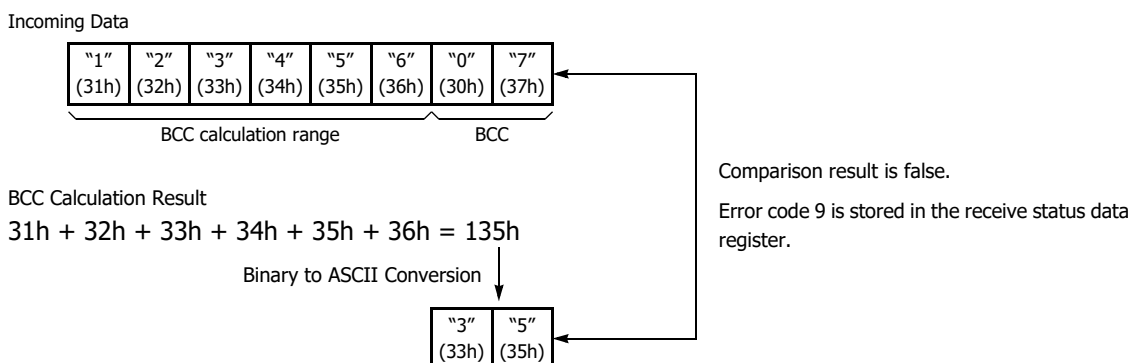

D1 (Destination 1)

Set an internal relay or an output for the receive completion output.

When the start input for a RXD instruction is turned on, preparation for receiving data is initiated, followed by data conversion and storage. When the data receive operation sequence is complete, the designated output or internal relay is turned on.

Conditions for Completion of Receiving Data


After starting to receive data, the RXD instruction can be completed in three ways depending on the designation of end delimiter and delimiter in the receive format.

End Delimiter	Delimiter	Conditions for Completion of Receiving Data
With	With or Without	When a specified byte count of data (digits × repeat) has been received or when an end delimiter is received. When a BCC exists immediately after the end delimiter, the BCC is received before ending data receiving.
Without	With	After the last constant (including delimiter) designated in the RXD instruction has been received, data receiving is completed when the subsequent byte count of data has been received.
Without	Without	When a specified byte count of data (digits × repeat) has been received.

Note: Whenever a receive timeout has occurred, data receiving stops arbitrarily.

Data receiving is complete when one of the above three conditions is met. To abort a RXD instruction, use the special internal relay for user communication receive instruction cancel flag. See "User Communication Receive Instruction Cancel Flag" on page 5-22.

Example: A RXD instruction does not have an end delimiter and has a delimiter programmed in the receive format for data registers.

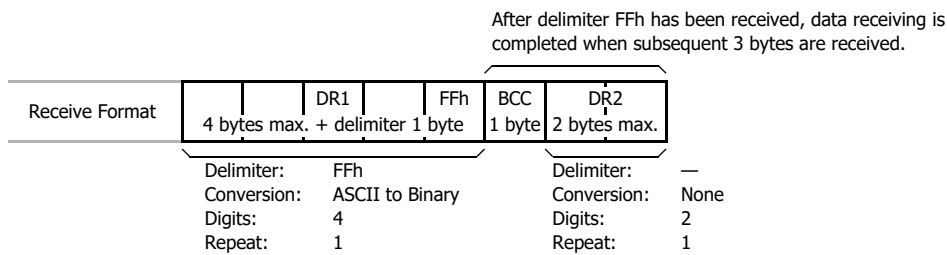

D2 (Destination 2)

Set the data register in which to store the receive status and the receive data byte count.

The receive status is stored in D2+0 and the receive data byte count is stored in D2+1.

D2+0 (Receive Status)

The receive status is stored in the data register set with D2. The receive status includes the reception operation status and the error information.


Receive Status Code	Status	Description
16	Preparing data receive	From turning on the start input for a RXD instruction to read the receive format, until the RXD instruction is enabled by an END processing
32	Receiving data	From enabling the RXD instruction by an END processing, until incoming data is received
48	Data receive complete	From receiving incoming data, until the received data is converted and stored in data registers according to the receive format
64	Receive instruction complete	All data receive operation is completed and the next data receive is made possible
128	User communication receive instruction cancel flag active	RXD instructions are cancelled by special internal relay for user communication receive instruction cancel flag, such as M8022, M8023, M8026, M8033, M8145 to M8147, M8170, M8176, or M8365 to M8394

If the receive status code is other than shown above, a receive instruction error is suspected. See "User Communication Error" on page 5-52.

D2+1 (Receive Digits (Bytes))

The data register next to the device designated for receive status stores the byte count of data received by the RXD instruction. When a start delimiter, end delimiter, and BCC are included in the received data, the byte counts for these codes are also included in the receive data byte count.

 Example: Data register D200 is designated as a device for receive status.



5: USER COMMUNICATION INSTRUCTIONS

User Communication Receive Instruction Cancel Flag

If user communication receive instruction cancel is turned on when the receive pre-processing for the user communication receive instruction has already been completed and data is being received (status code 32), all receive instructions for the corresponding port will be canceled. This is effective for canceling receive instruction execution when waiting a long time to receive data.

To activate a receive instruction that was canceled, turn off the user communication receive instruction cancel flag, and then turn on the receive instruction input conditions again.

User communication receive instruction cancel flags are allocated as follows to each communication port as a special internal relay.


Device Address	Description	CPU Stopped	Power OFF	R/W
M8022	User Communication Receive Instruction Cancel Flag (Port 1)	Cleared	Cleared	R/W
M8023	User Communication Receive Instruction Cancel Flag (Port 2)	Cleared	Cleared	R/W
M8026	User Communication Receive Instruction Cancel Flag (Port 3)	Cleared	Cleared	R/W
M8033	User Communication Receive Instruction Cancel Flag (Port 4) ^{*1}	Cleared	Cleared	R/W
M8145	User Communication Receive Instruction Cancel Flag (Port 5) ^{*1}	Cleared	Cleared	R/W
M8146	User Communication Receive Instruction Cancel Flag (Port 6) ^{*1}	Cleared	Cleared	R/W
M8147	User Communication Receive Instruction Cancel Flag (Port 7) ^{*1}	Cleared	Cleared	R/W
M8170	User Communication Receive Instruction Cancel Flag (Port 8) ^{*1}	Cleared	Cleared	R/W
M8176	User Communication Receive Instruction Cancel Flag (Port 9) ^{*1}	Cleared	Cleared	R/W
M8365	User Communication Receive Instruction Cancel Flag (Port 10) ^{*1*2}	Cleared	Cleared	R/W
M8366	User Communication Receive Instruction Cancel Flag (Port 11) ^{*1*2}	Cleared	Cleared	R/W
M8367	User Communication Receive Instruction Cancel Flag (Port 12) ^{*1*2}	Cleared	Cleared	R/W
M8370	User Communication Receive Instruction Cancel Flag (Port 13) ^{*1*2}	Cleared	Cleared	R/W
M8371	User Communication Receive Instruction Cancel Flag (Port 14) ^{*1*2}	Cleared	Cleared	R/W
M8372	User Communication Receive Instruction Cancel Flag (Port 15) ^{*1*2}	Cleared	Cleared	R/W
M8373	User Communication Receive Instruction Cancel Flag (Port 16) ^{*1*2}	Cleared	Cleared	R/W
M8374	User Communication Receive Instruction Cancel Flag (Port 17) ^{*1*2}	Cleared	Cleared	R/W
M8375	User Communication Receive Instruction Cancel Flag (Port 18) ^{*1*2}	Cleared	Cleared	R/W
M8376	User Communication Receive Instruction Cancel Flag (Port 19) ^{*1*2}	Cleared	Cleared	R/W
M8377	User Communication Receive Instruction Cancel Flag (Port 20) ^{*1*2}	Cleared	Cleared	R/W
M8380	User Communication Receive Instruction Cancel Flag (Port 21) ^{*1*2}	Cleared	Cleared	R/W
M8381	User Communication Receive Instruction Cancel Flag (Port 22) ^{*1*2}	Cleared	Cleared	R/W
M8382	User Communication Receive Instruction Cancel Flag (Port 23) ^{*1*2}	Cleared	Cleared	R/W
M8383	User Communication Receive Instruction Cancel Flag (Port 24) ^{*1*2}	Cleared	Cleared	R/W
M8384	User Communication Receive Instruction Cancel Flag (Port 25) ^{*1*2}	Cleared	Cleared	R/W
M8385	User Communication Receive Instruction Cancel Flag (Port 26) ^{*1*2}	Cleared	Cleared	R/W
M8386	User Communication Receive Instruction Cancel Flag (Port 27) ^{*1*2}	Cleared	Cleared	R/W
M8387	User Communication Receive Instruction Cancel Flag (Port 28) ^{*1*2}	Cleared	Cleared	R/W
M8390	User Communication Receive Instruction Cancel Flag (Port 29) ^{*1*2}	Cleared	Cleared	R/W
M8391	User Communication Receive Instruction Cancel Flag (Port 30) ^{*1*2}	Cleared	Cleared	R/W
M8392	User Communication Receive Instruction Cancel Flag (Port 31) ^{*1*2}	Cleared	Cleared	R/W
M8393	User Communication Receive Instruction Cancel Flag (Port 32) ^{*1*2}	Cleared	Cleared	R/W
M8394	User Communication Receive Instruction Cancel Flag (Port 33) ^{*1*2}	Cleared	Cleared	R/W

*1 When using a communication module.

*2 Plus CPU module only.

Note: "R/W" is the abbreviation for read/write. When R/W, it can be read and written. When R, it can only be read. When W, it can only be written.

 ETXD (User Communication Transmit over Ethernet)



The ETXD instruction converts transmission data to the specified data type and sends it to the external device connected over Ethernet port 1 and 2.

When the input is on, the transmission data designated by S1 is transmitted to the device connected with the specified connection.

When transmission is complete, the device designated by D1 is turned on. Transmit status (the transmission status and error code) is stored to the device designated by D2.

The byte count of transmitted data is stored to D2+1.

 
Apart from the connection settings, the settings of ETXD and TXD instructions are the same. For details on TXD instruction, see "TXD (Transmit)" on page 5-2.

The ETXD instruction cannot be used in an interrupt program.

If used, a user program execution error will result, turning on special internal relay M8004 and the ERR LED on the FC6A Series MICROSmart. For details about the user program execution errors, see Chapter 3 "User Program Execution Errors" in the "FC6A Series MICROSmart Ladder Programming Manual".

Note: For details on the user communication client and user communication server specifications and for details on user communication over Ethernet, see "User Communication via Ethernet Communication" on page 5-40.

ERXD (User Communication Receive over Ethernet)



The ERXD instruction receives data from an external device connected over Ethernet port 1 and 2, converts the received data in the specified format, and stores the converted data to data registers.

When the input is on, the received data designated by S1 is received from the device connected with the specified connection.

When all data has been received, the device designated by D1 is turned on. Receive status (the receive status and error code) is stored to the device designated by D2.

The byte count of received data is stored to D2+1.

When user communication receive instruction cancel flag (M8200 - M8207 and M8334 - M8343) is turned on while receiving incoming data, the execution of all active receive instructions for the corresponding connection is canceled.

Apart from the connection settings and the allocation of the user communication receive instruction cancel flags, the settings of ERXD and RXD instructions are the same. For details on RXD instruction, see "RXD (Receive)" on page 5-10.

The ERXD instruction cannot be used in an interrupt program.

If used, a user program execution error will result, turning on special internal relay M8004 and the ERR LED on the FC6A Series MICROSmart. For details about the user program execution errors, see Chapter 3 "User Program Execution Errors" in the "FC6A Series MICROSmart Ladder Programming Manual".

Note: For details on the user communication client and user communication server specifications and for details on user communication (UDP), see "User Communication via Ethernet Communication" on page 5-40.

User Communication via Serial Communication

With user communication via serial communication, the FC6A Series MICROSmart can send and receive data between external devices connected to port 1 to port 33, such as a printer or barcode reader, by using the TXD (user communication transmit) and RXD (user communication receive) instructions.


User Communication Overview

By installing a communication cartridge on the FC6A Series MICROSmart expansion communication port, the FC6A Series MICROSmart can communicate with two external devices simultaneously.

When using an RS485 communication cartridge, FC6A Series MICROSmart modules can communicate with a maximum of 31 RS485 devices using the user communication.

User communication transmit and receive instructions can be programmed to match the communication protocol of the equipment to communicate with. Possibility of communication using the user communication mode can be determined referring to the user communication mode specifications described below.

An RS232C equipment is connected to port 1 of the FC6A Series MICROSmart.

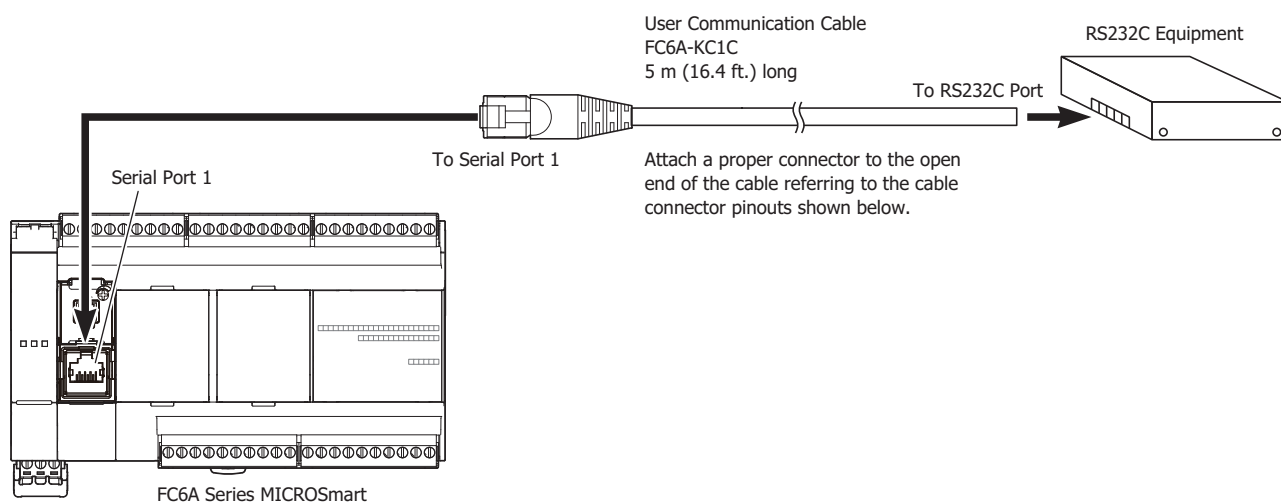

User Communication Mode Specifications


Type	RS232C User Communication	RS485 User Communication
Communication Port	Port 1 to port 33	Port 1 to port 33
Maximum Nodes	1 per port	31 maximum
Standards	EIA RS232C	EIA RS485
Baud Rate	1,200, 2,400, 4,800, 9,600, 19,200, 38,400, 57,600, 115,200 bps (Default: 115,200)	
Data Bits	7 or 8 bits (Default: 7)	
Parity	Odd, Even, None (Default: Even)	
Stop Bits	1 or 2 bits (Default: 1)	
Receive Timeout	10 to 2,540 ms (10 ms increments) or none (Receive timeout is disabled when 2,550 ms is selected.) The receive timeout has an effect when using RXD instructions.	
Communication Method	Start-stop synchronization system	
Maximum Cable Length	FC6A-PC1: 5 m FC6A-SIF52: 15 m	FC6A-PC3: 200 m FC6A-SIF52: 1,200 m
Maximum Transmit Data	1,500 bytes	
Maximum Receive Data	1,500 bytes	
BCC Calculation	XOR, ADD, ADD-2comp *, Modbus ASCII *, Modbus RTU * (* For calculation examples, see "BCC Calculation Examples" on page 5-58.)	

Programming WindLDR


When using the user communication function to communicate with an external RS232C or RS485 device, set the communication parameters for the FC6A Series MICROSmart to match those of the external device.

Note: Since communication parameters in the Function Area Settings relate to the user program, the user program must be downloaded to the FC6A Series MICROSmart after changing any of these settings.

1. From the WindLDR menu bar, select **Configuration > Communication Ports**. The **Function Area Settings** dialog box for Communication Ports appears.

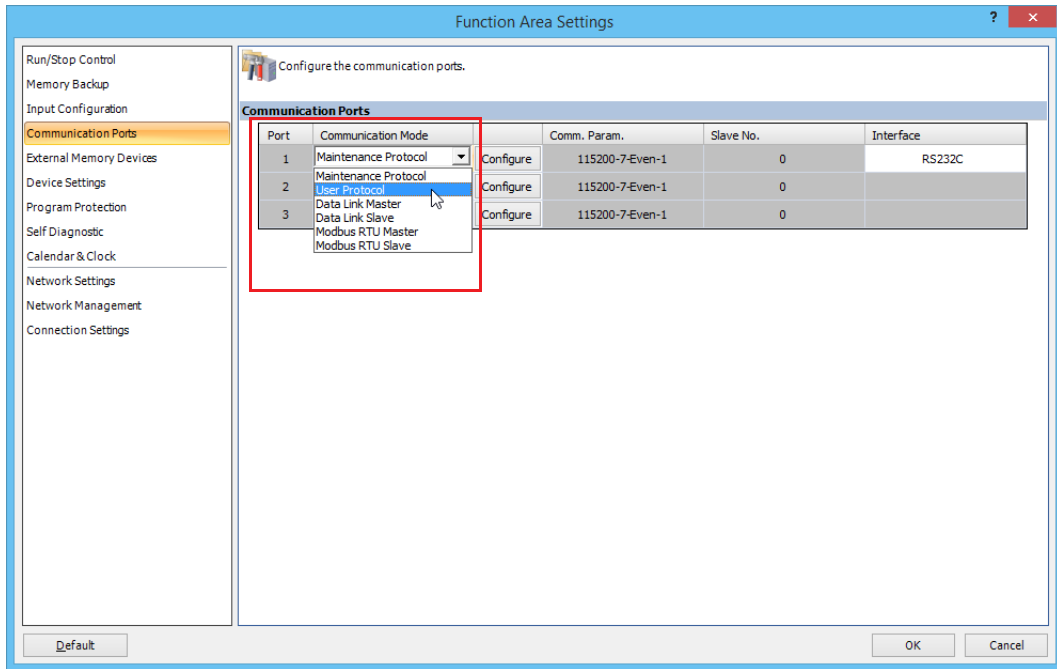

2. In the Communication Mode pull-down list for **Port 1** to **Port 3**, select **User Protocol**. (Click the **Configure** button when changing previous settings.) The **User Protocol** dialog box appears.

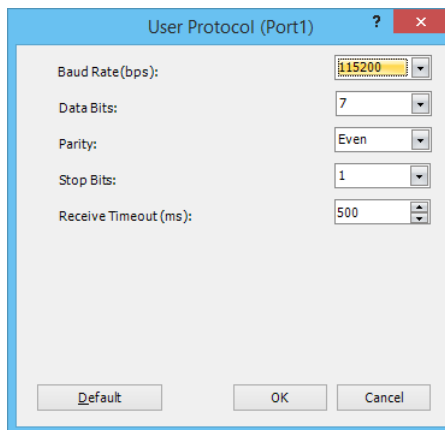


When **2550 ms** is selected in the **Receive Timeout** box, the receive timeout function is disabled.

3. Select communication parameters to the same values for the device to communicate with.
4. Click the **OK** button.

Programming TXD Instruction Using WindLDR

The following example demonstrates how to program a TXD instruction including a start delimiter, BCC, and end delimiter using WindLDR.


TXD sample program:

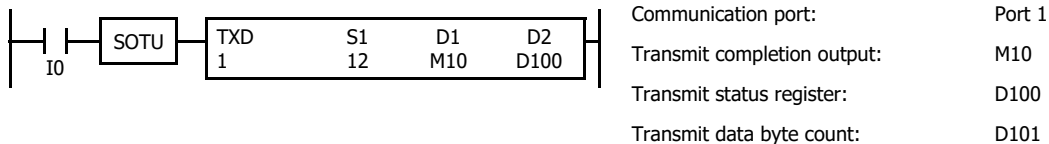


Data register contents:

D10 04D2h = 1234
 D11 162Eh = 5678



Transmit data example:

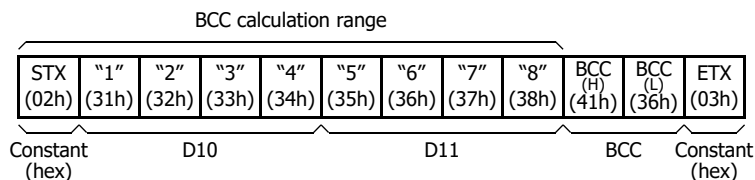



1. Start to program a TXD instruction. Move the cursor where you want to insert the TXD instruction, and type **TXD**. You can also insert the TXD instruction by clicking the User Communication icon in the menu bar and clicking where you want to insert the TXD instruction in the program edit area.
 The **TXD (Transmit)** dialog box appears.

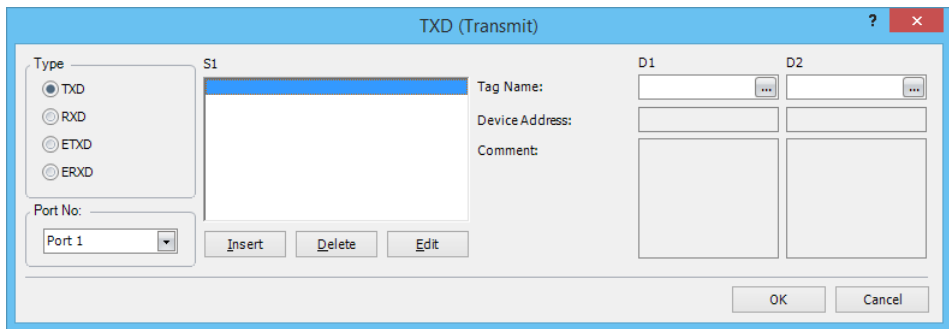



2. Check that **TXD** is selected in the **Type** box and select **Port 1** in the **Port No.** box. Then, click **Insert**. The **Data Type Selection** dialog box appears. You will program source device S1 using this dialog box.
3. Click **Constant (Hexadecimal)** in the **Type** box and click **OK**. Next, in the **Constant (Hexadecimal)** dialog box, type **02** to program the start delimiter STX (02h). When finished, click **OK**.

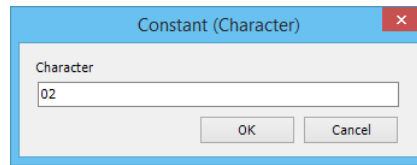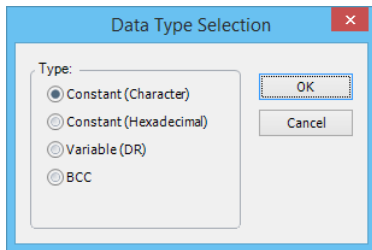

4. Since the **TXD (Transmit)** dialog box reappears, repeat the above procedure. In the **Data Type Selection** dialog box, click **Variable (DR)** and click **OK**. Next, in the **Variable (Data Register)** dialog box, type **D0010** in the **DR No.** box and click **BCD to ASCII** to select the BCD to ASCII conversion. Enter **4** in the **Digits** box (4 digits) and **2** in the **REP** box (2 repeat cycles). When finished, click **OK**.

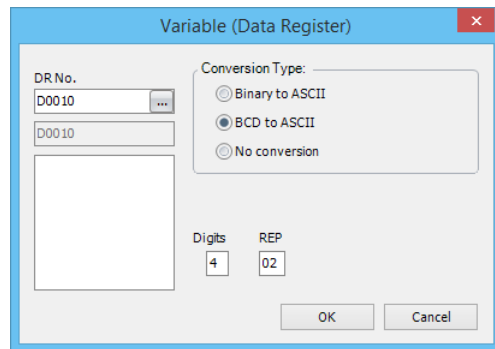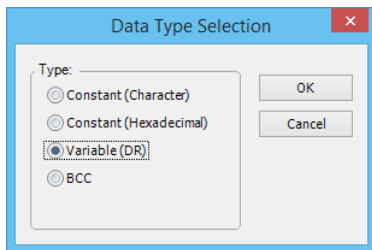


5. Again in the **Data Type Selection** dialog box, click **BCC** and click **OK**. Next, in the **BCC** dialog box, enter **1** in the **Calculation Start Position** box, select **ADD** for the **Calculate Type**, click **Binary to ASCII** for the **Conversion Type**, and click **2** for the **Digits**. When finished, click **OK**.

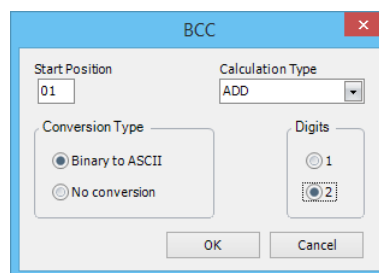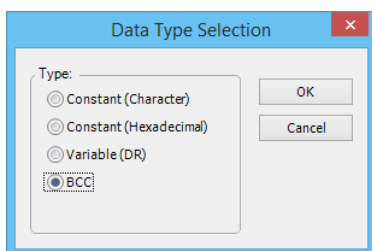


5: USER COMMUNICATION INSTRUCTIONS


6. Once again in the **Data Type Selection** dialog box, click **Constant (Hexadecimal)** and click **OK**. Next, in the Constant (Hexadecimal) dialog box, type **03** to program the end delimiter ETX (03h). When finished, click **OK**.

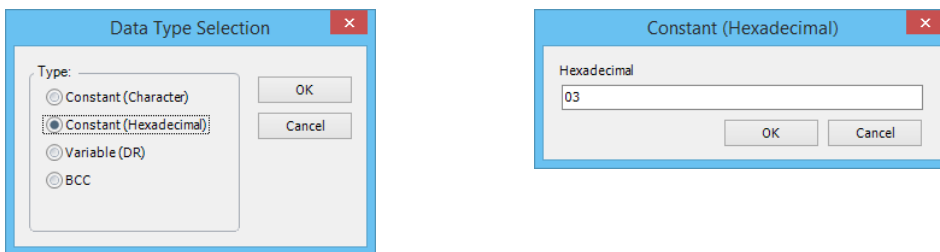

7. In the **TXD (Transmit)** dialog box, type **M0010** in the destination D1 box and type **D0100** in the destination D2 box. When finished, click **OK**.

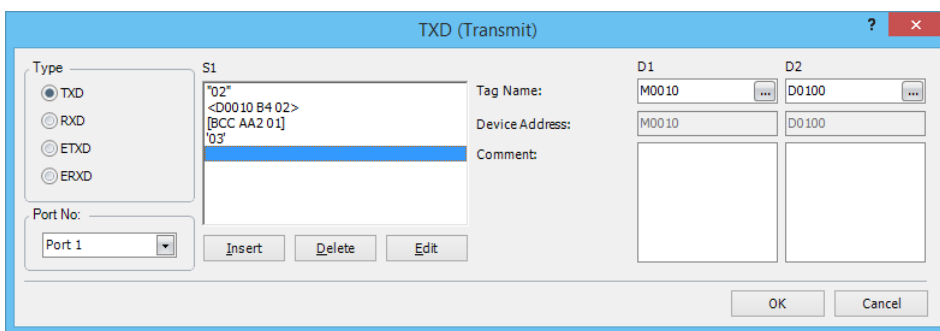


Programming of the TXD1 instruction is complete and the transmit data is specified as follows:

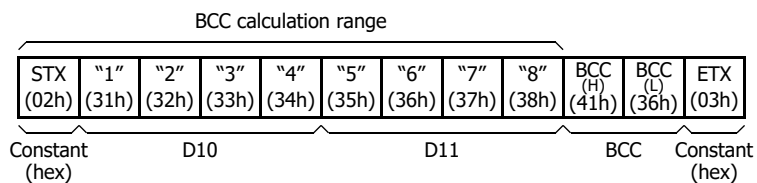


Programming RXD Instruction Using WindLDR

The following example demonstrates how to program an RXD instruction including a start delimiter, skip, constant for verification, BCC, and end delimiter using WindLDR. Converted data is stored to data registers D10 and D11. Internal relay M100 is used as destination D1 for the receive completion output. Data register D1000 is used as destination D2 for the receive status, and data register D1001 is used to store the receive data byte count.

Receive data example:

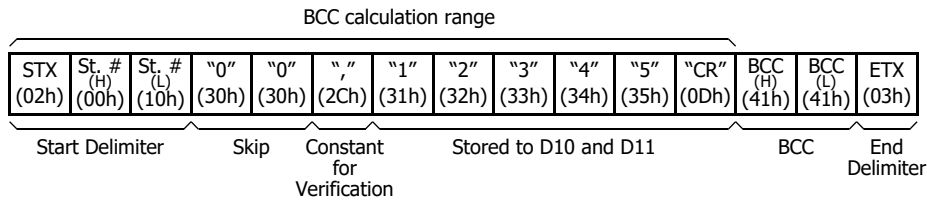


RXD sample program:


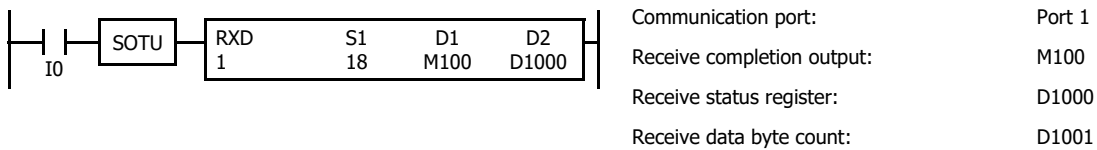


1. Start to program an RXD instruction. Move the cursor where you want to insert the RXD instruction, and type **RXD**. You can also insert the RXD instruction by clicking the User Communication icon in the menu bar and clicking where you want to insert the RXD instruction in the program edit area, then the Transmit dialog box appears. Click **RXD** to change the dialog box to the Receive dialog box.

The **RXD (Receive)** dialog box appears.


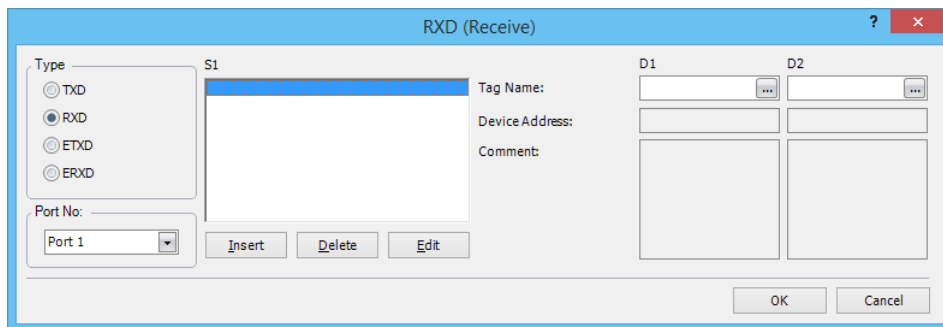


2. Check that **RXD** is selected in the Type box and select **Port 1** in the Port box. Then, click **Insert**. The **Data Type Selection** dialog box appears. You will program source device S1 using this dialog box.
3. Click **Constant (Hexadecimal)** in the Type box and click **OK**. Next, in the **Constant (Hexadecimal)** dialog box, type **020010** to program the start delimiter STX (02h), Station No. H (00h), and Station No. L (10h). When finished, click **OK**.

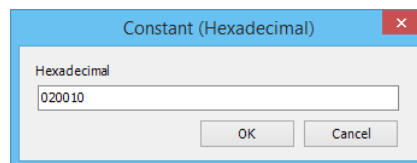
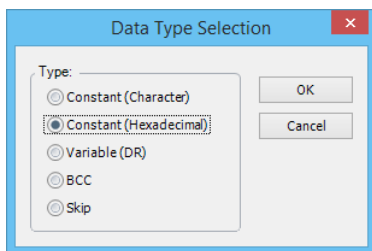


5: USER COMMUNICATION INSTRUCTIONS



- Since the **RXD (Receive)** dialog box reappears, repeat the above procedure. In the **Data Type Selection** dialog box, click **Skip** and click **OK**. Next, in the **Skip** dialog box, type **02** in the **Digits** box and click **OK**.

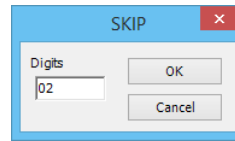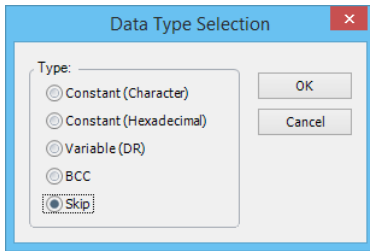



- Again in the **Data Type Selection** dialog box, click **Constant (Character)** and click **OK**. Next, in the **Constant (Character)** dialog box, type **, (2Ch)** in the **Character** box to program a comma as a constant to verify. When finished, click **OK**.

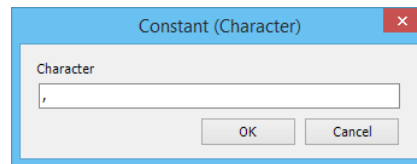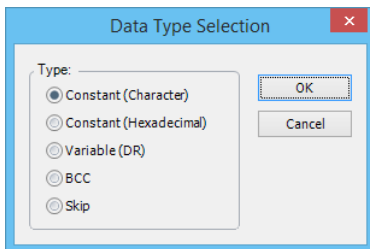



- Again in the **Data Type Selection** dialog box, click **Variable (DR)** and click **OK**. Next, in the **Variable (Data Register)** dialog box, type **D10** in the **DR No.** box and click **ASCII to Binary** to select ASCII to binary conversion. Enter **4** in the **Digits** box (4 digits) and **2** in the **REP** box (2 repeat cycles). Click **Variable**, select **HEX**, and type **0D** to designate a delimiter. When finished, click **OK**.

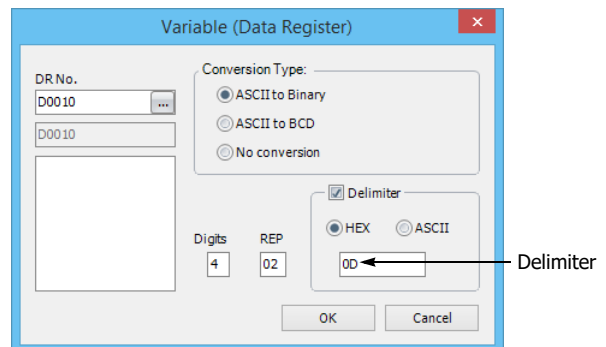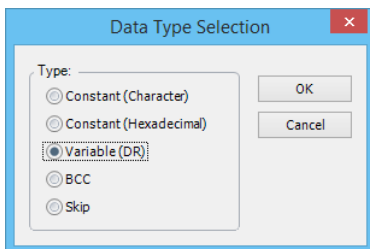


- Again in the **Data Type Selection** dialog box, click **BCC** and click **OK**. Next, in the **BCC** dialog box, enter **01** in the **Calculation Start Position** box, select **ADD** for the **Calculation Type**, click **Binary to ASCII** for the **Conversion Type**, and click **2** for the **Digits**. When finished, click **OK**.

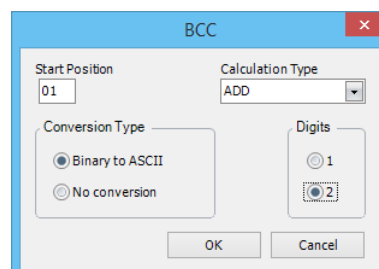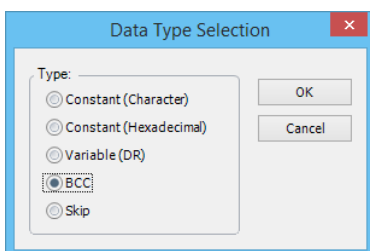

8. Once again in the **Data Type Selection** dialog box, click **Constant (Hexadecimal)** and click **OK**. Next, in the **Constant (Hexadecimal)** dialog box, type **03** to program the end delimiter ETX (03h). When finished, click **OK**.

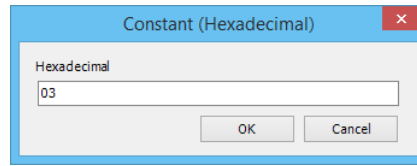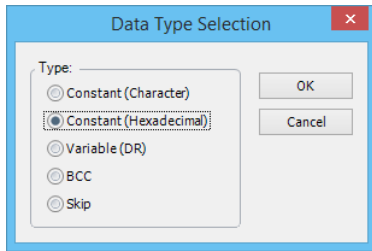

9. In the **RXD (Receive)** dialog box, type **M0100** in the destination **D1** box and type **D1000** in the destination **D2** box. When finished, click **OK**.

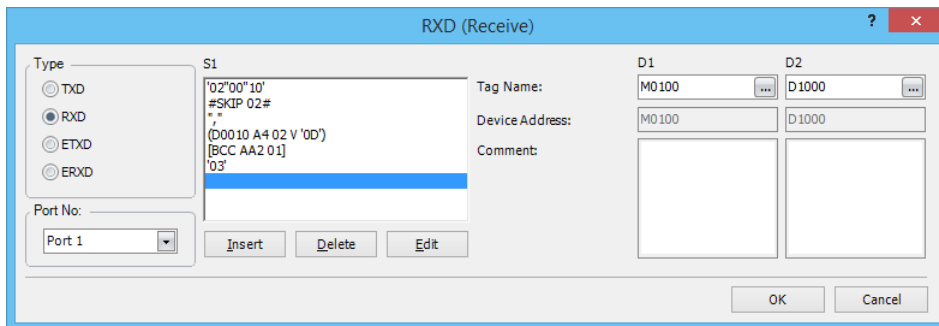

Programming of the RXD instruction is complete and the receive data will be stored as follows:

D10

1234h

 = 4660
 D11

0005h

 = 5

5: USER COMMUNICATION INSTRUCTIONS

RS232C Line Control Signals

While the FC6A Series MICROSmart is in user communication mode, special data registers can be used to enable or disable DSR and DTR control signal options for port 1 through port 33.

Line control signals cannot be used with RS485 communication.

The RS-232C communication cartridge (FC6A-PC1) RS signal is an always on output signal.

In the maintenance communication mode, DSR has no effect and DTR remains on.

Special Data Registers for RS232C Line Control Signals

Special data registers D8104 through D8734 are allocated for RS232C line control signals.


DR No.	Data Register Function	Data Register Value Updated	R/W
D8104	Control signal status (port 1 to port 5)	Every scan	R
D8105	DSR input control signal option (port 1 to port 5)	Every scan	R/W
D8106	DTR output control signal option (port 1 to port 5)	Every scan	R/W
D8204	Control signal status (port 6 to port 9)	Every scan	R
D8205	DSR input control signal option (port 6 to port 9)	Every scan	R/W
D8206	DTR output control signal option (port 6 to port 9)	Every scan	R/W
D8717	Control signal status (port 10 to port 13)	Every scan	R
D8718	DSR input control signal option (port 10 to port 13)	Every scan	R/W
D8719	DTR output control signal option (port 10 to port 13)	Every scan	R/W
D8720	Control signal status (port 14 to port 17)	Every scan	R
D8721	DSR input control signal option (port 14 to port 17)	Every scan	R/W
D8722	DTR output control signal option (port 14 to port 17)	Every scan	R/W
D8723	Control signal status (port 18 to port 21)	Every scan	R
D8724	DSR input control signal option (port 18 to port 21)	Every scan	R/W
D8725	DTR output control signal option (port 18 to port 21)	Every scan	R/W
D8726	Control signal status (port 22 to port 25)	Every scan	R
D8727	DSR input control signal option (port 22 to port 25)	Every scan	R/W
D8728	DTR output control signal option (port 22 to port 25)	Every scan	R/W
D8729	Control signal status (port 26 to port 29)	Every scan	R
D8730	DSR input control signal option (port 26 to port 29)	Every scan	R/W
D8731	DTR output control signal option (port 26 to port 29)	Every scan	R/W
D8732	Control signal status (port 30 to port 33)	Every scan	R
D8733	DSR input control signal option (port 30 to port 33)	Every scan	R/W
D8734	DTR output control signal option (port 30 to port 33)	Every scan	R/W


Control Signal Status

The signal statuses of the control signals (DSR and DTR) are stored in D8104, D8204, D8717, D8720, D8723, D8726, D8729, and D8732.

The statuses of the DSR and DTR signals are stored in the above devices that correspond to the communication port. The values in the devices are updated in END processing when stopped and while running.

The allocation of communication ports in the device (bit assignment) is as follows.

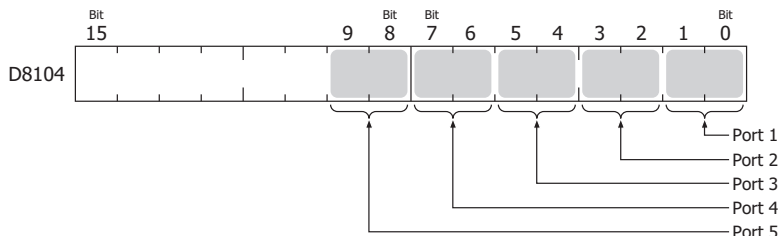

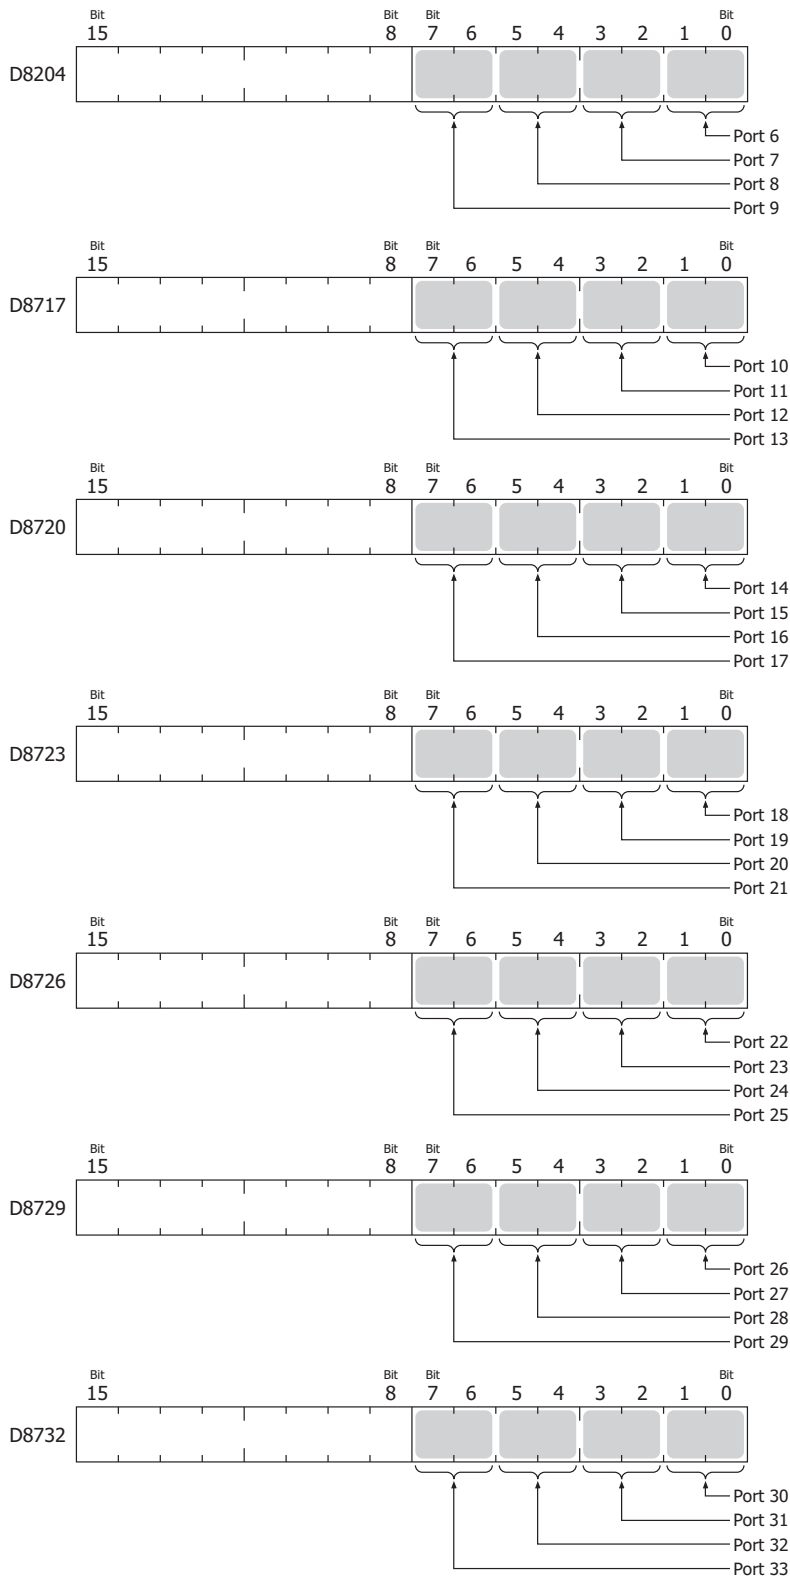

2-bit Binary Value	DTR	DSR	Description
00	OFF	OFF	Both DSR and DTR are off
01	OFF	ON	DSR is on
10	ON	OFF	DTR is on
11	ON	ON	Both DSR and DTR are on

5: USER COMMUNICATION INSTRUCTIONS

DSR Control Signal Status in RUN and STOP Modes

Communication Mode	3-bit Binary Value	DSR (Input) Status	
		RUN Mode	STOP Mode
User Communication Mode	000 (default)	No effect	
	001	ON: Enable TXD/RXD OFF: Disable TXD/RXD	No effect (TXD/RXD disabled)
	010	ON: Disable TXD/RXD OFF: Enable TXD/RXD	No effect (TXD/RXD disabled)
	011	ON: Enable TXD OFF: Disable TXD	No effect (TXD/RXD disabled)
	100	ON: Disable TXD OFF: Enable TXD	No effect (TXD/RXD disabled)
	≥ 101	No effect	
Maintenance Mode	—	No effect	

DTR Control Signal Status in RUN and STOP Modes

Communication Mode	2-bit Binary Value	DTR (Output) Status	
		RUN Mode	STOP Mode
User Communication Mode	00 (default)	ON	OFF
	01	OFF	OFF
	10	RXD enabled: ON RXD disabled: OFF	OFF
	11	ON	OFF
Maintenance Mode	—	ON	ON


DSR Input Control Signal Option

The external device uses the DSR signal to indicate that it is ready to receive data or to tell the FC6A Series MICROSmart its status, such as if it is transmitting valid data.


The FC6A Series MICROSmart determines whether or not to transmit and receive data depending on the status of the DSR signal of the external device.

The DSR signal can be controlled by setting values in D8105, D8205, D8718, D8721, D8724, D8727, D8730, and D8733. These registers are only valid during user communication.

The allocation of communication ports in the devices (bit assignment) is as follows.

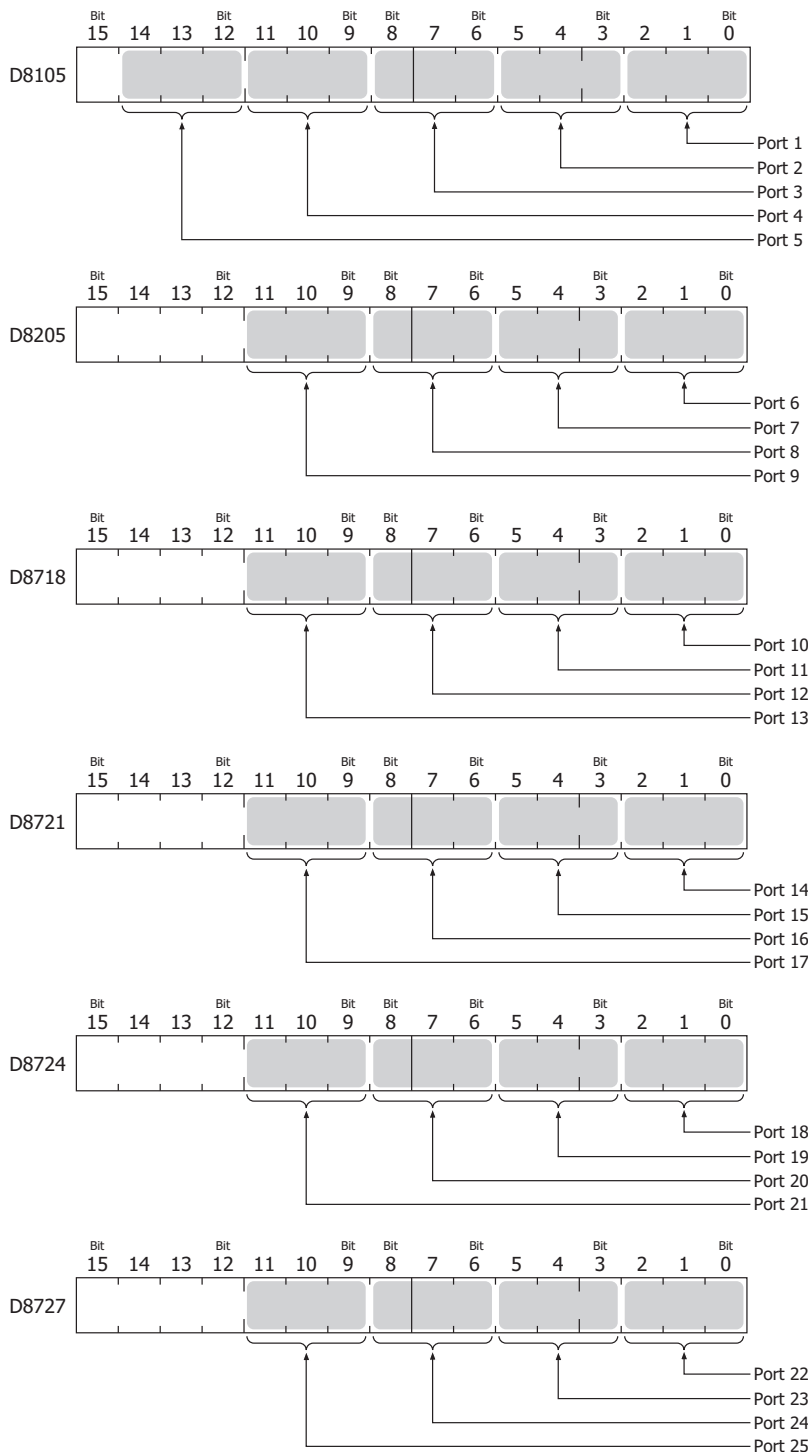

5: USER COMMUNICATION INSTRUCTIONS

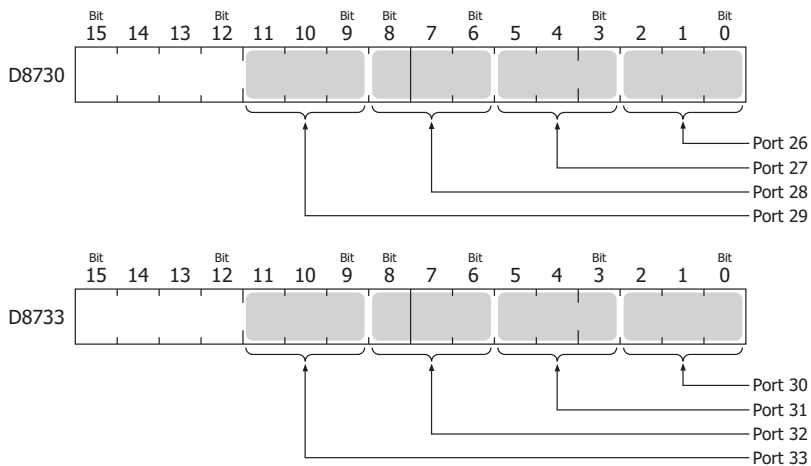


3-bit Binary Value	Description
000	DSR is not used for data flow control. Use this status if DSR signal control is not required.
001	When DSR is on, the FC6A Series MICROSmart can transmit and receive data.
010	When DSR is off, the FC6A Series MICROSmart can transmit and receive data.
011	When DSR is on, the FC6A Series MICROSmart can transmit data. This function is usually called "Busy Control" and is used for controlling transmission to a remote terminal with a slow processing speed, such as a printer. When the remote terminal is busy, data input to the remote terminal is restricted.
100	When DSR is off, the FC6A Series MICROSmart can transmit data.
≥ 101	The operation is the same as the setting "000". DSR is not used for data flow control.


DTR Output Control Signal Option

The FC6A Series MICROSmart tells the external device of its control status and transmit/receive status using the DTR signal. The DTR signal can be controlled by setting values in D8106, D8206, D8719, D8722, D8725, D8728, D8731, and D8734. These registers are only valid during user communication.

The allocation of communication ports in the devices (bit assignment) is as follows.

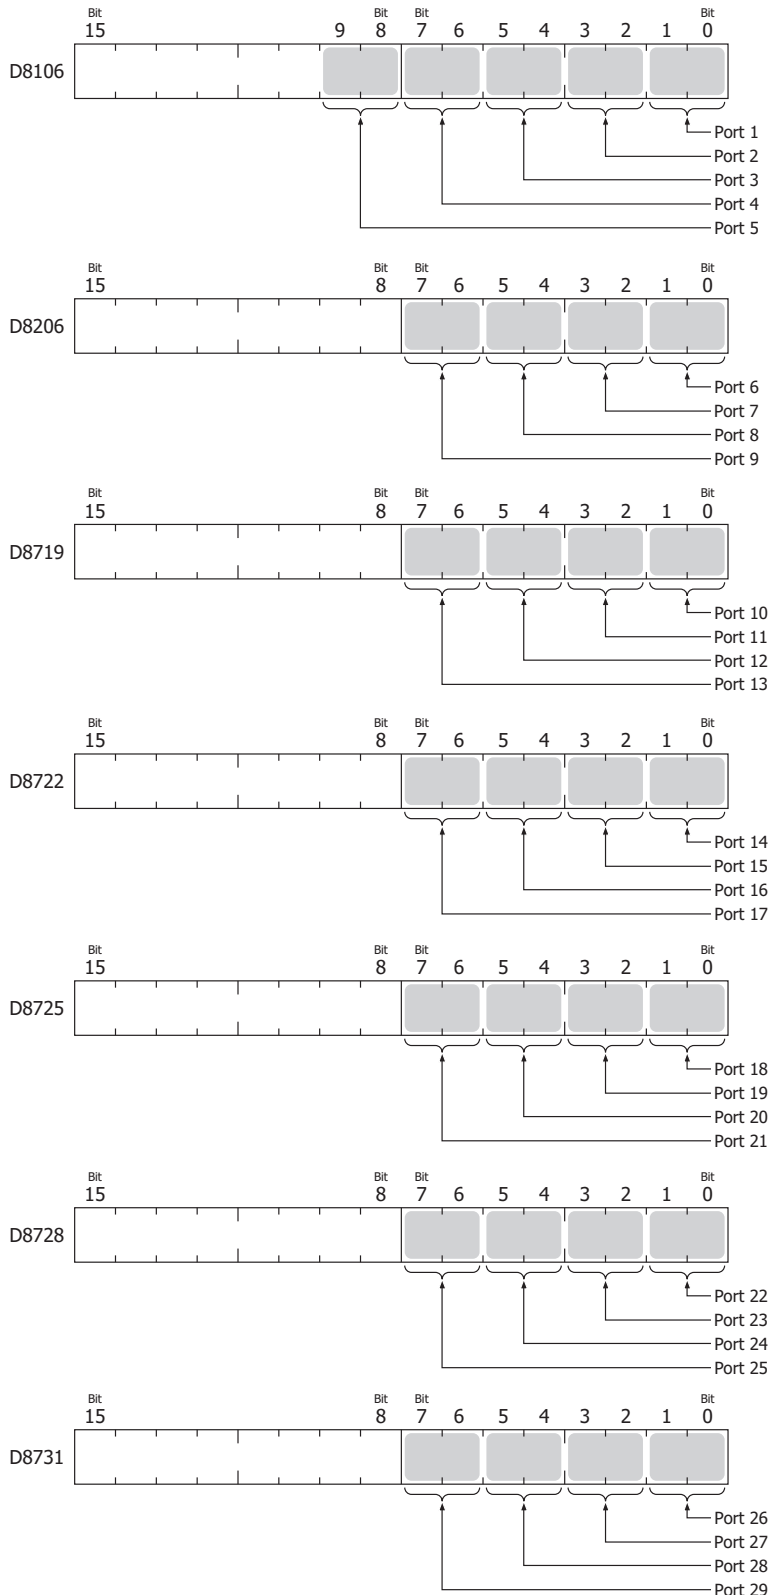

5: USER COMMUNICATION INSTRUCTIONS

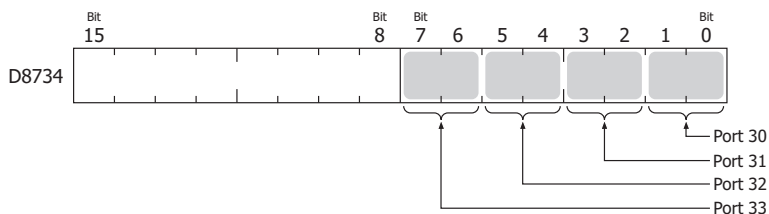

2-bit Binary Value	Description												
00	<p>While the FC6A Series MICROSmart is running, DTR is on whether the FC6A Series MICROSmart is transmitting or receiving data. While the FC6A Series MICROSmart is stopped, DTR remains off. Use this option to indicate the FC6A Series MICROSmart operating status.</p> <table border="1"> <tr> <td>FC6A Series MICROSmart</td> <td>Stopped</td> <td>Running</td> <td>Stopped</td> </tr> <tr> <td>DTR signal</td> <td>ON</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td></td> <td>OFF</td> <td>OFF</td> <td>OFF</td> </tr> </table>	FC6A Series MICROSmart	Stopped	Running	Stopped	DTR signal	ON	ON	OFF		OFF	OFF	OFF
FC6A Series MICROSmart	Stopped	Running	Stopped										
DTR signal	ON	ON	OFF										
	OFF	OFF	OFF										
01	<p>Whether the FC6A Series MICROSmart is running or stopped, DTR remains off.</p> <table border="1"> <tr> <td>FC6A Series MICROSmart</td> <td>Stopped</td> <td>Running</td> <td>Stopped</td> </tr> <tr> <td>DTR signal</td> <td>ON</td> <td>ON</td> <td>ON</td> </tr> <tr> <td></td> <td>OFF</td> <td>OFF</td> <td>OFF</td> </tr> </table>	FC6A Series MICROSmart	Stopped	Running	Stopped	DTR signal	ON	ON	ON		OFF	OFF	OFF
FC6A Series MICROSmart	Stopped	Running	Stopped										
DTR signal	ON	ON	ON										
	OFF	OFF	OFF										
10	<p>While the FC6A Series MICROSmart can receive data, DTR is turned on. While the FC6A Series MICROSmart can not receive data, DTR remains off. Use this option when flow control of receive data is required.</p> <table border="1"> <tr> <td>Receive</td> <td>Impossible</td> <td>Possible</td> <td>Impossible</td> </tr> <tr> <td>DTR signal</td> <td>ON</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td></td> <td>OFF</td> <td>OFF</td> <td>OFF</td> </tr> </table>	Receive	Impossible	Possible	Impossible	DTR signal	ON	ON	OFF		OFF	OFF	OFF
Receive	Impossible	Possible	Impossible										
DTR signal	ON	ON	OFF										
	OFF	OFF	OFF										
11	The operation is the same as the setting "00".												


User Communication via Serial Communication (Bluetooth)

Connect a Bluetooth communication cartridge to the cartridge slot of the All-in-One CPU module/CAN J1939 All-in-One CPU module, the cartridge slot of a cartridge base module connected to the Plus CPU module, or the cartridge slot of the HMI module to use user communication over Bluetooth communication.

With user communication over Bluetooth communication, the FC6A MICROSmart can send and receive data between external devices connected over Bluetooth, such as barcode reader, using the TXD (user communication transmit) and RXD (user communication receive) instructions.

Example of Receiving Data Read with a Barcode Reader

Connect the Bluetooth communication cartridge to cartridge slot 1 of the FC6A Series MICROSmart and communicate with the barcode reader.

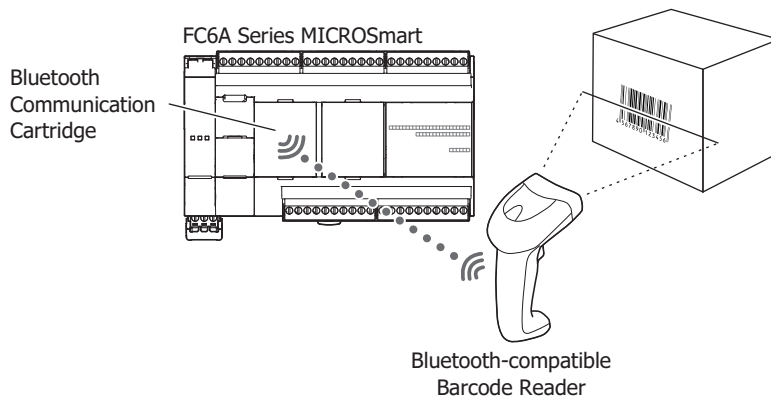

For details on communication specifications and WindLDR settings, see "Bluetooth Communication" on page 9-1.

User Communication via Ethernet Communication

This section describes the Ethernet user communication. Ethernet user communication works on TCP/UDP protocol. The FC6A Series MICROSmart can be used as a user communication client/server. With Ethernet user communication instructions (ETXD and ERXD instructions), the FC6A Series MICROSmart can exchange the data with devices on the network.

Except for the port number and the allocation of the user communication receive instruction cancel flags, Ethernet user communication instructions (ETXD and ERXD instructions) are identical to TXD and RXD instructions. For details about TXD and RXD instructions, see "TXD (Transmit)" on page 5-2 and "RXD (Receive)" on page 5-10.

Ethernet User Communication Overview

The FC6A Series MICROSmart can be used as an Ethernet user communication (TCP) client/server. The Plus CPU module can also be used for user communication (UDP). It can be used simultaneously with the maintenance communication server, Modbus TCP server, and Modbus TCP client.

When using the FC6A Series MICROSmart user communication client, the FC6A Series MICROSmart can access and communicate with the server devices using the protocol of the server device. A maximum of eight connections for the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections for the Plus CPU module can be allocated to each type of communication. User communication client functions and configuration are described in "To use the FC6A Series MICROSmart as a user communication client" on page 5-41. User communication server functions and configuration are described in "User Communication Server" on page 5-47.


The FC6A Series MICROSmart supports the TCP/UDP protocol.

The FC6A Series MICROSmart can send data to and receive data from devices on a network by using the ETXD (User Communication Transmit over Ethernet) instruction and the ERXD (User Communication Receive over Ethernet) instruction.

The FC6A Series MICROSmart can be used as both an Ethernet user communication client and server.

Each of the eight connections possessed by the FC6A Series MICROSmart can be allocated to different types of communication. Ethernet user communication can simultaneously use the maintenance communication server, Modbus TCP server, and Modbus TCP client.

Ethernet communication example using three connections

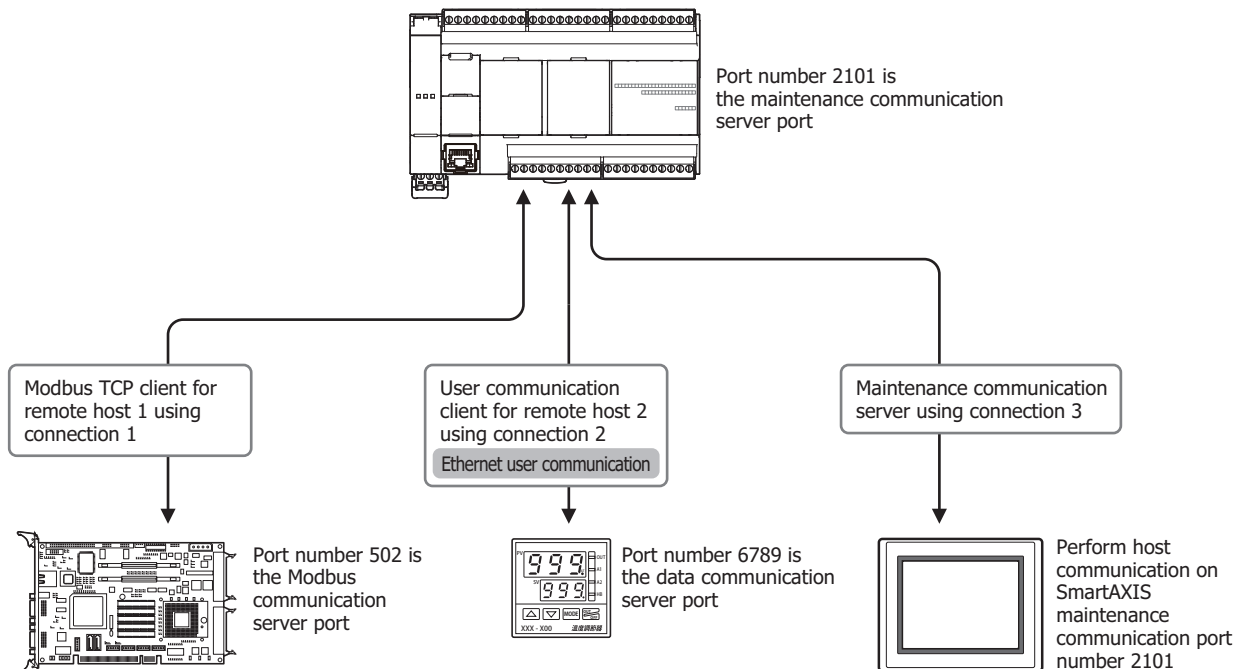

FC6A Series MICROSmart function area settings connection settings

Connection	Communication Protocol	Other Settings
1	Modbus TCP client	Destination: Remote host 1
2	User communication client	Destination: Remote host 2
3	Maintenance communication server	Port number: 2101

Remote host table


Remote Host Number	IP Address	Port Number
1	192.168.0.12	502
2	192.168.0.13	6789

To use the FC6A Series MICROSmart as a user communication client

Connect the FC6A Series MICROSmart to the server device via the network and communicate with the server device using the Ethernet user communication instructions.

A maximum of eight connections for the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections for the Plus CPU module can be allocated to user communication clients, which allows the FC6A Series MICROSmart to simultaneously connect to and communicate with different server devices.

When three connections are allocated to user communication client

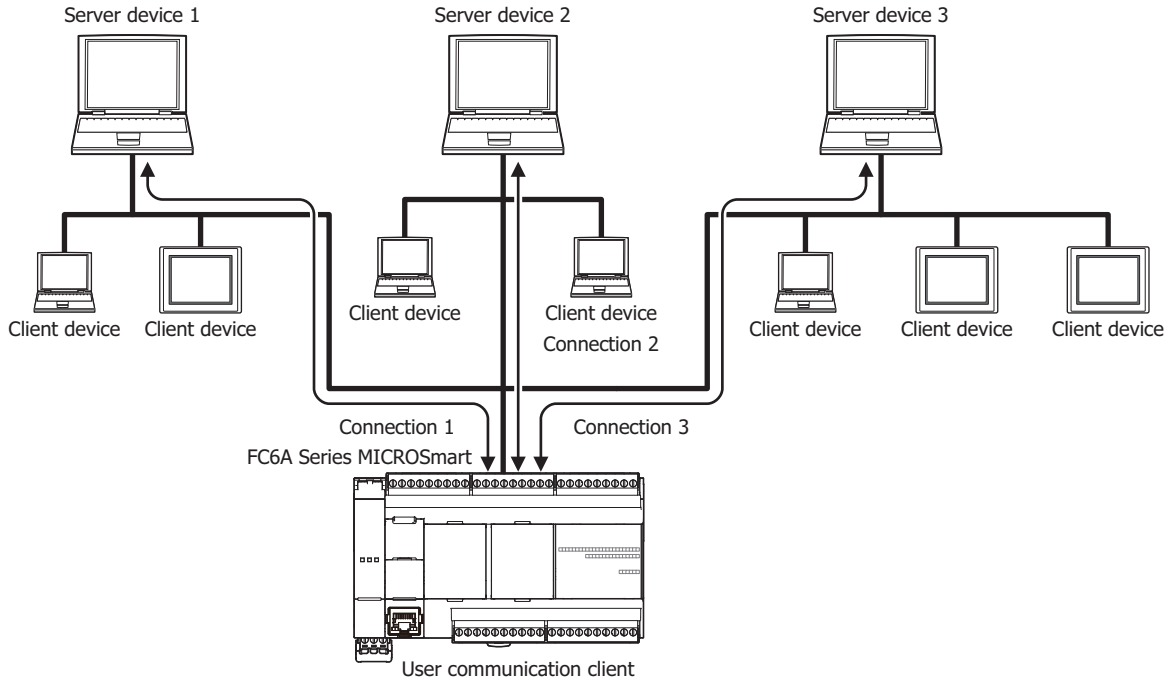


To use the FC6A Series MICROSmart as a user communication server

The client devices connect to the FC6A Series MICROSmart and the FC6A Series MICROSmart communicates with the client devices using Ethernet user communication instructions.

A maximum of eight connections for the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections for the Plus CPU module can be allocated to user communication servers, which enables FC6A Series MICROSmart to simultaneously connect to and communicate with a maximum of eight different client devices or a maximum of 16 different client devices, respectively.

When three connections are allocated to user communication server

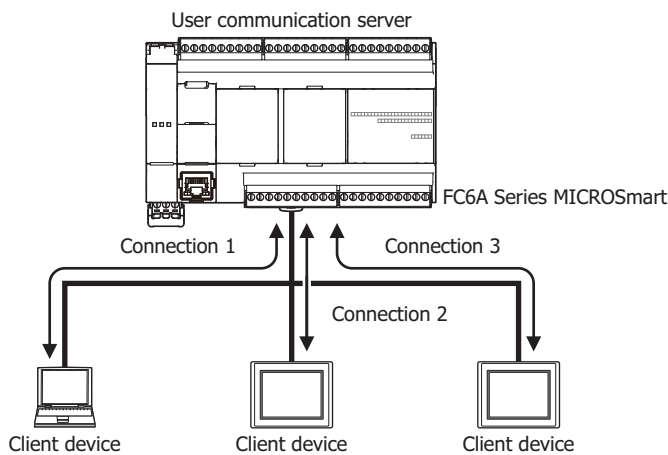


To use the FC6A Series MICROSmart for user communication (UDP)

The Plus CPU module can be connected to a UDP communication device and communicate with that device using the Ethernet user communication instructions.

The Plus CPU module can simultaneously connect to and communicate with a maximum of 16 UDP communication devices by allocating a maximum of 16 connections to user communication (UDP).

When three connections are allocated to user communication (UDP)

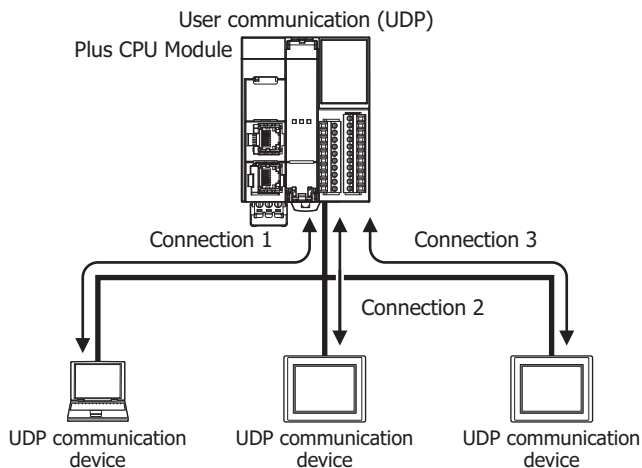

User Communication Client

When a client connection is configured as the user communication client, the FC6A Series MICROSmart communicates with the specified server device according to the settings configured in the ETXD and ERXD instructions that are programmed for the client connection. The remote host number and other communication settings can be configured in the Connection Settings tab in the Function Area Settings dialog box.

Specifications (User Communication Client)

Item	User Communication Client
Remote Host Number	1 to 255 Switch the remote host number with the special data registers (D8268 to D8275 and D8774 to D8781).
Establish Connection	<ul style="list-style-type: none"> When ETXD/ERXD Instructions are executed When the FC6A Series MICROSmart starts to run*¹
Disconnect Connection	<ul style="list-style-type: none"> When the FC6A Series MICROSmart is stopped When special internal relays (M8222 to M8231 and M8355 to M8364) are turned on
Number of Remote Hosts that the FC6A Series MICROSmart Can Communicate Simultaneously	One remote host per a user communication client* ²
Receive Timeout Time	100 to 25,500 ms (100 ms increments)* ³

*1 Can be enabled or disabled in **Function Area Settings, Connection Settings**.

*2 A maximum of eight connections for the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections for the Plus CPU module can be allocated to user communication clients, which enables FC6A Series MICROSmart to simultaneously communicate with a maximum of eight server devices or a maximum of 16 server devices, respectively.

*3 Numeric values not in parentheses are the default settings.

Switching Remote Host Numbers

When user communication clients have been configured, the communication devices can be changed by using the special data registers (D8268 to D8275 and D8774 to D8781). Specify the remote host number of the communication devices to change to with the special data registers. If a value other than 1 to 255 is specified, the remote host number set in the Function Area Settings will be used.

Special Data Register	Description
D8268	Remote Host Number of Connection 1 (1 to 255)
D8269	Remote Host Number of Connection 2 (1 to 255)
D8270	Remote Host Number of Connection 3 (1 to 255)
D8271	Remote Host Number of Connection 4 (1 to 255)
D8272	Remote Host Number of Connection 5 (1 to 255)
D8273	Remote Host Number of Connection 6 (1 to 255)
D8274	Remote Host Number of Connection 7 (1 to 255)
D8275	Remote Host Number of Connection 8 (1 to 255)
D8774*¹	Remote Host Number of Connection 9 (1 to 255)
D8775*¹	Remote Host Number of Connection 10 (1 to 255)
D8776*¹	Remote Host Number of Connection 11 (1 to 255)
D8777*¹	Remote Host Number of Connection 12 (1 to 255)
D8778*¹	Remote Host Number of Connection 13 (1 to 255)
D8779*¹	Remote Host Number of Connection 14 (1 to 255)
D8780*¹	Remote Host Number of Connection 15 (1 to 255)
D8781*¹	Remote Host Number of Connection 16 (1 to 255)

*1 Plus CPU module only.

5: USER COMMUNICATION INSTRUCTIONS

Establishing/Disconnecting User Communication Client Connections

When user communication clients are configured, connections are established on TCP protocol. The connections are established when ETXD/ERXD instructions are executed or when the FC6A Series MICROSmart starts running (See above)*1. Once a connection is established, the connection will be kept open until either the FC6A Series MICROSmart is stopped or a special internal relay (M8222 to M8231 and M8355 to M8364) allocated to the connection is turned on.

Special Internal Relay	Description	Operation
M8222	Connection 1 Disconnect	When the relay is turned on, the corresponding connection is disconnected. When the relay is on, the connection cannot be established.
M8223	Connection 2 Disconnect	
M8224	Connection 3 Disconnect	
M8225	Connection 4 Disconnect	
M8226	Connection 5 Disconnect	
M8227	Connection 6 Disconnect	
M8230	Connection 7 Disconnect	
M8231	Connection 8 Disconnect	
M8355 ^{*2}	Connection 9 Disconnect	
M8356 ^{*2}	Connection 10 Disconnect	
M8357 ^{*2}	Connection 11 Disconnect	
M8360 ^{*2}	Connection 12 Disconnect	
M8361 ^{*2}	Connection 13 Disconnect	
M8362 ^{*2}	Connection 14 Disconnect	
M8363 ^{*2}	Connection 15 Disconnect	
M8364 ^{*2}	Connection 16 Disconnect	

*1 Can be enabled or disabled in **Function Area Settings, Connection Settings**.

*2 Plus CPU module only.

User Communication Receive over Ethernet Instruction (ERXD) Cancel Flag

The allocation of the user communication receive instruction cancel flags for each client connection is shown in the table below. For details about the user communication receive instruction cancel flag, see "User Communication Receive Instruction Cancel Flag" on page 5-22.


Special Internal Relay	Description
M8200	User Communication Receive Instruction Cancel Flag (Connection 1)
M8201	User Communication Receive Instruction Cancel Flag (Connection 2)
M8202	User Communication Receive Instruction Cancel Flag (Connection 3)
M8203	User Communication Receive Instruction Cancel Flag (Connection 4)
M8204	User Communication Receive Instruction Cancel Flag (Connection 5)
M8205	User Communication Receive Instruction Cancel Flag (Connection 6)
M8206	User Communication Receive Instruction Cancel Flag (Connection 7)
M8207	User Communication Receive Instruction Cancel Flag (Connection 8)
M8334 ^{*1}	User Communication Receive Instruction Cancel Flag (Connection 9)
M8335 ^{*1}	User Communication Receive Instruction Cancel Flag (Connection 10)
M8336 ^{*1}	User Communication Receive Instruction Cancel Flag (Connection 11)
M8337 ^{*1}	User Communication Receive Instruction Cancel Flag (Connection 12)
M8340 ^{*1}	User Communication Receive Instruction Cancel Flag (Connection 13)
M8341 ^{*1}	User Communication Receive Instruction Cancel Flag (Connection 14)
M8342 ^{*1}	User Communication Receive Instruction Cancel Flag (Connection 15)
M8343 ^{*1}	User Communication Receive Instruction Cancel Flag (Connection 16)

*1 Plus CPU module only.


Programming WindLDR (User Communication Client)

To use the user communication client, configure the user client communication settings in the **Function Area Settings** dialog box and then download the user program to the FC6A Series MICROSmart.

1. Select **Configuration** from the WindLDR menu bar, and then click **Connection Settings**.
The **Function Area settings** dialog box appears.
2. Select the **User Communication Client** as the communication mode for the client connection 1.

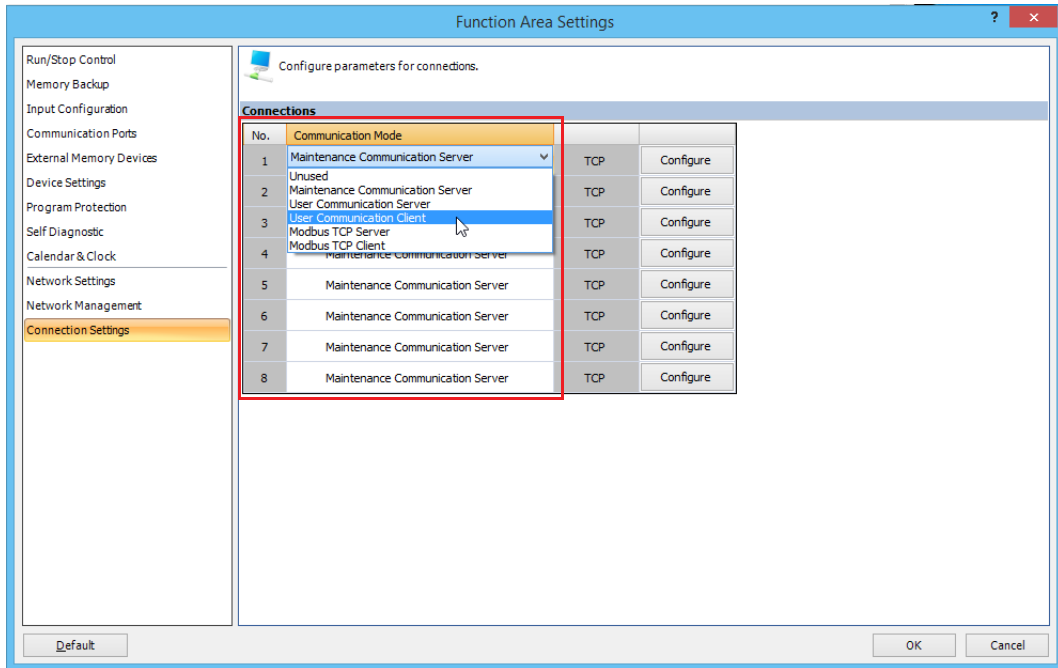

The **User Communication Client** dialog box appears.

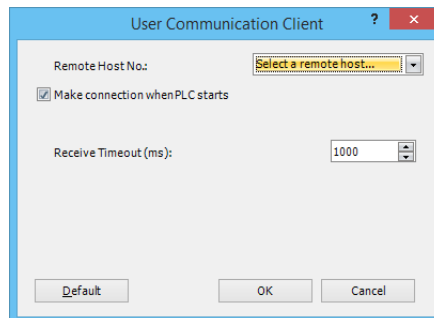


Configure the remote host number and receive timeout. If you want the FC6A Series MICROSmart to establish the connection when it starts to run, select "Make Connection when PLC starts." Click **OK** button to close the dialog box.


5: USER COMMUNICATION INSTRUCTIONS

3. Edit the user program.


To insert Ethernet user communication instructions to the ladder editor, select the Ethernet user communication instructions (ETXD or ERXD instructions) in the **Coil Selection** dialog box.

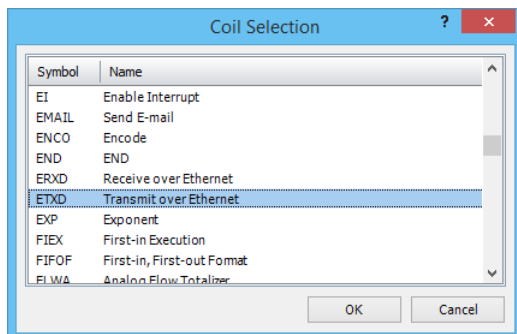

The **ETXD (Transmit over Ethernet)** dialog box appears.

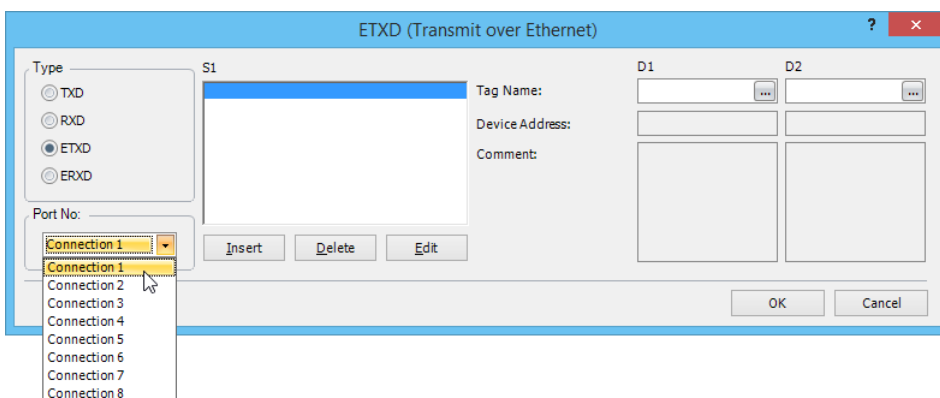

 Select **ETXD** (Transmit over Ethernet) to transmit data or **ERXD** (Receive over Ethernet) to receive data as the instruction type. Select the client connection from 1 through 8 and designate S1, D1, and D2. Click **OK** button to close the dialog box.



4. Download the user program.

The settings for the user communication client have been finished.

The specifications of Ethernet user communication instructions (ETXD and ERXD instructions) are identical to TXD and RXD instructions. For details about TXD and RXD instructions, see "TXD (Transmit)" on page 5-2 and "RXD (Receive)" on page 5-10.

User Communication Server

When a server connection is configured as the user communication server, a client device can access and communicate with the FC6A Series MICROSmart. The FC6A Series MICROSmart communicates with the client device according to the settings configured in the ETXD and ERXD instructions that are programmed for the server connection. The local host number and other communication settings can be configured in the **Connection Settings** tab in the **Function Area Settings** dialog box.

Specifications (User Communication Server)

Item	User Communication Server
Local Host Port Number	2102 to 2117 (Can be changed between 0 and 65535)
Number of Clients That Can Simultaneously Communicate with the FC6A Series MICROSmart	One client per a user communication server*1
Receive Timeout Time	100 to 25,500 ms (100 ms increments)

*1 A maximum of eight connections for the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections for the Plus CPU module can be allocated to user communication servers, which enables a maximum of eight client devices or a maximum of 16 client devices to connect to and communicate with the FC6A Series MICROSmart, respectively.

User Communication Receive over Ethernet Instruction (ERXD) Cancel Flag

The allocation of the user communication receive instruction cancel flags for each server connection is shown in the table below. For details about the user communication receive instruction cancel flag, see "User Communication Receive Instruction Cancel Flag" on page 5-22.

Device Address	Description
M8200	User Communication Receive Instruction Cancel Flag (Connection 1)
M8201	User Communication Receive Instruction Cancel Flag (Connection 2)
M8202	User Communication Receive Instruction Cancel Flag (Connection 3)
M8203	User Communication Receive Instruction Cancel Flag (Connection 4)
M8204	User Communication Receive Instruction Cancel Flag (Connection 5)
M8205	User Communication Receive Instruction Cancel Flag (Connection 6)
M8206	User Communication Receive Instruction Cancel Flag (Connection 7)
M8207	User Communication Receive Instruction Cancel Flag (Connection 8)
M8334*1	User Communication Receive Instruction Cancel Flag (Connection 9)
M8335*1	User Communication Receive Instruction Cancel Flag (Connection 10)
M8336*1	User Communication Receive Instruction Cancel Flag (Connection 11)
M8337*1	User Communication Receive Instruction Cancel Flag (Connection 12)
M8340*1	User Communication Receive Instruction Cancel Flag (Connection 13)
M8341*1	User Communication Receive Instruction Cancel Flag (Connection 14)
M8342*1	User Communication Receive Instruction Cancel Flag (Connection 15)
M8343*1	User Communication Receive Instruction Cancel Flag (Connection 16)


*1 Plus CPU module only.

5: USER COMMUNICATION INSTRUCTIONS


Programming WindLDR (User Communication Server)

To use the user communication server, configure the user communication server settings in the Function Area Settings dialog box and then download the user program to the FC6A Series MICROSmart.

1. Select **Configuration** from the WindLDR menu bar, and then click **Connection Settings**.
The **Function Area Settings** dialog box appears.
2. Select the **User Communication Server** as the communication mode for the server connection 1.

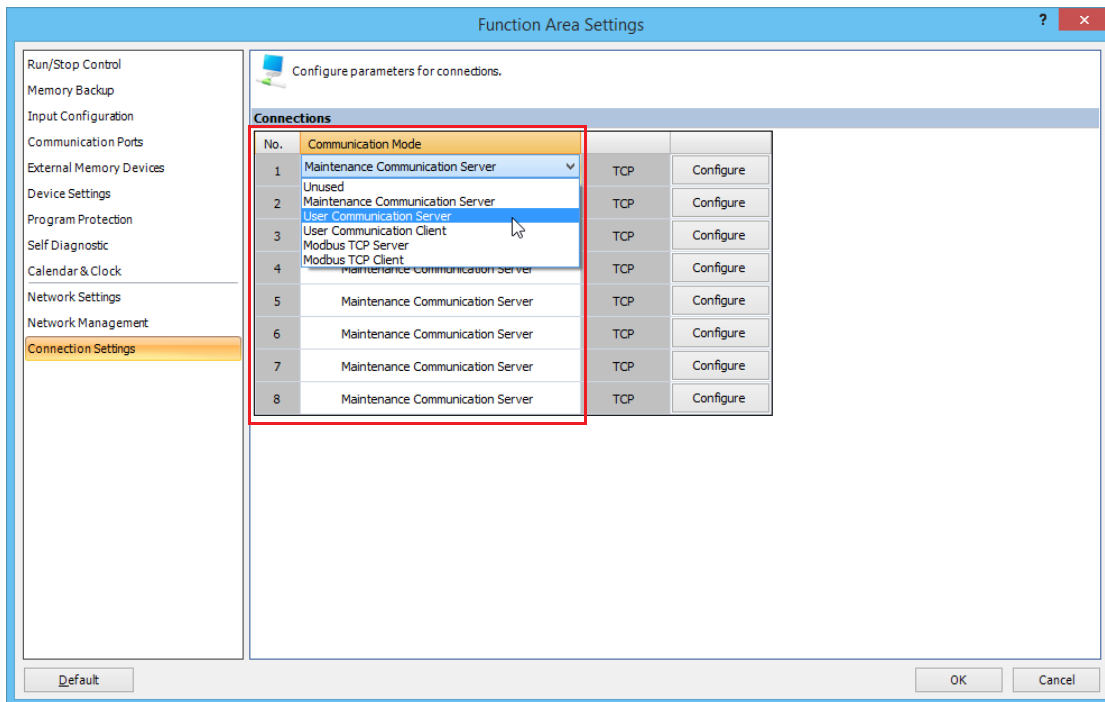


The **User Communication Server** dialog box appears.

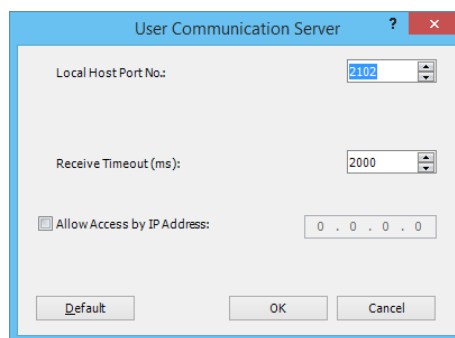


Configure the local host port number and receive timeout. If you want to restrict the access using IP address, configure the allowed IP address.

3. Edit the user program.


To insert Ethernet user communication instructions to the ladder editor, select the Ethernet user communication instructions (ETXD or ERXD instructions) in the **Coil Selection** dialog box.

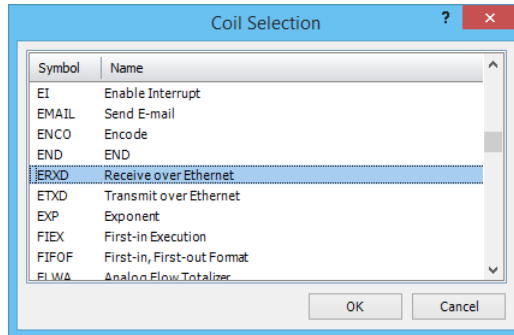

The **ERXD (Receive over Ethernet)** dialog box appears.

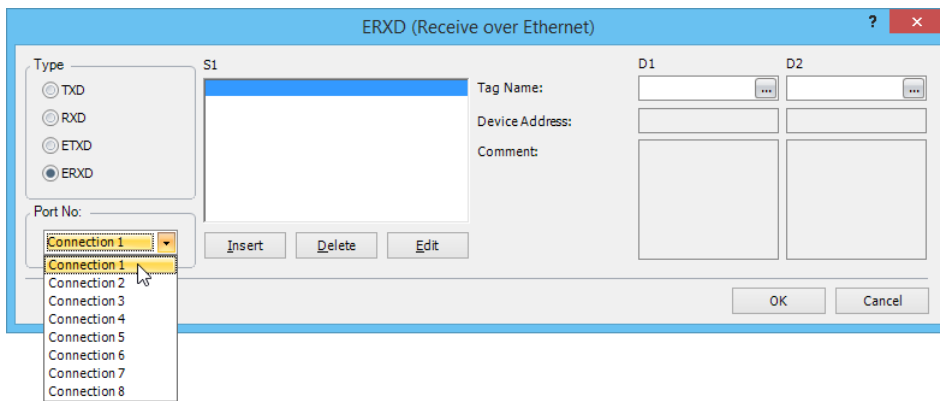

 Select **ETXD** (Transmit over Ethernet) to transmit data and **ERXD** (Receive over Ethernet) to receive data as the instruction type. Select the server connection from 1 through 16 and designate S1, D1, and D2. Click **OK** button to close the dialog box.



4. Download the user program.

The settings for the user communication server have been finished.

The specifications of Ethernet user communication instructions (ETXD and ERXD instructions) are identical to TXD and RXD instructions. For details about TXD and RXD instructions, see "TXD (Transmit)" on page 5-2 and "RXD (Receive)" on page 5-10.

5: USER COMMUNICATION INSTRUCTIONS

User Communication (UDP)

The Plus CPU module can communicate with UDP communication devices through a user communication server according to the ETXD (User Communication Transmit over Ethernet) and ERXD (User Communication Receive over Ethernet) instructions set to the corresponding connection number.

The port number settings and the communication settings of the user communication server are configured on the **Configuration** tab, in the **Function Area Settings** group, under **Connection Settings**.

Specifications

Item	User Communication Server
Remote host number	1 to 255
Local host port number	0 to 65535
Allow access by IP address	0.0.0.0 to 255.255.255.255

Allocation of Receive Cancel Flags for ERXD (User Communication Receive over Ethernet) Instructions

The following table shows the allocation of receive cancel flags for each connection.

When preparations for receiving data is finished and the instruction is in Receiving Data state (status code 32), and the corresponding user communication receive instruction cancel flag is turned on, execution of all receive instructions for the corresponding connection will be canceled. This is effective when receiving data is taking too long time and you want to cancel the execution of the receive instruction.

To activate a receive instruction that is canceled, turn off the user communication receive cancel flag, and then turn on the input to the receive instruction again.

User communication receive instruction cancel flags are allocated in special internal relays for each connection as follows.


Special Internal Relay	Description
M8200	User Communication Receive Instruction Cancel Flag (Connection 1)
M8201	User Communication Receive Instruction Cancel Flag (Connection 2)
M8202	User Communication Receive Instruction Cancel Flag (Connection 3)
M8203	User Communication Receive Instruction Cancel Flag (Connection 4)
M8204	User Communication Receive Instruction Cancel Flag (Connection 5)
M8205	User Communication Receive Instruction Cancel Flag (Connection 6)
M8206	User Communication Receive Instruction Cancel Flag (Connection 7)
M8207	User Communication Receive Instruction Cancel Flag (Connection 8)
M8334	User Communication Receive Instruction Cancel Flag (Connection 9)
M8335	User Communication Receive Instruction Cancel Flag (Connection 10)
M8336	User Communication Receive Instruction Cancel Flag (Connection 11)
M8337	User Communication Receive Instruction Cancel Flag (Connection 12)
M8340	User Communication Receive Instruction Cancel Flag (Connection 13)
M8341	User Communication Receive Instruction Cancel Flag (Connection 14)
M8342	User Communication Receive Instruction Cancel Flag (Connection 15)
M8343	User Communication Receive Instruction Cancel Flag (Connection 16)

Programming WindLDR


Configure the Plus CPU module for user communication (UDP).

The following example provides a explanation of the procedure to configure user communication (UDP) for connection 1 using WindLDR.

1. On the WindLDR **Configuration** tab, in the **Function Area Settings** group, click **Connection Settings**. The **Function Area Settings** dialog box is displayed.
2. Click **Communication Mode** for connection number 1 and select **User Communication (UDP)**. The **User Communication (UDP)** dialog box is displayed.

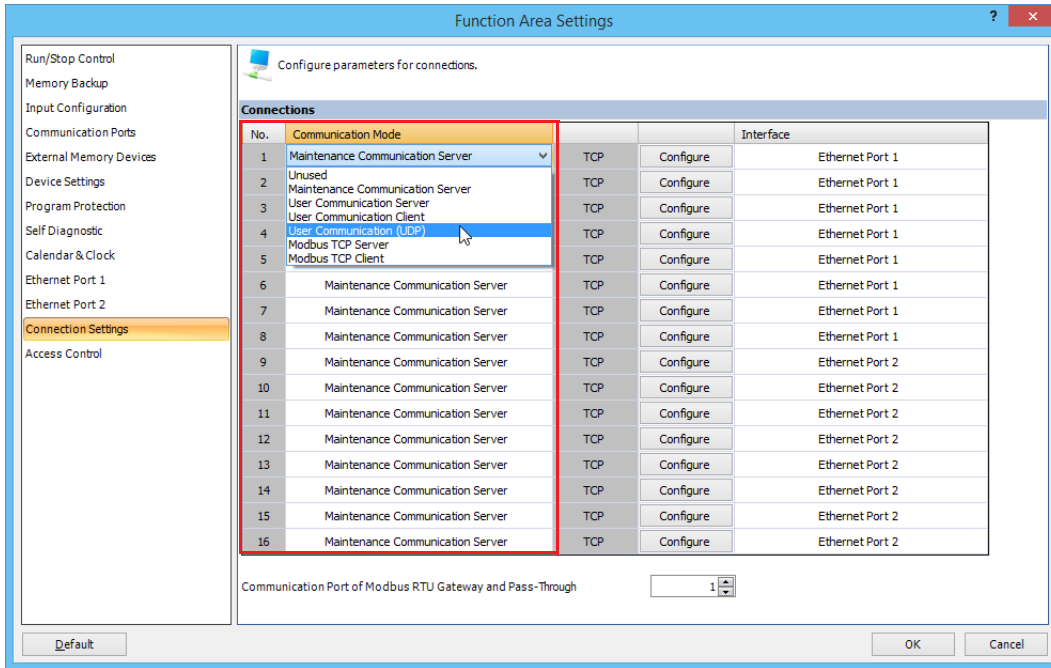

3. Configure **Remote Host No.** and **Local Host Port No.**. To enable access restrictions by IP address, select the **Allow Access by IP Address** check box and configure the IP address to allow. For details on the remote host number, see "Remote Host List" on page 3-21.

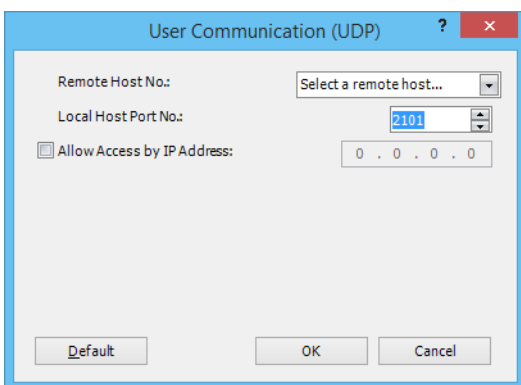

4. Click **OK**.

This concludes configuring the settings for user communication (UDP).

Next, create a user program that uses the user communication instructions that correspond to the configured connection, and then download the user program to the Plus CPU module.

User Communication Error

When a user communication error occurs, an error code is stored in the data register designated as a transmit status in the TXD instruction or as a receive status in the RXD instruction. When multiple errors occur, the final error code overwrites all preceding errors and is stored in the status data register.

The status data register also contains transmit/receive status code. To extract a user communication error code from the status data register, divide the value by 16. The remainder is the user communication error code. See "D2 (Destination 2)" on page 5-8 for the Transmit Status and "D2 (Destination 2)" on page 5-21 for the Receive Status.

To correct the error, correct the user program by referring to the error causes described below:

User Communication Error Code

User Communication Error Code	Error Cause	Transmit/Receive Completion Output
1	Start inputs to more than 5 TXD instructions are on simultaneously.	Transmit completion outputs of the first 5 TXD instructions from the top of the ladder diagram are turned on.
2	Transmission destination busy timeout	The transmit completion output goes on.
3	Start inputs to more than 5 RXD instructions with a start delimiter are on simultaneously.	Among the first 5 RXD instructions from the top of the ladder diagram, receive completion outputs of RXD instructions go on if the start delimiter matches the first byte of the received data.
4	While a RXD instruction without a start delimiter is executed, another RXD instruction with or without a start delimiter is executed.	The receive completion output of the RXD instruction at a smaller address goes on.
5	While a RXD instruction with a start delimiter is executed, another RXD instruction with the same start delimiter is executed.	No effect on the receive completion output.
7	The first bytes of received data do not match the specified start delimiter.	No effect on the receive completion output. If incoming data with a matching start delimiter is received subsequently, the receive completion output goes on.
8	When ASCII to binary or ASCII to BCD conversion is specified in the receive format, any code other than 0 to 9 and A to F is received. (These codes are regarded as 0 during conversion.)	The receive completion output goes on.
9	BCC calculated from the RXD instruction does not match the BCC appended to the received data.	The receive completion output goes on.
10	Constants including the end delimiter code specified in the RXD instruction do not match the received constants.	The receive completion output goes on.
11	Receive timeout between characters (After receiving one byte of data, the next byte is not received in the period specified for the receive timeout value.)	The receive completion output goes on.
12	Overrun error (Before the receive processing is completed, the next data is received.)	The receive completion output goes off.
13	Framing error (Detection error of start bit or stop bit)	No effect on the completion output.
14	Parity check error (Error is found in the parity check.)	No effect on the completion output.
15	A user communication instruction was used even though the port settings or the connection settings were not set to user communication mode.	No effect on the completion output.


ASCII Character Code Table

Upper Bit Lower Bit	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	N _{UL}	D _{LE}	SP	0	@	P	`	p								
Decimal	0	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
1	S _{OH}	D _{C1}	!	1	A	Q	a	q								
Decimal	1	17	33	49	65	81	97	113	129	145	161	177	193	209	225	241
2	S _{TX}	D _{C2}	"	2	B	R	b	r								
Decimal	2	18	34	50	66	82	98	114	130	146	162	178	194	210	226	242
3	E _{TX}	D _{C3}	#	3	C	S	c	s								
Decimal	3	19	35	51	67	83	99	115	131	147	163	179	195	211	227	243
4	E _{OT}	D _{C4}	\$	4	D	T	d	t								
Decimal	4	20	36	52	68	84	100	116	132	148	164	180	196	212	228	244
5	E _{NQ}	N _{AK}	%	5	E	U	e	u								
Decimal	5	21	37	53	69	85	101	117	133	149	165	181	197	213	229	245
6	A _{CK}	S _{YN}	&	6	F	V	f	v								
Decimal	6	22	38	54	70	86	102	118	134	150	166	182	198	214	230	246
7	B _{EL}	E _{TB}	'	7	G	W	g	w								
Decimal	7	23	39	55	71	87	103	119	135	151	167	183	199	215	231	247
8	BS	C _{AN}	(8	H	X	h	x								
Decimal	8	24	40	56	72	88	104	120	136	152	168	184	200	216	232	248
9	HT	EM)	9	I	Y	i	y								
Decimal	9	25	41	57	73	89	105	121	137	153	169	185	201	217	233	249
A	LF	S _{UB}	*	:	J	Z	j	z								
Decimal	10	26	42	58	74	90	106	122	138	154	170	186	202	218	234	250
B	VT	E _{SC}	+	;	K	[k	{								
Decimal	11	27	43	59	75	91	107	123	139	155	171	187	203	219	235	251
C	FF	FS	,	<	L	\	l									
Decimal	12	28	44	60	76	92	108	124	140	156	172	188	204	220	236	252
D	CR	GS	-	=	M]	m	}								
Decimal	13	29	45	61	77	93	109	125	141	157	173	189	205	221	237	253
E	SO	RS	.	>	N	^	n	~								
Decimal	14	30	46	62	78	94	110	126	142	158	174	190	206	222	238	254
F	SI	US	/	?	O	_	o									
Decimal	15	31	47	63	79	95	111	127	143	159	175	191	207	223	239	255

Sample Program – User Communication TXD

This example demonstrates a program to send data to a printer using the user communication TXD1 (transmit) instruction.

System Setup

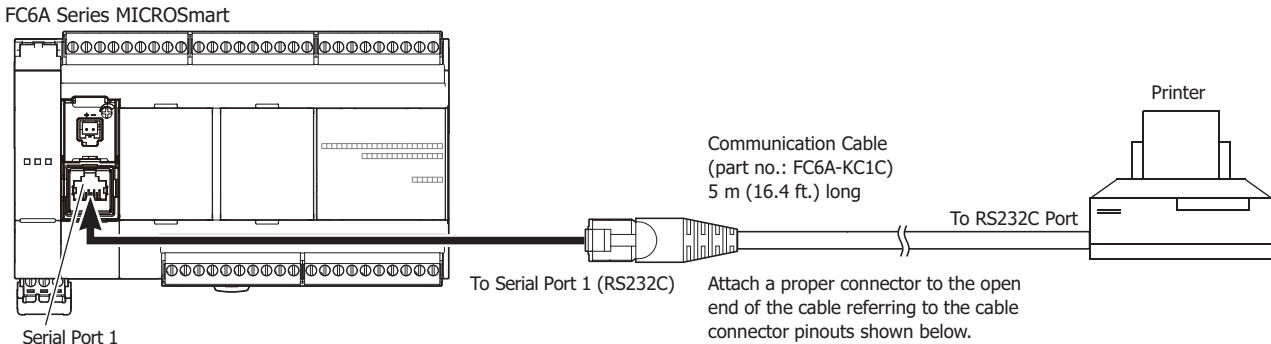

Cable Connection and Pinouts

Description	Color	Pin		Pin	Description	
Shield	—	Cover			Shield	
RXD Receive Data	White/Orange	1		1	NC	No Connection
TXD Transmit Data	Orange	2		2	NC	No Connection
DTR Equipment Ready	White/Green	3		3	DATA	Receive Data
A	Blue	4		4	NC	No Connection
B	White/Blue	5		5	SG	Signal Ground
DSR Data Set Ready	Green	6		6	NC	No Connection
NC No Connection	White/Brown	7		7	NC	No Connection
SG Signal Ground	Brown	8		8	BUSY	Busy Signal
			9	NC	No Connection	

The name of BUSY terminal differs depending on printers, such as DTR. The function of this terminal is to send a signal to remote equipment whether the printer is ready to print data or not. Since the operation of this signal may differ depending on printers, confirm the operation before connecting the cable.

Caution Do not connect any wiring to the NC (no connection) pins; otherwise, the FC6A Series MICROSmart and the printer may not work correctly and may be damaged.

Description of Operation

The data of counter C2 and data register D30 are printed every minute. A printout example is shown on the right.

Programming Special Data Register

Special data register D8105 is used to monitor the BUSY signal and to control the transmission of print data.

Special DR	Value	Description
D8105	3 (011)	While DSR is on (not busy), the FC6A Series MICROSmart sends data. While DSR is off (busy), the FC6A Series MICROSmart stops data transmission. If the off duration exceeds a limit (approx. 5 s), a transmission busy timeout error will occur, and the remaining data is not sent. The transmit status data register stores an error code. See "User Communication Error" on page 5-52.

Printout Example

```

--- PRINT TEST ---

11H 00M

CNT2...0050
D030...3854

--- PRINT TEST ---

11H 01M

CNT2...0110
D030...2124
    
```

The FC6A Series MICROSmart monitors the DSR signal to prevent the receive buffer of the printer from overflowing. For the DSR signal, see "DSR Input Control Signal Option" on page 5-35.

Setting User Communication Mode in WindLDR Function Area Settings

Since this example uses the Serial Port 1 (RS232C), select User Protocol for Port 1 in the **Function Area Settings** using WindLDR. See "Programming WindLDR" on page 5-25.

Setting Communication Parameters

Set the communication parameters to match those of the printer. See "Programming WindLDR" on page 5-25. For details of the communication parameters of the printer, see the user's manual for the printer. An example is shown below:


Communication Parameters:

Baud rate: 9,600 bps
 Data bits: 8
 Parity check: None
 Stop bits: 1

Note: The receive timeout value is used for the RXD instruction in the user communication mode. Since this example uses only the TXD instruction, the receive timeout value has no effect.

Ladder Diagram

The second data stored in special data register D8014 is compared with 0 using the CMP= (compare equal to) instruction. Each time the condition is met, the TXD1 instruction is executed to send the C2 and D30 data to the printer. A counting circuit for counter C2 is omitted from this sample program.

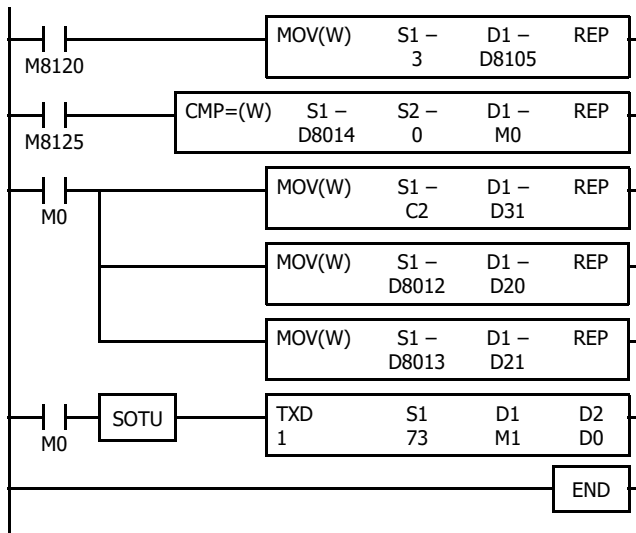

M8120 is the initialize pulse special internal relay.
 3 → D8105 to enable the DSR option for busy control.
 M8125 is the in-operation output special internal relay.
 CMP=(W) compares the D8014 second data with 0.
 When the D8014 data equals 0 second, M0 is turned on.
 Counter C2 current value is moved to D31.
 D8012 hour data is moved to D20.
 D8013 minute data is moved to D21.
 TXD1 is executed to send 73-byte data through the Serial Port 1 (RS232C) to the printer.

Details of S1 Settings in the Transmit Instruction


SP	SP	SP	-	-	-	SP	P	R	I	N	T	SP	T
20h	20h	20h	2Dh	2Dh	2Dh	20h	50h	52h	49h	4Eh	54h	20h	54h
E	S	T	SP	-	-	-	CR	LF	CR	LF	SP	SP	SP
45h	53h	54h	20h	2Dh	2Dh	2Dh	0Dh	0Ah	0Dh	0Ah	20h	20h	20h
D20 Conversion: BCD→ASCII Digits: 2 REP: 01													
H	SP												
48h	20h												
D21 Conversion: BCD→ASCII Digits: 2 REP: 01													
M	CR	LF	CR	LF									
4Dh	0Dh	0Ah	0Dh	0Ah									
SP	SP	SP	C	N	T	2							
20h	20h	20h	43h	4Eh	54h	32h	2Eh	2Eh	2Eh				
D31 Conversion: BCD→ASCII Digits: 4 REP: 01													
CR	LF	SP	SP	SP	D	0	3	0					
0Dh	0Ah	20h	20h	20h	44h	30h	33h	30h	2Eh	2Eh	2Eh		
D30 Conversion: BCD→ASCII Digits: 4 REP: 01													
CR	LF	CR	LF										
0Dh	0Ah	0Dh	0Ah										

D20 hour data is converted from BCD to ASCII, and 2 digits are sent.
 D21 minute data is converted from BCD to ASCII, and 2 digits are sent.
 D31 counter C2 data is converted from BCD to ASCII, and 4 digits are sent.
 D30 data is converted from BCD to ASCII, and 4 digits are sent.

Sample Program – User Communication RXD

This example demonstrates a program to receive data from a barcode reader with an RS232C port using the user communication RXD1 (receive) instruction.

System Setup

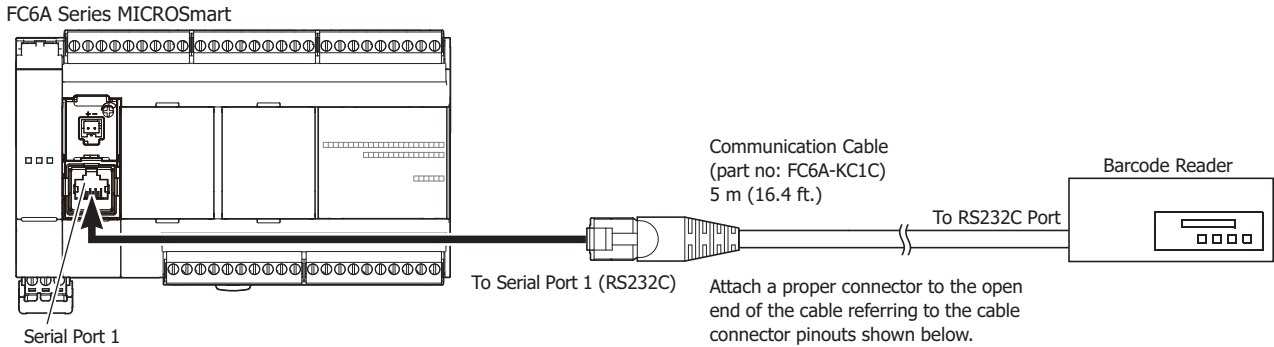


RJ45 Connector

Description	Color	Pin
Shield	—	Cover
RXD Receive Data	White/Orange	1
TXD Transmit Data	Orange	2
DTR Equipment Ready	White/Green	3
A	Blue	4
B	White/Blue	5
DSR Data Set Ready	Green	6
NC No Connection	White/Brown	7
SG Signal Ground	Brown	8

D-sub 25-pin Connector Pinouts

Pin	Description
1	FG Frame Ground
2	TXD1 Transmit Data
3	RXD1 Receive Data
7	GND Ground

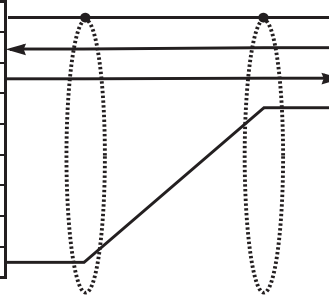

Caution Do not connect any wiring to the NC (no connection) pins; otherwise, the FC6A Series MICROSmart and the barcode reader may not work correctly and may be damaged.

Description of Operation

A barcode reader is used to scan barcodes of 8 numerical digits. The scanned data is sent to the FC6A Series MICROSmart through the Serial Port 1 (RS232C) and stored to data registers. The upper 8 digits of the data are stored to data register D20 and the lower 8 digits are stored to data register D21.

Setting User Communication Mode in WindLDR Function Area Settings

Since this example uses the Serial Port 1 (RS232C), select User Protocol for Port 1 in the Function Area Settings using WindLDR. See "Programming WindLDR" on page 5-25.

Setting Communication Parameters

Set the communication parameters to match those of the barcode reader. See "Programming WindLDR" on page 5-25. For details of the communication parameters of the barcode reader, see the user's manual for the barcode reader. An example is shown below:

Communication Parameters:

- Baud rate: 9,600 bps
- Data bits: 7
- Parity check: Even
- Stop bits: 1

Configuring Barcode Reader

The values shown below are an example of configuring a barcode reader. For actual settings, see the user's manual for the barcode reader.


Synchronization Mode	Auto			
Read Mode	Single read or multiple read			
Communication Parameter	Baud rate:	9,600 bps	Data bits:	7
	Parity check:	Even	Stop bit:	1
Other Communication Settings	Header:	02h	Terminator:	03h
	Data echo back:	No	BCR data output:	Yes
	Output timing:	Output priority 1	Character suppress:	No
	Data output filter:	No	Main serial input:	No
	Sub serial:	No		
Comparison Preset Mode	Not used			

Device Addresses

M100	Input to start receiving barcode data
M101	Receive completion output for barcode data
M8120	Initialize pulse special internal relay
D20	Store barcode data (upper 4 digits)
D21	Store barcode data (lower 4 digits)
D100	Receive status data register for barcode data
D101	Receive data byte count data register

Ladder Diagram

When the FC6A Series MICROSmart starts operation, the RXD1 instruction is executed to wait for incoming data. When data receive is complete, the data is stored to data registers D20 and D21. The receive completion signal is used to execute the RXD1 instruction to wait for another incoming data.

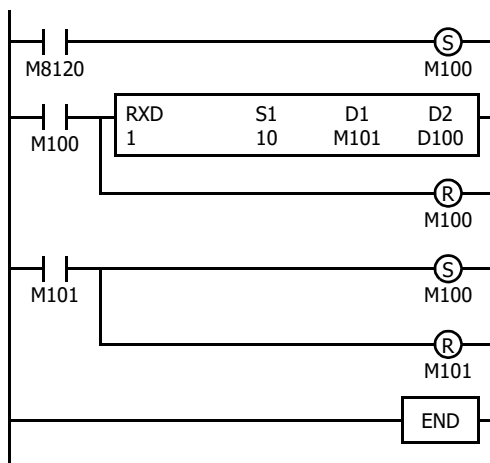


M8120 is the initialize pulse special internal relay used to set M100.

At the rising edge of M100, RXD1 is executed to be ready for receiving data.

Even after M100 is reset, RXD1 still waits for incoming data.

When data receive is complete, M101 is turned on, then M100 is set to execute RXD1 to receive the next incoming data.

RXD1 Data

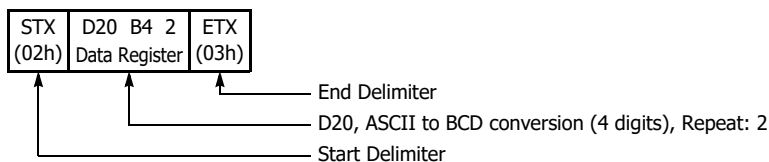

BCC Calculation Examples

The FC6A Series MICROSmart can use three new BCC calculation formulas of ADD-2comp, Modbus ASCII, and Modbus RTU for transmit instructions TXD1, TXD2 and TXD3 and receive instructions RXD1, RXD2 and RXD3. These block check characters are calculated as described below.

ADD-2comp

Add the characters in the range from the BCC calculation start position to the byte immediately before the BCC, then invert the result bit by bit, and add 1.

1. Add the characters in the range from the BCC calculation start position to the byte immediately before the BCC.
2. Invert the result bit by bit, and add 1 (2's complement).
3. Store the result to the BCC position according to the designated conversion type (Binary to ASCII conversion or No conversion) and the designated quantity of BCC digits.

Example: Binary to ASCII conversion, 2 BCC digits

When the result of step 2 is 175h, the BCC will consist of 37h, 35h.

Modbus ASCII — Calculating the LRC (longitudinal redundancy check)

Calculate the BCC using LRC (longitudinal redundancy check) for the range from the BCC calculation start position to the byte immediately before the BCC.

1. Convert the ASCII characters in the range from the BCC calculation start position to the byte immediately before the BCC, in units of two characters, to make 1-byte hexadecimal data. (Example: 37h, 35h → 75h)
2. Add up the results of step 1.
3. Invert the result bit by bit, and add 1 (2's complement).
4. Convert the lowest 1-byte data to ASCII characters. (Example: 75h → 37h, 35h)
5. Store the two digits to the BCC (LRC) position.

If the BCC calculation range consists of an odd number of bytes, the BCC calculation results in an indefinite value. Modbus protocol defines that the BCC calculation range is an even number of bytes.

Modbus RTU — Calculating the CRC-16 (cyclic redundancy checksum)

Calculate the BCC using CRC-16 (cyclic redundancy checksum) for the range from the BCC calculation start position to the byte immediately before the BCC. The generation polynomial is: $X^{16} + X^{15} + X^2 + 1$.

1. Take the exclusive OR (XOR) of FFFFh and the first 1-byte data at the BCC calculation start position.
2. Shift the result by 1 bit to the right. When a carry occurs, take the exclusive OR (XOR) of A001h, then go to step 3. If not, directly go to step 3.
3. Repeat step 2, shifting 8 times.
4. Take the exclusive OR (XOR) of the result and the next 1-byte data.
5. Repeat step 2 through step 4 up to the byte immediately before the BCC.
6. Swap the higher and lower bytes of the result of step 5, and store the resultant CRC-16 to the BCC (CRC) position. (Example: 1234h → 34h, 12h)

6: MODBUS COMMUNICATION

Introduction

This chapter describes the Modbus communication functions for the FC6A Series MICROSmart.

Overview

For Modbus communication, the FC6A Series MICROSmart can be used as a Modbus RTU communication master and slave and Modbus TCP communication client and server to communicate with external devices.

Communication Ports Used in Modbus Communication

Supported models and communication ports are as follows.

Communication Port	All-in-One CPU Module			CAN J1939 All-in-One CPU Module	Plus CPU Module	
	16-I/O Type	24-I/O Type	40-I/O Type		Plus 16-I/O Type	Plus 32-I/O Type
Port 1	Yes	Yes	Yes	—	Yes ^{*2}	Yes ^{*2}
Port 2	Yes ^{*1}	Yes ^{*1}	Yes ^{*1}	Yes ^{*1}	Yes ^{*2}	Yes ^{*2}
Port 3	—	—	Yes ^{*1}	Yes ^{*1}	Yes ^{*3}	Yes ^{*3}
Port 4 to 33	Yes (Port 4 to 9) ^{*4}				Yes (Port 4 to 33) ^{*5}	
Ethernet Port 1	Yes	Yes	Yes	Yes	Yes	Yes
Ethernet Port 2	—	—	—	—	Yes	Yes
HMI-Ethernet Port	—	—	—	—	—	—

*1 When an RS232C communication cartridge or RS485 communication cartridge is connected.

*2 When a cartridge base module and an RS232C communication cartridge or RS485 communication cartridge are connected.

*3 When the HMI module and an RS232C communication cartridge or RS485 communication cartridge are connected.

*4 Up to three communication modules can be connected to the All-in-One CPU module and CAN J1939 All-in-One CPU module, expanding the communication ports 4 to 9.

*5 Up to 15 communication modules can be connected to the Plus CPU module, expanding the communication ports 4 to 33.

Modbus Communication Settings


The Modbus communication settings supported by each communication port are as follows.

- Serial communication with an external device connected to port 1 to port 33 (RS232C/RS485)
"Modbus RTU Communication via RS232C/RS485" on page 6-2
- Ethernet communication with an external device connected by the Ethernet port 1 and 2
"Modbus TCP Communication via Ethernet Communication" on page 6-21

Modbus RTU Communication via RS232C/RS485

The FC6A Series MICROSmart supports the Modbus RTU protocol and can be used as the Modbus RTU master and the Modbus RTU slave. When configured as a Modbus RTU master, the FC6A Series MICROSmart can monitor and change the data of Modbus RTU slave devices. When the FC6A Series MICROSmart is configured as a Modbus RTU slave, the device data of the FC6A Series MICROSmart can be monitored and changed from the Modbus RTU master device.

For the Modbus RTU master function and how to configure it, see "Modbus RTU Master Communication" on page 6-3. For the Modbus RTU slave function and how to configure it, see "Modbus RTU Slave Communication" on page 6-9.

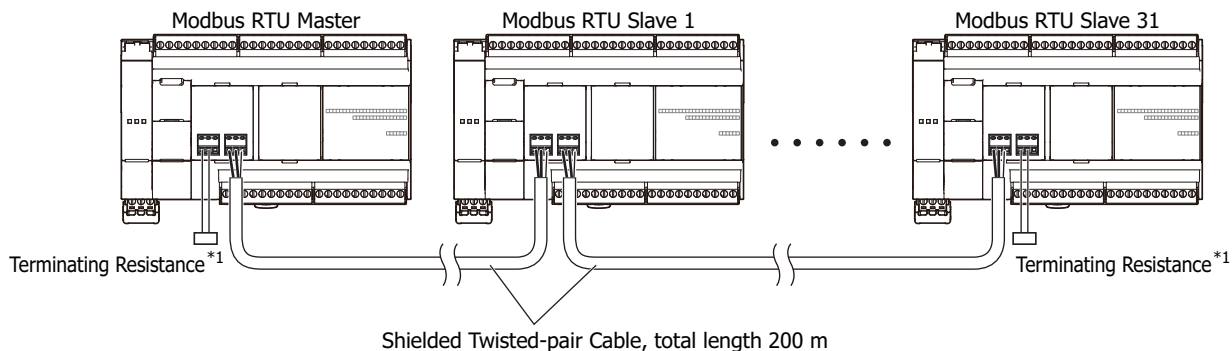

*1 When communication quality is unstable, add terminating resistance matched to the characteristic impedance to both ends. Use resistance with a rating of 1/2 W or higher.

Modbus RTU Master Communication

When configured as a Modbus RTU master, the FC6A Series MICROSmart sends communication requests to Modbus RTU slaves to read/write data. Each communication request is sent to a Modbus RTU slave according to the configured request table.

Modbus RTU master communication settings and request tables for Modbus RTU slave stations can be programmed using the WindLDR **Function Area Settings**. Communication with slave stations are performed asynchronously with user program execution, and the communication data are processed at the END processing in the order of request numbers specified in the request table. When request execution devices are designated, requests are executed only when the corresponding request execution device is turned on. When request execution devices are not designated, all requests are executed continuously.

Modbus RTU Master Communication Specifications

Item	Description
Baud Rate (bps)	9,600, 19,200, 38,400, 57,600, 115,200
Data Bits	8 bits (fixed)
Stop bits	1, 2 bits
Parity	Even, Odd, None
Slave Number	1 to 247 (0: broadcast slave number) *1
Maximum Number of Slaves	RS-232C: 1 RS-485: 31
Maximum Cable Length	Modbus Communication via RS-232C FC6A-PC1: 5 m FC6A-SIF52: 15 m Modbus Communication via RS-485 FC6A-PC3: 200 m FC6A-SIF52: 1,200 m
Receive Timeout *2	10 to 2,550 ms (in increments of 10 ms)
Timeout between Characters	10 ms
Transmission Wait Time	0 to 5,000 ms (in increments of 1 ms)
Retry Cycles	0 to 10

*1 A communication request becomes the broadcast when slave number 0 is specified. The broadcast communication request is received by all Modbus RTU slaves. Modbus RTU slave does not reply to the broadcast communication. Broadcast can be used to write the same data to all Modbus RTU slaves.

*2 Specifies the period of time before receiving a response frame from a slave.

Modbus RTU Master Communication Start and Stop

When request execution devices are designated in the Modbus RTU master request table, internal relays or data register bits as many as the request quantity are allocated to execute Modbus RTU master communication. The internal relays or data register bits are allocated in the order of requests. For example, when internal relay M0 is designated as the request execution device, M0 is allocated to request No. 1, M1 to request No. 2, and so on. To execute a request, turn on the corresponding request execution device.

When communication is completed, the request execution device turns off automatically. When it is required to send requests continuously, keep the corresponding request execution device on using a SET or OUT instruction.

When request execution devices are not designated, all requests programmed in the request table are executed continuously.

Communication Completion and Communication Error

Modbus RTU communication finishes when a read or write process is completed successfully or when a communication error occurs. Communication error occurs when communication failure has repeated more than the designated retry cycles or when the master station does not receive response within the designated receive timeout period. When a communication error occurs, the request is canceled and the next request is processed. When the error status data register is designated, the communication status of each request can be confirmed.

Note: Modbus master processes a maximum of one Modbus request per scan.

6: MODBUS COMMUNICATION

Communication Error Data

When Error Status is configured in the Request Table from the **Function Area Settings**, the error data of each request can be confirmed.

Use a Single DR for All Communication Requests	Error Data of Each Communication Request
Unchecked	Error data, the remote host number (high-order byte) and error code (low-order byte), of each request in the entire request table can be confirmed. Data registers as many as the quantity of requests are reserved for storing error data. When an error occurs for a request, error data is stored to the corresponding data register.
Checked	A single data register is shared by all requests. When an error occurs for a request, error data is stored to the data register and the old error data is overwritten.
Bit Allocation	
Remote Host Number (high-order byte)	1 to 255
Error Code (low-order byte)	00h: Normal completion 01h: Function code error (unsupported function code) 02h: Access destination error (address out of range, address+device quantity out of range) 03h: Device quantity error, 1-bit write data error (specified device quantity of 1-bit write is unsupported) 12h: Frame length error (frame length of transmitted request exceeds range) 13h: BCC error (BCC does not match) 14h: Slave number error (received slave number is invalid) 16h: Timeout error (timeout occurs)

Communication Error Data of Each Request

Error data of each request in the entire request table can be confirmed. To confirm error data of each request, select to use Error Status in the Request Table from the **Function Area Settings** and enter the data register number.

When Use a single DR for all communication requests is not selected, starting with the data register number, data registers as many as the quantity of requests are reserved for storing error data. When an error occurs for a request, an error code is stored to a corresponding data register.

When Use a single DR for all communication requests is selected, the same data register is shared by all requests. When an error occurs for a request, an error code is stored to the data register and the old value is overwritten.

Number of Requests in Modbus RTU Master

The number of requests that can be programmed in a request table is shown in the table below:


Port	Port 1 to Port 33
No. of Requests	255

Note: 8 bytes of the user program area are needed per each request.


Programming Modbus RTU Master Using WindLDR

Modbus master communication is programmed for Modbus RTU mode using WindLDR. Since these settings relate to the user program, the user program must be downloaded to the FC6A Series MICROSmart after changing any of these settings.

1. From the WindLDR menu bar, select **Configuration > Communication Ports**. The **Function Area Settings** dialog box for Communication Ports appears.
2. Click **Communication Mode** for the port to use and select **Modbus RTU Master**.

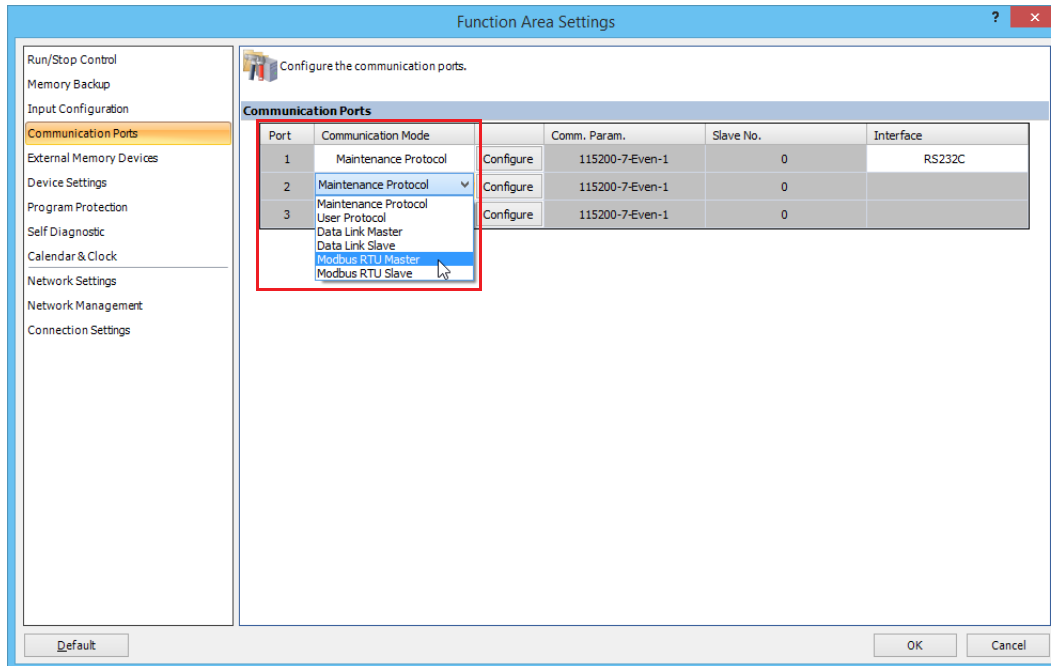


3. Click the **Configure** button for Port 2. The **Modbus RTU Master Request Table** appears.

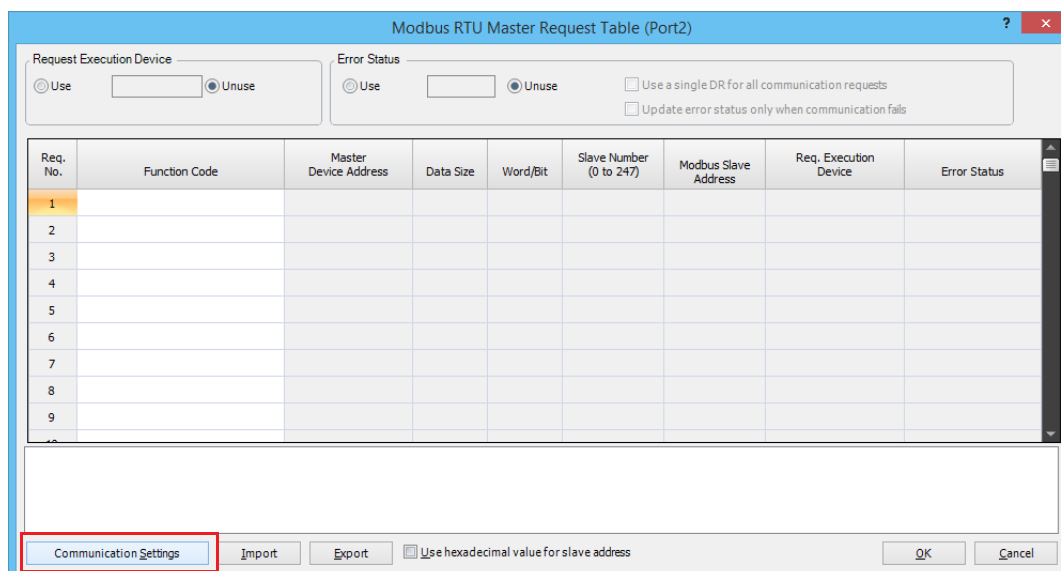

6: MODBUS COMMUNICATION


- Click the **Communication Settings** button. The **Communication Settings** dialog box appears. Change settings, if required.

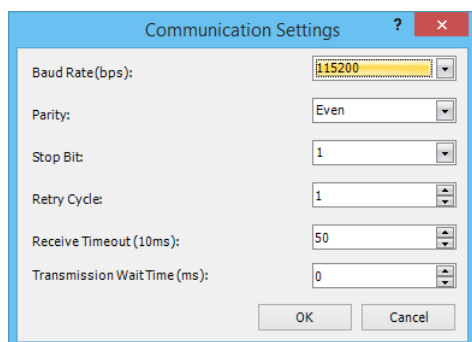

Baud Rate (bps)	9600, 19200, 38400, 57600, 115200
Parity	Even, Odd, None
Stop Bits	1 or 2
Retry Cycle	0 to 10
Receive Timeout	1 to 255 (×10 ms)
Transmission Wait Time	0 to 5000 (ms)

- Click the **OK** button to return to the Modbus RTU Master Request Table. Designate requests under the **Function Code**. A maximum of 255 requests can be entered in one request table.

Choose to use **Req. Execution Device** and **Error Status** data registers if necessary. When using **Req. Execution Device** and **Error Status** data registers, enter the first number of the devices.

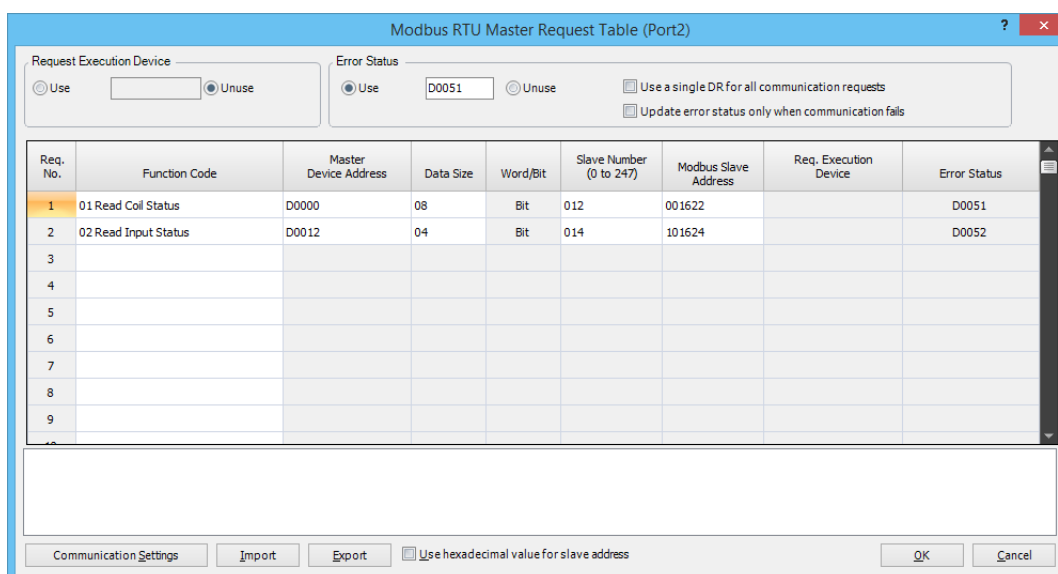

Notes for Editing the Request Table

Request execution devices and error status data registers are allocated in the order of request numbers. When deleting a request or changing the order of requests, the relationship of the request to the request execution devices and error status data register is changed. If the internal relay or data register is used in the user program, the device addresses must be changed accordingly. After completing the changes, download the user program again.

- When editing of the Master Request Table is complete, click the **OK** button to save changes.
- Download the user program to the FC6A Series MICROSmart.
Now, programming for the Modbus master is complete. Details about parameters and valid values are as follows.

Function Code

The Modbus RTU of the FC6A Series MICROSmart supports eight function codes as listed in the table below. Supported function codes and valid slave addresses vary with each Modbus slave device to communicate with. Configure the function codes according to the specifications of the Modbus slave devices.

Function Code	Data Size	Slave Address	FC6A Series MICROSmart as Modbus Slave
01 Read Coil Status	1 to 2,000 bits	000001 - 065535	Reads bit device statuses of Q (output), R (shift register), or M (internal relay).
02 Read Input Status	1 to 2,000 bits	100001 - 165535	Reads bit device statuses of I (input), T (timer contact), or C (counter contact).
03 Read Holding Registers	1 to 125 words	400001 - 465535	Reads word device data of D (data register), T (timer preset value), or C (counter preset value).
04 Read Input Registers	1 to 125 words	300001 - 365535	Reads word device data of T (timer current value) or C (counter current value).
05 Force Single Coil	1 bit	000001 - 065535	Changes a bit device status of Q (output), R (shift register), or M (internal relay).
06 Preset Single Register	1 word	400001 - 465535	Changes word device data of D (data register).
15 Force Multiple Coils	1 to 1,968 bits	000001 - 065535	Changes multiple bit device statuses of Q (output), R (shift register), or M (internal relay).
16 Preset Multiple Registers	1 to 123 words	400001 - 465535	Changes multiple word device data of D (data register).

Master Device Address

When function code 01, 02, 03, or 04 is selected to read data from Modbus slaves, designate the first data register or internal relay number to store the data received from the Modbus slave. When function code 05, 06, 15, or 16 is selected to write data to Modbus slaves, designate the first data register or internal relay number to store the data to write to the Modbus slave. Data registers and internal relays can be designated as the master device address.

Data Size and Word/Bit

Designate the quantity of data to read or write. The valid data size depends on the function code. When function code 01, 02, 05, or 15 is selected, designate the data size in bits. When function code 03, 04, 06, or 16 is selected, designate the data size in words. For valid data sizes, see the table above.

Slave No.

Designate slave numbers 0 through 247. The same slave number can be designated repeatedly for different request numbers which can be 1 through 255. In the Modbus communication, slave number 0 is used for a broadcast slave number. The broadcast can be used to write the same data to all Modbus slaves.

Slave Address

Designate data memory addresses of Modbus slaves. The valid slave address range depends on the function code. For valid slave addresses, see the table above. The allocations of memory addresses vary with each Modbus slave device. Refer to manuals for each Modbus slave device.

Request Execution Device

To use request execution devices, click the radio button for "Use" and designate the first internal relay in the Modbus RTU Master Request Table. Devices used for executing requests are automatically listed in the table. To execute a request, turn on the corresponding request execution device.

Data registers can also be designated as the Request Execution Device. When the first data register is designated as the Request Execution Device, data register bits as many as the number of requests are allocated from the least significant bit of the first data register. Data register bits assigned as the execution relays are automatically listed in the Request Table.

When request execution devices are not designated, all requests programmed in the Request Table are executed continuously.

Error Status Data Register


To use error status data registers, click the radio button for "Use" and designate the first data register in the Modbus RTU Master Request Table. Data registers used for storing error statuses are automatically listed in the table. When Use a single DR for all communication requests is selected, the first data register is shared by all requests.

Processing Requests


The data for Modbus communication are processed between the master and slaves as shown below.

Bit Data at Slaves (Function Codes 01, 02, 05, and 15)

- Master Device Address: Internal Relay

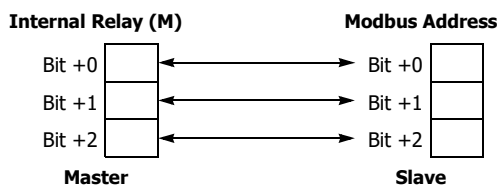


- Master Device Address: Data Register

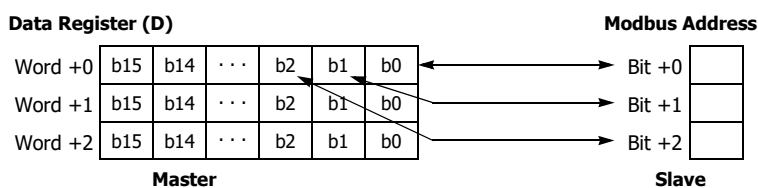


Word Data at Slaves (Function Codes 03, 04, 06, and 16)

- Master Device Address: Internal Relay

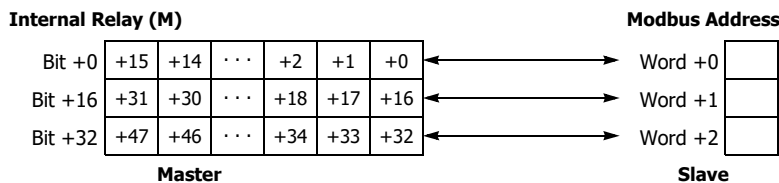

- Master Device Address: Data Register

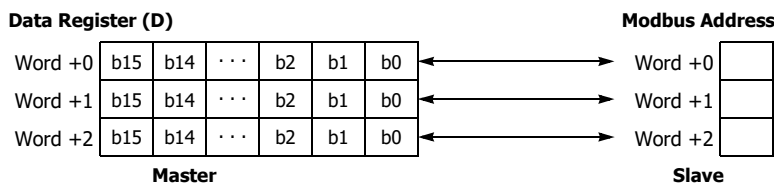

Modbus RTU Slave Communication

Modbus slave communication can be configured by selecting Modbus RTU Slave for Port 1, Port 2 and Port 3 in the WindLDR **Function Area Settings**. When a Modbus RTU slave receives a request from the Modbus RTU master, the Modbus RTU slave reads or writes data according to the request. The request is processed at the END processing of the user program.

Modbus RTU slaves do not reply to the Modbus RTU master for the broadcast requests.

Modbus RTU Slave Communication Specifications

Item	Description	
Baud Rate (bps)	9,600, 19,200, 38,400, 57,600, 115,200	
Data Bits	8 bits (fixed)	
Stop bits	1, 2 bits	
Parity	Odd, even, none	
Slave Number	Constant	1 to 247
	Data register	Set the special data register values between 1 and 247 Port 1: D8100 Port 2: D8102 Port 3: D8103 Port 4 to 9 ^{*2} : D8040 to D8045 Port 10 to 33 ^{*2*3} : D8735 to D8758
Timeout between Characters ^{*1}	1.5 characters minimum ^{*4}	
Timeout between Frames ^{*1}	3.5 characters minimum ^{*5}	

*1 When timeout occurs, the FC6A Series MICROSmart discards the received data and waits for the first frame of the next valid communication.

*2 When using a communication module.

*3 Plus CPU module only.

*4 For communication at 19,200 bps or higher, the timeout between characters needs to be a minimum of 0.75 ms.

*5 For communication at 19,200 bps or higher, the timeout between frames needs to be a minimum of 1.75 ms.

Map of Slave Addresses for Modbus RTU Slaves

Modbus Device Name	Modbus Address Map (Decimal) ^{*1}	Communication Frame Address ^{*2}	FC6A Series MICROSmart Device ^{*3}	Applicable Function Code
Coil (000000 and above)	000001 - 000516	0000 - 0203	Q0 - Q643	1, 5, 15
	000701 - 000956	02BC - 03BB	R000 - R255	
	001001 - 003048	03E8 - 0BE7	M0000 - M2557	
	003049 - 007400	0BE8 - 1CE7	M2560 - M7997	
	009001 - 009256	2328 - 2427	M8000 - M8317	
	009257 - 010600	2428 - 2967	M8320 - M9997	
	011001 - 017000	2AF8 - 4267	M10000 - M17497	
	017001 - 020000	4268 - 4E1F	M17500 - M21247	
	030001 - 030480	7530 - 770F	Q1000 - Q1597	
	030481 - 030960	7710 - 78EF	Q2000 - Q2597	
	030961 - 031440	78F0 - 7ACF	Q3000 - Q3597	
	031441 - 031920	7AD0 - 7CAF	Q4000 - Q4597	
	031921 - 032400	7CB0 - 7E8F	Q5000 - Q5597	
	032401 - 032880	7E90 - 806F	Q6000 - Q6597	
	032881 - 033360	8070 - 824F	Q7000 - Q7597	
	033361 - 033840	8250 - 842F	Q8000 - Q8597	
	033841 - 034320	8430 - 860F	Q9000 - Q9597	
034321 - 034800	8610 - 87EF	Q10000 - Q10597		

6: MODBUS COMMUNICATION

Modbus Device Name	Modbus Address Map (Decimal) ^{*1}	Communication Frame Address ^{*2}	FC6A Series MICROSmart Device ^{*3}	Applicable Function Code
Input Relay (100000 and above)	100001 - 100516	0000 - 0203	I0 - I643	2
	101001 - 101256	03E8 - 04E7	T000 - T255 (timer contact)	
	101501 - 101756	05DC - 06DB	C000 - C255 (counter contact)	
	102001 - 102768	07D0 - 0ACF	T256 - T1023 (timer contact)	
	102769 - 103744	0AD0 - 0E9F	T1024 - T1999 (timer contact)	
	104001 - 104256	0FA0 - 109F	C256 - C511 (counter contact)	
	130001 - 130480	7530 - 770F	I1000 - I1597	
	130481 - 130960	7710 - 78EF	I2000 - I2597	
	130961 - 131440	78F0 - 7ACF	I3000 - I3597	
	131441 - 131920	7AD0 - 7CAF	I4000 - I4597	
	131921 - 132400	7CB0 - 7E8F	I5000 - I5597	
	132401 - 132880	7E90 - 806F	I6000 - I6597	
	132881 - 133360	8070 - 824F	I7000 - I7597	
	133361 - 133840	8250 - 842F	I8000 - I8597	
	133841 - 134320	8430 - 860F	I9000 - I9597	
134321 - 134800	8610 - 87EF	I10000 - I10597		
Input Register (300000 and above)	300001 - 300256	0000 - 00FF	T000 - T255 (timer current value)	4
	300501 - 300756	01F4 - 02F3	C000 - C255 (counter current value)	
	302001 - 302768	07D0 - 0ACF	T256 - T1023 (timer current value)	
	302769 - 303744	0AD0 - 0E9F	T1024 - T1999 (timer current value)	
	304001 - 304256	0FA0 - 109F	C256 - C511 (counter current value)	
Holding Register (400000 and above)	400001 - 408000	0000 - 1F3F	D0000 - D7999	3,6,16
	408001 - 408500	1F40 - 2133	D8000 - D8499	
	408501 - 408900	2134 - 22C3	D8500 - D8899	
	409001 - 409256	2328 - 2427	T000 - T255 (timer preset value)	3
	409501 - 409756	251C - 261B	C000 - C255 (counter preset value)	
	410001 - 456000	2710 - DABF	D10000 - D55999	3,6,16
	456001 - 462000	DAC0 - F22F	D56000 - D61999	
	462001 - 462768	F230 - F52F	T256 - T1023 (timer preset value)	3
	462769 - 463744	F530 - F8FF	T1024 - T1999 (timer preset value)	
464001 - 464256	FA00 - FAFF	C256 - C511 (counter preset value)		

*1 Addresses generally used for Modbus communication. "Calculating Modbus Addresses for FC6A Series MICROSmart Devices" on page 6-11 shows the method to calculate slave addresses from FC6A Series MICROSmart devices.

*2 These 4-digit addresses are used in the communication frame. To calculate the address used in communication frame, extract lower 5 digits of the Modbus address, subtract 1 from the value, and convert the result into hexadecimal.

*3 Access within the device range for the FC6A Series MICROSmart type used.

Calculating Modbus Addresses for FC6A Series MICROSmart Devices

FC6A Series MICROSmart Device	Calculating Modbus Address	Calculation Example
I, Q, M M XXXX X (2): Octal (1): Decimal	$((1) - (4)) \times 8 + (2) + (5)$ Minimum address Offset	Example: M325 $(32 - 0) \times 8 + 5 + 1001 = 1262$ Modbus address: 1262 $1262 - 1 = 1261 = 04ED$ Slave addresses in communication: 04ED
R, T, C, D D XXXXX (3): Decimal	$((3) - (4)) + (5)$ Minimum address Offset	Example: D756 $(756 - 0) + 400001 = 400757$ Modbus address: 400757 Extract lower 5 digits → 757 $757 - 1 = 756 = 02F4$ Slave addresses in communication: 02F4

Modbus Device Name	FC6A Series MICROSmart Device	Minimum Address (4)	Offset (5)
Coil	Q0 - Q643	0	1
	R000 - R255	0	701
	M0000 - M2557	0	1001
	M2560 - M7997	256	3049
	M8000 - M8317	800	9001
	M8320 - M9997	832	9257
	M10000 - M17497	1000	11001
	M17500 - M21247	1750	17001
	Q1000 - Q1597	100	30001
	Q2000 - Q2597	200	30481
	Q3000 - Q3597	300	30961
	Q4000 - Q4597	400	31441
	Q5000 - Q5597	500	31921
	Q6000 - Q6597	600	32401
	Q7000 - Q7597	700	32881
	Q8000 - Q8597	800	33361
Q9000 - Q9597	900	33841	
Q10000 - Q10597	1000	34321	
Input Relay	I0 - I643	0	100001
	T000 - T255 (timer contact)	0	101001
	C000 - C255 (counter contact)	0	101501
	T256 - T1023 (timer contact)	256	102001
	T1024 - T1999 (timer contact)	1024	102769
	C256 - C511 (counter contact)	256	104001
	I1000 - I1597	100	130001
	I2000 - I2597	200	130481
	I3000 - I3597	300	130961
	I4000 - I4597	400	131441
	I5000 - I5597	500	131921
	I6000 - I6597	600	132401
	I7000 - I7597	700	132881
I8000 - I8597	800	133361	
I9000 - I9597	900	133841	
I10000 - I10597	1000	134321	
Input Register	T000 - T255 (timer current value)	0	300001
	C000 - C255 (counter current value)	0	300501
	T256 - T1023 (timer current value)	256	302001
	T1024 - T1999 (timer current value)	1024	302769
	C256 - C511 (counter current value)	256	304001


6: MODBUS COMMUNICATION

Modbus Device Name	FC6A Series MICROSmart Device	Minimum Address (4)	Offset (5)
Holding Register	D0000 - D7999	0	400001
	D8000 - D8499	8000	408001
	D8500 - D8899	8500	408501
	T000 - T255 (timer preset value)	0	409001
	C000 - C255 (counter preset value)	0	409501
	D10000 - D55999	10000	410001
	D56000 - D61999	56000	456001
	T256 - T1023 (timer preset value)	256	462001
	T1024 - T1999 (timer preset value)	256	462769
	C256 - C511 (counter preset value)	256	464001


Programming Modbus Slave Using WindLDR

Modbus slave communication is programmed for Modbus RTU mode using WindLDR. Since these settings relate to the user program, the user program must be downloaded to the FC6A Series MICROSmart after changing any of these settings.

1. From the WindLDR menu bar, select **Configuration > Communication Ports**. The **Function Area Settings** dialog box for Communication Ports appears.
2. In the Communication Mode pull-down list for Port, select **Modbus RTU Slave**.

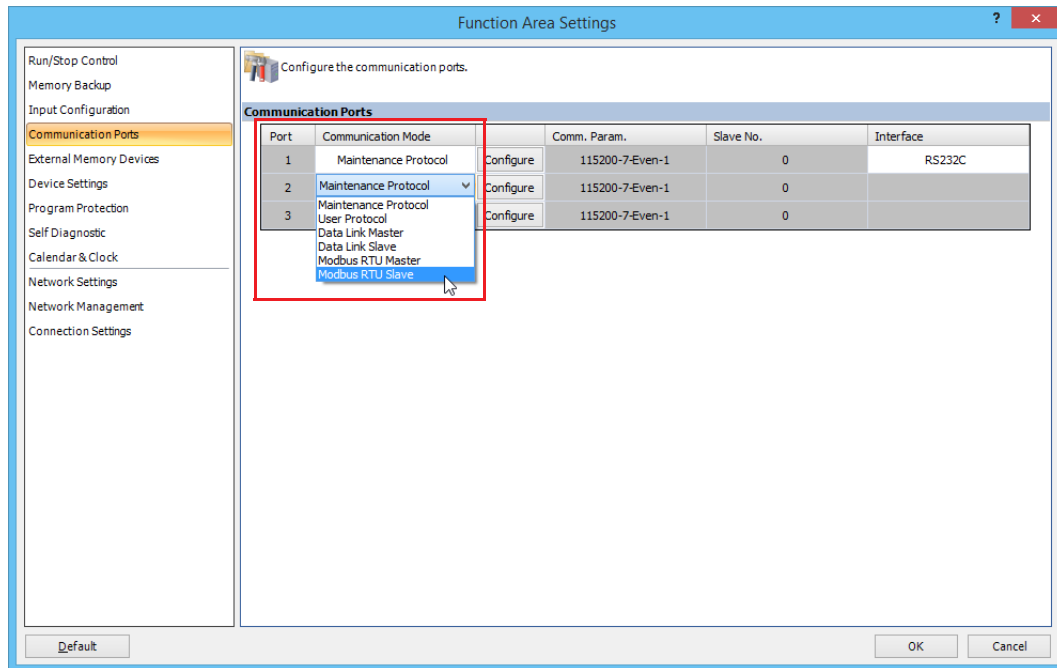

3. Click the **Configure** button. The **Modbus RTU Slave** dialog box appears. Change settings, if required.

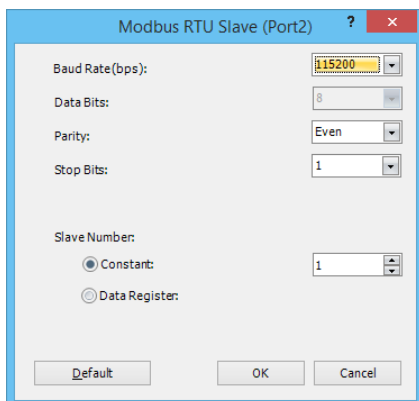

Baud Rate (bps)	9600	
	19200	
	38400	
	57600	
	115200	
Data Bits	8	
Parity	Even, Odd, None	
Stop Bits	1 or 2	
Slave Number	Constant	1 to 247
	Data register	The value in D8100 (port 1), D8102 (port 2), D8103 (port 3), D8040 to D8045 (port 4 to 9*1), or D8735 to D8758 (port 10 to 33*1*2) is used.

*1 When using a communication module.
*2 Plus CPU module only.

4. Click the **OK** button to save changes.
5. Download the user program to the FC6A Series MICROSmart. Now, programming for the Modbus slave is complete. Details about parameters and valid values are as follows.

Communication Protocol

This section describes the communication frame format used for Modbus RTU communication.

Modbus RTU Mode Communication Format

Request from Modbus Master

Idle 3.5 characters	Slave No.	Function Code	Data	CRC	Idle 3.5 characters
	1 byte	1 byte		2 bytes	

ACK Reply from Modbus RTU Slave

Idle 3.5 characters	Slave No.	Function Code	Data	CRC	Idle 3.5 characters
	1 byte	1 byte		2 bytes	

NAK Reply from Modbus RTU Slave

Idle 3.5 characters	Slave No.	Function Code + 80H	Error Code	CRC	Idle 3.5 characters
	1 byte	1 byte	1 byte	2 bytes	

Note: Idle means no data flowing on the communication line.

Communication Frame Format

Modbus RTU mode requires a minimum of 3.5-character-long idle time between frames to determine the beginning of a frame. The FC6A Series MICROSmart Modbus master sends requests at idle intervals of 5 ms, which can be changed in the **Function Area Settings** dialog box.

Slave No.

The FC6A Series MICROSmart can be assigned slave numbers 1 through 247. In the 1:1 communication using RS232C, the same slave number must be set in the master and the FC6A Series MICROSmart.

Slave No. 0 is reserved for broadcast slave number and is used to write the same data to all Modbus RTU slaves. In this case, the Modbus RTU slaves do not send a reply to the master.

Modbus RTU Communication NG Reply Error Code

One of the following error codes is stored in NAK reply.

- 01h: Function code error (unsupported function code)
- 02h: Access destination error (address out of range, address+device quantity out of range)
- 03h: Device quantity error, 1-bit write data error

CRC

Modbus RTU mode uses CRC check codes.

• **Modbus RTU Mode — Calculating the CRC-16 (cyclic redundancy checksum)**

Calculate the BCC using CRC-16 for the range from the slave number to the byte immediately before the BCC. The generation polynomial is: $X^{16} + X^{15} + X^2 + 1$.

1. Take the exclusive OR (XOR) of FFFFh and the first 1-byte data at the slave number.
2. Shift the result by 1 bit to the right. When a carry occurs, take the exclusive OR (XOR) of A001h, then go to step 3. If not, directly go to step 3.
3. Repeat step 2, shifting 8 times.
4. Take the exclusive OR (XOR) of the result and the next 1-byte data.
5. Repeat step 2 through step 4 up to the byte immediately before the BCC.
6. Swap the higher and lower bytes of the result of step 5, and store the resultant CRC-16 to the BCC (CRC) position. (Example: 1234h → 34h, 12h)

Communication Format

This section describes the communication format for each function code from the slave number up to immediately before the check code.

Function Code 01 (Read Coil Status) and Function Code 02 (Read Input Status)

Function code 01 reads bit device statuses of Q (output), R (shift register), or M (internal relay). One through 2,000 consecutive bits can be read out.


Function code 02 reads bit device statuses of I (input), T (timer contact), or C (counter contact). One through 2,000 consecutive bits can be read out.

Communication Frame

Request from Modbus RTU Master

Slave No.	Function Code	Address	No. of Bits
xxh	01h / 02h	xxxxh	xxxxh

ACK Reply from Modbus RTU Slave

Slave No.	Function Code	Quantity of Data	First 8 Bits	Second 8 Bits		Last 8 Bits
xxh	01h / 02h	xxh	xxh	xxh		xxh

NAK Reply from Modbus RTU Slave

Slave No.	Function Code	Error Code
xxh	81h / 82h	xxh

Communication Example

Purpose	Read 15 bits starting at output Q10. $Q10 \rightarrow (1 - 0) \times 8 + 0 + 1 = 9$ Modbus address: 9 $9 - 1 = 8 = 8h$ Communication frame address: 0008h
Condition	Slave No. 8 Q10 through Q27 binary data: 1234h

• Modbus RTU Mode

Request from Modbus RTU Master	08 01 0008 0010 (CRC)
ACK Reply from Modbus RTU Slave	08 01 02 34 12 (CRC)
NAK Reply from Modbus RTU Slave	08 81 xx (CRC)

6: MODBUS COMMUNICATION

Function Code 03 (Read Holding Registers) and Function Code 04 (Read Input Registers)

Function code 03 reads word device data of D (data register), T (timer preset value), or C (counter preset value). 1 through 125 consecutive words can be read out.

Function code 04 reads word device data of T (timer current value) or C (counter current value). 1 through 125 consecutive words can be read out.

Communication Frame

Request from Modbus RTU Master

Slave No.	Function Code	Address	No. of Words
xxh	03h / 04h	xxxxh	xxxxh

ACK Reply from Modbus RTU Slave

Slave No.	Function Code	Quantity of Data	First High Byte	First Low Byte		Last Low Byte
xxh	03h / 04h	xxh	xxh	xxh		xxh

NAK Reply from Modbus RTU Slave

Slave No.	Function Code	Error Code
xxh	83h / 84h	xxh

Communication Example

Purpose	Read 2 words starting at data register D1710. $D1710 \rightarrow (1710 - 0) + 400001 = 401711$ Modbus address: 401711 Extract lower 5 digits $\rightarrow 1711$ $1711 - 1 = 1710 = 6AEh$ Communication frame address: 06AEh
Condition	Slave No. 8 D1710 data: 1234h D1711 data: 5678h

- Modbus RTU Mode

Request from Modbus RTU Master	08 03 06AE 0002 (CRC)
ACK Reply from Modbus RTU Slave	08 03 04 12 34 56 78 (CRC)
NAK Reply from Modbus RTU Slave	08 83 xx (CRC)

Function Code 05 (Force Single Coil)

Function code 05 changes a bit device status of Q (output), R (shift register), or M (internal relay).

Communication Frame**Request from Modbus RTU Master**

Slave No.	Function Code	Address	OFF: 0000h ON: FF00h
xxh	05h	xxxxh	xxxxh

ACK Reply from Modbus RTU Slave

Slave No.	Function Code	Address	OFF: 0000h ON: FF00h
xxh	05h	xxxxh	xxxxh

NAK Reply from Modbus RTU Slave

Slave No.	Function Code	Error Code
xxh	85h	xxh

Communication Example

Purpose	Force internal relay M1320 on. $M1320 \rightarrow (132 - 0) \times 8 + 0 + 1001 = 2057$ Modbus address: 2057 $2057 - 1 = 2056 = 808h$ Communication frame address: 0808h
Condition	Slave No. 8

- **Modbus RTU Mode**

Request from Modbus RTU Master	08 05 0808 FF00 (CRC)
ACK Reply from Modbus RTU Slave	08 05 0808 FF00 (CRC)
NAK Reply from Modbus RTU Slave	08 85 xx (CRC)

6: MODBUS COMMUNICATION

Function Code 06 (Preset Single Register)

Function code 06 changes word device data of D (data register).

Communication Frame

Request from Modbus RTU Master

Slave No.	Function Code	Address	New Data
xxh	06h	xxxxh	xxxxh

ACK Reply from Modbus RTU Slave

Slave No.	Function Code	Address	Acknowledge Data
xxh	06h	xxxxh	xxxxh

NAK Reply from Modbus RTU Slave

Slave No.	Function Code	Error Code
xxh	86h	xxh

Communication Example

Purpose	Write 8000 to data register D1708. D1708 → (1708 - 0) + 400001 = 401709 Modbus address: 401709 Extract lower 5 digits → 1709 1709 - 1 = 1708 = 6ACh Communication frame address: 06ACh
Condition	Slave No. 8

• Modbus RTU Mode


Request from Modbus RTU Master	08 06 06AC 1F40 (CRC)
ACK Reply from Modbus RTU Slave	08 06 06AC 1F40 (CRC)
NAK Reply from Modbus RTU Slave	08 86 xx (CRC)

Function Code 15 (Force Multiple Coils)

Function code 15 changes bit device statuses of Q (output), R (shift register), or M (internal relay). One through 1,968 consecutive bits can be changed.

Communication Frame

Request from Modbus RTU Master

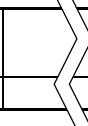Slave No.	Function Code	Address	No. of Bits	Quantity of Data	First 8 Bits	Second 8 Bits		Last 8 Bits
xxh	0Fh	xxxxh	xxxxh	xxh	xxh	xxh		xxh

ACK Reply from Modbus RTU Slave

Slave No.	Function Code	Address	No. of Bits
xxh	0Fh	xxxxh	xxxxh

NAK Reply from Modbus RTU Slave

Slave No.	Function Code	Error Code
xxh	8Fh	xxh

Communication Example

Purpose	Write the following bit statuses to internal relays M605 through M624.																																															
	<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;"></td> <td style="width: 15%;">M605</td> <td style="width: 15%;">M606</td> <td style="width: 15%;">M607</td> <td style="width: 15%;"></td> <td style="width: 15%;"></td> <td style="width: 15%;"></td> <td style="width: 15%;"></td> </tr> <tr> <td></td> <td>(ON)</td> <td>(ON)</td> <td>(OFF)</td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td style="text-align: center;">M610</td> <td style="text-align: center;">M611</td> <td style="text-align: center;">M612</td> <td style="text-align: center;">M613</td> <td style="text-align: center;">M614</td> <td style="text-align: center;">M615</td> <td style="text-align: center;">M616</td> <td style="text-align: center;">M617</td> </tr> <tr> <td style="text-align: center;">(ON)</td> <td style="text-align: center;">(OFF)</td> <td style="text-align: center;">(ON)</td> <td style="text-align: center;">(ON)</td> <td style="text-align: center;">(OFF)</td> <td style="text-align: center;">(OFF)</td> <td style="text-align: center;">(ON)</td> <td style="text-align: center;">(OFF)</td> </tr> <tr> <td style="text-align: center;">M620</td> <td style="text-align: center;">M621</td> <td style="text-align: center;">M622</td> <td style="text-align: center;">M623</td> <td style="text-align: center;">M624</td> <td></td> <td></td> <td></td> </tr> <tr> <td style="text-align: center;">(OFF)</td> <td style="text-align: center;">(OFF)</td> <td style="text-align: center;">(OFF)</td> <td style="text-align: center;">(OFF)</td> <td style="text-align: center;">(OFF)</td> <td></td> <td></td> <td></td> </tr> </table> <p>M605 (LSB) through M614 (MSB) binary data: 6B M615 (LSB) through M624 (MSB) binary data: 02 $M605 \rightarrow (60 - 0) \times 8 + 5 + 1001 = 1486$ Modbus address: 1486 $1486 - 1 = 1485 = 5CDh$ Communication frame address: 05CDh</p>		M605	M606	M607						(ON)	(ON)	(OFF)					M610	M611	M612	M613	M614	M615	M616	M617	(ON)	(OFF)	(ON)	(ON)	(OFF)	(OFF)	(ON)	(OFF)	M620	M621	M622	M623	M624				(OFF)	(OFF)	(OFF)	(OFF)	(OFF)		
	M605	M606	M607																																													
	(ON)	(ON)	(OFF)																																													
M610	M611	M612	M613	M614	M615	M616	M617																																									
(ON)	(OFF)	(ON)	(ON)	(OFF)	(OFF)	(ON)	(OFF)																																									
M620	M621	M622	M623	M624																																												
(OFF)	(OFF)	(OFF)	(OFF)	(OFF)																																												
Condition	Slave No. 8																																															

• **Modbus RTU Mode**

Request from Modbus RTU Master	08 0F 05CD 0010 02 6B 02 (CRC)
ACK Reply from Modbus RTU Slave	08 0F 05CD 0010 (CRC)
NAK Reply from Modbus RTU Slave	08 8F xx (CRC)

6: MODBUS COMMUNICATION

Function Code 16 (Preset Multiple Registers)

Function code 16 changes word device data of D (data register). One through 123 consecutive words can be changed.

Communication Frame

Request from Modbus RTU Master

Slave No.	Function Code	Address	No. of Words	Quantity of Data	First High Byte	First Low Byte		Last Low Byte
xxh	10h	xxxxh	xxxxh	xxh	xxh	xxh		xxh

ACK Reply from Modbus RTU Slave

Slave No.	Function Code	Address	No. of Words
xxh	10h	xxxxh	xxxxh

NAK Reply from Modbus RTU Slave

Slave No.	Function Code	Error Code
xxh	90h	xxh

Communication Example

Purpose	Write the following data to four data registers D1708 through D1711.
	D1708 D1709 D1710 D1711 (1234h) (5678h) (ABCDh) (EF01h)
	D1708 → (1708 - 0) + 400001 = 401709
	Modbus address: 401709
	Extract lower 5 digits → 1709
Condition	1709 - 1 = 1708 = 6ACh
	Communication frame address: 06ACh
	Slave No. 8

• Modbus RTU Mode

Request from Modbus RTU Master	08 10 06AC 0004 08 12 34 56 78 AB CD EF 01 (CRC)
ACK Reply from Modbus RTU Slave	08 10 06AC 0004 (CRC)
NAK Reply from Modbus RTU Slave	08 90 xx (CRC)


Modbus TCP Communication via Ethernet Communication

The FC6A Series MICROSmart supports Modbus TCP clients and Modbus TCP servers. Connect the Ethernet port 1 and Ethernet port 2 (Plus CPU module only) on the FC6A Series MICROSmart to enable the FC6A Series MICROSmart to communicate with Modbus TCP compliant devices.

When configured as a Modbus TCP client, the FC6A Series MICROSmart can monitor and change the data memory of the network devices supporting Modbus TCP server. A maximum of eight connections for the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections for the Plus CPU module can be allocated to Modbus TCP clients. Each connection can communicate with multiple Modbus TCP server devices (1 to 255).

When the FC6A Series MICROSmart is configured as a Modbus TCP server, the device data of the FC6A Series MICROSmart can be monitored and changed from Modbus TCP client devices. A maximum of eight connections for the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections for the Plus CPU module can be allocated to Modbus TCP servers.

For the Modbus TCP client function and how to configure it, see "Modbus TCP Client" on page 6-22. For the Modbus TCP server function and how to configure it, see "Modbus TCP Server" on page 6-27.

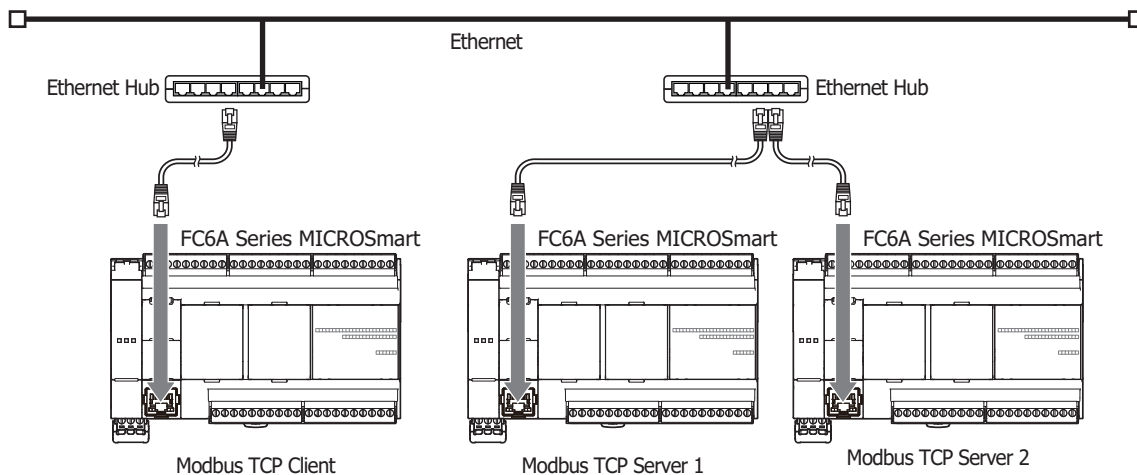

Modbus TCP Client

When configured as a Modbus TCP client, the FC6A Series MICROSmart sends communication requests to a Modbus TCP server to read/write data. Each communication request is sent to a Modbus Server according to the configured request table.

Modbus TCP client communication settings and request tables for Modbus TCP servers can be configured using the WindLDR **Function Area Settings**. The FC6A Series MICROSmart communicate with the Modbus TCP servers according to those settings. Communication with Modbus TCP servers are performed in sync with the user program execution, and the communication data is processed at the END, in the order of request numbers specified in the request table. In Plus CPU module Modbus TCP client communication, the Plus CPU module can perform Modbus TCP communication for the first 128 requests without disconnecting the connection with the Modbus TCP server. For 129 and subsequent requests, the connection with the Modbus TCP server will be connected and disconnected each time Modbus TCP communication is performed.

Modbus TCP Client Specifications

Parameter	Modbus TCP Client
Slave Number	0-255
Maximum Number of Servers	8 (one server per one connection)
Receive Timeout *1	100 to 25,500 ms (in increments of 100 ms)
Transmission wait time	0 to 5,000 ms (0 ms)

*1 Specifies the period of time before receiving a response frame from a server.

Request Execution Device	Start/stop
Used	When request execution devices are designated in the Modbus TCP Client request table, internal relays or data register bits (as many as the request quantity) are allocated to execute Modbus TCP Client communication. For example, when internal relay M0 is designated as the request execution device, M0 is allocated to request No. 1, M1 to request No. 2, and so on. To execute a request, turn on the corresponding request execution device. When communication is completed, the request execution device turns off automatically. When it is required to send requests continuously, keep the corresponding request execution device on using a SET or OUT instruction. When request execution devices are not designated, all requests programmed in the request table are executed continuously.
Unused	The internal relays or data register bits are allocated in the order of requests.
Auto ping linking	Whether or not to send a request from the Modbus TCP client can be controlled with online status on/off via auto ping linking. This eliminates unnecessary timeouts by not sending requests to remote hosts that are not part of the network. For details on auto ping linking, see "Auto Ping Function" on page 3-23.

The FC6A Series MICROSmart operation when combining the request execution setting is as follows.

Request Execution Setting	Auto Ping Linking	
	Do Not Use	Use
Request execution device	Do not use	Always send all requests.
	Use	Send the applicable request only when the online status and the communication execution device are both on, and do not send the applicable request in all other cases.

Communication Completion and Communication Error

Modbus communication finishes when a read or write process is completed successfully or when a communication error occurs. A communication error occurs when communication failure has repeated three times. When a communication error occurs, the request is canceled and the next request is processed. When the error status data register is designated, the communication status of each request can be confirmed.

Communication Error Data

When Error Status is configured in the Request Table from the **Function Area Settings**, the error data of each request can be confirmed.

Use a single DR for all communication requests	Error data of each communication request
Unchecked	Error data, the remote host number (high-order byte) and error code (low-order byte), of each request in the entire request table can be confirmed. Data registers as many as the quantity of requests are reserved for storing error data. When an error occurs for a request, error data is stored to the corresponding data register.
Checked	A single data register is shared by all requests. When an error occurs for a request, error data is stored to the data register and the old error data is overwritten.
Bit Allocation	
Remote Host Number (high-order byte)	1 to 255
Error Code (low-order byte)	00h: Normal completion 01h: Function code error (unsupported function code) 02h: Access destination error (address out of range, address+device quantity out of range) 03h: Device quantity error, 1-bit write data error (specified device quantity of 1-bit write is unsupported) 12h: Frame length error (frame length of transmitted request exceeds range) 13h: BCC error (BCC does not match) 14h: Slave number error (received slave number is invalid) 16h: Timeout error (timeout occurs)

Modbus TCP Communication Request Table

A maximum of 255 requests can be configured in the Modbus TCP Client Request Table.

Notes:


- 10 bytes of the user program area are needed per each request.
- Request execution devices and error status data registers are allocated in the order of request numbers. When deleting a request or changing the order of requests, the relationship of the request to the request execution devices and error status data register is changed. If the allocated internal relays or data registers are used in the user program, those device addresses must be updated accordingly.

6: MODBUS COMMUNICATION


Programming WindLDR (Modbus TCP Client)

In order to use the Modbus TCP client, configure the Modbus TCP client in the **Function Area Settings** dialog box and then download the user program to the FC6A Series MICROSmart.


1. From the WindLDR menu bar, select **Configuration > Connection Settings**.
The **Function Area Settings** dialog box appears.
2. Select **Modbus TCP Client** as the communication mode for the connection 1.

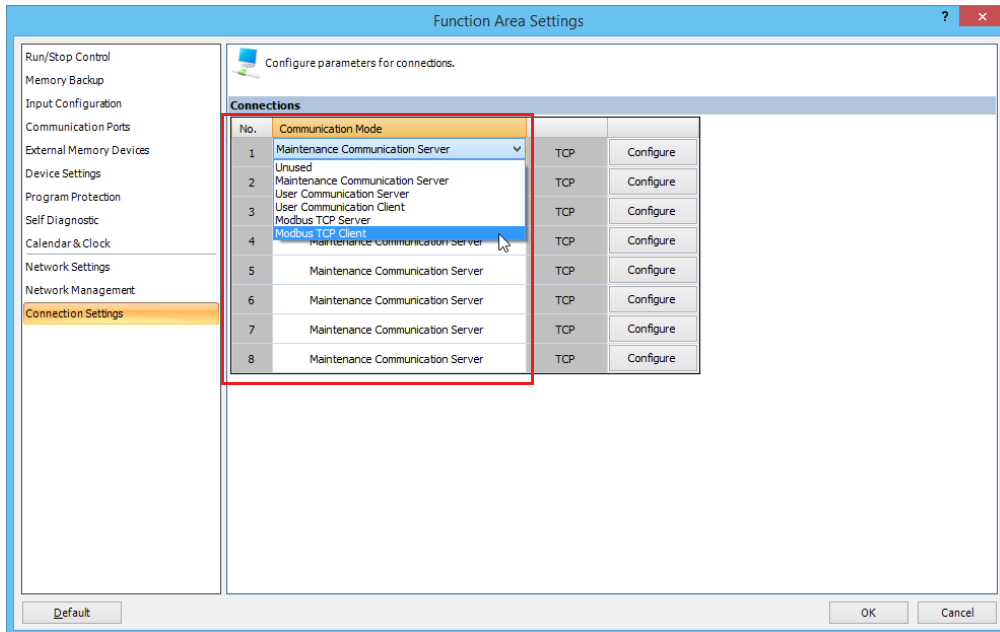

The **Modbus TCP Client** dialog box appears.

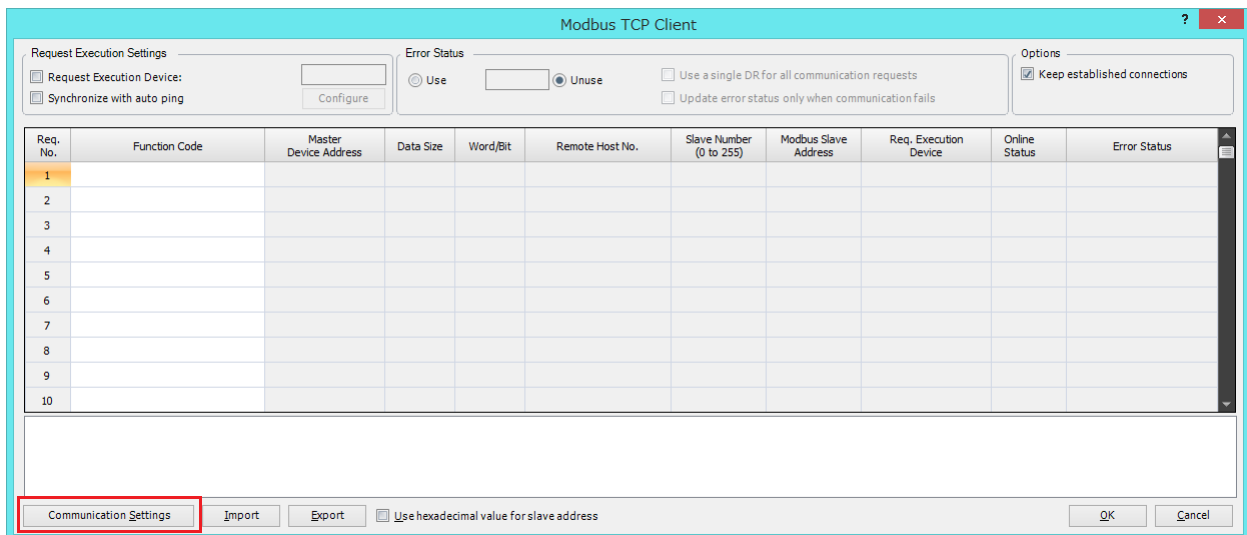

3. Click on the **Communication Settings** button.
The **Communication Settings** dialog box appears. Configure the receive timeout and the transmission wait time.
Click **OK**.

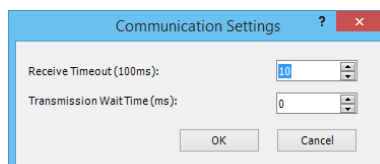

4. Configure the requests of the Modbus TCP Client.

A maximum of 255 requests can be entered in one request table. Specify the Modbus TCP servers with the remote host numbers. After all requests are configured, click **OK** button to close the dialog box.

Choose to use **Request Execution Devices** and **Error Status** data registers if necessary. When using **Request Execution Devices** and **Error Status** data registers, enter the first number of the devices.

5. Download the user program to the FC6A Series MICROSmart.

Programming for the Modbus TCP client is complete. Details about parameters and valid values are as follows.

Function Code

The Modbus TCP of the FC6A Series MICROSmart supports eight function codes as listed in the table below. Supported function codes and valid slave addresses vary with each Modbus server device to communicate with. Configure the function codes according to the specifications of the Modbus server devices.

Function Code	Data Size	Slave Address	FC6A Series MICROSmart as Modbus Slave
01 Read Coil Status	1 to 2,000 bits	000001 - 065535	Reads bit device statuses of Q (output), R (shift register), or M (internal relay).
02 Read Input Status	1 to 2,000 bits	100001 - 165535	Reads bit device statuses of I (input), T (timer contact), or C (counter contact).
03 Read Holding Registers	1 to 125 words	400001 - 465535	Reads word device data of D (data register), T (timer preset value), or C (counter preset value).
04 Read Input Registers	1 to 125 words	300001 - 365535	Reads word device data of T (timer current value) or C (counter current value).
05 Force Single Coil	1 bit	000001 - 065535	Changes a bit device status of Q (output), R (shift register), or M (internal relay).
06 Preset Single Register	1 word	400001 - 465535	Changes word device data of D (data register).
15 Force Multiple Coils	1 to 1,968 bits	000001 - 065535	Changes multiple bit device statuses of Q (output), R (shift register), or M (internal relay).
16 Preset Multiple Registers	1 to 123 words	400001 - 465535	Changes multiple word device data of D (data register).

Master Device Address

When function code 01, 02, 03, or 04 is selected to read data from Modbus servers, designate the first data register or internal relay number to store the data received from the Modbus server. When function code 05, 06, 15, or 16 is selected to write data to Modbus servers, designate the first data register or internal relay number to store the data to write to the Modbus server. Data registers and internal relays can be designated as the master device address.

Data Size and Word/Bit

Designate the quantity of data to read or write. The valid data size depends on the function code. When function code 01, 02, 05, or 15 is selected, designate the data size in bits. When function code 03, 04, 06, or 16 is selected, designate the data size in words. For valid data sizes, see "Function Code" on page 6-25.

Remote Host No.

Designate the remote host number configured in the Remote Host List dialog box. In the Remote Host List dialog box, IP address and port number are configured for each remote host. The default port number of Modbus TCP communication is 502. If the Modbus TCP server uses a different port number, configure that port number in the Remote Host List dialog box.

Slave No.

Designate slave numbers 0 through 255. The same slave number can be designated repeatedly for different request numbers which can be 1 through 255. If the Modbus TCP Server will not reference the slave number, set the slave number to any desired number.

Slave Address

Designate data memory addresses of Modbus servers. The valid slave address range depends on the function code. For valid slave addresses, see the table above. The allocations of memory addresses vary with each Modbus server device. Refer to manuals for each Modbus server device.

Request Execution Device

To use request execution devices, click the radio button for "Use" and designate the first internal relay or data register in the Modbus TCP Client Request Table. Internal relays or data register bits used for executing requests are automatically listed in the table. To execute a request, turn on the corresponding request execution device.

When request execution devices are not designated, all requests programmed in the Request Table are executed continuously.

Error Status Data Register

To use error status data registers, click the radio button for "Use" and designate the first data register in the Modbus TCP Client Request Table. Data registers used for storing error statuses are automatically listed in the table. When **Use a single DR for all communication requests** is selected, the first data register is shared by all requests.

Modbus TCP Server

When the FC6A Series MICROSmart is configured as the Modbus TCP server, Modbus TCP client devices can read/write data to the FC6A Series MICROSmart. When the FC6A Series MICROSmart receives a valid request from a Modbus TCP client device, the data is read or written according to the request received. The communication data received from Modbus TCP clients is processed at the END processing of the user program.

Modbus TCP Server Specifications

Parameter	Modbus TCP Server
Slave Number	Ignored
Response Time	1.5 ms
Number of Clients that can Access Simultaneously*1	All-in-One CPU module/CAN J1939 All-in-One CPU module: 8 (1 client per 1 connection) Plus CPU module: 16 (1 client per 1 connection)
Port Number	502 (can be changed between 0 and 65535)
Supported Function Code	01 Read Coil Status 02 Read Input Status 03 Read Holding Registers 04 Read Input Registers 05 Force Single Coil 06 Preset Single Register 15 Force Multiple coils 16 Preset Multiple Registers

*1 The number of connections when all eight connections for the All-in-One CPU module/CAN J1939 All-in-One CPU module and 16 connections for the Plus CPU module are set to Modbus TCP server.

Map of Slave Addresses for the Modbus TCP Server

Modbus TCP client can access the Modbus devices (Coil, Input Relay, Input Register, and Holding Register) of Modbus server to read or write the device data (I, Q, M, R, T, C, and D) of FC6A Series MICROSmart. Refer to the following table to configure the Modbus TCP clients.

Modbus Device Name	Slave Addresses	Slave Addresses in Communication*1	FC6A Series MICROSmart Device*2	Applicable Function Code
Coil (000000 and above)	000001 - 000516	0000 - 0203	Q0 - Q643	1,5,15
	000701 - 000956	02BC - 03BB	R000 - R255	
	001001 - 003048	03E8 - 0BE7	M0000 - M2557	
	003049 - 007400	0BE8 - 1CE7	M2560 - M7997	
	009001 - 009256	2328 - 2427	M8000 - M8317	
	009257 - 010600	2428 - 2967	M8320 - M9997	
	011001 - 017000	2AF8 - 4267	M10000 - M17497	
	017001 - 020000	4268 - 4E1F	M17500 - M21247	
	030001 - 030480	7530 - 770F	Q1000 - Q1597	
	030481 - 030960	7710 - 78EF	Q2000 - Q2597	
	030961 - 031440	78F0 - 7ACF	Q3000 - Q3597	
	031441 - 031920	7AD0 - 7CAF	Q4000 - Q4597	
	031921 - 032400	7CB0 - 7E8F	Q5000 - Q5597	
	032401 - 032880	7E90 - 806F	Q6000 - Q6597	
	032881 - 033360	8070 - 824F	Q7000 - Q7597	
	033361 - 033840	8250 - 842F	Q8000 - Q8597	
033841 - 034320	8430 - 860F	Q9000 - Q9597		
034321 - 034800	8610 - 87EF	Q10000 - Q10597		

6: MODBUS COMMUNICATION

Modbus Device Name	Slave Addresses	Slave Addresses in Communication ^{*1}	FC6A Series MICROSmart Device ^{*2}	Applicable Function Code
Input Relay (100000 and above)	100001 - 100516	0000 - 0203	I0 - I643	2
	101001 - 101256	03E8 - 04E7	T000 - T255 (timer contact)	
	101501 - 101756	05DC - 06DB	C000 - C255 (counter contact)	
	102001 - 102768	07D0 - 0ACF	T256 - T1023 (timer contact)	
	102769 - 103744	0AD0 - 0E9F	T1024 - T1999 (timer contact)	
	104001 - 104256	0FA0 - 109F	C256 - C511 (counter contact)	
	130001 - 130480	7530 - 770F	I1000 - I1597	
	130481 - 130960	7710 - 78EF	I2000 - I2597	
	130961 - 131440	78F0 - 7ACF	I3000 - I3597	
	131441 - 131920	7AD0 - 7CAF	I4000 - I4597	
	131921 - 132400	7CB0 - 7E8F	I5000 - I5597	
	132401 - 132880	7E90 - 806F	I6000 - I6597	
	132881 - 133360	8070 - 824F	I7000 - I7597	
	133361 - 133840	8250 - 842F	I8000 - I8597	
	133841 - 134320	8430 - 860F	I9000 - I9597	
134321 - 134800	8610 - 87EF	I10000 - I10597		
Input Register (300000 and above)	300001 - 300256	0000 - 00FF	T000 - T255 (timer current value)	4
	300501 - 300756	01F4 - 02F3	C000 - C255 (counter current value)	
	302001 - 302768	07D0 - 0ACF	T256 - T1023 (timer current value)	
	302769 - 303744	0AD0 - 0E9F	T1024 - T1999 (timer current value)	
	304001 - 304256	0FA0 - 109F	C256 - C511 (counter current value)	
Holding Register (400000 and above)	400001 - 408000	0000 - 1F3F	D0000 - D7999	3,6,16
	408001 - 408500	1F40 - 2133	D8000 - D8499	
	408501 - 408900	2134 - 22C3	D8500 - D8899	
	409001 - 409256	2328 - 2427	T000 - T255 (timer preset value)	3
	409501 - 409756	251C - 261B	C000 - C255 (counter preset value)	
	410001 - 456000	2710 - DABF	D10000 - D55999	3,6,16
	456001 - 462000	DAC0 - F22F	D56000 - D61999	
	462001 - 462768	F230 - F52F	T256 - T1023 (timer preset value)	3
	462769 - 463744	F530 - F8FF	T1024 - T1999 (timer preset value)	
464001 - 464256	FA00 - FAFF	C256 - C511 (counter preset value)		


*1 Slave addresses in communication are 4-digit values used in the address portion of the communication frame. Subtract 1 from the lower 5 digits of the slave address and store that value in hexadecimal. For details, see "Modbus RTU Slave Communication" on page 6-9.

*2 Access within the device range for the FC6A Series MICROSmart type used.

Programming WindLDR (Modbus TCP Server)


In order to use Modbus TCP server, configure the Modbus TCP server in the **Function Area Settings** dialog box and then download the user program to the FC6A Series MICROSmart.

1. From the WindLDR menu bar, select **Configuration > Connection Settings**. The **Function Area Settings** dialog box appears.
2. Select **Modbus TCP Server** as the communication mode for connection 1.

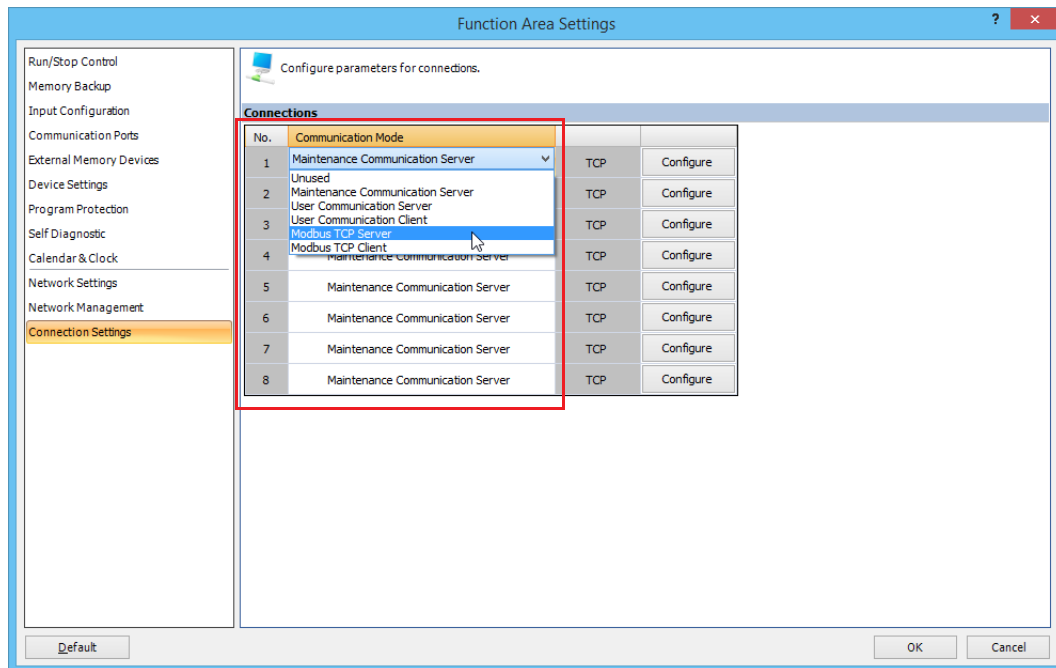

The **Modbus TCP Server** dialog box appears.

3. Configure the parameters and click on **OK** button.

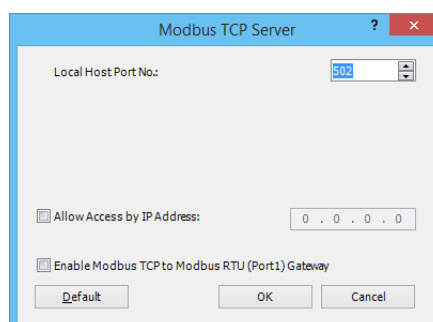

Note: For details about each parameter, see the following page.

4. Download the user program to the FC6A Series MICROSmart.

Programming for the Modbus TCP server is complete.

Modbus TCP Server Communication Settings

Local Host Port No.

Configure the local host port number between 0 and 65,535. The same local host port number can be used with multiple connection numbers.

If the same port number is used with multiple connections, Modbus TCP clients (as many as the number of the connections) can communicate with FC6A Series MICROSmart through the same port number.

Allow Access by IP Address

You can set the IP address for a device to permit access. By setting the allowed IP address, only the device with the specified IP address can establish a connection with the FC6A Series MICROSmart and communicate with the Modbus TCP server. When the same local host port number is configured in multiple connections, all the allowed IP address settings are effective. If a connection in which the allowed IP address is not configured uses the same local host port number, arbitrary access is allowed through the port.

- Example 1) If two connections use the same local port number and an allowed IP address is not configured for both connections, access from a total of two clients with any IP addresses is accepted.
- Example 2) If two connections use the same local port number and 192.168.1.101 and 192.168.1.102 are configured as the allowed IP addresses, access from a total of two clients whose IP addresses are 192.168.1.101 and 192.168.1.102 is accepted.
- Example 3) If connection 1 and 2 use the same local port number, an allowed IP address 192.168.1.101 is configured for connection 1, and the allowed IP address is not configured for connections, access from a total of two clients with any IP addresses is accepted.

Modbus TCP Communication Format

This section describes the communication format used for Modbus TCP client and server communication. Modbus TCP communication format starts with the Modbus TCP header followed by the RTU mode communication format without the idle 3.5 characters at both ends and CRC as shown below.

Modbus TCP Communication Format

Transaction ID	Protocol ID	Message Length (bytes)	Unit ID	Function Code	Data			
2 bytes	2 bytes	2 bytes	1 byte	1 byte	N bytes			
Modbus TCP Header								
RTU Mode Communication Format			Idle 3.5 characters	Slave No.	Function Code	Data	CRC	Idle 3.5 characters
				1 byte	1 byte	N bytes	2 bytes	

Transaction ID

The Modbus TCP server (slave) returns the request ID sent from the client (master) without any change. When receiving the returned request ID, the client can confirm to which request the response was returned. When confirmation is not required, designate 0 as a transaction ID.

Protocol ID

Designate 0 to identify Modbus TCP protocol.

Message Length

Designate the length of the following message in bytes.

Unit ID

The ID for identifying the device. Store the slave number of the Modbus TCP server. The FC6A Series MICROSmart Modbus TCP server accepts and processes requests when the unit ID of the received request is not 0. When the unit ID is 0, the received request is processed as broadcast communication and no response is returned to the Modbus TCP client.

Function Code

Designate a function code, such as 01 (read coil status) and 02 (read input status).

Data

Designate required data for each function.


Modbus RTU Pass-Through Function

The Modbus RTU pass-through function allows a Modbus TCP client connected to a Modbus TCP network to access a Modbus RTU slave connected to a Modbus RTU network. Modbus RTU pass-through is supported in the All-in-One CPU module and the Plus CPU module but not supported in CAN J1939 All-in-One CPU module.

For the All-in-One CPU module, this function can read and write device information on a Modbus RTU slave device connected to serial port 1 of the FC6A Series MICROSmart from the Modbus TCP client device connected to Ethernet port 1.

The Modbus RTU pass-through function is only supported between Ethernet port 1 and the serial port 1 on the FC6A Series MICROSmart.

For the Plus CPU module, a Modbus RTU slave device connected to port 1 to 33 of the Plus CPU module can be selected and device information can be read and written from the Modbus TCP client device connected to Ethernet port 1 or 2. The Modbus RTU pass-through function is only supported between Ethernet port 1 and 2 and port 1 to 33 on the Plus CPU module.

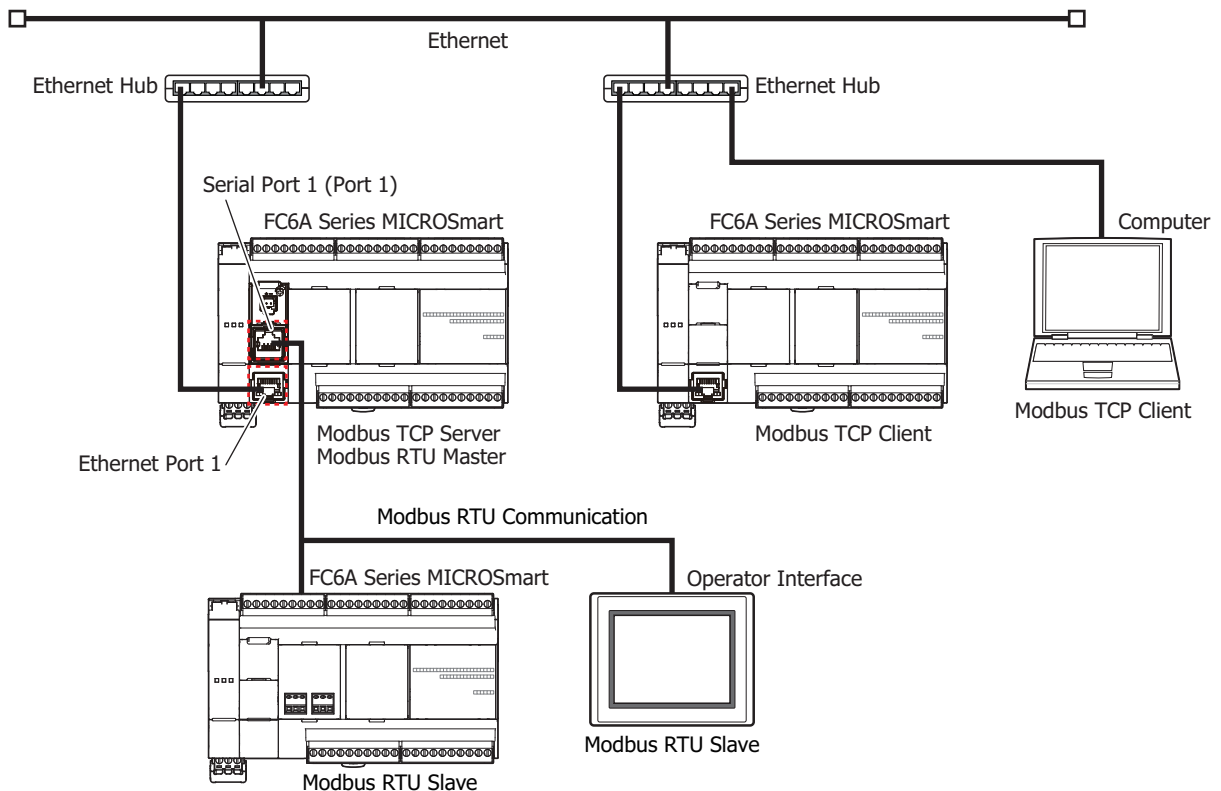

6: MODBUS COMMUNICATION

Modbus TCP Communication Format in the Modbus RTU Pass-Through Function

The Modbus RTU pass-through function deletes the Modbus TCP headers from the Modbus TCP communication frame received by the Modbus TCP server and sends the frames with a CRC added to the "Unit ID", "Function code", and "Description" frames to the Modbus RTU slave specified by the unit ID.

The Modbus TCP communication format in the Modbus RTU pass-through function is as follows.

Modbus TCP Communication Format

Transaction ID	Protocol ID	Message Length (bytes)	Unit ID	Function Code	Description
2 bytes	2 bytes	2 bytes	1 byte	1 byte	N bytes

Modbus TCP Header

RTU Mode Communication Format

"Idle"	Slave No.	Function Code	Description	CRC	"Idle"
3.5 characters	1 byte	1 byte	N bytes	2 bytes	3.5 characters

Transaction ID

The Modbus TCP server returns the transaction ID from the client as is. The client can confirm to which request the response was returned. Enter 0 when there is no particular check to perform.

Protocol ID

This number indicates the Modbus TCP protocol and is 0.

Message Length

Represents the length of the message that follows in bytes.

Unit ID

The ID for identifying the device. It stores the slave number of the Modbus RTU slave. The Unit ID and subsequent frames are passed through to the Modbus RTU network.

If 255 is specified for the unit ID, the frames are processed by the Modbus TCP server (local station) and not passed through to the Modbus RTU slave.

Function Code

The function number such as reading or writing.

Description


The data required for processing.

Modbus RTU Pass-Through Function Specifications

Supported Port	Ethernet Communication	All-in-One CPU module: Ethernet port 1 Plus CPU module: Ethernet port 1 and 2
	Serial Communication	All-in-One CPU module: port 1 Plus CPU module: port 1 to 33
Communication Mode		Modbus TCP server (slave) and Modbus RTU master
Enable/disable Settings		Configure in Function Area Settings . * There is no limit on the number of server connections that can be enabled. * Can be used in combination with pass-through through the maintenance communication server.
Specifying the Pass-Through Destination		Specify the Modbus RTU slave for pass-through with the Modbus TCP communication frame unit ID. When the Modbus RTU pass-through function is enabled Unit ID (0 to 254): Modbus RTU pass-through is performed. Unit ID (255): Processed by the Modbus TCP server. When the Modbus RTU pass-through function is disabled Unit ID (0 to 255): Processed by the Modbus TCP server.
Available Number of Bytes for Communication		512 bytes * Data (a frame) that exceeds 512 bytes cannot be passed through with the pass-through function. When more than 512 bytes of data are received, that data including the previously received data is discarded.
Pass-Through Operation		When the unit ID (slave station number) is not 255, the FC6A Series MICROSmart issues a pass-through request to communication port and waits for a response from the Modbus RTU slave. When the unit ID is 255, the FC6A Series MICROSmart handles the request as communication to the local station and returns a response to the Modbus TCP client. When there are pass-through requests via the ModbusTCP Server, those requests are processed with a higher priority than the communication requests of the ModbusRTU master.

Modbus RTU Pass-Through Using the Maintenance Communication Server

When the FC6A Series MICROSmart is set as a maintenance communication server, it can access Modbus RTU slaves connected to a Modbus RTU network. From a maintenance communication client, such as WindLDR or Data File Manager installed in a remote computer, devices of an FC6A Series MICROSmart set as a Modbus RTU slave can be read and written and project data can be downloaded and uploaded through an FC6A Series MICROSmart (Modbus RTU Master) connected to Ethernet.

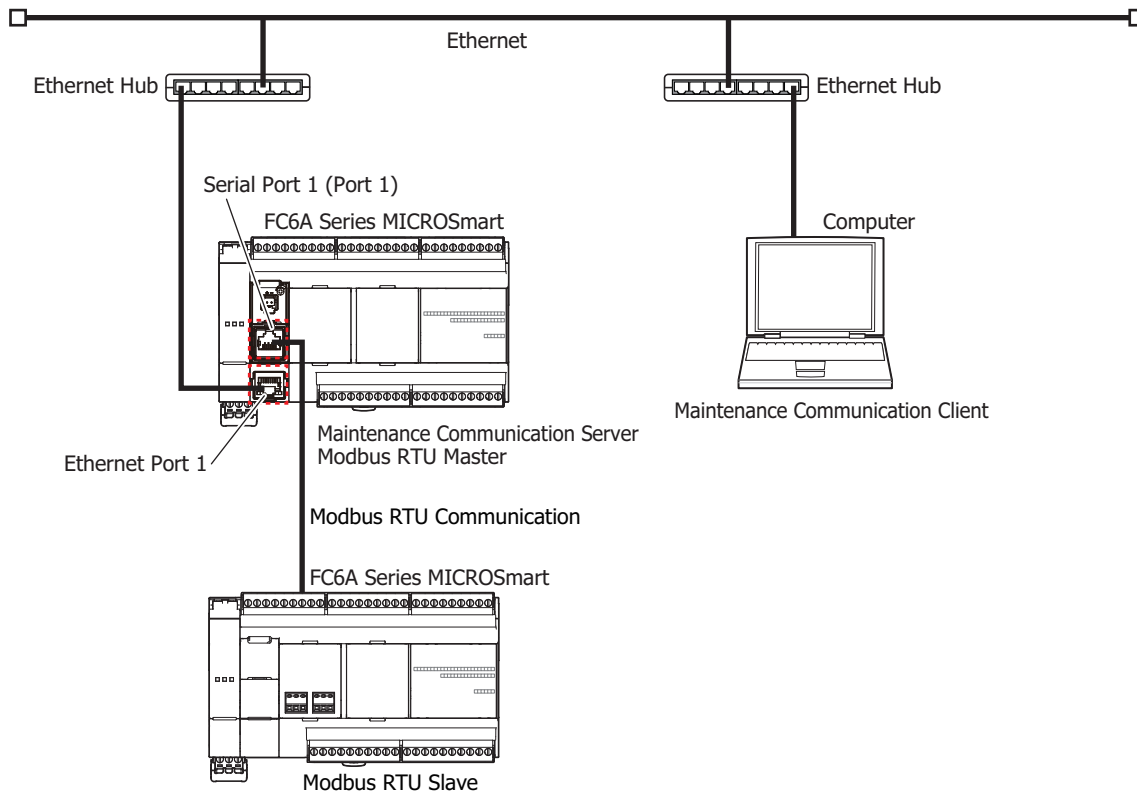


Modbus RTU Pass-Through Function Settings

Programming WindLDR


To use the Modbus RTU pass-through function, download a user program to the FC6A Series MICROSmart configured in **Function Area Settings**.

All-in-One CPU module

1. On the WindLDR **Configuration** tab, in the **Function Area Settings** group, click **Connection Settings**. The **Function Area Settings** dialog box is displayed.
2. Click **Communication Mode** for **Port 1** and select **Modbus TCP Server**. The **Modbus TCP Server** dialog box is displayed.

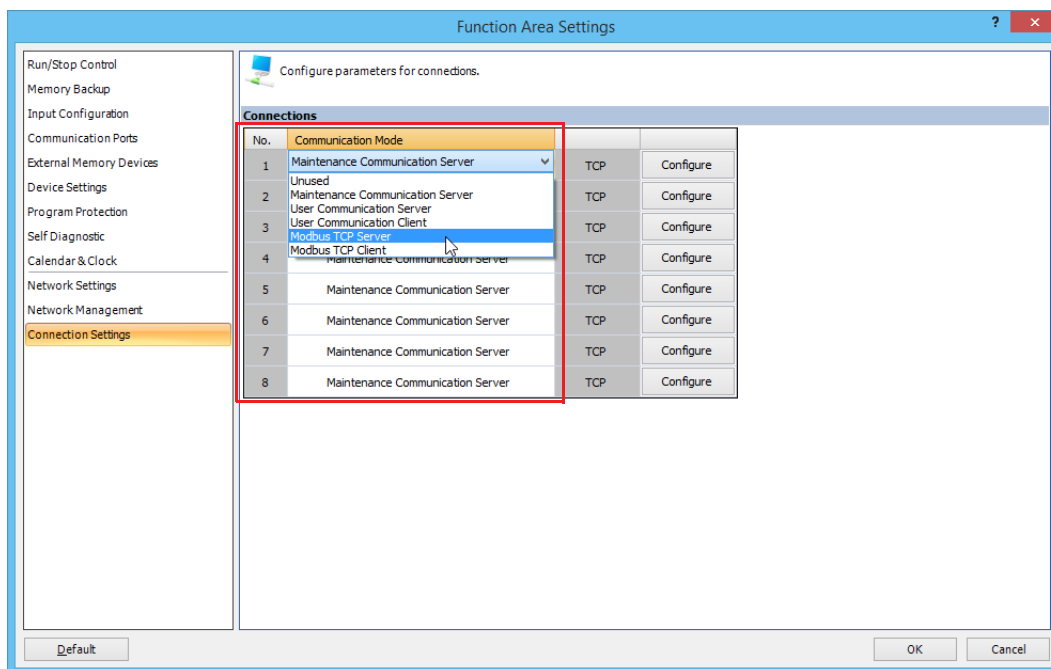


3. Select the **Enable Modbus TCP to Modbus RTU (Port1) Gateway** check box and configure the local host port number and the allow access by IP address. Specify a number that is different from the other server connections for the local host port number of the port that will use the pass-through function.

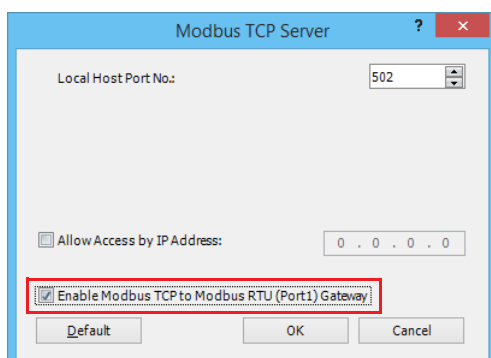

4. Click **OK**.

6: MODBUS COMMUNICATION


- Click **Communication Mode** for **Port 1** and select **Modbus RTU Master**.
The **Modbus RTU Master Request Table** dialog box is displayed.

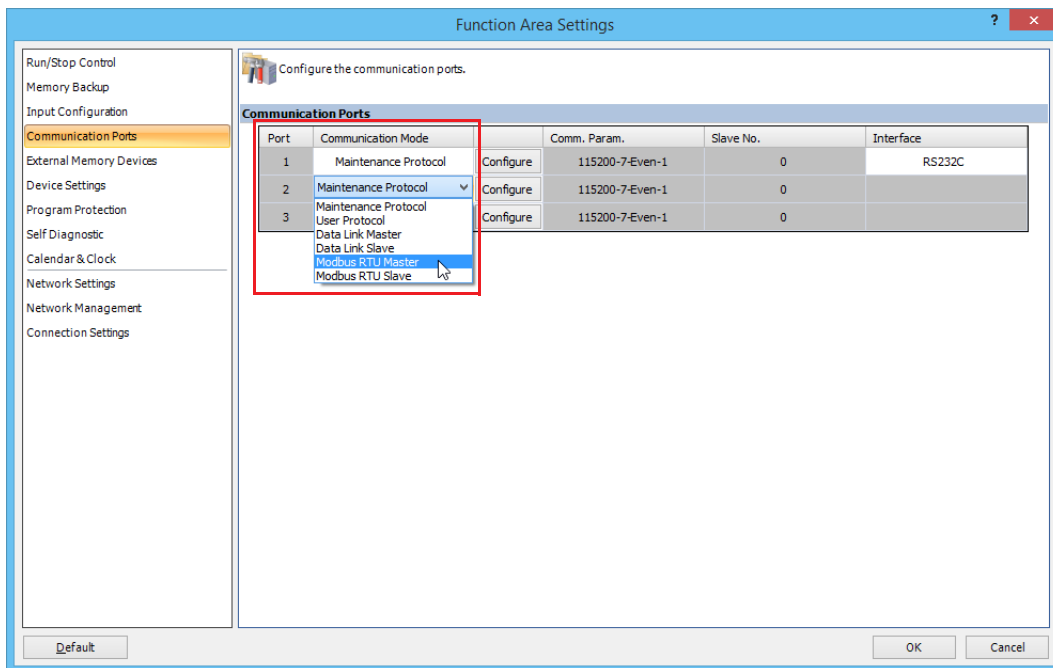

- Configure the **Modbus RTU Master Request Table** dialog box items.
For details, see "Modbus RTU Master Communication" on page 6-3.
- Download the user program to the FC6A Series MICROSmart.
This concludes configuring the settings to use the Modbus RTU pass-through function.


Plus CPU module

1. On the WindLDR **Configuration** tab, in the **Function Area Settings** group, click **Connection Settings**. The **Function Area Settings** dialog box is displayed.
2. Click **Communication Mode** for the connection number that will be used and select **Modbus TCP Server**. The **Modbus TCP Server** dialog box is displayed.

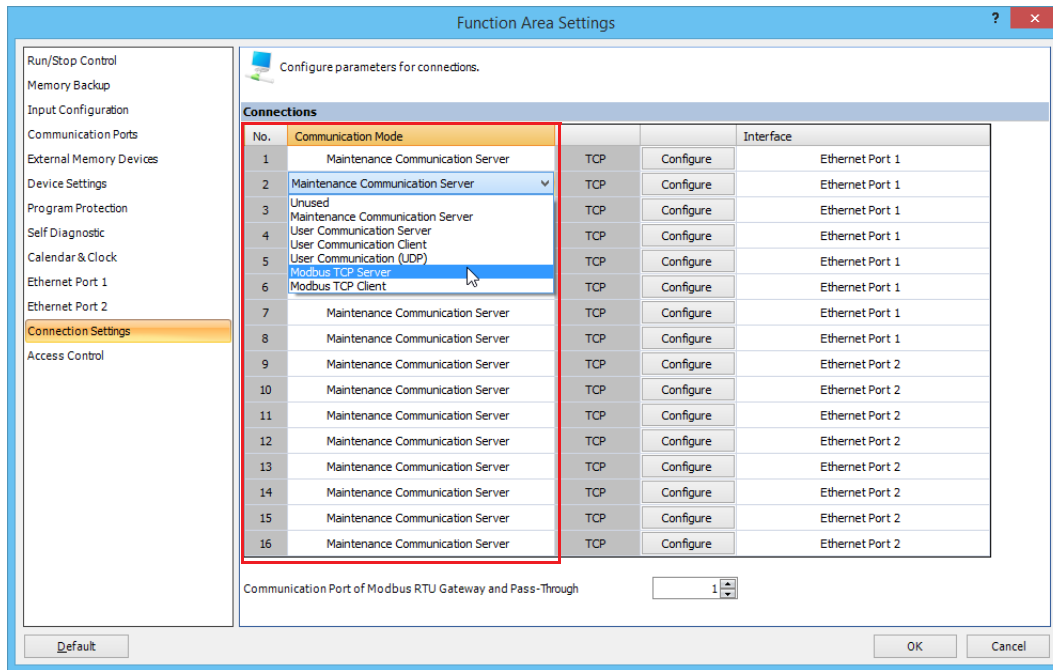

Note: For Modbus RTU pass-through using the maintenance communication server, select **Maintenance Communication Server**. The **Maintenance Communication Server** dialog box is displayed.

3. Select the **Enable Modbus TCP to Modbus RTU Gateway** check box and configure the local host port number and allow access by IP address. Set a number that is different from the other server connections for the local host port number of the port that will use the pass-through function.

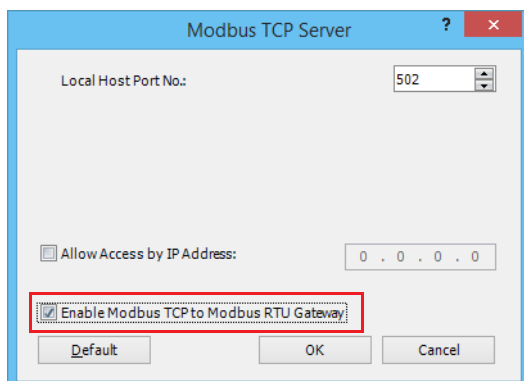


Note: For the **Maintenance Communication Server** dialog box, select the **Enable Pass-Through over Modbus RTU** check box and configure the local host port number and allow access by IP address.

4. Click **OK**.

6: MODBUS COMMUNICATION

5. With **Communication Port of Modbus RTU Gateway and Pass-Through**, set the port number that will be used (1 to 33).

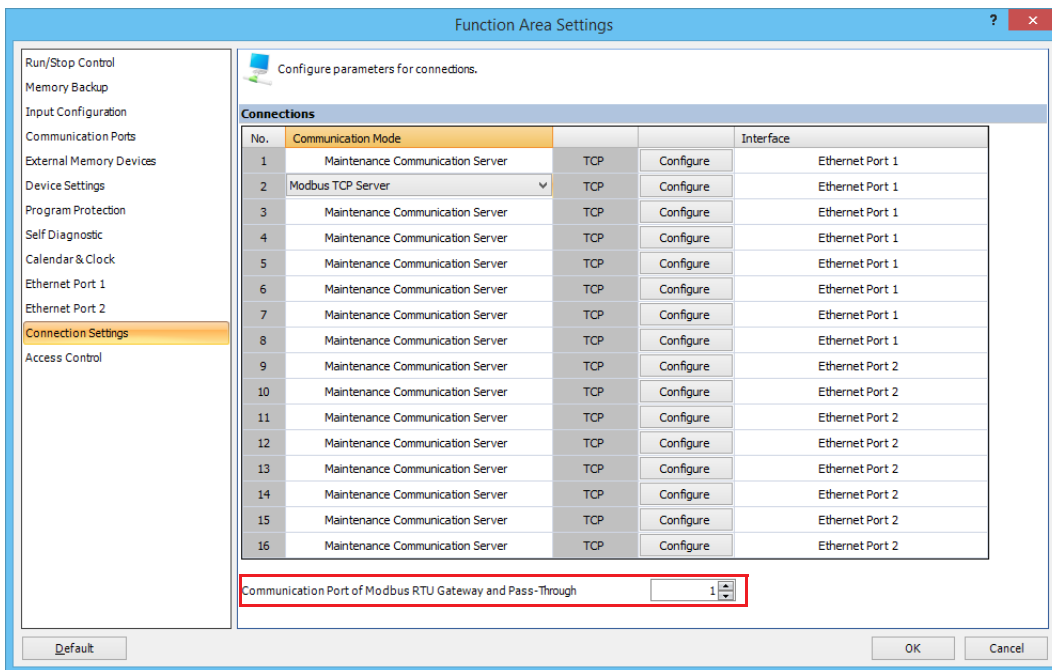

6. Download the user program to the FC6A Series MICROSmart.

This concludes configuring the settings to use the Modbus RTU pass-through function.

7: DATA LINK COMMUNICATION

Introduction

This chapter describes the data link communication function used to set up a distributed control system.

In data link communication, data can be exchanged between a master station and slave stations by connecting a maximum of 31 slave station FC6A Series MICROSmarts to a master station FC6A Series MICROSmart. The master station has a total of 13 words worth of data registers for each slave station: 6 words for sending data to the slave station, 6 words for receiving data from the slave station, and 1 word for the communication status/error. Each slave station has a total of 13 words worth of data registers: 6 words for sending data to the master station, 6 words for receiving data from the master station, and 1 word for the communication status/error.

Data link communication proceeds independently of the user program execution, and the data registers for the data link communication are updated at the END processing.

The FC6A Series MICROSmart data link function is compatible with the data link functions of the MICROSmart FC5A Series and FC4A Series.

One CPU module can be either a master station or a slave station. Data link master and slave cannot be used at the same time.

Communication Ports Used in Data Link Communication

Supported models and communication ports are as follows.

Communication Port	All-in-One CPU Module			CAN J1939 All-in-One CPU Module	Plus CPU Module	
	16-I/O Type	24-I/O Type	40-I/O Type		Plus 16-I/O Type	Plus 32-I/O Type
Port 1	Yes	Yes	Yes	—	Yes ^{*2}	Yes ^{*2}
Port 2	Yes ^{*1}	Yes ^{*1}	Yes ^{*1}	Yes ^{*1}	Yes ^{*2}	Yes ^{*2}
Port 3	—	—	Yes ^{*1}	Yes ^{*1}	Yes ^{*3}	Yes ^{*3}
Port 4 to 33	Yes (3 maximum) ^{*4}				Yes (15 maximum) ^{*5}	

*1 When an RS232C communication cartridge or RS485 communication cartridge is connected.

*2 When a cartridge base module and an RS232C communication cartridge or RS485 communication cartridge are connected.

*3 When the HMI module and an RS232C communication cartridge or RS485 communication cartridge are connected.

*4 Up to three communication modules can be connected to the All-in-One CPU module and CAN J1939 All-in-One CPU module, expanding the communication ports 4 to 9.

*5 Up to 15 communication modules can be connected to the Plus CPU module, expanding the communication ports 4 to 33.

Data Link Specifications

Mode	Details
Electric Specifications	Compliance with EIA RS485
Baud Rate	19,200, 38,400, 57,600 bps
Synchronization	Start-stop synchronization Start bit: 1 Data bits: 7 Parity: Even Stop bit: 1
Communication Cable	Shielded twisted pair cable
Maximum Cable Length	200 m (656 feet)
Maximum Slave Stations	31 slave stations
Transmit/Receive Data	Transmit data: 186 words maximum, Receive data: 186 words maximum 0 through 6 words each for transmission and receiving per slave station

Data Updating


Mode	Details
Effect on Scan Time	Communication processing between masters and slaves is not synchronized with the user program, and there is no effect on the scan time.
Data Update Timing	Data updating for both masters and slaves is performed in END processing. The update timing can be checked with the communication completed flag.
Master-compatible Models	FC6A Series MICROSmart (FC4A Series MICROSmart/FC5A Series MICROSmart)
Slave-compatible Models	FC6A Series MICROSmart (FC4A Series MICROSmart/FC5A Series MICROSmart)

The master station sends the appropriate amount of data (in units of words) to the slave stations. The slave stations that received this transmission send an amount of data matching the number of words received to the master station. In this way data is exchanged. The data refresh is performed on the master and slave stations during the END processing. The master station can only exchange data with one slave station during one communication cycle.

If 31 slave stations are connected, the master station requires 31 communication cycles to exchange data with all slave stations. The master station turns on the communication complete relay for only one scan after the completion of the communication cycle with a slave station.

Data Link System Setup

The data link function can be used by setting port 1 of the FC6A Series MICROSmart to RS-485 or by using a RS-485 communication cartridge in port 2 or port 3.

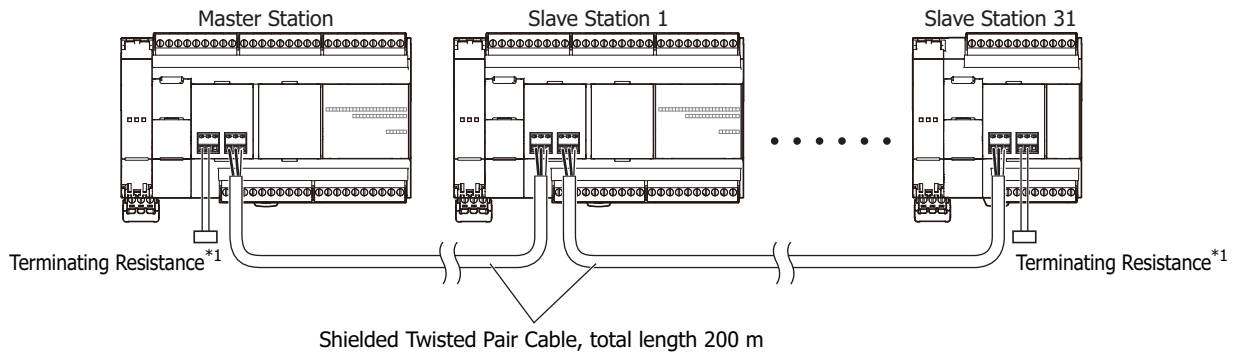

*1 When communication quality is unstable, add terminating resistance matched to the characteristic impedance to both ends. Use resistance with a rating of 1/2 W or higher.

7: DATA LINK COMMUNICATION

Data Register Allocation for Transmit/Receive Data

The master station has 12 data registers assigned for data communication with each slave station. Each slave station has 12 data registers assigned for data communication with the master station. When data is set in data registers at the master station assigned for data link communication, the data is sent to the corresponding data registers at a slave station. When data is set in data registers at a slave station assigned for data link communication, the data is sent to the corresponding data registers at the master station.

Master Station

Slave Station Number	Data Register	Transmit/Receive Data	Slave Station Number	Data Register	Transmit/Receive Data
Slave 1	D900-D905	Transmit data to slave 1	Slave 17	D1092-D1097	Transmit data to slave 17
	D906-D911	Receive data from slave 1		D1098-D1103	Receive data from slave 17
Slave 2	D912-D917	Transmit data to slave 2	Slave 18	D1104-D1109	Transmit data to slave 18
	D918-D923	Receive data from slave 2		D1110-D1115	Receive data from slave 18
Slave 3	D924-D929	Transmit data to slave 3	Slave 19	D1116-D1121	Transmit data to slave 19
	D930-D935	Receive data from slave 3		D1122-D1127	Receive data from slave 19
Slave 4	D936-D941	Transmit data to slave 4	Slave 20	D1128-D1133	Transmit data to slave 20
	D942-D947	Receive data from slave 4		D1134-D1139	Receive data from slave 20
Slave 5	D948-D953	Transmit data to slave 5	Slave 21	D1140-D1145	Transmit data to slave 21
	D954-D959	Receive data from slave 5		D1146-D1151	Receive data from slave 21
Slave 6	D960-D965	Transmit data to slave 6	Slave 22	D1152-D1157	Transmit data to slave 22
	D966-D971	Receive data from slave 6		D1158-D1163	Receive data from slave 22
Slave 7	D972-D977	Transmit data to slave 7	Slave 23	D1164-D1169	Transmit data to slave 23
	D978-D983	Receive data from slave 7		D1170-D1175	Receive data from slave 23
Slave 8	D984-D989	Transmit data to slave 8	Slave 24	D1176-D1181	Transmit data to slave 24
	D990-D995	Receive data from slave 8		D1182-D1187	Receive data from slave 24
Slave 9	D996-D1001	Transmit data to slave 9	Slave 25	D1188-D1193	Transmit data to slave 25
	D1002-D1007	Receive data from slave 9		D1194-D1199	Receive data from slave 25
Slave 10	D1008-D1013	Transmit data to slave 10	Slave 26	D1200-D1205	Transmit data to slave 26
	D1014-D1019	Receive data from slave 10		D1206-D1211	Receive data from slave 26
Slave 11	D1020-D1025	Transmit data to slave 11	Slave 27	D1212-D1217	Transmit data to slave 27
	D1026-D1031	Receive data from slave 11		D1218-D1223	Receive data from slave 27
Slave 12	D1032-D1037	Transmit data to slave 12	Slave 28	D1224-D1229	Transmit data to slave 28
	D1038-D1043	Receive data from slave 12		D1230-D1235	Receive data from slave 28
Slave 13	D1044-D1049	Transmit data to slave 13	Slave 29	D1236-D1241	Transmit data to slave 29
	D1050-D1055	Receive data from slave 13		D1242-D1247	Receive data from slave 29
Slave 14	D1056-D1061	Transmit data to slave 14	Slave 30	D1248-D1253	Transmit data to slave 30
	D1062-D1067	Receive data from slave 14		D1254-D1259	Receive data from slave 30
Slave 15	D1068-D1073	Transmit data to slave 15	Slave 31	D1260-D1265	Transmit data to slave 31
	D1074-D1079	Receive data from slave 15		D1266-D1271	Receive data from slave 31
Slave 16	D1080-D1085	Transmit data to slave 16			
	D1086-D1091	Receive data from slave 16			

If any slave stations are not connected, master station data registers which are assigned to the vacant slave stations can be used as ordinary data registers.

Slave Station

Data	Data Register	Transmit/Receive Data
Slave Station Data	D900-D905	Transmit data to master station
	D906-D911	Receive data from master station

Slave station data registers D912 through D1271 can be used as ordinary data registers.

Special Data Registers for Data Link Communication Error

In addition to data registers assigned for data communication, the master station has 31 special data registers and each slave station has one special data register to store data link communication error codes. If any communication error occurs in the data link system, communication error codes are set to a corresponding data register for link communication error at the master station and to data register D8069 at the slave station. For details of link communication error codes, see below.

If a communication error occurs in the data link communication system, the data is resent two times. If the error still exists after three attempts, then the error code is set to the data registers for data link communication error. Since the error code is not communicated between the master and slave stations, error codes must be cleared individually.

Master Station

Special Data Register	Data Link Communication Error Data	Special Data Register	Data Link Communication Error Data
D8069	Slave station 1 communication error	D8085	Slave station 17 communication error
D8070	Slave station 2 communication error	D8086	Slave station 18 communication error
D8071	Slave station 3 communication error	D8087	Slave station 19 communication error
D8072	Slave station 4 communication error	D8088	Slave station 20 communication error
D8073	Slave station 5 communication error	D8089	Slave station 21 communication error
D8074	Slave station 6 communication error	D8090	Slave station 22 communication error
D8075	Slave station 7 communication error	D8091	Slave station 23 communication error
D8076	Slave station 8 communication error	D8092	Slave station 24 communication error
D8077	Slave station 9 communication error	D8093	Slave station 25 communication error
D8078	Slave station 10 communication error	D8094	Slave station 26 communication error
D8079	Slave station 11 communication error	D8095	Slave station 27 communication error
D8080	Slave station 12 communication error	D8096	Slave station 28 communication error
D8081	Slave station 13 communication error	D8097	Slave station 29 communication error
D8082	Slave station 14 communication error	D8098	Slave station 30 communication error
D8083	Slave station 15 communication error	D8099	Slave station 31 communication error
D8084	Slave station 16 communication error	—	—

If any slave stations are not connected, master station data registers which are assigned to the vacant slave stations can be used as ordinary data registers.

Slave Station

Special Data Register	Data Link Communication Error Data
D8069	Slave station communication error

Note: Slave station data registers D8070 through D8099 can be used as ordinary data registers.

Data Link Communication Error Code

When an error occurs during the data link, the data is sent again (the operation is retried) up to twice.

If an error occurs on the third attempt to send the data, the error number is set in the data register for the communication status/error of the master station and the corresponding slave station.

Error Code	Error Details
1h (1)	Overrun error (data is received when the receive data registers are full)
2h (2)	Framing error (failure to detect start or stop bit)
4h (4)	Parity error (an error was found by the parity check)
8h (8)	Receive timeout (line disconnection)
10h (16)	BCC (block check character) error (disparity with data received up to BCC)
20h (32)	Retry cycle over (error occurred in all 3 trials of communication)
40h (64)	I/O definition quantity error (discrepancy of transmit/receive station number or data quantity)


When more than one error is detected in the data link system, the total of error codes is indicated. For example, when framing error (error code 2h) and BCC error (error code 10h) are found, error code 12h (18) is stored.

7: DATA LINK COMMUNICATION


Data Link Communication between Master and Slave Stations

The master station has 6 data registers assigned to transmit data to a slave station and 6 data registers assigned to receive data from a slave station. The quantity of data registers for data link can be selected from 0 through 6 using WindLDR. The following examples illustrate how data is exchanged between the master and slave stations when 2 or 6 data registers are used for data link communication with each of 31 slave stations.

Example 1: Transmit Data 2 Words and Receive Data 2 Words

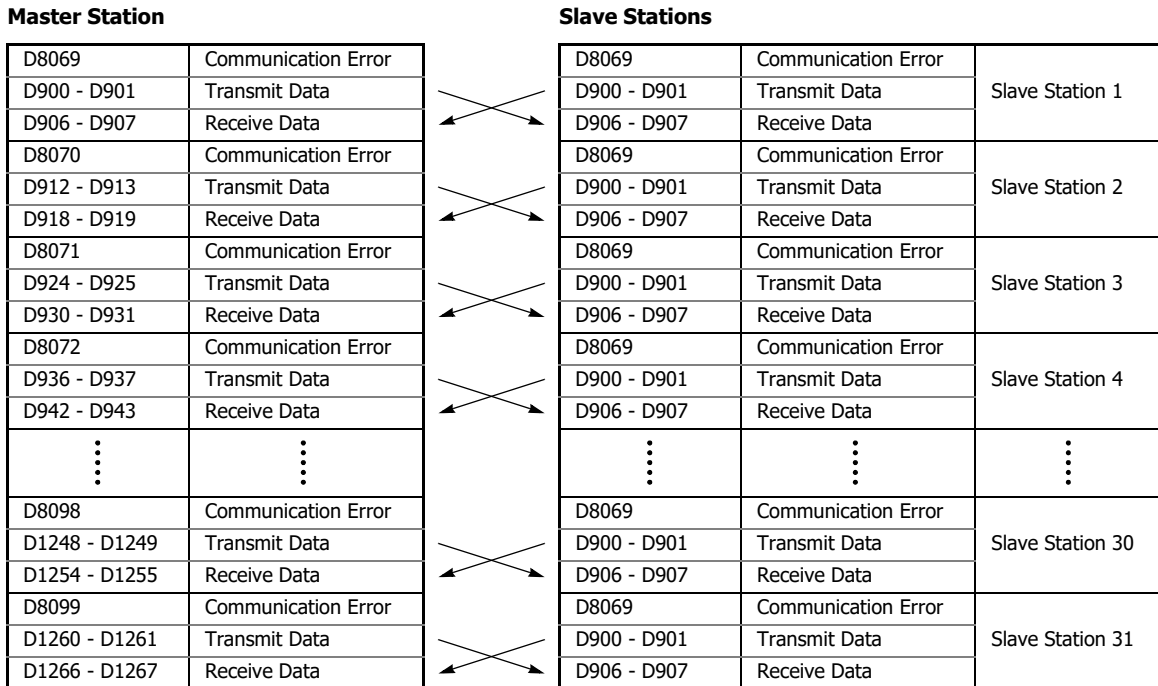

Example 2: Transmit Data 6 Words and Receive Data 6 Words

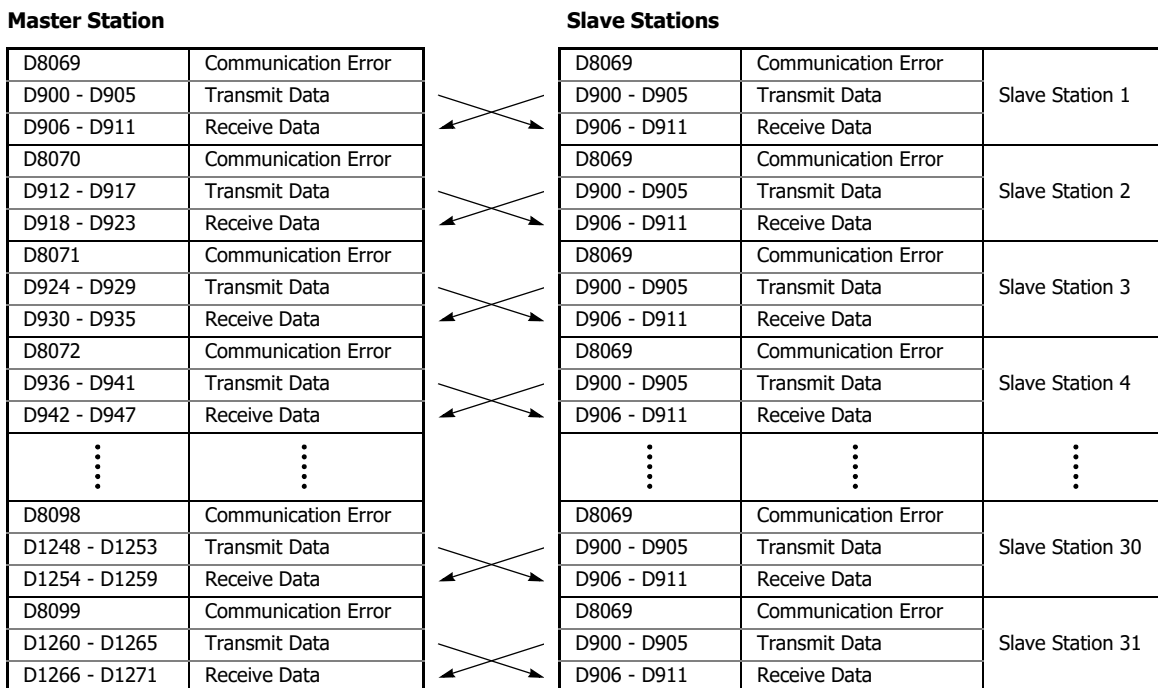

Note: When using port 2 or port 3, the communication status and error are stored in the registers configured in **Function Area Settings**.

Special Internal Relays for Data Link Communication

Special internal relays M8005 through M8007 and M8080 through M8117 are assigned for the data link communication.

M8005 Data Link Communication Error

When an error occurs during communication in the data link system, M8005 turns on. The M8005 status is maintained when the error is cleared and remains on until M8005 is reset using WindLDR or until the CPU is turned off. The cause of the data link communication error can be checked using **Online > Monitor > Monitor**, followed by **Online > Status > Error Status: Details**. See "Data Link Communication Error Code" on page 7-5.

When performing communication on port 2 or port 3, this function is disabled.

M8006 Data Link Communication Prohibit Flag (Master Station)

When M8006 at the master station is turned on in the data link system, data link communication is stopped. When M8006 is turned off, data link communication resumes. The M8006 status is maintained when the CPU is turned off and remains on until M8006 is reset using WindLDR.

When M8006 is on at the master station, M8007 is turned on at slave stations in the data link system.

M8007 Data Link Communication Initialize Flag (Master Station)

Data Link Communication Stop Flag (Slave Station)

M8007 has a different function at the master or slave station of the data link communication system.

Master station: Data link communication initialize flag

When M8007 at the master station is turned on during operation, the link configuration is checked to initialize the data link system. When a slave station is powered up after the master station, turn M8007 on to initialize the data link system. After a data link system setup is changed, M8007 must also be turned on to ensure correct communication.

Slave station: Data link communication stop flag

When a slave station does not receive communication data from the master station for 10 seconds or more in the data link system, M8007 turns on. When a slave station does not receive data in 10 seconds after initializing the data link system, M8007 also turns on at the slave station. When the slave station receives correct communication data, M8007 turns off.

M8080-M8116 Slave Station Communication Completion Relay (Master Station)

Special internal relays M8080 through M8116 are used to indicate the completion of data refresh. When data link communication with a slave station is complete, a special internal relay assigned for the slave station is turned on for one scan time at the master station.

Special Internal Relay	Slave Station Number	Special Internal Relay	Slave Station Number	Special Internal Relay	Slave Station Number
M8080	Slave Station 1	M8092	Slave Station 11	M8104	Slave Station 21
M8081	Slave Station 2	M8093	Slave Station 12	M8105	Slave Station 22
M8082	Slave Station 3	M8094	Slave Station 13	M8106	Slave Station 23
M8083	Slave Station 4	M8095	Slave Station 14	M8107	Slave Station 24
M8084	Slave Station 5	M8096	Slave Station 15	M8110	Slave Station 25
M8085	Slave Station 6	M8097	Slave Station 16	M8111	Slave Station 26
M8086	Slave Station 7	M8100	Slave Station 17	M8112	Slave Station 27
M8087	Slave Station 8	M8101	Slave Station 18	M8113	Slave Station 28
M8090	Slave Station 9	M8102	Slave Station 19	M8114	Slave Station 29
M8091	Slave Station 10	M8103	Slave Station 20	M8115	Slave Station 30
—	—	—	—	M8116	Slave Station 31

M8080 Communication Completion Relay (Slave Station)

When data link communication with a master station is complete, special internal relay M8080 at the slave station is turned on for one scan time.

M8117 All Slave Station Communication Completion Relay


When data link communication with all slave stations is complete, special internal relay M8117 at the master station is turned on for one scan time. M8117 at slave stations does not go on.

Programming WindLDR


The Communication page in the **Function Area Settings** is used to program the data link master and slave stations. Since these settings relate to the user program, the user program must be downloaded to the CPU module after changing any of these settings.

Data Link Master Station

1. From the WindLDR menu bar, select **Configuration > Comm. Ports**.
The **Function Area Settings** dialog box for Communication Ports appears.
2. Click **Communication Mode** for the port to use and select **Data Link Master**.
The **Data Link Master Settings** dialog box appears.

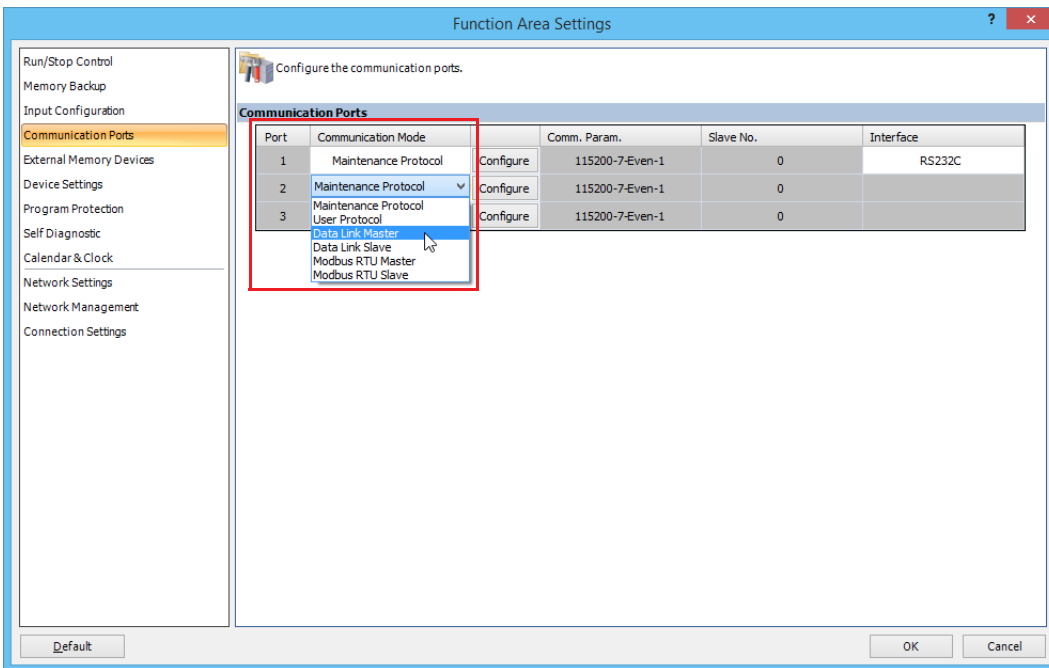

3. Set the Baud Rate, Slaves, and Status DR under Master Settings.
4. Select a slave number from the list, and then set the number of words to transmit/receive.
To make the same settings for all slave stations in the list, click **Apply to all slaves**.

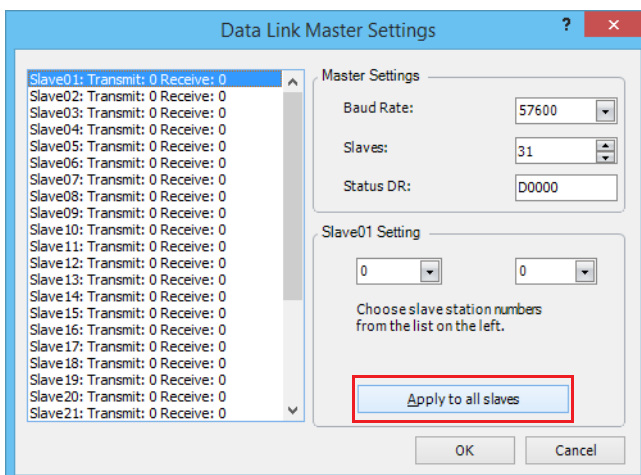

Number of words to transmit: The number of words worth of data to transmit from the master station to the slave stations
 Number of words to receive: The number of words worth of data that the master station receives from each slave station

5. Click **OK**.
6. Create the user program.
7. Transfer the user program.

 
This concludes configuring the settings.

Note: When you use data link communication, you have to turn on the slave stations first before turning on the master station. If you turn on the master station before turning on the slave stations, the master station cannot recognize the slave stations. If the master station cannot recognize the slave stations, you have to initialize the data link. To initialize the data link, click **Initialize Data Link** in WindLDR or turn on special internal relay M8007 in the user program.

1. Select **Online > Monitor > Monitor > Start Monitor**.
WindLDR enters monitor mode.
2. Select **Online > PLC > Initialize > Initialize Data Link**.
The slave stations are recognized by the master station.

If you cannot perform WindLDR maintenance communication, insert the following program into the master station's user program.


Stop and then run the master station to have it recognize the slave stations.



When operation (RUN) starts, M8007 is turned on for a period of one scan, and the data link is initialized.

Data Link Slave Station


1. From the WindLDR menu bar, select **Configuration > Comm. Ports**.
The **Function Area Settings** dialog box for Communication Ports appears.
2. Click **Communication Mode** for the port to use and select **Data Link Slave**.
The **Data Link Slave Settings** dialog box appears.

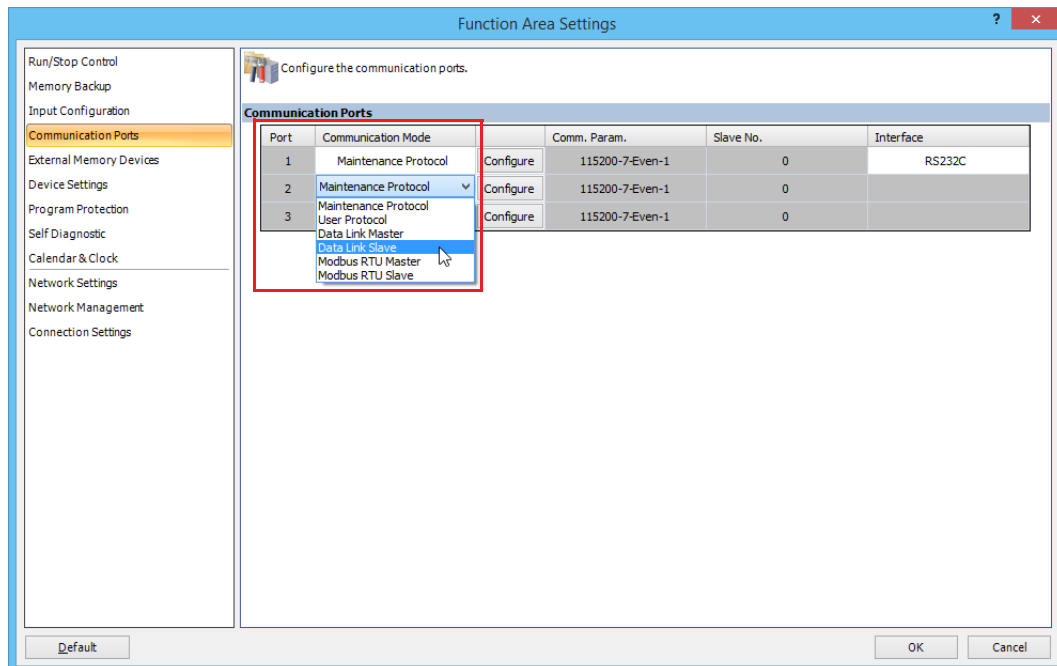

7: DATA LINK COMMUNICATION

3. Set the Slave No. and the Baud Rate.

Select **Constant** or **Data Register** under **Slave No.** If you select **Constant**, set the slave No. If you select **Data Register**, write the slave No. into the special data register.

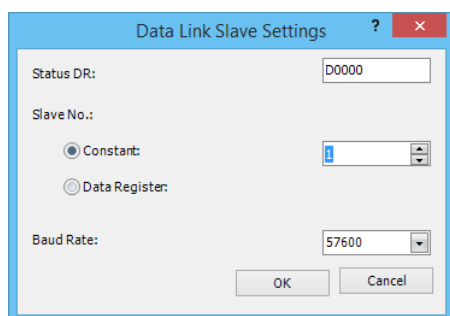

4. Click **OK**.

5. Create the user program.

6. Transfer the user program.

This concludes configuring the settings.

Note: If you select **Data Register** under **Slave No.** in the **Data Link Slave Settings** dialog box, you can change the slave No. of the slave station without downloading the user program by writing the slave No. into the following special data registers.

Communication Port	Special Data Register
Port 1	D8100
Port 2	D8102
Port 3	D8103
Port 4 to 9 ^{*1}	D8040 to D8045
Port 10 to 33 ^{*1*2}	D8735 to D8758

*1 When communication modules are connected.

*2 Plus CPU module only.

Note: After making changes, correctly initialize the master station and set the slave stations.

Use one of the following methods to initialize the master station.

(1) Turn off the master station, and then turn it back on.

(2) Set M8007 on the master station.

(3) Select **Online > PLC > Initialize > Initialize Data Link**.

The valid slave No. are 1 to 31. If you specify any other value, the station number set in the **Function Area Settings** will be used.

Data Refresh

In the data link communication, the master station communicates with only one slave station in one communication cycle. When a slave station receives a communication from the master station, the slave station returns data stored in data registers assigned for data link communication. After receiving data from slave stations, the master station stores the data into data registers allocated to each slave station. The process of updating data into data registers is called refresh. When the maximum 31 slave stations are connected, the master station requires 31 communication cycles to communicate with all slave stations.

Mode	Separate Refresh Mode
Scan Time	Since the communication between the master station and slave stations proceeds independently of the user program scanning, the scan time is not affected.
Data Refresh Timing	At both master and slave stations, received data is refreshed at the END processing. Refresh completion can be confirmed with communication completion special internal relays M8080 through M8117.
Applicable Master Station	FC6A Series MICROSmart (FC4A/FC5A MICROSmart)
Applicable Slave Station	FC6A Series MICROSmart (FC4A/FC5A MICROSmart)

Both master and slave stations refresh communication data at the END processing. When data refresh is complete, communication completion special internal relays M8080 through M8116 (slave station communication completion relay) go on at the master station for one scan time after the data refresh. At each slave station, special internal relay M8080 (communication completion relay) goes on.

When the master station completes communication with all slave stations, special internal relay M8117 (all slave station communication completion relay) goes on at the master station for one scan time.

Total Refresh Time at Master Station for Communication with All Slave Stations (Trfn)

The master station requires the following time to refresh the transmit and receive data for communication with all slave stations, that is the total of refresh times.

$$[\text{Baud Rate } 19,200 \text{ bps}] \text{Trfn} = \sum \text{Trf} = \sum \{4.2 \text{ ms} + 2.4 \text{ ms} \times (\text{Transmit Words} + \text{Receive Words}) + 1 \text{ scan time}\}$$

$$[\text{Baud Rate } 38,400 \text{ bps}] \text{Trfn} = \sum \text{Trf} = \sum \{2.2 \text{ ms} + 1.3 \text{ ms} \times (\text{Transmit Words} + \text{Receive Words}) + 1 \text{ scan time}\}$$

$$[\text{Baud Rate } 57,600 \text{ bps}] \text{Trfn} = \sum \text{Trf} = \sum \{1.6 \text{ ms} + 0.9 \text{ ms} \times (\text{Transmit Words} + \text{Receive Words}) + 1 \text{ scan time}\}$$

Refresh Time

When data link communication is performed with such parameters as transmit words 6, receive words 6, slave stations 8, and average scan time 20 ms, then the total refresh time Trf8 for communication with all eight slave stations will be:

$$[\text{Baud Rate } 19,200 \text{ bps}] \text{Trf8} = \{4.2 \text{ ms} + 2.4 \text{ ms} \times (6 + 6) + 20 \text{ ms}\} \times 8 = 424.0 \text{ ms}$$

$$[\text{Baud Rate } 38,400 \text{ bps}] \text{Trf8} = \{2.2 \text{ ms} + 1.3 \text{ ms} \times (6 + 6) + 20 \text{ ms}\} \times 8 = 302.4 \text{ ms}$$


$$[\text{Baud Rate } 57,600 \text{ bps}] \text{Trf8} = \{1.6 \text{ ms} + 0.9 \text{ ms} \times (6 + 6) + 20 \text{ ms}\} \times 8 = 259.2 \text{ ms}$$

Data Link with Other PLCs

The FC6A Series MICROSmart can exchange data by communicating with IDEC FC4A Series and FC5A Series MICROSmart (data link).

Data Link with FC4A/FC5A

FC4A/FC5A Settings	MICROSmart Settings
Transmit data: 6 words Receive data: 6 words Baud rate: 19,200 or 38,400 bps	Set the data link station slave station to 1 to 31.

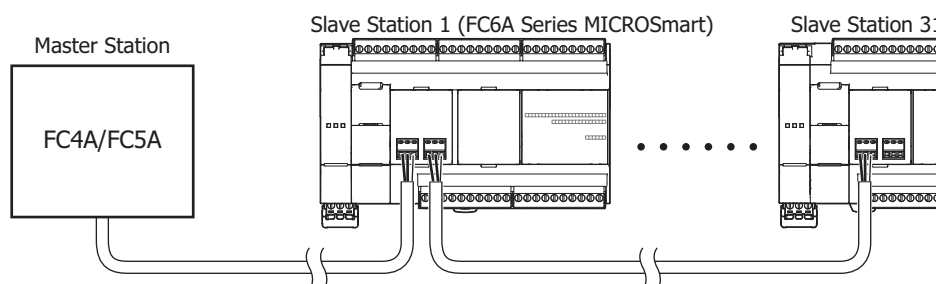

8: J1939 COMMUNICATION

This chapter describes J1939 communication in the CAN J1939 All-in-One CPU module.

The following abbreviations are used in the text to simplify the descriptions.

Abbreviation	Official Name
CAN	Controller Area Network
ECU	Electronic Controller Unit
NIECU	Network Interconnection ECU
CA	Controller Application
PDU	Protocol Data Unit
PGN	Parameter Group Number
SA	Source Address
DA	Destination Address
SAE	Society of Automotive Engineers
SPN	Suspect Parameter Number


Overview of J1939 Communication over CAN

The CAN J1939 All-in-One CPU module is compatible with CAN communication based on SAE J1939. The CAN J1939 All-in-One CPU module can communicate with other J1939 communication-compatible devices by connecting the CAN port to a J1939 communication network. For details on J1939 communication, refer to the SAE J1939 standard.

SAE J1939 Overview

J1939 Communication Network

A J1939 communication network is composed of ECUs (engine, brake, etc.) and NIECUs (repeaters, routers, etc.), and each ECU has one or more CAs. A CA is assigned an address between 0 and 253 and a unique 64-bit ID (NAME), and messages can be exchanged between CAs using the addresses. If there is an address conflict between CAs, the conflict will be resolved based on the priority indicated in NAME.

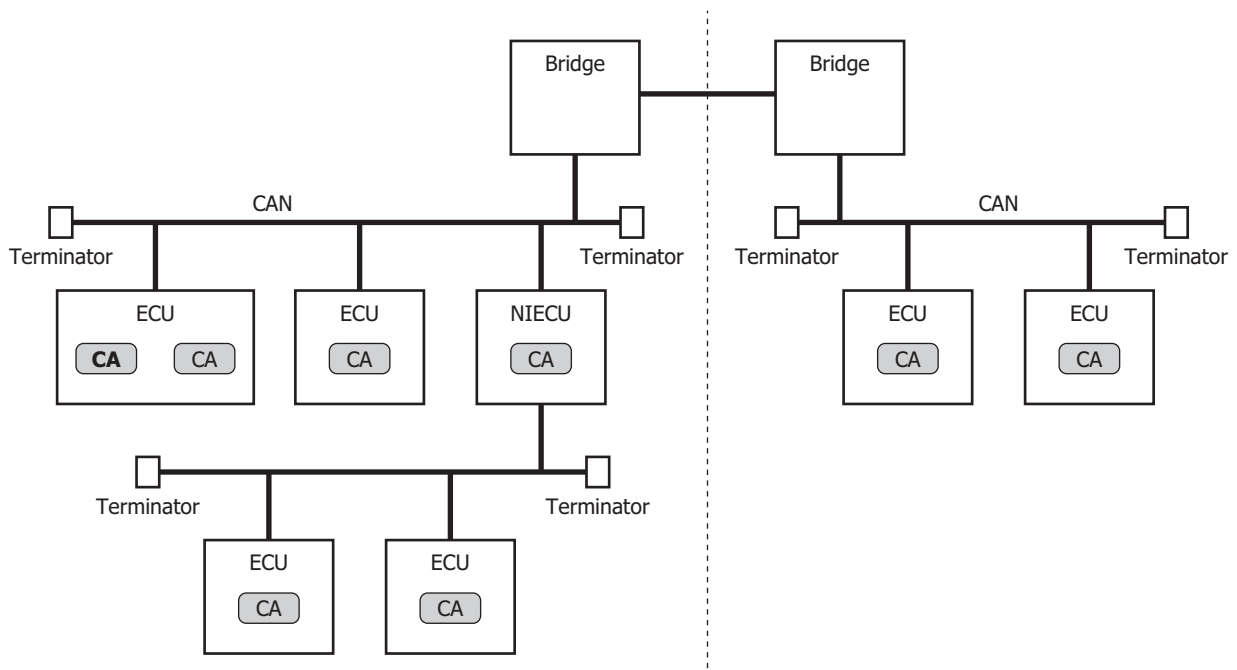

8: J1939 COMMUNICATION

Device Address

Addresses are defined between 0 and 255.

However, 254 (null address) is the result of an address conflict and is only used when an address cannot be obtained. 255 (global address) is used when broadcasting messages to all CAs without specifying a specific CA.

Address	Description	Details
0 to 253	Address range allocated to CAs	For a portion of addresses, the use has been determined according to the type of connected device. For details, refer to the SAE J1939 standard.
254	Null address	Set as the result of an address conflict when an address between 0 and 253 could not be obtained.
255	Global address	Used when transmitting a message as a broadcast.

NAME (64 bits total)

The 64-bit NAME is split into multiple fields. The content for a portion of the fields is already defined in the standard. NAME must be set to a value that is not duplicated by another device on the same J1939 communication network. For details on the definition of each bit, refer to the SAE J1939 standard.

Field Name	Bit Length	SAE Defined*1	Item
Arbitrary Address Capable	1 (high order)	—	Dynamic address support
Industry Group	3	Yes	Industry group
Vehicle System Instance	4	—	Vehicle system instance
Vehicle System	7	Yes	Vehicle system
Reserved	1	Yes	Reserved (fixed as 0)
Function	8	Yes	Function
Function Instance	5	—	Function instance
ECU Instance	3	—	ECU instance
Manufacturer Code	11	Yes	Manufacturer code
Identify Number	21 (low order)	—	ID number

*1 "Yes" items are defined in the standard. Set those items according to the used network and purpose.

Note: If the network that will be used is not known, set NAME as the maximum value of each field.

The CAN J1939 All-in-One CPU module resolves address conflicts with CAs according to the value of the Arbitrary Address Capable bit.

If the Arbitrary Address Capable bit is 0

The CAN J1939 All-in-One CPU module operates as a fixed address CA. If there is a CA that has the same address as the local address, the CAN J1939 All-in-One CPU module can exchange messages with the set local address if its priority is high.

If the CAN J1939 All-in-One CPU module priority is low, the local address is 254 (null address).

If the Arbitrary Address Capable bit is 1

The CAN J1939 All-in-One CPU module operates as a dynamic address CA. If there are CAs that duplicate the local address, the local address is compared to that of the corresponding CA, and if the CAN J1939 All-in-One CPU module priority is lower, it repeatedly attempts to acquire another address. When the local address has been determined, messages can be exchanged.

If the local address was not determined by the last address, it is set to 254 (null address).

PGN

CAs exchange parameter information such as the engine RPM and the on/off status of switches. These parameters are defined in advance and assigned unique ID numbers (SPNs). The parameters are also grouped according to content, and these parameter groups are assigned unique ID numbers (PGN).

CAs exchange messages for each PGN.

Example: SPNs that make up PGN 1792 General Purpose Valve Pressure*1


SPN	Parameter Name	Data Size
4086	Valve Load Sense Pressure	2 bytes
4087	Valve Pilot Pressure	1 byte
4088	Valve Assembly Load sense Pressure	2 bytes
4089	Valve Assembly Supply Pressure	2 bytes

*1 From J1939-71

Message

CAs use the data frame in the CAN extended frame format that holds the 29-bit CAN ID to exchange messages. The CAN ID is composed of the priority, PGN, and source address. The PGN is composed of the EDP, DP, PDU Format (PDUF), and PDU Specific (PDUS).

Message

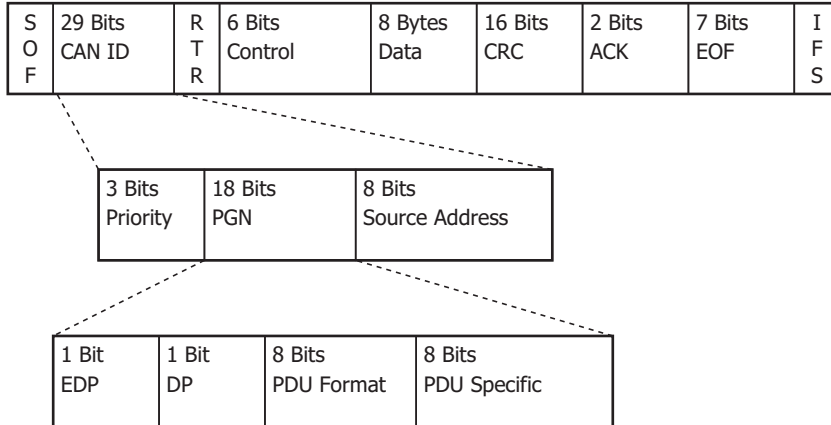

PDU 1 format

When PDUF is 00h to EFh, the PGN is defined in the format called the PDU1 format. The PGN is defined with EDP, DP, and PDUF, and it is handled as a PGN for one-to-one communication. At this time, the destination address is stored in the PDUS. However, when the PDUS is specified as 255 (global address), the PGN is handled as a broadcast PGN, not as one-to-one communication.


PDU 2 format

When PDUF is F0h to FFh, the PGN is defined in the format called the PDU2 format. The PGN is defined with EDP, DP, PDUF, and PDUS, and it is handled as a PGN for broadcast communication.

Since the data that can be stored in the CAN data frame is a maximum of 8 bytes, when the PGN data is 9 bytes or longer, messages are split into 8-byte packets and exchanged as multi-packet messages.

Overview of J1939 Communication Supported by the All-in-One CPU Module

The CAN J1939 All-in-One CPU module can connect to a J1939 communication network as an ECU that has one CA. It is compatible with the network management function that manages addresses between CAs so address conflicts can be resolved and dynamic addresses can be assigned.

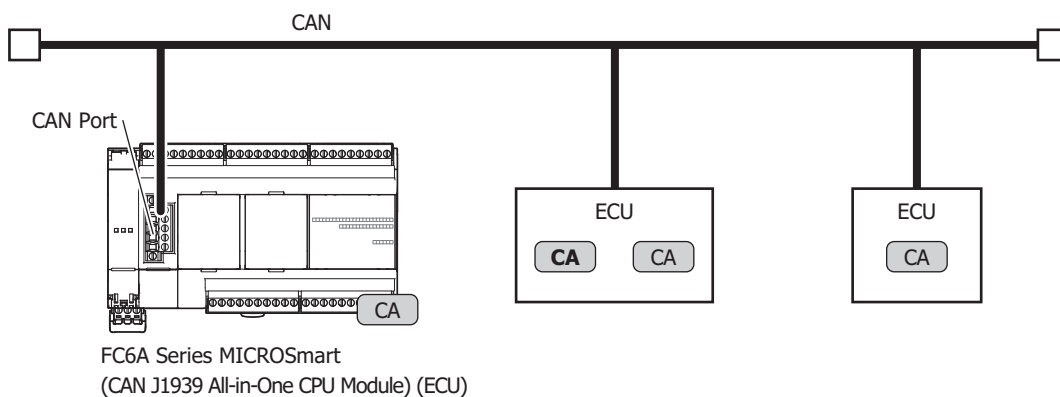

8: J1939 COMMUNICATION

Specifications

Item	Description	Comments
Supported SAE J1939	SAE J1939-11: Physical Layer, 250 K bits/s, Twisted Shielded Pair SAE J1939-15: Reduced Physical Layer, 250 K bits/s, Un-Shielded Twisted Pair SAE J1939-21: Data Link Layer SAE J1939-71: Vehicle Application Layer SAE J1939-73: Application Layer - Diagnostics SAE J1939-75: Application Layer - Generator Sets and Industrial SAE J1939-81: Network Management	
Baud Rate	250 k [bps]	
Transmit Methods	Event transmission, cycle transmission	
Receive Methods	Receive in ladder END, with cycle monitoring	
Maximum Number of Nodes	128 nodes	The number of CAs that can be managed with address management
Maximum Number of Send Message	100	
Maximum Number of Received Messages	200	
Maximum Length of Transmitted Message	252 bytes	
Maximum Length of Receive Message	252 bytes	
Network Management	Enabled	Resolves address conflicts, monitors the addresses of neighboring CAs

Special PGNs Handled by the CAN J1939 All-in-One CPU Module

A portion of PGNs are used internally to control the MICROSmart. These PGNs cannot be received, even when they are set as receive messages.

PGNs that cannot be set as receive messages

PGN	Parameter Name	Description
59392 (E800h)	Acknowledgment	Used for responses between CAs.
59904 (EA00h)	Request	Used to request PGN transmission.
60160 (EB00h)	Data Transfer Message	Used to exchange multi-packet messages 9 bytes or longer.
60416 (EC00h)	Connection Management Message	
60928 (EE00h)	Address Claim	Used for address management on the network.

Communication Control

Checking if J1939 communication is permitted/prohibited and checking the communication status can be performed with special internal relays and special data registers.

Note: R/W stands for read/write and allows reading and writing. R is read-only. W is write-only.

Special Internal Relay Allocations

Special Internal Relays	Description	Setting Timing	R/W
M8300	J1939 Communication Permitted Flag		R/W
M8301	J1939 Online Status	Every scan	R
M8302	J1939 Local Station Address Confirmation Status	Every scan	R
M8303	J1939 Communication Error Output	Every scan	R
M8304	J1939 Communication Bus Off Occurrence Output	Every scan	R

J1939 Communication Permitted Flag (M8300)

Controls whether J1939 communication is permitted or prohibited. Turn on M8300 to start J1939 communication after initialization processing has been performed.

OFF: Communication prohibited (default)

ON: Communication permitted

Note: If there is no response from any CAs to a message sent in initialization processing, the transmission will be repeatedly retried and Error Passive (error code 2002) will occur. Turn on M8300 after CAs on the network are able to send and receive data.

J1939 Online Status (M8301)

Indicates the J1939 communication online status. While offline, messages cannot be exchanged because the CAN J1939 All-in-One CPU module is not connected to a J1939 communication network.

OFF: Offline

ON: Online

J1939 Local Station Address Confirmation Status (M8302)

Indicates the local address confirmation status during J1939 communication. This relay turns on when the local address is between 0 and 253. While online, this relay turns off immediately after starting communication and when an address conflict has occurred and the local address is 254 (null address). When M8302 is off, messages cannot be exchanged using the ladder program.

OFF:Local address unconfirmed

ON:Local address confirmed

J1939 Communication Error Output (M8303)

Indicates the status of a J1939 communication error. M8303 turns on when a value other than "0" is stored in D8052 (J1939 Communication Error Code).

OFF: No communication error

ON: Communication error has occurred

J1939 Communication Bus Off Occurrence Output (M8304)

Indicates the bus off status during J1939 communication. Bus off is the status where devices cannot participate in communication on the bus. All transmit and receive operations are prohibited. The CAN J1939 All-in-One CPU module has an internal transmit error counter and receive error counter, and when these counters reach a certain value, the bus off status is set.

When bus off occurs, the CAN J1939 All-in-One CPU module stops communication and goes offline. To restart communication, M8300 must be turned on to go back online. When M8300 is turned on, M8304 is turned off.

OFF: Bus off has not occurred

ON: Bus off has occurred

Special Data Register Allocations

Special Data Register	Function	Setting Timing	R/W
D8052	J1939 Communication Error Code	When error occurred	R/W

J1939 Communication Error Code (D8052)


This register stores the J1939 communication error code. To initialize this register, write "0".

Details on the J1939 communication error code are as follows.

Status Code	Description	Details
0	Normal	
100	Multi-packet transmit/receive error	An unexpected BAM frame was received.
101	Multi-packet transmit/receive error	An unexpected RTS frame was received.
102	Multi-packet transmit/receive error	An unexpected CTS frame was received.
103	Multi-packet transmit/receive error	An unexpected EOM frame was received.
104	Multi-packet transmit/receive error	An unexpected Connection Abort frame was received.
105	Multi-packet transmit/receive error	An unexpected DT frame was received.
106	Multi-packet transmit/receive error	The length of the multi-packet transmitted/received message was out of range.
107	Multi-packet transmit/receive error	Failed to transmit the Connection Abort message.
110	NACK transmission failure	NACK could not be transmitted for a PGN transmit request.
200	Internal transmit queue overflow	The limit of messages that can be sent at one time has been exceeded.
201	Internal receive queue overflow	The limit of messages that can be received at one time has been exceeded.
1000	Local address unconfirmed	The local address is 254.
2000	CAN communication initialization error	The CAN controller could not be initialized.
2001	CAN communication initialization error	The CAN controller could not be reset.
2002	Error Passive	An error/warning interrupt has occurred, and the CAN controller has entered the Error Passive state.
2003	Error Active	The CAN controller has entered the Error Active state.
2004	Data overrun error	The data overrun interrupt occurred.
3000	Bus off error	Bus off occurred on the CAN.

Communication Control Status Transitions

J1939 communication status and initialization processing transitions are as follows.

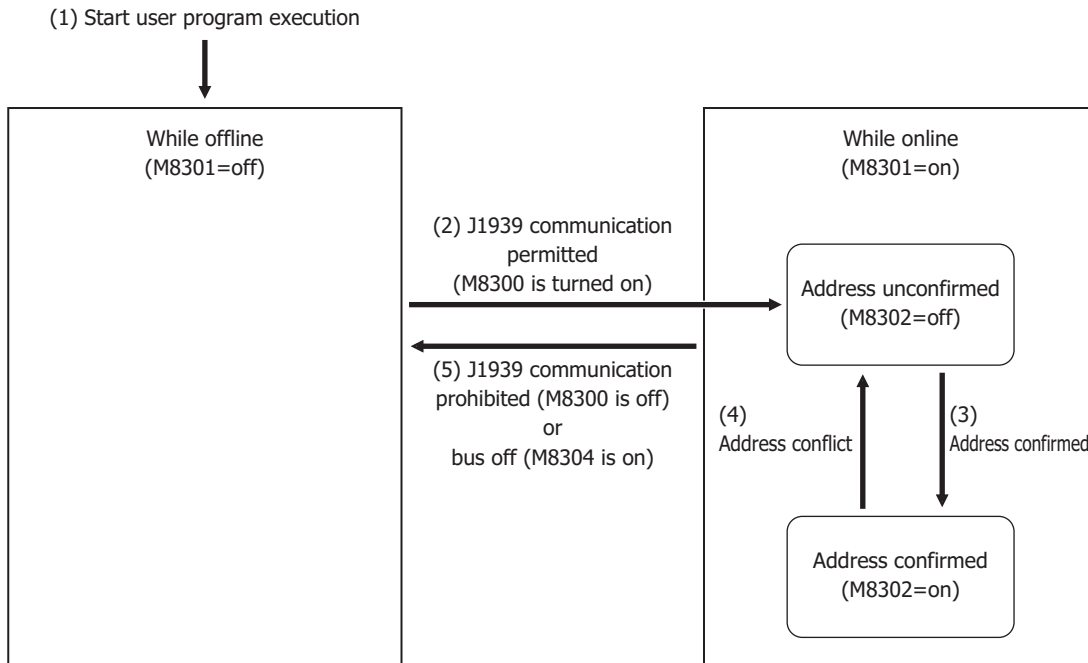

(1) The offline status is set immediately after starting execution of the user program.

(2) When M8300 is turned on, the online status is set and initialization processing is performed.

In initialization processing, initialization messages are sent to CAs, duplicate addresses are checked, and conflicts are resolved for those duplicate addresses.

Before confirming the local address in initialization processing, the address is the address unconfirmed status (M8302=off).

(3) When a local address is confirmed between 0 and 253, the status is the address confirmed status (M8302=on).

Messages can be exchanged between the MICROSmart and CAs. If the local address is 254, the status remains the address unconfirmed status.

(4) When an address conflict occurs and the local address is 254 (null address), the status is the address unconfirmed status.

(5) When M8300 is turned off, communication processing is stopped and the offline status is set.

The offline status is also set when bus off occurs during communication (M8304 is turned on). M8300 remains off at this time.

To set the online status again, turn off M8300 and then turn it on again.


J1939 Communication Settings

This section describes the operation procedure and details about the items related to J1939 communication.


Programming WindLDR

Configure J1939 communication according to the usage environment.


1. On the **Configuration** tab, in the **Function Area Settings** group, click **Comm. Port**.
The **Function Area Settings** dialog box is displayed.
2. Select **J1939** from the CAN port group communication mode.
The **J1939 Communication Settings** dialog box is displayed.

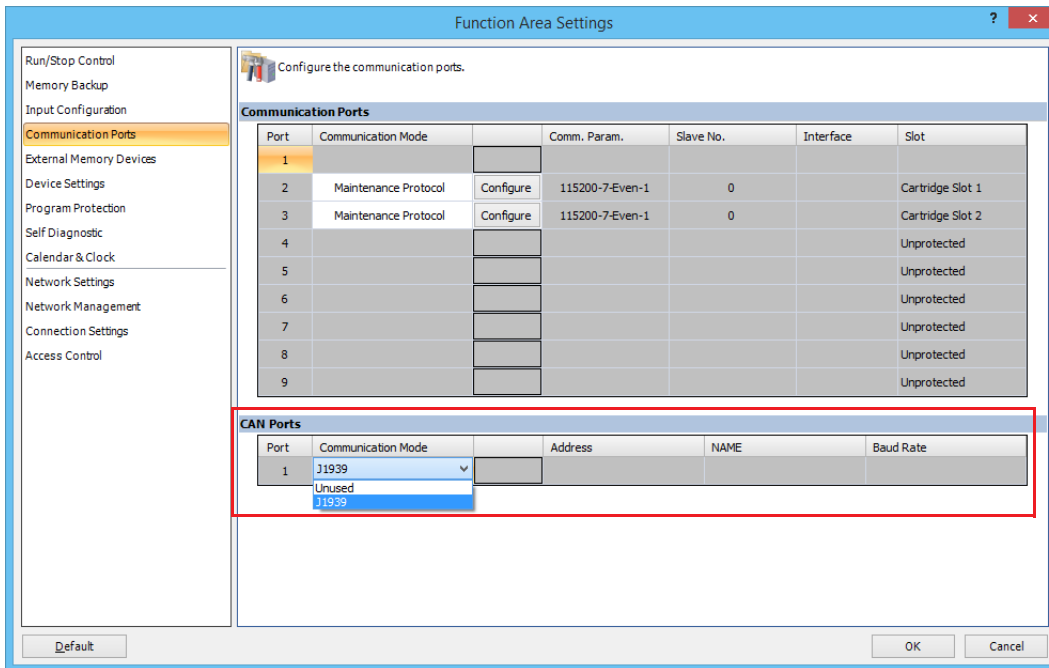


3. Under **PLC Setting**, on the **Address Settings** tab, set the local address, device name (NAME), and CA address table. Set the local address and device name (NAME).

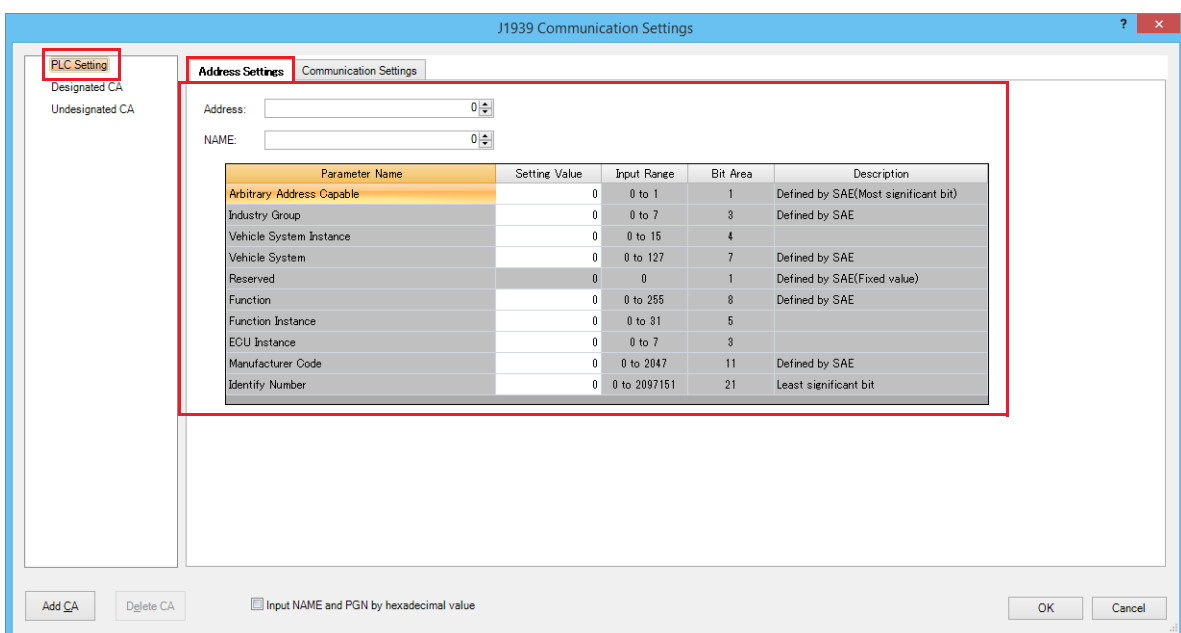


4. Click the **Communication Settings** tab and set the device address to store the CA address table.

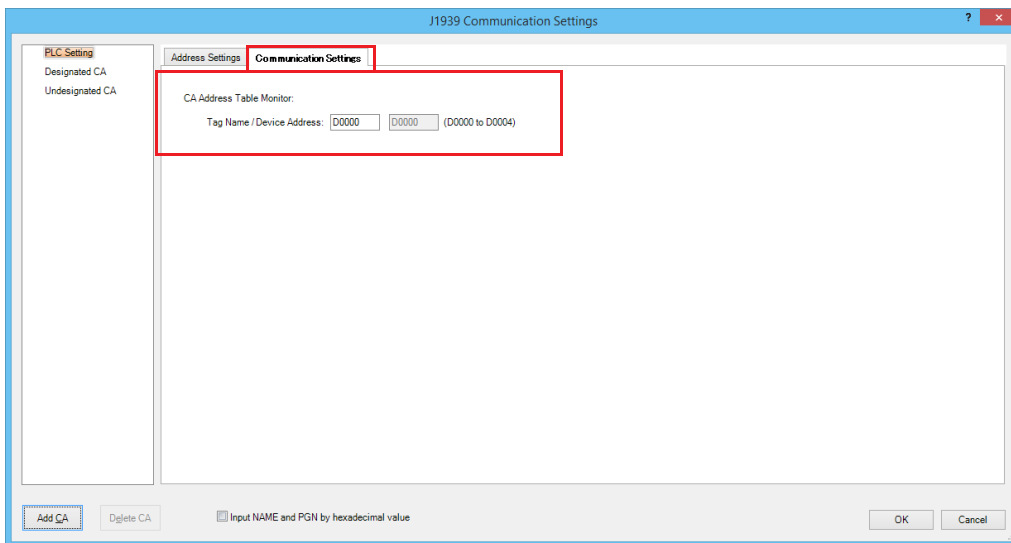


5. Click **Add CA** to add a node to configure a CA.

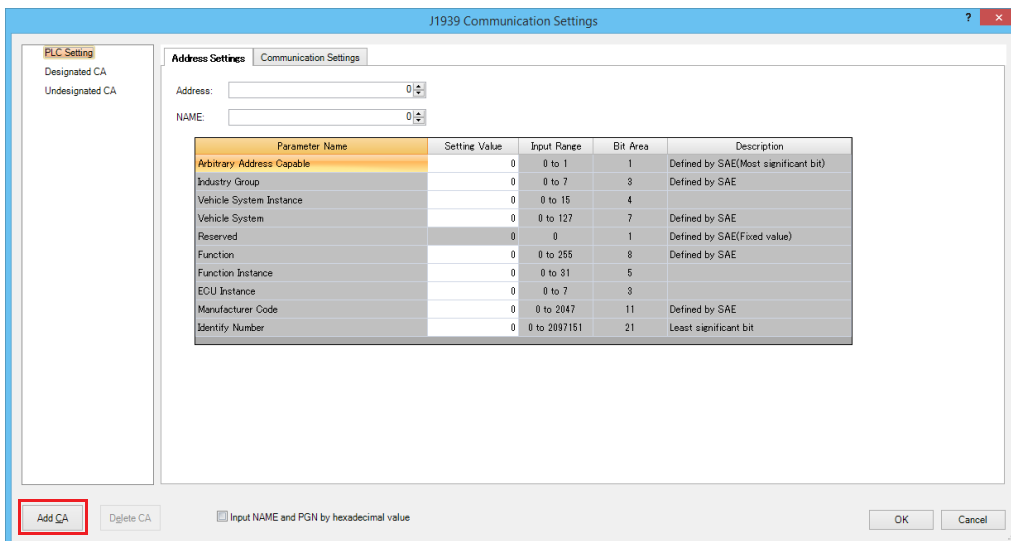


6. Click the node that corresponds to the CA to configure and click the **Address Settings** tab. Configure the address and the device name for the CA.

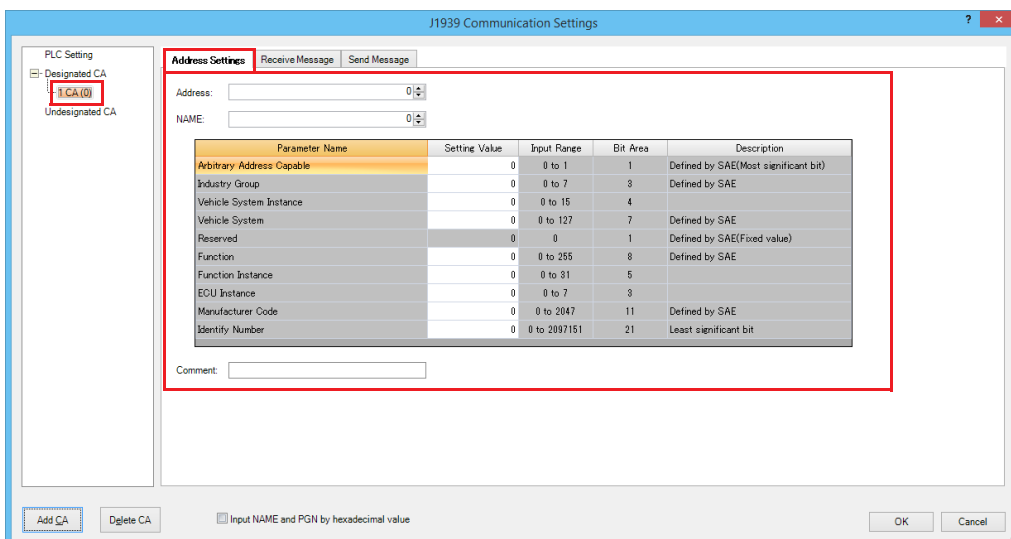


7. Click the **Receive Message** tab and first configure the devices that will used with received messages.

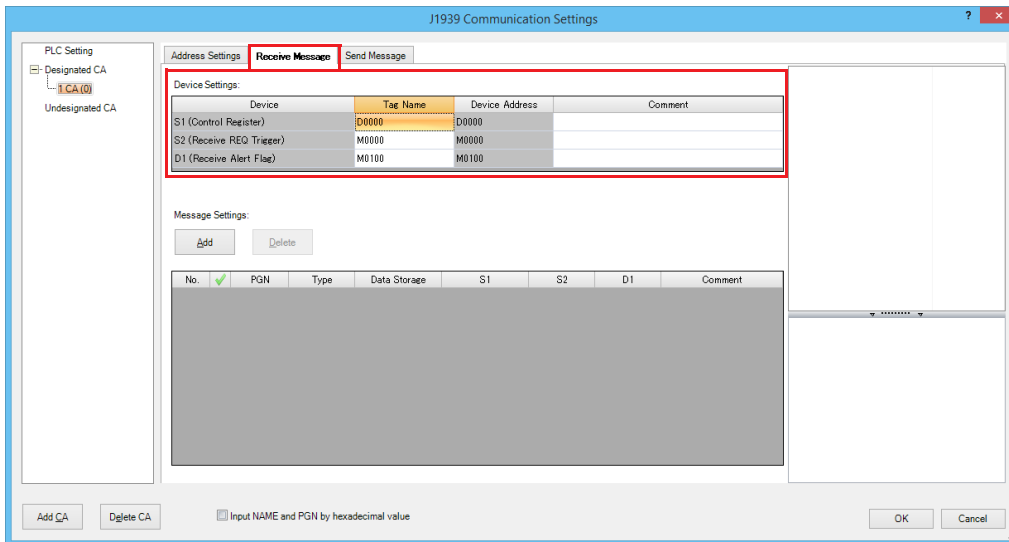


8. Click **Add** to add a received message.

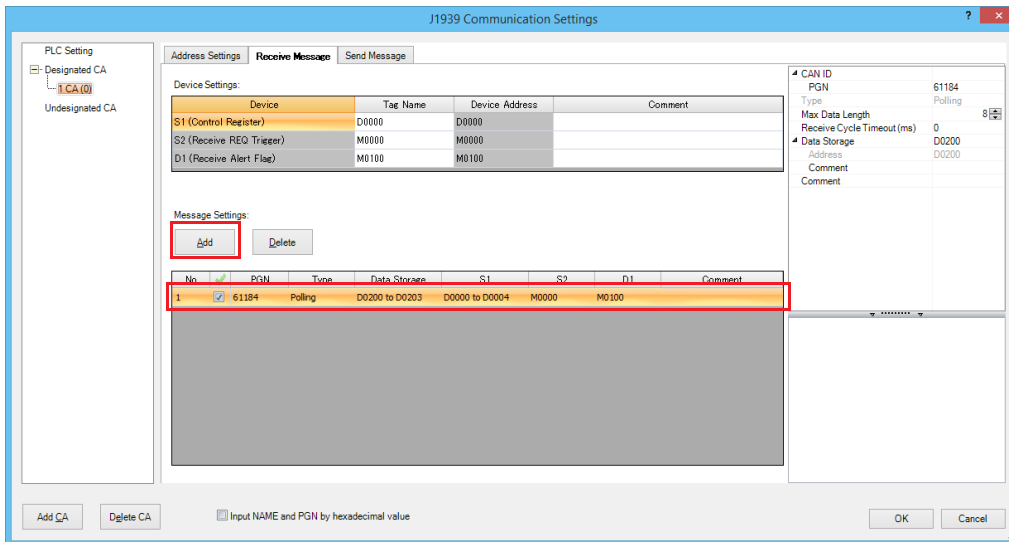



9. Select any of the cells for the message settings to display the parameters for the messages on the right side. Configure the items.

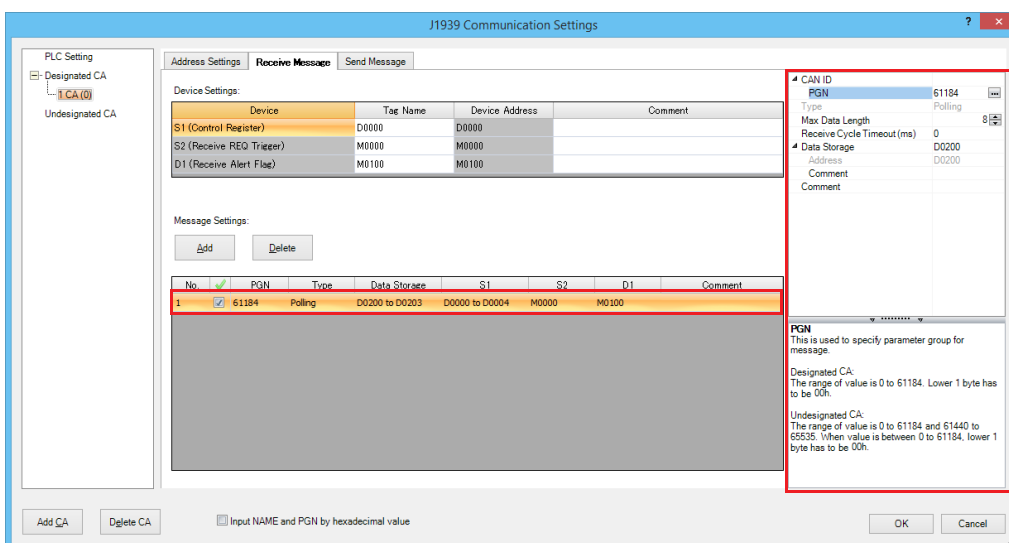

10. Click the **Send Message** tab and configure it in the same manner as the **Receive Message** tab.

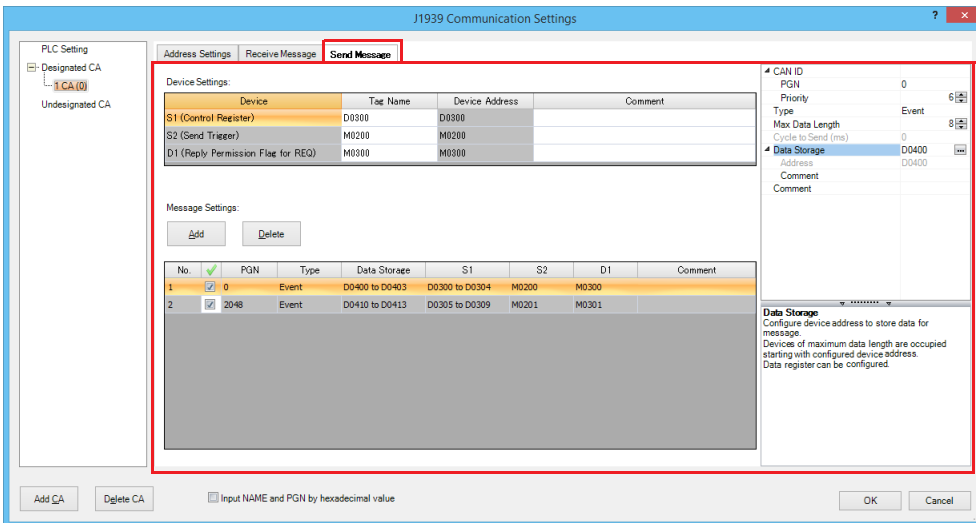

11. Click **Undesignated CA**. Configure the **Receive Message** tab and the **Send Message** tab in the same manner as those under **Designated CA**.

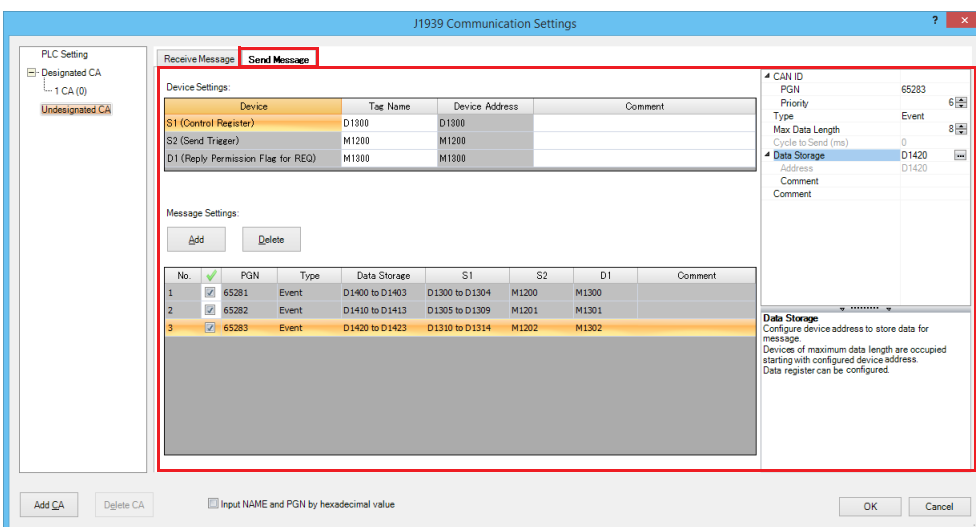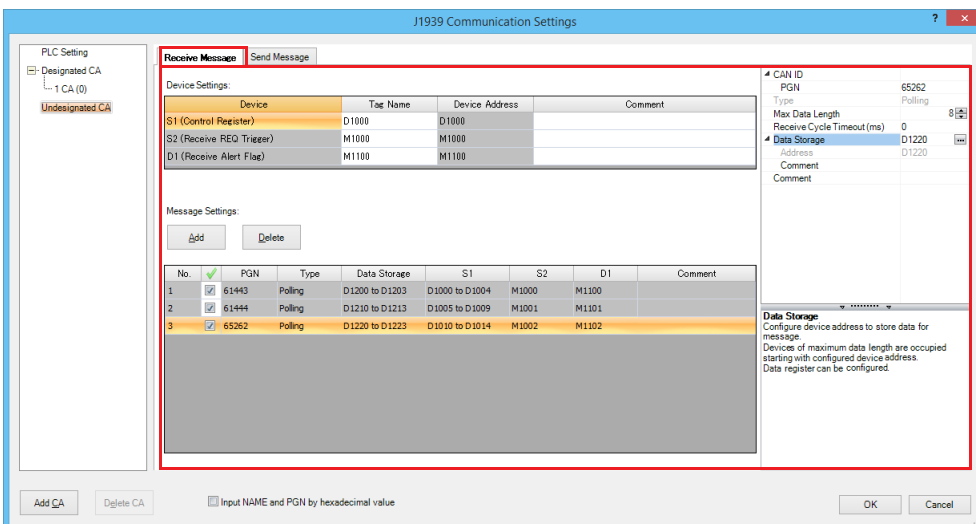

12. Click **OK**.

This concludes configuring the settings.

J1939 Communication Parameters


This section describes the **J1939 Settings** dialog box parameter settings required to use J1939 communication.

PLC Setting

These settings configure the CAN J1939 All-in-One CPU module local address, local NAME, and CA address table.

■ Address Settings tab

This tab configures the CAN J1939 All-in-One CPU module local address and local NAME.

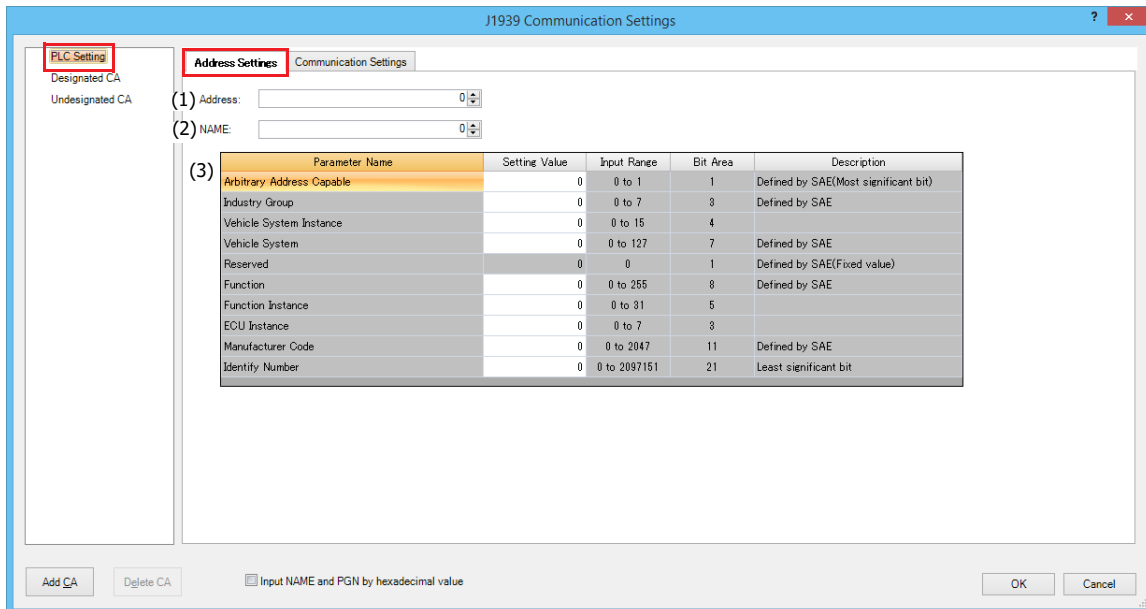

(1) Address

Sets the initial value of the CAN J1939 All-in-One CPU module local address between 0 and 253.

When **Input NAME and PGN by hexadecimal value** check box is selected, enter them as hexadecimal values.

Example: When hexadecimal: 01, F0, etc.

When an address conflict occurs with a CA connected to the same network, the local address is reacquired according to the Arbitrary Address Capable bit of the local NAME.

(2) NAME

Sets the CAN J1939 All-in-One CPU module local NAME in 64 bits.

When **Input NAME and PGN by hexadecimal value** check box is selected, enter them as hexadecimal values.

Example: When hexadecimal: 123456789ABCDEF1, 0000FFFFFFFFF0A, etc.

Set this value so that it is not duplicated by other CAs on the same network. For details, see "NAME (64 bits total)" on page 8-2.


The device name (NAME) is composed of the set values in the device name field list (3). When the device name (NAME) is changed, those changes are reflected under **Setting Value** in the device name field list.

(3) Device name field list

Displays each field of the device name (NAME) (2). When a **Setting Value** is changed, the result is reflected in the device name (NAME).

■ Communication Settings tab

This tab configures the CA address table monitor. The CA address table monitor is the table that manages the CA addresses registered by the CAN J1939 All-in-One CPU module (local) and **Designated CA**.

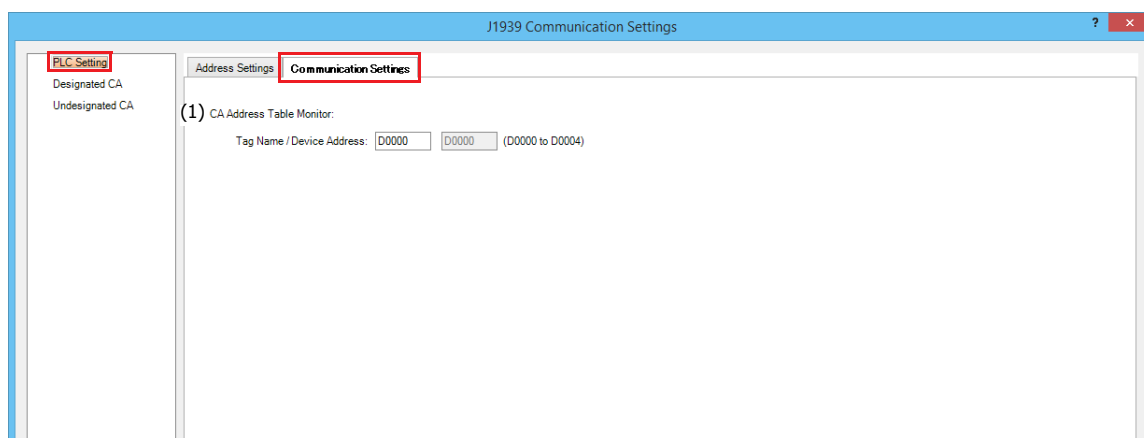

(1) CA Address Table Monitor

Sets the starting address of the data registers that will store the CA address table.

The values set in WindLDR are stored in the CA address table as the initial values, and when the CAN J1939 All-in-One CPU module address changes due to an address conflict, the CA address table is updated with that. When address information is received from a CA, the address of the CA that matches the NAME is updated. The CAN J1939 All-in-One CPU module exchanges messages based on the addresses in the CA address table.

CA Address Table Monitor Definition

CA	Storage Destination	Function	Setting Details
Local	Starting number+0	Local NAME	Stores the CAN J1939 All-in-One CPU module NAME.
	Starting number+1		
	Starting number+2		
	Starting number+3		
Local	Starting number+4	Local address* ¹	Stores the CAN J1939 All-in-One CPU module address. If the address changes while online, exchanging messages after that is performed based on the new address.
	Starting number+5	CA#1 NAME* ²	Stores the CA#1 NAME.
Starting number+6			
Starting number+7			
Starting number+8			
CA#1 (5 words)	Starting number+9	CA#1 address* ^{2*3}	Stores the CA#1 address. When NAME has been set, the address may change when online. If the address changes while online, exchanging messages after that is performed based on the new address.
•	•	•	
•	•	•	
•	•	•	
CA#N* ³ (5 words)	Starting number+5xN	CA#N NAME* ²	Stores the CA#N NAME.
	Starting number+5xN+1		
	Starting number+5xN+2		
	Starting number+5xN+3		
	Starting number+5xN+4	CA#N address* ^{2*3}	Stores the CA#N address. When NAME has been set, the address may change when online. If the address changes while online, exchanging messages after that is performed based on the new address.

*1 If an address cannot be assigned due to address conflicts with CAs on the network, the address is 254 (null address). In this case, messages cannot be exchanged.

*2 If the address is outside the range of 0 to 253, messages cannot be exchanged with the corresponding CA.

*3 N is 1 to 253.

Example 1: When updated by local address conflict

CA address table			
Local NAME	+0 words	9234....5678h	* Arbitrary Address Capable = 1
Local address	+4 words	30	→ Updated to 128
CA#1 NAME	+5 words	1345....6789h	
CA#1 address	+9 words	150	
		•	
		•	
		•	

Example 2: When updated by receiving CA address information

CA address table		CA address information	
Local NAME	+0 words	2233....5678h	
Local address	+4 words	128	
CA#1 NAME	+5 words	2444....6789h	
CA#1 address	+9 words	150	
		•	
		•	
CA#4 NAME	+20 words	A844....1111h	
CA#4 address	+24 words	50	→ Updated to 130
		•	
		•	
		•	

A844....1111h	NAME
130	Address

Address of CA that matches NAME is updated

Example 3: When CA#4 NAME is set to 0 in Example 2

CA address table		CA address information	
Local NAME	+0 words	2233....5678h	
Local address	+4 words	128	
CA#1 NAME	+5 words	2444....6789h	
CA#1 address	+9 words	150	
		•	
		•	
CA#4 NAME	+20 words	0h	
CA#4 address	+24 words	50	Not updated
		•	
		•	
		•	

A844....1111h	NAME
130	Address


The CA address table is not updated because the NAME does not exist in the CA address table

Designated CA

For each added CA, these settings configure the address and NAME of the CA to exchange messages with and the transmitted and received messages.

■ Address Settings tab

This tab configures the address and NAME of the CA selected on the CA list.

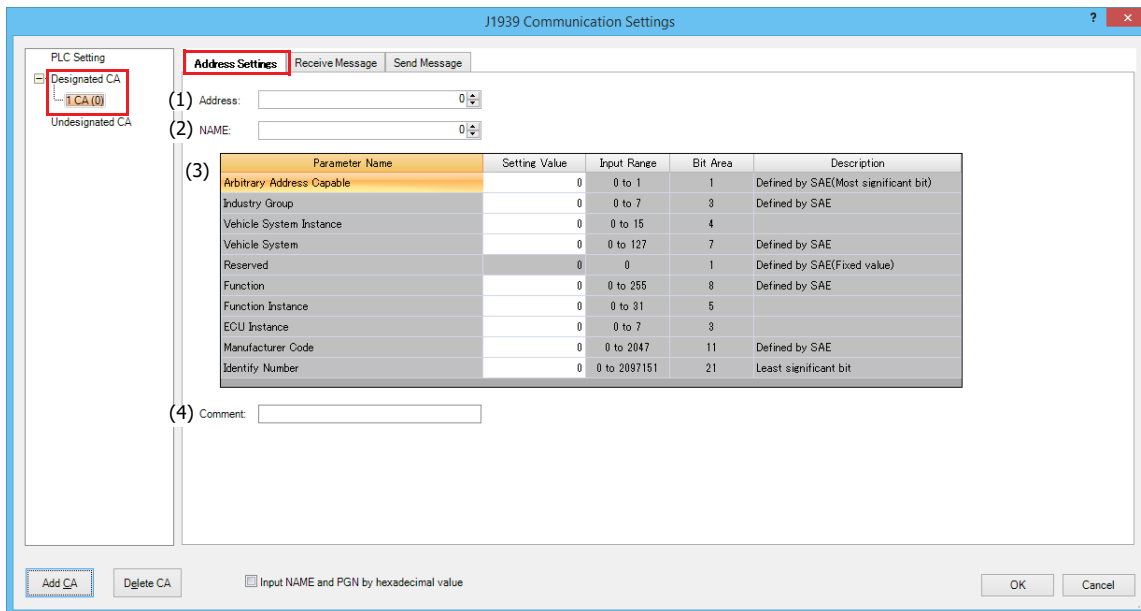

(1) Address

Sets the address of the CA to exchange messages with from between 0 and 254.

When **Input NAME and PGN by hexadecimal value** check box is selected, enter them as hexadecimal values.

Example: When hexadecimal: 01, F0, etc.

(2) NAME

Sets the CA NAME in 64 bits. If CA NAME is not defined, set it to 0.

When **Input NAME and PGN by hexadecimal value** check box is selected, enter them as hexadecimal values.

Example: When hexadecimal: 123456789ABCDEF1, 0000FFFFFFFFF0A, etc.

The device name (NAME) is composed of the set values in the device name field list (3). When the device name (NAME) is changed, those changes are reflected under **Setting Value** in the device name field list.

(3) Device name field list


Displays each field of the device name (NAME) (2). When a **Setting Value** is changed, the result is reflected in the device name (NAME).

(4) Comment

Sets a comment for the CA as a maximum of 127 characters. This is reflected in the CA list under **Designated CA**.

■ Receive Message tab

This tab configures the messages that the CAN J1939 All-in-One CPU module receives from the CA selected in the CA list.

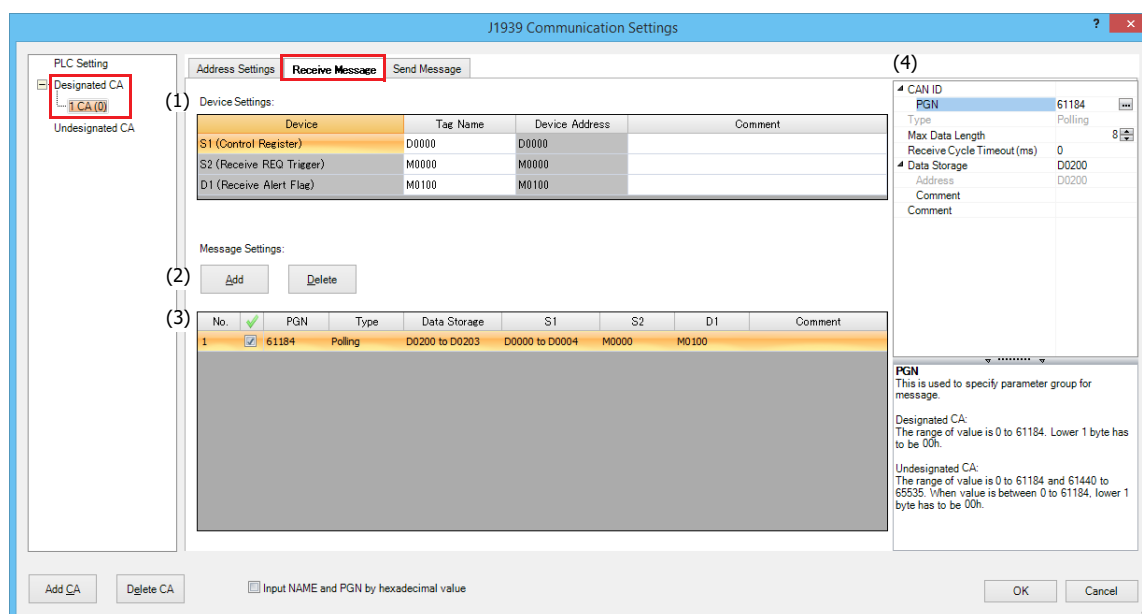

(1) Device Settings

Sets the data registers that will be used by the received messages.

Settings	Description
Tag Name	Specifies the tag name of the device or the device address.
Device Address	Shows the device address that corresponds to the tag name.
Comment	Shows the comment for the device address. This item can be edited.

S1 (Control Register)

Sets the starting address of the data registers that will store the receive results.

Storage Destination	Item	Description
Starting number+0	Received data length	This register stores the length of the received message data. If the message that will be received exceeds 8 bytes, a multi-packet message split into 8-byte packets will be received. After the multi-packet message has finished being received, the split data is combined and stored in the data storage destination. If the length of the received message data is longer than the maximum data length, the maximum data length is stored and 100 is stored in the receive results status.
Starting number+1	Reserved	
Starting number+2	Receive results status	This register stores the receive results. To initialize this register, write "0". For details on the receive results status, see "Receive results status" on page 8-16.
Starting number+3	Receive action flag	
	Bit 0	Receive buffer overwrite flag
	Bits 1 to 15	Reserved
Starting number+4	Reserved	


Receive results status

Status Code	Description	Details
0	Normal	
10	Receive cycle timeout	The set time for the receive cycle timeout has been exceeded since the previous message was received.
100	Received data length error	The length of the received message data was longer than the maximum data length.
101	Received data length error	The received message was 252 bytes or longer.
102	Multi-packet receive error	A message with a data length of 9 bytes or longer could not be received.

S2 (Receive REQ Trigger)

This function issues a request to the corresponding CA to transmit a message. When the receive REQ trigger is turned on, PGN 59904 (Request) will be sent to the CA in ladder program END processing.

Receive REQ trigger usage example

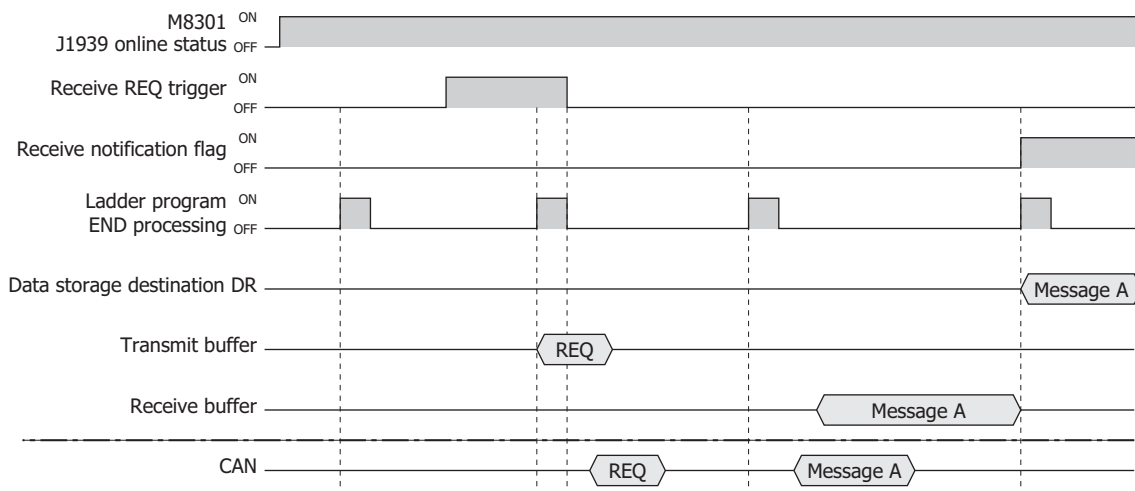

D1 (Receive Alert Flag)

Sets the flag for notification of a received message. This register is on for one scan when a message is received.

(2) Add button/Delete button

Click **Add** to add a received message to the message list (3).

To delete a message, select the message to delete in the message list, and then click **Delete**.

(3) Message list

Displays the content configured by the message parameter settings (4). The received message can also be enabled or disabled. The message is enabled when the check box is selected and disabled when the check box is cleared.

Notes:

Click the check box column header to perform the following operations.

- If all received message check boxes are on, all of the check boxes are cleared.
- If any received message check boxes are off, all of the check boxes are selected.

(4) Message parameter settings

These settings configure the details of the received message selected in the message list.

CAN ID

PGN: Sets the PGN of the message to receive. The range of the PGN that can be set is 0 to 61,184 (0000h to EF00h) (PDU1 format). Set the low order 1 byte (PDU Specific) that indicates the destination address in PDU1 format to 00h.


Click ... and a PGN can be selected in the displayed PGN Manager. For details, see "PGN Manager" on page 8-29.

Type

The receive method for messages is fixed as "Polling".

Received messages are temporarily saved to the internal receive buffer, and the contents of the receive buffer are written to the data registers set as the data storage destination in the ladder program END processing. At this time, the receive notification flag is turned on for only one scan.

If the same PGN message is received from the same CA multiple times during the period from the ladder program END processing until the next END processing, the content of the last received message is written to the data storage destination.

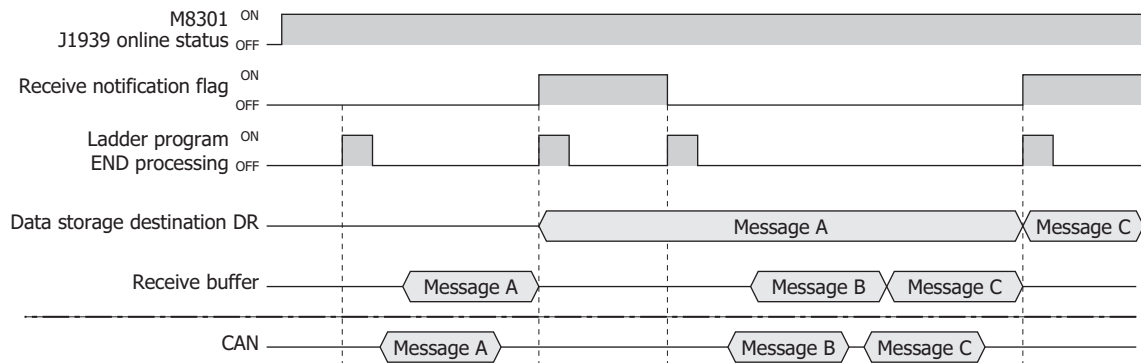Polling reception example**Max Data Length**

Sets the maximum data length of the PGN to receive. The maximum value that can be set is 252 bytes.

Receive Cycle Timeout (ms)

Sets the time to monitor the receive message cycle that periodically receives messages in 10 ms increments. The range that can be set is 0 to 655,350. If set to 0, the receive cycle is not monitored.

Data Storage

Sets the data registers that will store the received message. The maximum data length is used starting from the set device.

Address: Shows the device address that corresponds to the tag name of the device or the device address.


Comment: Shows the comment that corresponds to the tag name of the device or the device address. This item can be edited.

Comment

Sets the comment for the received message. The comment that can be set is a maximum of 127 bytes.

■ Send Message tab

This tab configures the messages that the CAN J1939 All-in-One CPU module transmits to the CA selected in the CA list.

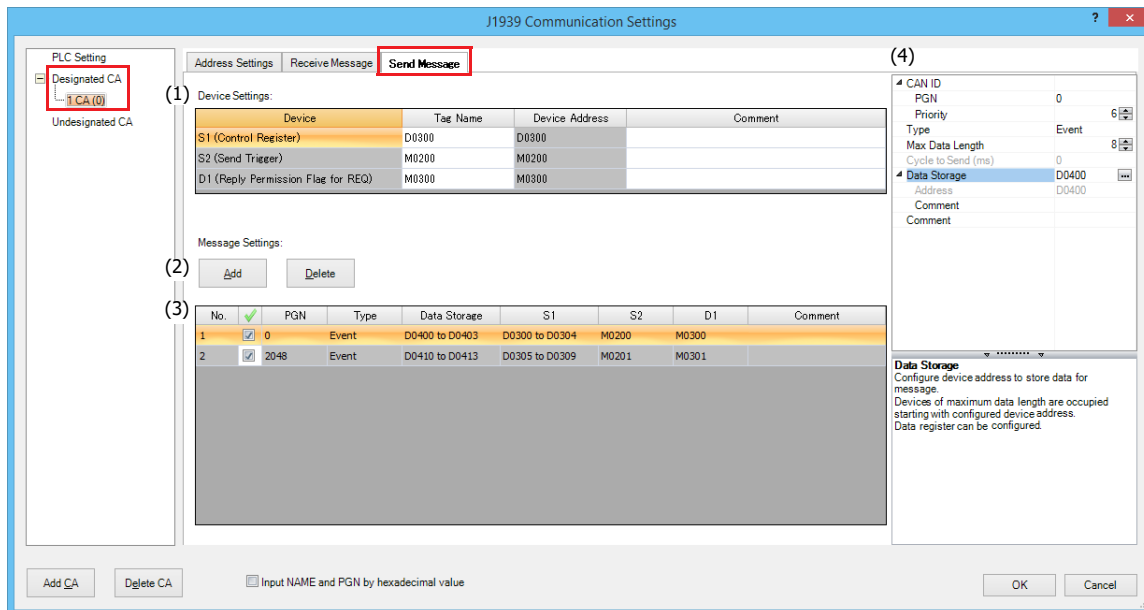

(1) Device Settings

Sets the data registers that will be used by the sent messages.

Settings	Description
Tag name	Specifies the tag name of the device or the device address.
Device Address	Shows the device address that corresponds to the tag name.
Comment	Shows the comment for the device address. This item can be edited.

S1 (Control Register)

Sets the starting address of the data registers that will store the transmit settings and transmit results.

Storage Destination	Item	Description
Starting number+0	Transmit data length	This register stores the length of the message data to transmit. Starting from the data storage destination, data in the length of the transmit data length will be transmitted to the CA. When 0 is stored for the transmit data length, data of the maximum data length will be transmitted to the CA. This cannot be set larger than the maximum data length. If the message that will be transmitted exceeds 8 bytes, the message is split into 8-byte packets and transmitted as a multi-packet message.
Starting number+1	Reserved	
Starting number+2	Transmit results status	This register stores the transmit results. To initialize this register, write "0". For details on the transmit results status, see "Transmit results status" on page 8-19.
Starting number+3	Transmit action flag	
	Bit 0	REQ received flag
Starting number+3	Bits 1 to 15	Reserved
	Reserved	

Transmit results status

Status Code	Description	Details
0	Normal	
1	Multi-packet message transmitted	A message with a data length of 9 bytes or longer has finished being transmitted.
10	Transmit data length error	The length of the transmitted message data was longer than the maximum data length.
20	Internal transmit queue overflow	The limit on the number of messages that can be queued for transmission has been reached.
100	Multi-packet transmit error	A message with a data length of 9 bytes or longer could not be transmitted.
200	Local address unconfirmed	The message could not be transmitted because the local address is unconfirmed.
201	Destination address unconfirmed	The message could not be transmitted because the destination CA address is unconfirmed.


S2 (Send Trigger)

Sets the transmit trigger when "Event transmission" is selected for **Type**. When the transmit trigger is turned on, the message is transmitted in ladder program END processing. After the message is transmitted, the transmit trigger is turned off.

D1 (Reply Permission Flag for REQ)

This function transmits a PGN in response to a transmit request PGN received from the corresponding CA while the REQ response permitted flag is on. When PGN 59904 (Request) is received from a CA, the transmit action flag's REQ received flag is turned on, and in the next END processing a message for the corresponding PGN will be transmitted.

Request response example

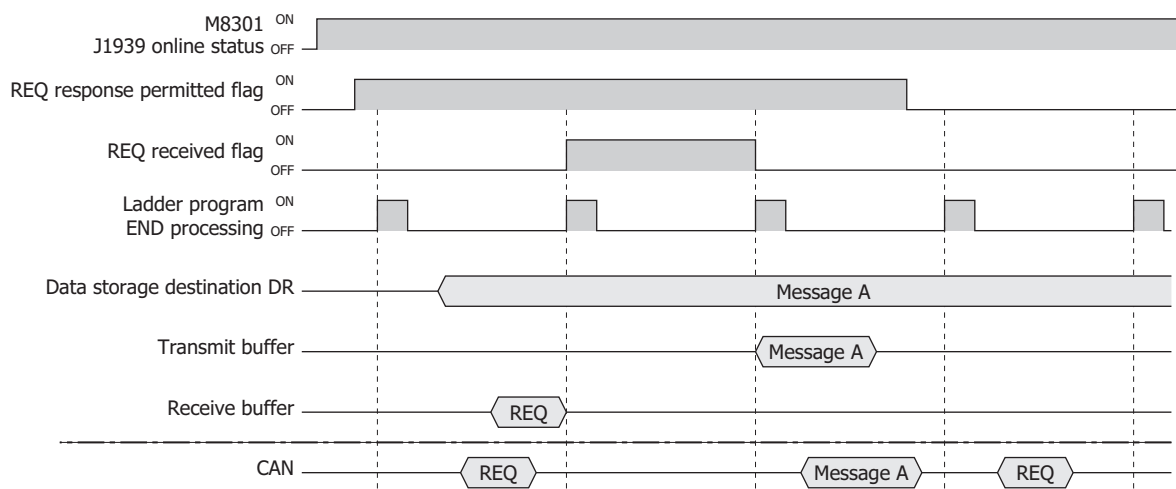**(2) Add button/Delete button**

Click **Add** to add a transmitted message to the message list (3).

To delete a message, select the message to delete in the message list, and then click **Delete**.

(3) Message list

Displays the content configured by the message parameter settings (4). The send message can also be enabled or disabled. The message is enabled when the check box is selected and disabled when the check box is cleared.

Note:

Click the check box column header to perform the following operations.

- If all transmitted message check boxes are on, all of the check boxes are cleared.
- If any transmitted message check boxes are off, all of the check boxes are selected.

(4) Message parameter settings

These settings configure the details of the transmitted message selected in the message list.

CAN ID

PGN: Sets the PGN of the message to transmit. The range of the PGN that can be set is 0 to 61,184 (0000h to EF00h) (PDU1 format). Set the low order 1 byte (PDU Specific) that indicates the destination address in PDU1 format to 00h.

Click ... and a PGN can be selected in the displayed PGN Manager. For details, see "PGN Manager" on page 8-29.


Priority: Sets the priority for the message to transmit between 0 and 7.

Type

Sets the transmit method for the message. Select as "Event" or "Cycle".


Event: When the transmit trigger is turned on, the transmit data stored in the data storage destination is transmitted in END Processing.

Designated CA event transmission example

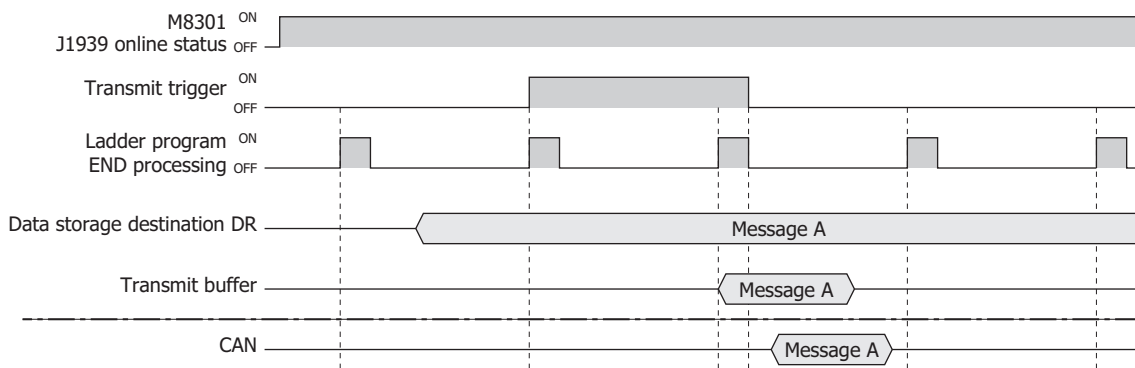

Cycle: While the cycle transmission permitted flag is on and when the transmit cycle occurs, the transmit data stored in the data storage destination is transmitted in END processing. The actual transmit cycle is affected by the ladder program scan time.

Designated CA cycle transmission example

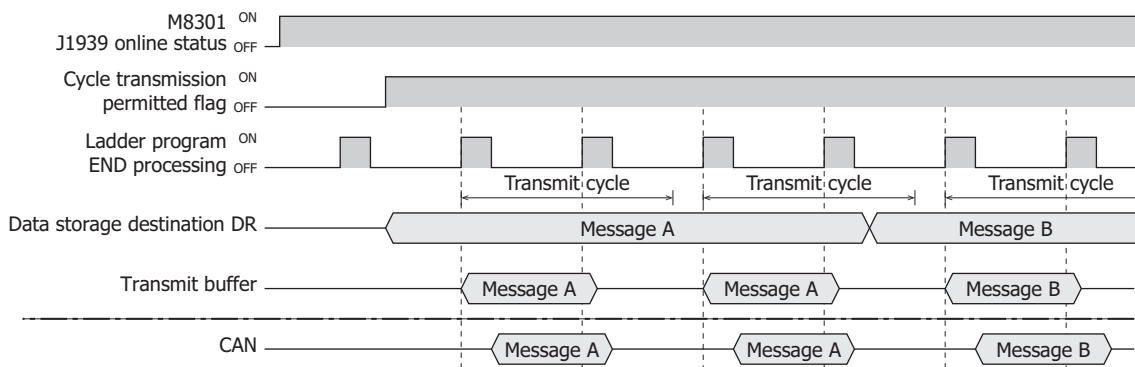

Max Data Length

Sets the maximum data length of the PGN to transmit. The maximum value that can be set is 252 bytes.

Cycle to Send (ms)

Sets the transmit cycle in 10 ms increments when "Cycle transmission" is selected for **Type**. The range of the value that can be set is 10 to 655,350.

Data Storage

Sets the data registers that will store the transmitted message. The maximum data length is used starting from the set device. When transmitting a message, the data is first copied from the data storage destination to the internal transmit buffer and then transmitted.

Address: Shows the device address that corresponds to the tag name of the device or the device address.

Comment: Shows the comment that corresponds to the tag name of the device or the device address. This item can be edited.

Comment


Sets the comment for the transmitted message. The comment that can be set is a maximum of 127 bytes.

Undesignated CA

These settings configure messages that are exchanged as broadcasts without specifying specific CAs.

■ **Receive Message tab**

This tab configures messages that are transmitted from other CAs to the J1939 communication network as broadcasts.

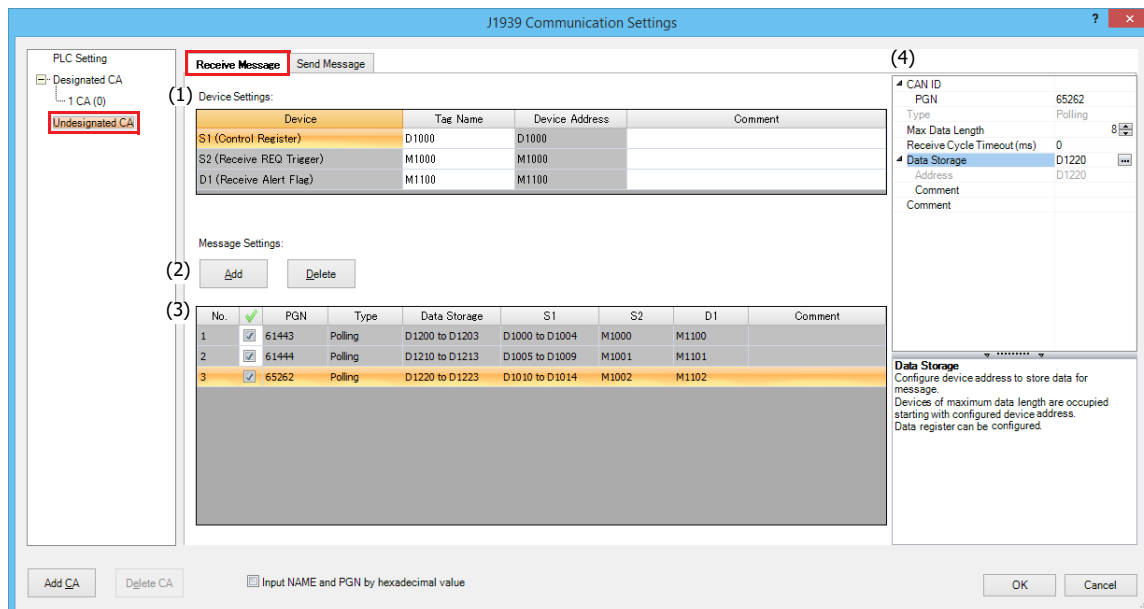

(1) Device Settings

Sets the data registers that will be used by the received messages.

Settings	Description
Tag name	Specifies the tag name of the device or the device address.
Device address	Shows the device address that corresponds to the tag name.
Comment	Shows the comment for the device address. This item can be edited.

S1 (Control Register)

Sets the starting address of the data registers that will store the receive results.

Storage Destination	Item	Description
Starting number+0	Received data length	This register stores the length of the received message data. If the message that will be received exceeds 8 bytes, a multi-packet message split into 8-byte packets will be received. After the multi-packet message has finished being received, the split data is combined and stored in the data storage destination. If the length of the received message data is longer than the maximum data length, the maximum data length is stored and 100 is stored in the receive results status.
Starting number+1	Source address	This register stores the source address of the received message.
Starting number+2	Receive results status	This register stores the receive results. To initialize this register, write "0". For details on the receive results status, see "Receive results status" on page 8-23.
Starting number+3	Bit 0	Receive buffer overwrite flag
	Bits 1 to 15	Reserved
Starting number+4	Reserved	


Receive results status

Status Code	Description	Details
0	Normal	
10	Receive cycle timeout	The set time for the receive cycle timeout has been exceeded since the previous message was received.
100	Received data length error	The length of the received message data was longer than the maximum data length.
101	Received data length error	The received message was 252 bytes or longer.
102	Multi-packet receive error	A message with a data length of 9 bytes or longer could not be received.

S2 (Receive REQ Trigger)

This function issues a PGN transmit request as a broadcast to the J1939 communication network. If the receive REQ trigger is turned on, PGN 599034 (Request) is transmitted as a broadcast in ladder program END processing.

Receive REQ trigger usage example

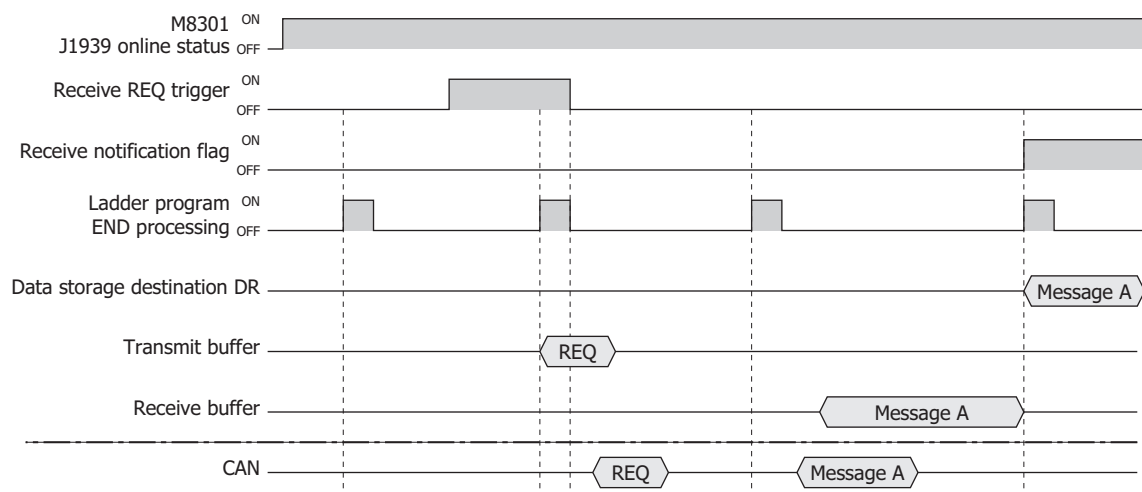**D1 (Receive Alert Flag)**

Sets the flag for notification of a received message. This register is on for one scan when a message is received.

(2) Add button/Delete button

Click **Add** to add a received message row to the message list (3).

To delete a message, select the message to delete in the message list, and then click **Delete**.

(3) Message list

Displays the content configured by the message parameter settings (4). The received message can also be enabled or disabled. The message is enabled when the check box is selected and disabled when the check box is cleared.

Notes:

Click the check box column header to perform the following operations.

- If all received message check boxes are on, all of the check boxes are cleared.
- If any received message check boxes are off, all of the check boxes are selected.

(4) Message parameter settings

These settings configure the details of the received message selected in the message list.

CAN ID

PGN: Sets the PGN of the message to receive in 2 bytes. The range of the PGN that can be set is 0 to 61,184 (0000h to EF00h) (PDU1 format) and 61,440 to 65,535 (F000h to FFFFh) (PDU2 format). Set the low order 1 byte (PDU Specific) that indicates the destination address in PDU1 format to 00h.

When the PGN is set in the PDU1 format range, only messages with a destination address of 255 (global address) can be received.

Click ... and a PGN can be selected in the displayed PGN Manager. For details, see "PGN Manager" on page 8-29.


Type

The receive method for messages is fixed as "Polling".

Received messages are temporarily saved to the internal receive buffer, and the contents of the receive buffer are written to the data registers set as the data storage destination in the ladder program END processing. At this time, the receive notification flag is turned on for only one scan.

If the same PGN message is received from the same CA multiple times during the period from the ladder program END processing until the next END processing, the content of the last received message is written to the data storage destination.

Polling reception example

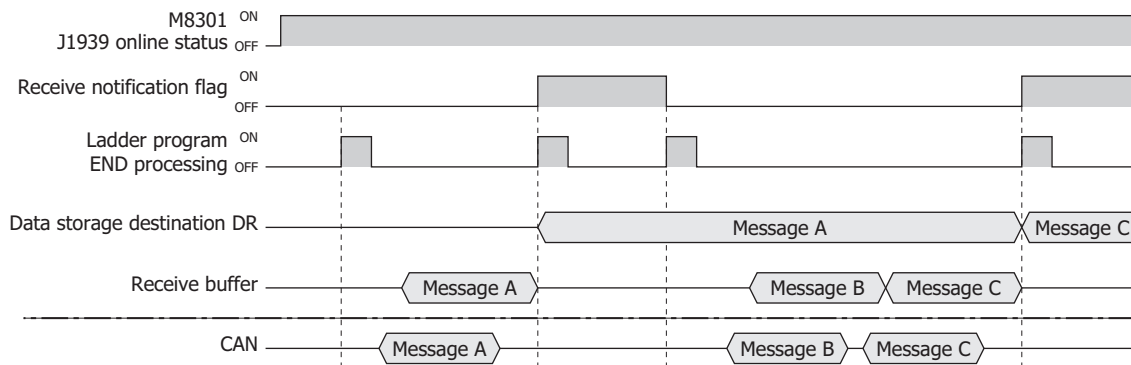

Max Data Length

Sets the maximum data length of the PGN to receive. The maximum value that can be set is 252 bytes.

Receive Cycle Timeout (ms)

Sets the time to monitor the receive message cycle that periodically receives messages in 10 ms increments. The range that can be set is 0 to 655,350. If set to 0, the receive cycle is not monitored.

Data Storage

Sets the data registers that will store the received message. The maximum data length is used starting from the set device.

Address: Shows the device address that corresponds to the tag name of the device or the device address.


Comment: Shows the comment that corresponds to the tag name of the device or the device address. This item can be edited.

Comment

Sets the comment for the received message. The comment that can be set is a maximum of 127 bytes.

■ **Send Message tab**

This tab configures messages that the CAN J1939 All-in-One CPU module transmits to the J1939 communication network as broadcasts.

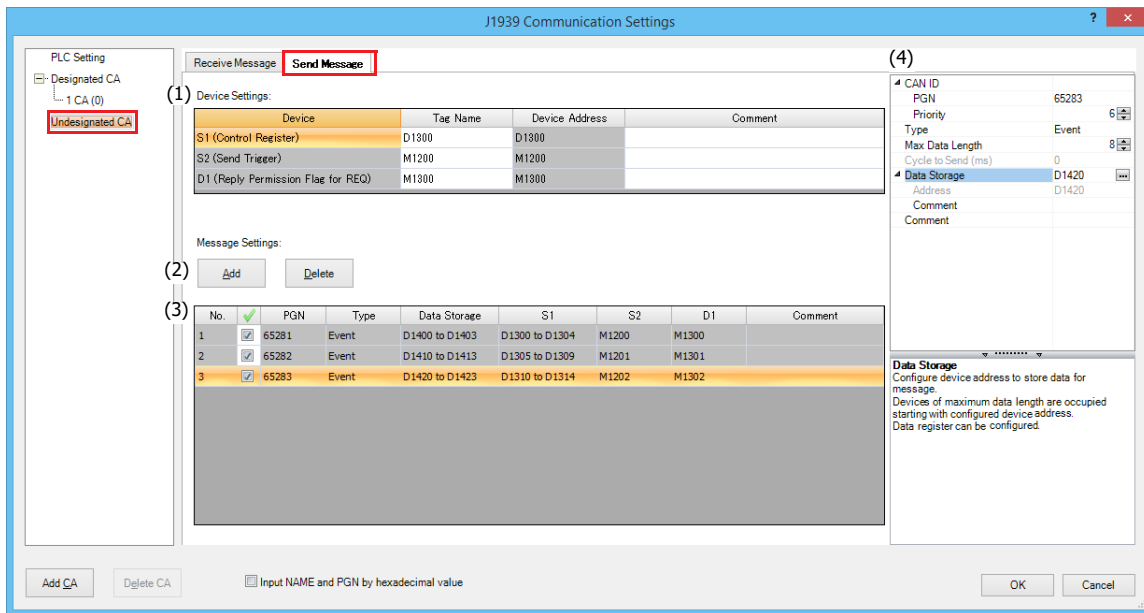

(1) Device Settings

Sets the data registers that will be used by the sent messages.

Settings	Description
Tag Name	Specifies the tag name of the device or the device address.
Device Address	Shows the device address that corresponds to the tag name.
Comment	Shows the comment for the device address. This item can be edited.

S1 (Control Register)

Sets the starting address of the data registers that will store the transmit settings and transmit results.

Storage Destination	Item	Description
Starting number+0	Transmit data length	This register stores the length of the message data to transmit. Starting from the data storage destination, data in the length of the transmit data length will be transmitted to the CA. When 0 is stored for the transmit data length, data of the maximum data length will be transmitted to the CA. This cannot be set larger than the maximum data length. If the message that will be transmitted exceeds 8 bytes, the message is split into 8-byte packets and transmitted as a multi-packet message.
Starting number+1	Request response destination address	Stores the source address of the received request PGN as the PGN response destination address.
Starting number+2	Transmit results status	This register stores the transmit results. To initialize this register, write "0". For details on the transmit results status, see "Transmit results status" on page 8-26.
Starting number+3	Transmit action flag	
	Bit 0	REQ received flag
	Bits 1 to 15	Reserved
Starting number+4	Reserved	

Transmit results status

Status Code	Description	Details
0	Normal	
1	Multi-packet message transmitted	A message with a data length of 9 bytes or longer has finished being transmitted.
10	Transmit data length error	The length of the transmitted message data was longer than the maximum data length.
20	Internal transmit queue overflow	The limit on the number of messages that can be queued for transmission has been reached.
100	Multi-packet transmit error	A message with a data length of 9 bytes or longer could not be transmitted.
200	Local address unconfirmed	The message could not be transmitted because the local address is unconfirmed.
201	Destination address unconfirmed	The message could not be transmitted because the destination CA address is unconfirmed.


S2 (Send Trigger)

Sets the transmit trigger when "Event transmission" is selected for **Type**. When the transmit trigger is turned on, the message is transmitted in ladder program END processing. After the message is transmitted, the transmit trigger is turned off.

D1 (Reply Permission Flag for REQ)

This function responds to the transmit request in a message transmitted as a broadcast. When PGN 59904 (Request) transmitted as a broadcast is received, if the REQ response permitted flag for the corresponding PGN is on, the PGN 59904 (Request) source address is stored in the request response destination address, and the transmit action flag's REQ received flag is turned on. In the next END processing, the requested PGN message is transmitted to the request response destination address.

Request response example

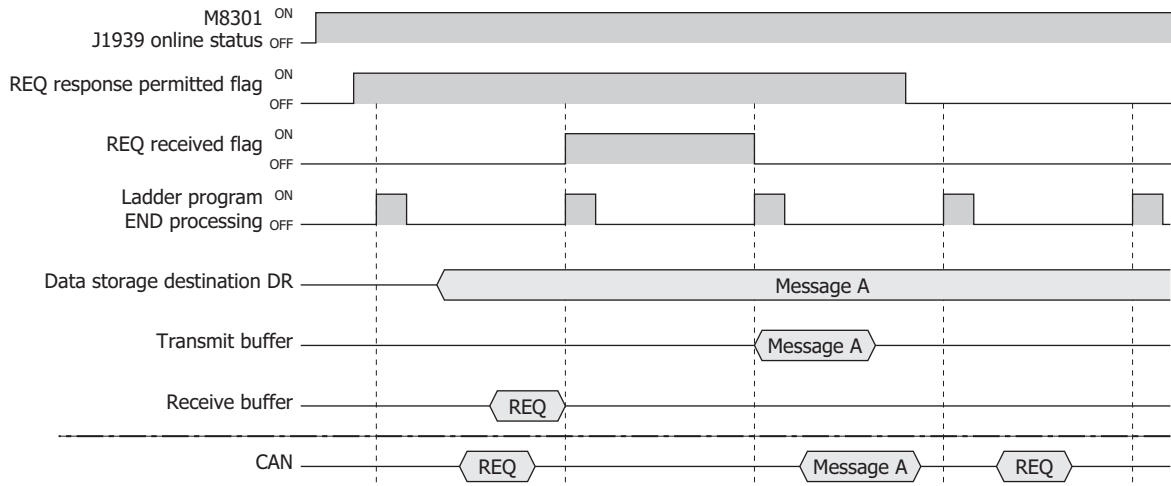

(2) Add button/Delete button

Click **Add** to add a transmitted message to the message list (3).

To delete a message, select the message to delete in the message list, and then click **Delete**.

(3) Message list

Displays the content configured by the message parameter settings (4). The send message can also be enabled or disabled. The message is enabled when the check box is selected and disabled when the check box is cleared.

Notes:

Click the check box column header to perform the following operations.

- If all transmitted message check boxes are on, all of the check boxes are cleared.
- If any transmitted message check boxes are off, all of the check boxes are selected.

(4) Message parameter settings

These settings configure the details of the transmitted message selected in the message list.

CAN ID

PGN: Sets the PGN of the message to transmit. The range of the PGN that can be set is 0 to 61,184 (0000h to EF00h) (PDU1 format) and 61,440 to 65,535 (F000h to FFFFh) (PDU2 format). Set the low order 1 byte (PDU Specific) that indicates the destination address in PDU1 format to 00h. When the PGN is set in the PDU1 format range, it is transmitted as a message with a destination address of 255 (global address).

Click ... and a PGN can be selected in the displayed PGN Manager. For details, see "PGN Manager" on page 8-29.


Priority: Sets the priority for the message to transmit between 0 and 7.

Type

Sets the transmit method for the message. Select as "Event" or "Cycle".


Event: When the transmit trigger is turned on, the transmit data stored in the data storage destination is transmitted in END Processing.

Undesignated CA event transmission example

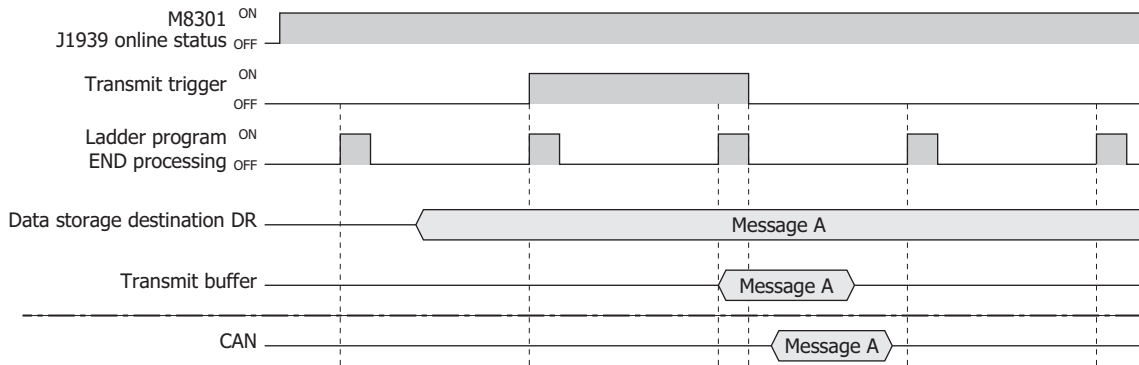

Cycle: While the cycle transmission permitted flag is on and when the transmit cycle occurs, the transmit data stored in the data storage destination is transmitted in END processing. The actual transmit cycle is affected by the ladder program scan time.

Undesignated CA cycle transmission example

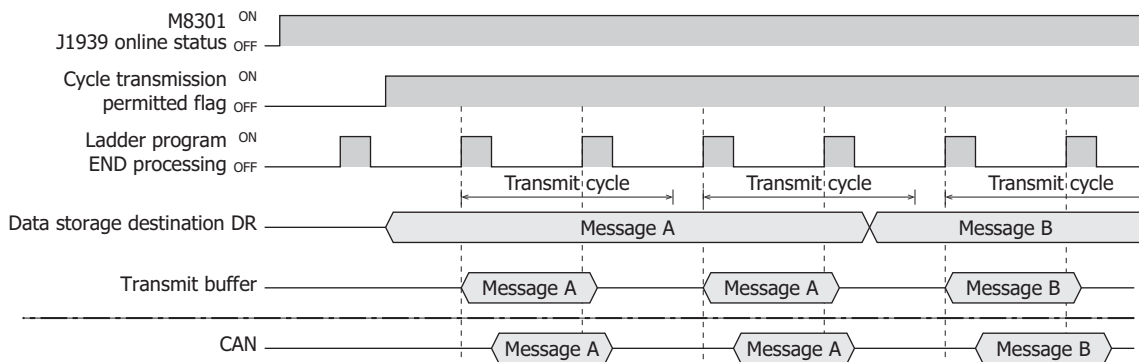

Max Data Length

Sets the maximum data length of the PGN to transmit. The maximum value that can be set is 252 bytes.

Cycle to Send (ms)

Sets the transmit cycle in 10 ms increments when "Cycle transmission" is selected for **Type**. The range of the value that can be set is 10 to 655,350.

Data Storage

Sets the data registers that will store the transmitted message. The maximum data length is used starting from the set device. When transmitting a message, the data is first copied from the data storage destination to the internal transmit buffer and then transmitted.

Address: Shows the device address that corresponds to the tag name of the device or the device address.


Comment: Shows the comment that corresponds to the tag name of the device or the device address. This item can be edited.

Comment

Sets the comment for the transmitted message. The comment that can be set is a maximum of 127 bytes.

PGN Manager

PGNs for transmitted and received messages are collectively managed with PGN Manager.

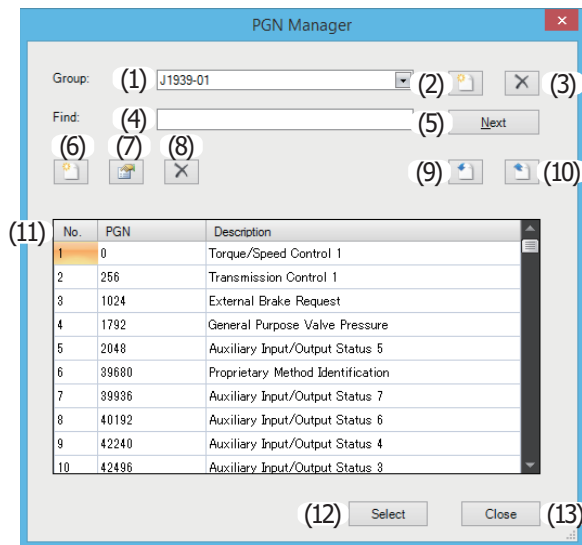

(1) Group list

Displays the registered PGN groups.

When the group is changed, the PGNs registered to the selected group are displayed in the PGN list (11).

J1939 has been registered in advance. A maximum of 20 groups including **J1939** can be registered.

(2) Add group button

Adds a group.

Click this button to display PGN Group Editor. Add a new group with PGN Group Editor. For details, see "PGN Group Editor" on page 8-31.

The added group is added to the group list.

(3) Delete group button

Deletes a group.

Select a group from the group list and click this button to delete it.

The default group **J1939** cannot be deleted.

(4) Find

Enter a string to find in the PGN list as a maximum of 128 bytes.

(5) Next

Finds the string entered in **Find** in the PGN list. Enter a string in **Find** and click this button.

(6) Add PGN button

Adds a PGN to the group.

Select the group in the group list where the PGN will be added and click this button to display PGN Editor.

Add a new PGN with PGN Editor. For details, see "PGN Editor" on page 8-31.

The added PGN is added to the PGN list.

(7) Edit PGN button

Edits a PGN.

Select a registered group in the group list that contains the PGN to edit, and then select the PGN to edit in the PGN list. Click this button to display PGN Editor.

Edit the PGN in PGN Editor. For details, see "PGN Editor" on page 8-31.

The content of the PGN selected in the PGN is updated.

(8) Delete PGN button

Deletes a PGN.

Select a registered group in the group list that contains the PGN to delete, and then select the PGN to delete in the PGN list.


Click this button to delete the PGN.

(9) Import PGNs button

Imports PGNs saved as a CSV file.

Select the group where the PGNs will be imported in the group list. PGNs that are already registered to the selected group are all deleted before the import is executed.

Click this button to display the **Open** dialog box.

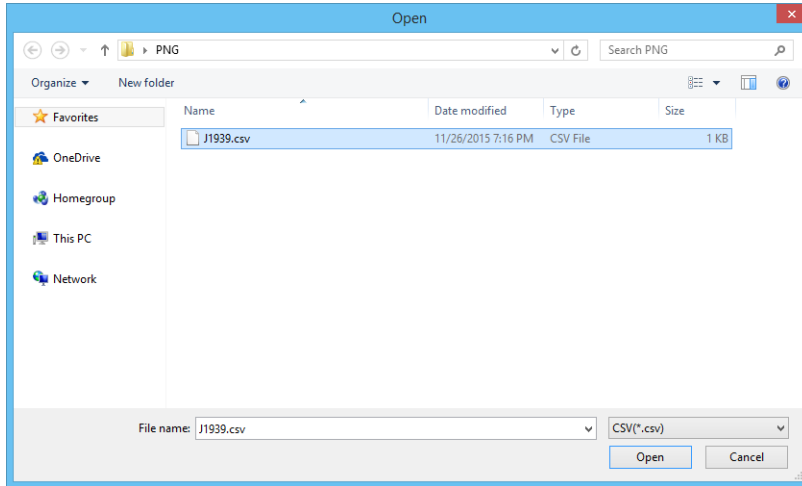


Select the CSV file where the PGNs are saved and click **Open** to import the PGNs in that file to the PGN list for the group selected in the group list.

(10) Export PGNs button

Exports the PGNs registered to the group selected in the group list as a CSV file.

Click this button to display the **Save As** dialog box.

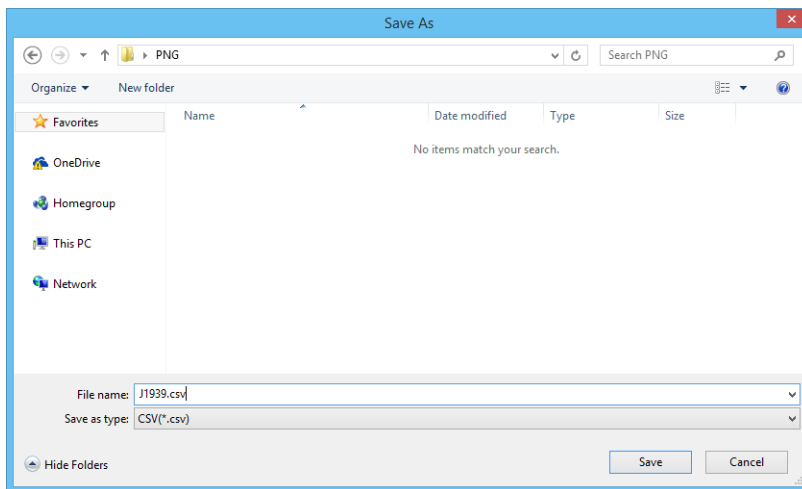

Select the location to save the file, enter a file name, and then click **Save** to save the PGNs registered to the group as a CSV file.

(11) PGN list

Displays the PGNs registered to the group selected in the group list.

No.: Displays the control number for the registered PGN (1 to 65,535).

PGN: Displays the PGN.

Name: Displays the PGN name.

(12) Select button


Closes PGN Manager and sets **CAN ID** in the calling message parameter to the PGN selected in the PGN list.

(13) Close button

Closes PGN Manager.

■ PGN Group Editor

Adds a new group.

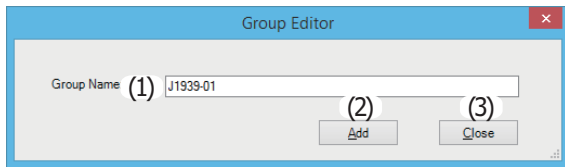

(1) Group Name

Enter the group name for the group that will be used to register PGNs as a maximum of 64 bytes.

(2) Add button


Closes PGN Group Editor and adds the group to the PGN Manager group list.

(3) Close button

Closes PGN Group Editor.

■ PGN Editor

Adds new PGNs and edits existing PGNs.

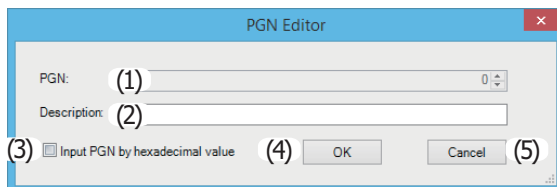

(1) PGN

Enter the PGN to register as a maximum of 5 characters.

When the **Input PGN by hexadecimal value** check box is cleared, enter this as a decimal value. When the check box is selected, enter this as a hexadecimal value.

Example: When hexadecimal: 0001, FF00, etc.

(2) Description

Enter the name of the PGN to register as a maximum of 128 bytes.

(3) Input PGN by hexadecimal value check box

Specifies the PGN entry format.

When cleared, enter the value as a decimal value. When selected, enter the value as a hexadecimal value.

(4) OK button

Closes PGN Editor and adds the PGN to the PGN Manager group list.

(5) Cancel button

Closes PGN Editor.


9: BLUETOOTH COMMUNICATION

This chapter describes the Bluetooth communication of the FC6A Series MICROSmart.


Overview

Bluetooth communication can be used by connecting a Bluetooth communication cartridge to the FC6A Series MICROSmart. Bluetooth communication cartridge can be connected to the three cartridge slots, cartridge slots 1, 2, and 3 (Plus CPU module only). Bluetooth communication cartridges can have the serial communication with Bluetooth devices that support SPP profile. The FC6A Series MICROSmart with a connected Bluetooth communication cartridge can connect to a Bluetooth network as a master or slave. Regardless of whether the FC6A Series MICROSmart is a master or slave, the FC6A Series MICROSmart can connect to and communicate with only one Bluetooth device per Bluetooth communication cartridge. On a Bluetooth network, the source of the connection is called the master and the destination of the connection is called the slave.

Example of Computer and FC6A Series MICROSmart Connection

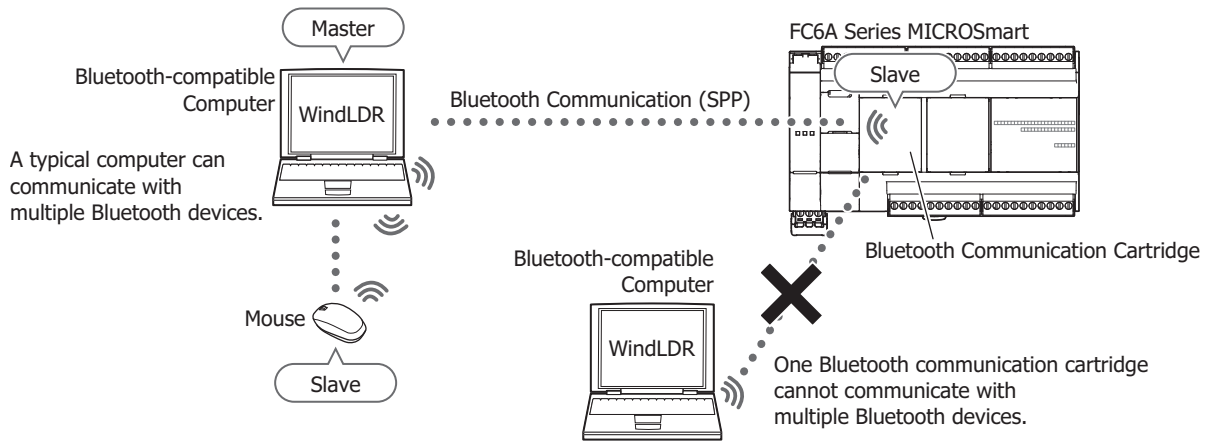

Example of FC6A Series MICROSmart and Bluetooth Device Connection

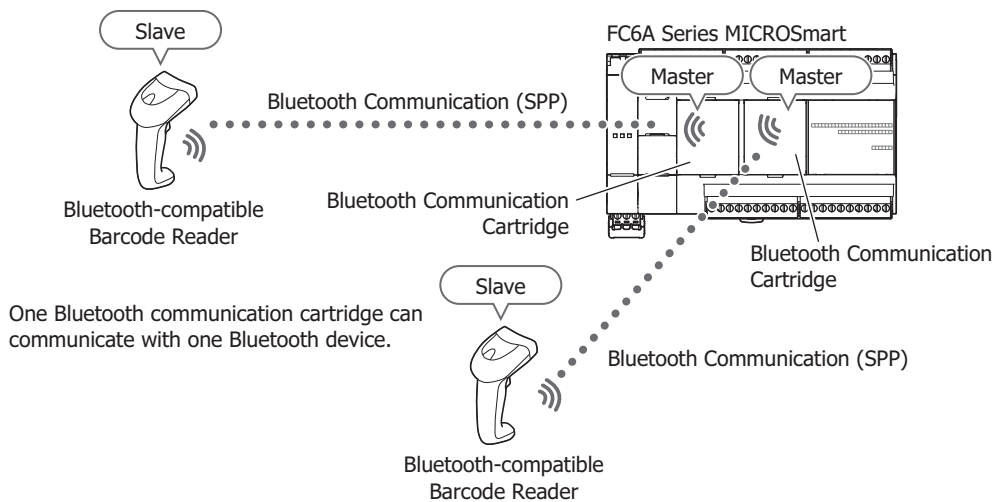

9: BLUETOOTH COMMUNICATION

Wireless Communication Specifications

Type No.	FC6A-PC4
Bluetooth Standard	Bluetooth ver.2.1 + EDR
Profile	SPP (Serial Port Profile) iAP (iPod Accessory Protocol)
Frequency Range	2,402 MHz to 2,480 MHz
Wireless Transmission Distance*1	10 m (Class 2)
Multi-point Function	8 units
Communication Protocol	Maintenance communication protocol, user communication protocol
Bluetooth Wireless Approved Regions*2	Japan, China, USA, Canada, Australia, New Zealand, Europe

*1 Connection effective range is affected by obstacles (human, metal, wall) and wave signal condition. Make sure to confirm the connection status before actual operation.

*2 Depending on countries or regions, evaluations on the device equipped with FC6A may be necessary.


Note: Communication performance (required time) in maintenance communication is as follows.

- User program upload equivalent to 10,000 steps: 2 minutes 40 seconds approx.
- User program download equivalent to 10,000 steps: 2 minutes 30 seconds approx.
- User program upload equivalent to 20,000 steps: 5 minutes 20 seconds approx.
- User program download equivalent to 20,000 steps: 5 minutes approx.
- 100 KB CSV file retrieval: 1 minute 30 seconds approx.
- 200 KB CSV file retrieval: 3 minutes approx.


Configuring the Bluetooth Communication Cartridge

Programming WindLDR

1. The Bluetooth communication cartridge is configured with the Module Configuration Editor. On the **Configuration** tab, in the **PLCs** group, select **Expansion Modules**.
2. Click the Bluetooth communication cartridge inserted in the module configuration area and click **Configure**. The **Bluetooth Communication Cartridge Configuration** dialog box is displayed.

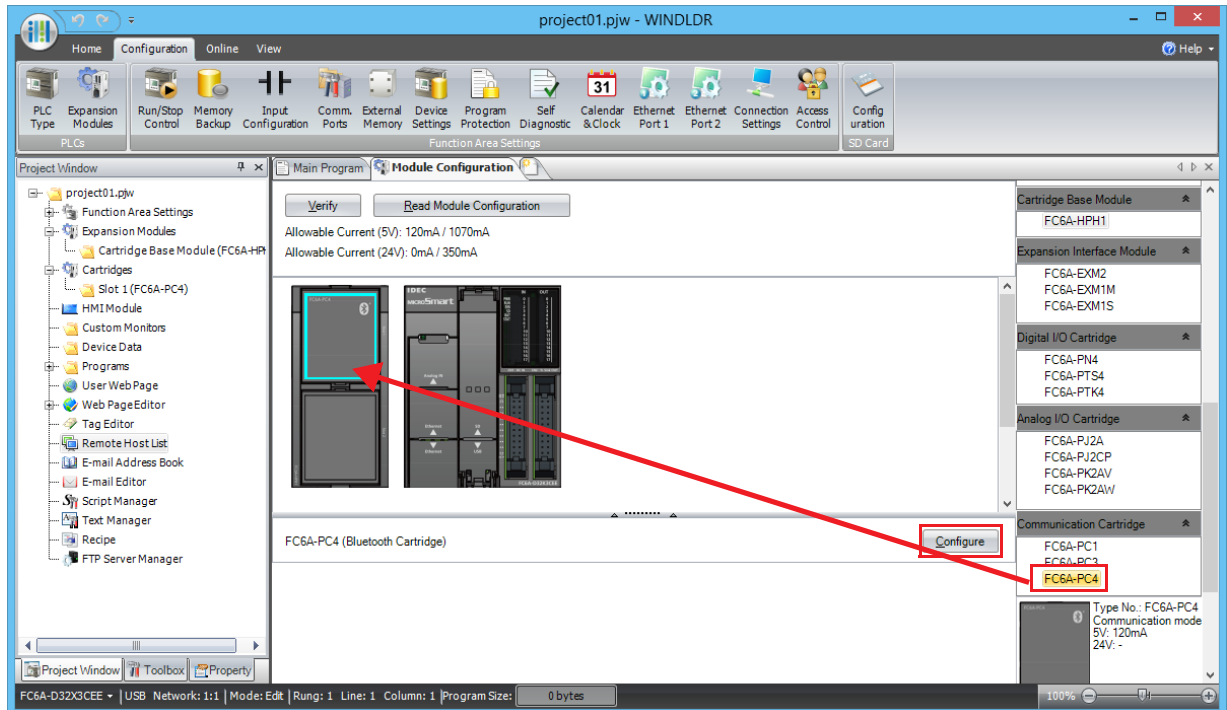

3. Configure the Bluetooth communication cartridge settings.

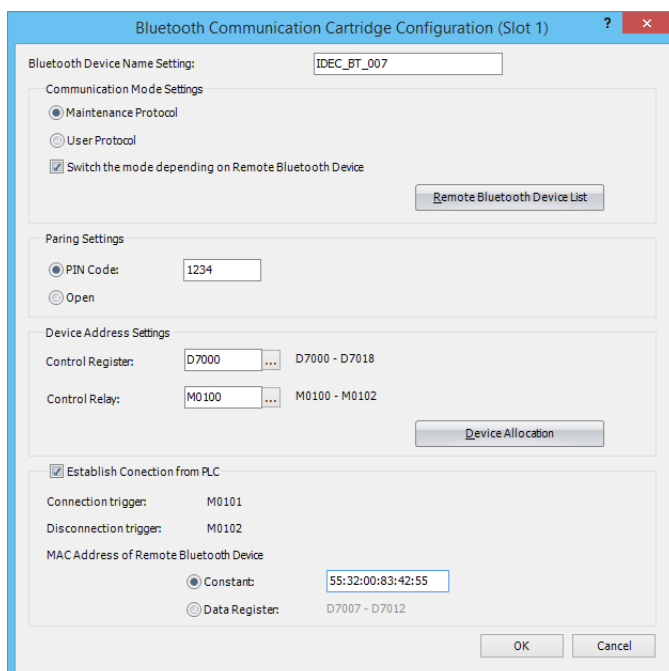

4. Download the user program to the FC6A Series MICROSmart. This concludes configuring the Bluetooth communication cartridge.

Bluetooth Communication Cartridge Configuration

(1) Bluetooth Device Name Setting

Set the name that will be displayed on a computer or smartphone when Bluetooth devices in the area are detected from that computer or smartphone.

(2) Communication Mode Settings

Select the communication mode of the FC6A Series MICROSmart in Bluetooth communication from **Maintenance Protocol** or **User Protocol**.

When Switching the mode depending on Remote Bluetooth Device (3) is selected, the communication mode configured in (3) is applied with a higher priority.

(3) Switch the mode depending on Remote Bluetooth Device

Select this check box to switch the communication mode of the FC6A Series MICROSmart according to the connected Bluetooth device.

For example, use this option to switch to maintenance communication when the FC6A Series MICROSmart connects to a smart phone and to switch to user communication when the FC6A Series MICROSmart connects to a barcode reader after it is disconnected from the smart phone.

If this check box is not selected or this check box is selected but no Bluetooth devices are registered in the **Remote Bluetooth Device List** dialog box, the FC6A Series MICROSmart will operate with the communication mode set by Communication Mode Settings (2).

When Switching the mode depending on Remote Bluetooth Device (3) is configured and FC6A Series MICROSmart establishes a connection with a Bluetooth device, the FC6A Series MICROSmart determines the communication mode. Therefore, the FC6A Series MICROSmart does not receive the SPP data for a few seconds from when the connection is established. SPP communication is possible when the communication mode is changed and the Bluetooth communication cartridge (cartridge slot) status in the control register (6) is changed.

(4) Remote Bluetooth Device List button

MAC address and communication mode for the remote Bluetooth devices to connect for Switching the mode depending on Remote Bluetooth Device (3) can be configured.

Click this button to display the **Remote Bluetooth Device List** dialog box.

The MAC address, communication mode, and comment of each Bluetooth device are displayed in the dialog box. For details, see "Remote Bluetooth Device List" on page 9-6.

(5) Pairing Settings

Select the security when making a Bluetooth connection from the following.

- PIN Code : Requires the input of the configured PIN code when making a connection with the Bluetooth device. The communicated content is encrypted.
This pairing method is typically used with devices up to Bluetooth v2.0.
- Open : The communicated content is not encrypted.
This setting is used to communicate with devices up to Bluetooth v2.0 with no security.

(6) Control Registers

Specify the first data register of the control registers storing MAC addresses of the remote Bluetooth device and the Bluetooth communication cartridge connected to the FC6A Series MICROSmart. Special data registers cannot be specified.

Device Address	Item	Description	R/W
Starting number+0	Status of Bluetooth communication cartridge (cartridge slot)	Stores the status and communication mode of the Bluetooth communication cartridge. 0: No operation 255: In operation, such as waiting for Bluetooth connection and disconnection 1: Maintenance communication 2: User communication The default setting is 0 (No operation).	R
Starting number+1	MAC address of Bluetooth communication cartridge (cartridge slot)	Stores the MAC address of the Bluetooth communication cartridge connected to the cartridge slot. Example: MAC address: AA-BB-CC-DD-EE-FF Starting number+1=AA, starting number+2=BB, starting number+3=CC, starting number+4=DD, starting number+5=EE, starting number+6=FF	R
Starting number+2			
Starting number+3			
Starting number+4			
Starting number+5			
Starting number+6			
Starting number+7	MAC address of the remote Bluetooth device with which the Bluetooth communication cartridge makes a connection (cartridge slot)	Store the MAC address of the remote Bluetooth device to connect. Example: MAC address: AA-BB-CC-DD-EE-FF Starting number+1=AA, starting number+2=BB, starting number+3=CC, starting number+4=DD, starting number+5=EE, starting number+6=FF	R/W
Starting number+8			
Starting number+9			
Starting number+10			
Starting number+11			
Starting number+12			
Starting number+13	—Reserved—		—
Starting number+14			
Starting number+15			
Starting number+16			
Starting number+17			
Starting number+18			

(7) Control Relays

Specify the first internal relay of the control relays storing the Bluetooth communication cartridge (cartridge slot) communication status and connection and disconnection triggers for the Establish Connection (9). Special internal relays cannot be specified.

Device Address	Item	Description	R/W
Starting number+0	Status of Bluetooth communication cartridge (cartridge slot)	0: Cannot communicate with the remote Bluetooth device 1: Can communicate with the remote Bluetooth device	R
Starting number+1	Connection trigger of Bluetooth communication cartridge (cartridge slot)	0: Do not process 1: Connect the connection target Bluetooth device	R/W
Starting number+2	Disconnection trigger of Bluetooth communication cartridge (cartridge slot)	0: Do not process 1: Disconnect the connection target Bluetooth device	R/W

(8) Device Allocation button

Click this button to display the **Device Allocation** dialog box.

The dialog box displays a table with the Bluetooth communication cartridge settings and corresponding data registers and internal relays. For details, see "Device Allocations" on page 9-7.


9: BLUETOOTH COMMUNICATION

(9) Establish Connection from PLC

Select this check box to connect to and disconnect from the remote Bluetooth device when FC6A Series MICROSmart is the master. When this check box is selected, iOS devices cannot be connected.

- Connection Trigger : The device address of the control relay, which is configured in (7), + 1 is displayed as the connection trigger. When this is turned off to on, a connection is made with the remote Bluetooth device configured in **MAC Address of Remote Bluetooth Device**.
- Disconnection Trigger : The device address of the control relay, which is configured in (7), + 2 is displayed as the disconnection trigger. When this is turned off to on, a connection with the remote Bluetooth device configured in **MAC Address of Remote Bluetooth Device** is disconnected.
- MAC Address of Remote Bluetooth Device : The remote Bluetooth device to connect can be specified with either **Constant** or **Data Register**.
When **Constant** is selected, MAC address configured in the **Bluetooth Communication Cartridge Configuration** dialog box becomes the target to connect.
When **Data Register** is selected, MAC address configured with the first data register +7 to +12 of the control register (6) becomes the target to connect.

Remote Bluetooth Device List

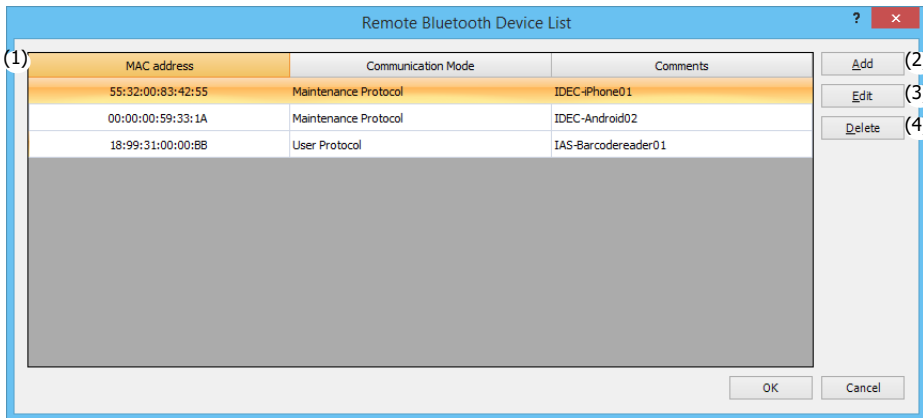

(1) Bluetooth Device List

Displays the MAC address, communication mode, and comment of each Bluetooth device.

(2) Add

Click this button to display the **Remote Bluetooth Device Settings** dialog box. This dialog box is used to enter the MAC address of the connected Bluetooth device, communication mode to switch to at the start of the connection, and comment. A maximum of 20 devices can be registered. For details, see "Remote Bluetooth Device Settings" on page 9-7.

(3) Edit

Select a Bluetooth device in the Bluetooth Device List (1) and click this button to display the **Remote Bluetooth Device Settings** dialog box. This dialog box is used to edit the MAC address of the connected Bluetooth device, communication mode to switch to at the start of the connection, and comment. For details, see "Remote Bluetooth Device Settings" on page 9-7.

(4) Delete

Select a Bluetooth device in the Bluetooth Device List (1) and click this button to delete the Bluetooth device.

Remote Bluetooth Device Settings

Remote Bluetooth Device Setting

MAC address (1) 35:32:00:83:42:55 OK

Communication Mode (2) Maintenance Protoc Cancel

Comments (3) .DEC-iPhone01

(1) MAC address

Set the MAC address of the connected Bluetooth device.

(2) Communication Mode

Select the communication mode to switch to at the start of the connection from **Maintenance Protocol** or **User Protocol**.

(3) Comments

Enter the MAC address of the connected Bluetooth device.

Device Allocations

Device Allocation

(1) Data Register Internal Relay

Device Address	Description
D7000	Bluetooth Cartridge (Slot 1) Status
D7001	Bluetooth Cartridge (Slot 1) MAC Address 1/6
D7002	Bluetooth Cartridge (Slot 1) MAC Address 2/6
D7003	Bluetooth Cartridge (Slot 1) MAC Address 3/6
D7004	Bluetooth Cartridge (Slot 1) MAC Address 4/6
D7005	Bluetooth Cartridge (Slot 1) MAC Address 5/6
D7006	Bluetooth Cartridge (Slot 1) MAC Address 6/6
D7007	Bluetooth Cartridge (Slot 1) Target Device MAC ...
D7008	Bluetooth Cartridge (Slot 1) Target Device MAC ...
D7009	Bluetooth Cartridge (Slot 1) Target Device MAC ...
D7010	Bluetooth Cartridge (Slot 1) Target Device MAC ...
D7011	Bluetooth Cartridge (Slot 1) Target Device MAC ...
D7012	Bluetooth Cartridge (Slot 1) Target Device MAC ...
D7013	Reserved
D7014	Reserved

(2) Allocate Comments Close

(1) Device Allocations List

Displays a table with the Bluetooth communication cartridge settings, data registers, and internal relays.

(2) Allocate Comments button

Click this button to set the content in the table as the comments of the devices.

Configuring and Communicating with Bluetooth Devices

Maintenance Communication with a Computer

This section describes how to perform maintenance communication with a computer using the Bluetooth communication.

This enables you to have a computer, in which WindLDR is installed, connect with the Bluetooth communication cartridge to monitor and change device values and to upload and download the user program.

The FC6A Series MICROSmart waits for the connection as the slave and the computer acts as the master to make the connection on the Bluetooth network.



FC6A Series MICROSmart Settings

1. Connect the Bluetooth communication cartridge to the FC6A Series MICROSmart.
2. Configure the Bluetooth communication cartridge with WindLDR.
For details, see "Programming WindLDR" on page 9-3.


Example: **Bluetooth Communication Cartridge Configuration** dialog box settings

Settings		Description
Bluetooth Device Name Setting		IDEC_BT_007
Communication Mode		Maintenance Communication
Pairing Setting		PIN Code "1234"
Device Settings	Control Registers	D7000
	Control Relays	M0100


3. Download the user program to the FC6A Series MICROSmart.

Computer Settings

1. Search for the name of the Bluetooth communication cartridge with the computer.
The name is set with the **Bluetooth Device Name Setting** in the **Bluetooth Communication Cartridge Configuration** dialog box in WindLDR.
(IDEC_BT_007)

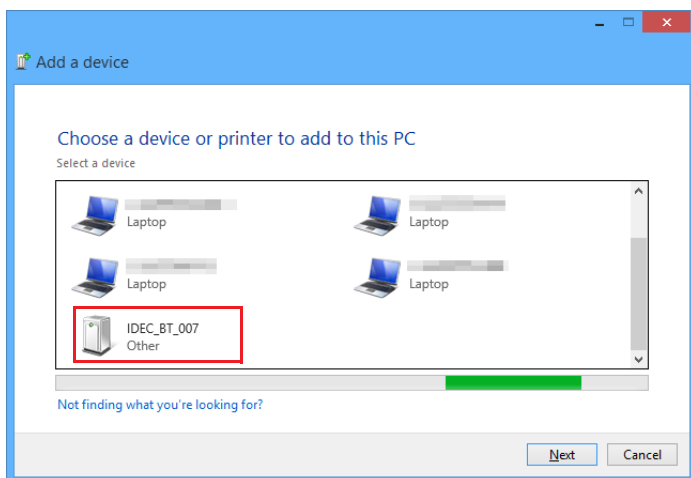


2. Connect to the Bluetooth communication cartridge and create a virtual COM port. When connecting the first time, pairing is necessary and entering the PIN code "1234" is required.

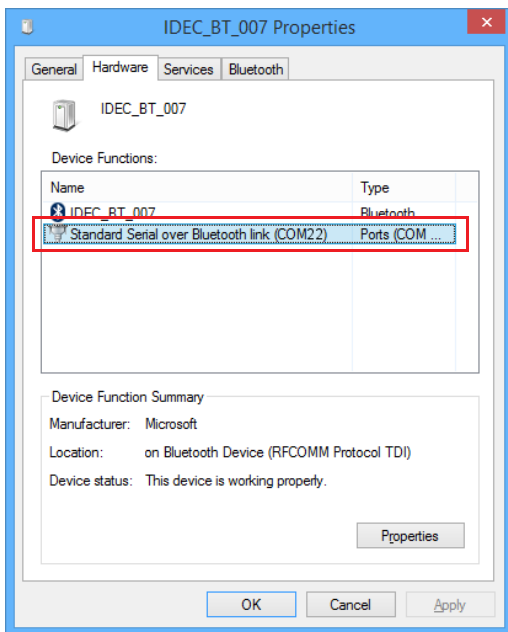

Checking Bluetooth Communication


1. Perform the serial communication using the virtual COM port. Select **Use Bluetooth communication**.

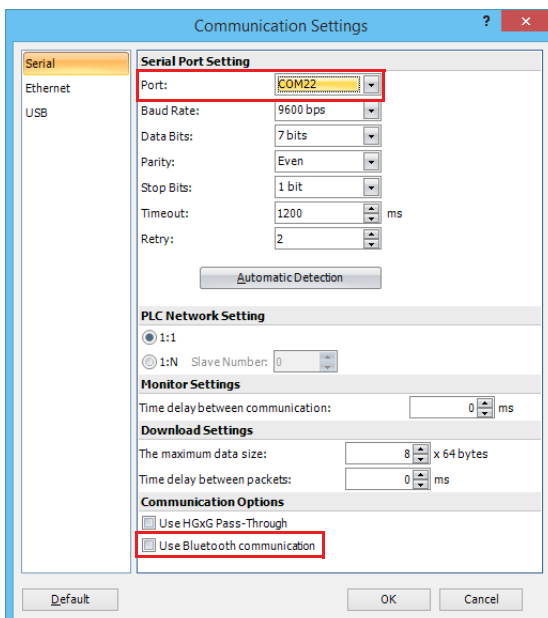

2. Run the monitor in WindLDR.
3. Check the value of the device that indicates the Bluetooth communication status. Check if the Bluetooth communication cartridge status (M0100) is 1. The Bluetooth communication cartridge (cartridge slot) status is the first internal relay + 0 of the control relays configured in **Device Address Settings** in **Bluetooth Communication Cartridge Configuration** dialog box.

Maintenance Communication with a Smartphone

This section describes how to perform maintenance communication with a smartphone using the Bluetooth communication. This enables you to have a smart phone, in which the dedicated app is installed, connect with the Bluetooth communication cartridge to monitor and change device values and to upload and download the user program. The FC6A Series MICROSmart waits for the connection as the slave and the smartphone acts as the master to make the connection on the Bluetooth network.

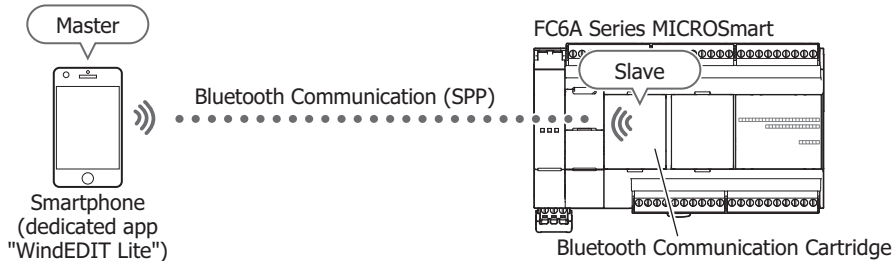

Unspecified access can be prevented by using password authentication to restrict access to the FC6A Series MICROSmart.

FC6A Series MICROSmart Settings

1. Connect the Bluetooth communication cartridge to the FC6A Series MICROSmart.
2. Configure the Bluetooth communication cartridge with WindLDR.
For details, see "Programming WindLDR" on page 9-3.


Example: **Bluetooth Communication Cartridge Configuration** dialog box settings

Settings		Description
Bluetooth Device Name Setting		IDEC_BT_007
Communication Mode		Maintenance Communication
Pairing Setting		PIN Code "1234"
Device Settings	Control Registers	D7000
	Control Relays	M0100

3. Download the user program to the FC6A Series MICROSmart.


Smartphone Settings

1. Search for the name of the Bluetooth communication cartridge with a smart phone.
The name is set with the **Bluetooth Device Name Setting** in the **Bluetooth Communication Cartridge Configuration** dialog box in WindLDR.
(IDEC_BT_007)

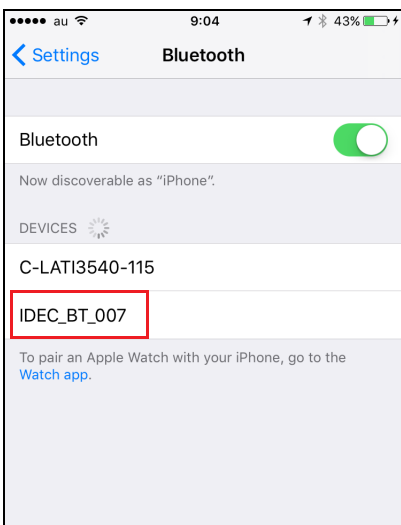

Note: The search screen for the Bluetooth communication devices depends on each smart phone to use.

2. Connect to the Bluetooth communication cartridge from the dedicated app.

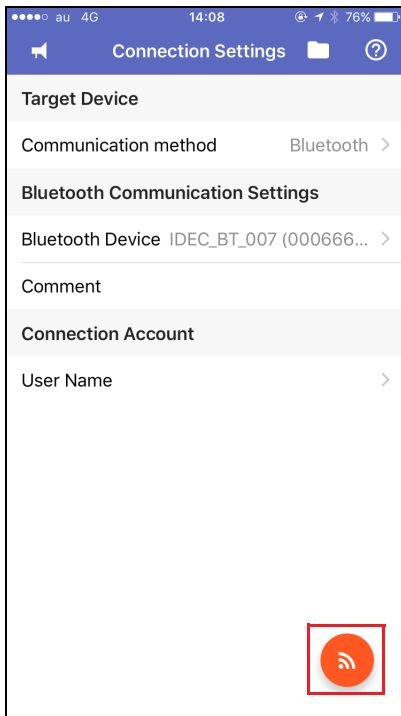

Checking Bluetooth Communication

1. Check the device value that indicates the Bluetooth communication status with the dedicated app **WindEDIT Lite**. Check if the Bluetooth communication cartridge status (M0100) is 1. The Bluetooth communication cartridge (cartridge slot) status is the first internal relay + 0 of the control relays configured in **Device Address Settings** in **Bluetooth Communication Cartridge Configuration** dialog box.


Note: For how to use the dedicated app **WindEDIT Lite**, see the "WindEDIT Lite User's Manual".

User Account Settings


Creating User Accounts

• Operation procedure


1. In the **Function Area Settings** dialog box, under **Access Control**, select the **Enable access control for App** check box.
2. Click **Configure**.
The **User Account Settings** dialog box is displayed.

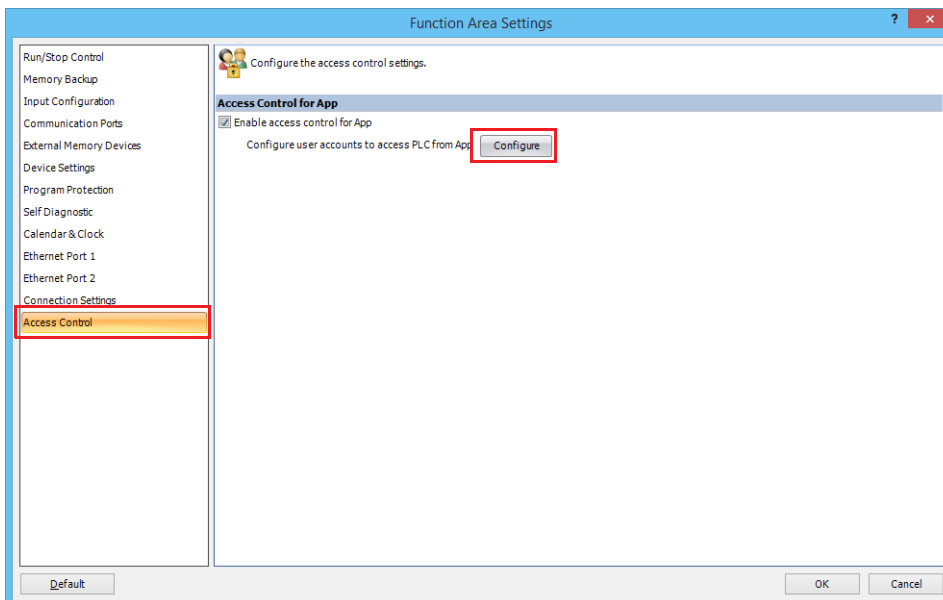


3. Click **New User**.
A user account is created in the list.

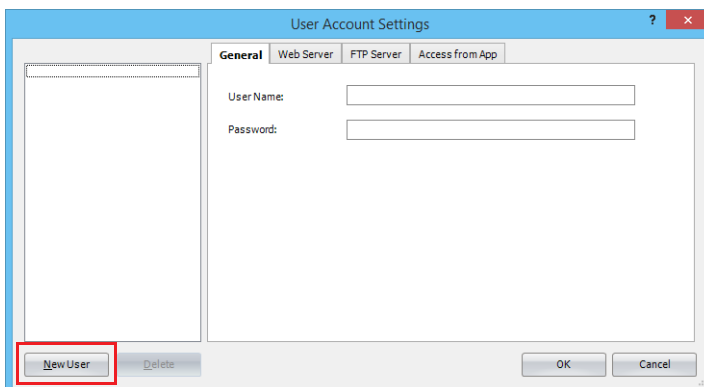

- On the **General** tab, set **User Name** and **Password**.

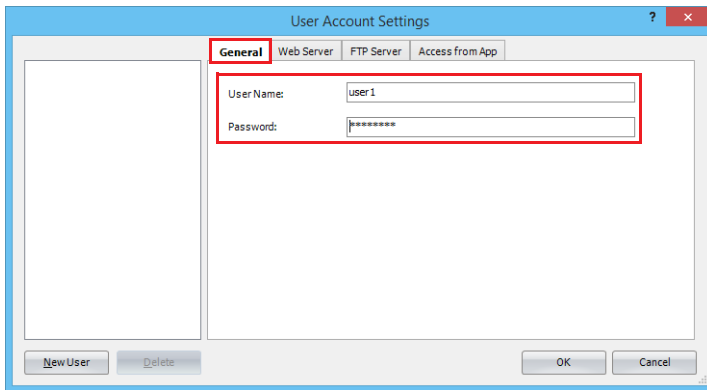


- Click the **Access from App** tab and select the **Allow access to PLC from App** check box.
- Under **Permission**, select **Read Only** or **Read/Write**.

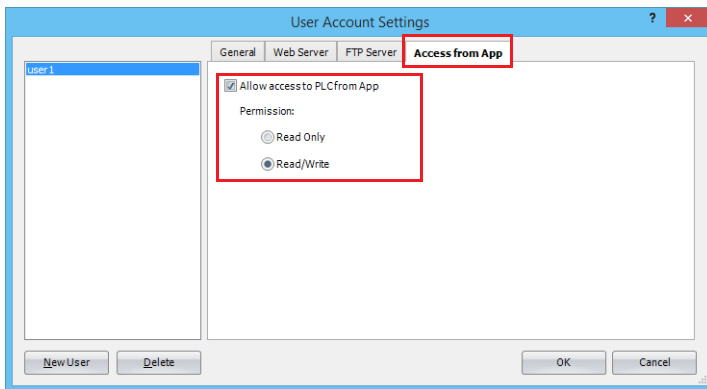

- Repeat the steps 2 to 6 and create the required number of user accounts.

Note: If you select a user account on the list, you can edit the settings of the selected user account on the **General** and **Access from App** tabs.

- Click **OK**.

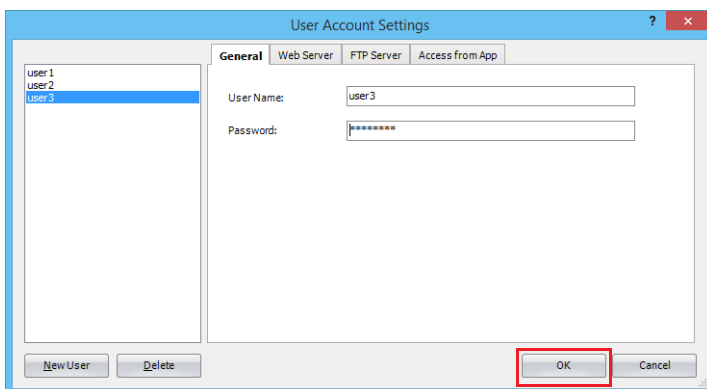


This concludes creating user accounts.

9: BLUETOOTH COMMUNICATION


Deleting a Created User Account

• Operation procedure


1. Select the user account on the list and click **Delete**.
A confirmation message is displayed.

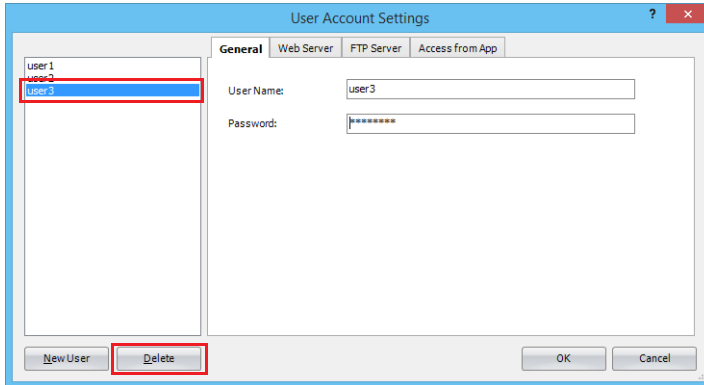

2. Click **OK**.

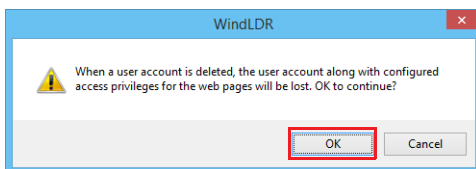

3. Click **OK**.

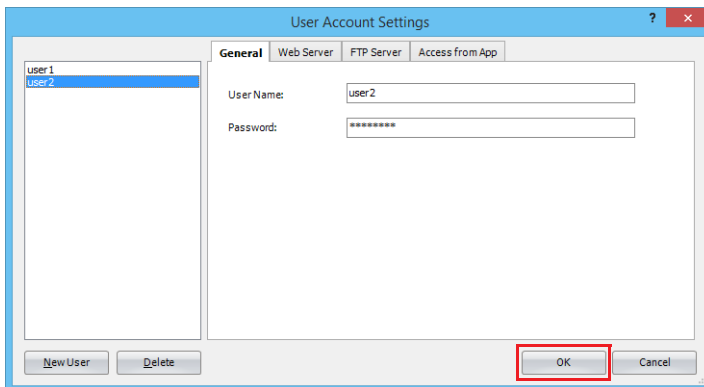


This concludes deleting a user account.

User Communication with a Barcode Reader

This section describes how to perform user communication with a barcode reader using the Bluetooth communication.

The FC6A Series MICROSmart can connect to a supported barcode reader and perform user communication.

The configuration method depends on the specifications of the barcode reader to use. In the following description, the barcode reader waits for the connection as the slave and the FC6A Series MICROSmart acts as the master to make the connection on the Bluetooth network.

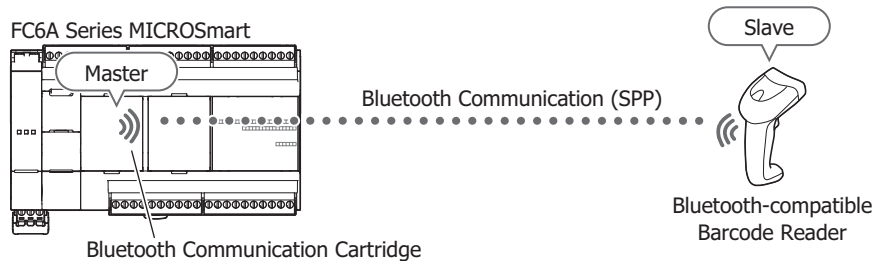

Note: The recommended barcode reader is IDEC's GBT4400.

FC6A Series MICROSmart Settings

1. Connect the Bluetooth communication cartridge to the FC6A Series MICROSmart.
2. Configure the Bluetooth communication cartridge with WindLDR.
For details, see "Programming WindLDR" on page 9-3.

Example: **Bluetooth Communication Cartridge Configuration** dialog box settings

Settings		Description
Bluetooth Device Name Setting		IDEC_BT_007
Communication Mode		User Communication
Pairing Setting		PIN code "1234"
Device Settings	Control Registers	D7000
	Control Relays	M0100
Establish Connection from PLC		Selected*1

*1 The MAC address of the barcode reader is required for the connection.

3. Download the user program to the FC6A Series MICROSmart.

Barcode Reader Settings

1. Set the PIN code on the barcode reader.
Configure the barcode reader by reading the PIN code setup barcode. This will depend on the specifications of the barcode reader. The PIN code is set with the **Pairing Settings** in the **Bluetooth Communication Cartridge Configuration** dialog box in WindLDR.
(1234)
2. Have the barcode reader wait for a connection.
Configure the barcode reader by having it read the setup barcode for the wait for connection. This will depend on the specifications of the barcode reader.

Checking Bluetooth Communication

1. Turn on the connection trigger on the FC6A Series MICROSmart.
Turn on the Bluetooth communication cartridge connection trigger. The Bluetooth communication cartridge (cartridge slot) connection trigger is the first internal relay + 1 of the control relays configured in **Device Address Settings** in **Bluetooth Communication Cartridge Configuration** dialog box. The status code of 255 is stored in D7000, which is the first control register + 0: Bluetooth communication cartridge status (cartridge slot).
2. Run the monitor in WindLDR.

9: BLUETOOTH COMMUNICATION

3. Check the device value that indicates the Bluetooth communication status.
Check if the Bluetooth communication cartridge status (M0100) is 1. The Bluetooth communication cartridge (cartridge slot) status is the first internal relay + 0 of the control relays configured in **Device Address Settings** in **Bluetooth Communication Cartridge Configuration** dialog box.

10: FTP SERVER/CLIENT

This chapter describes FTP server and client of the Plus CPU module.

FTP Server

The FTP server is available with the Plus CPU module only.

FTP Server Overview


What the FTP Server Can Do

The FTP server enables the Plus CPU module to act as an FTP server to communicate with FTP clients, such as a computer. FTP clients can perform the following actions.

- Read files from the SD memory card inserted into the Plus CPU module.
- Write files to the SD memory card inserted into the Plus CPU module.

Example of System Configuration

The following diagram shows an example of a system configuration for using the FTP server.

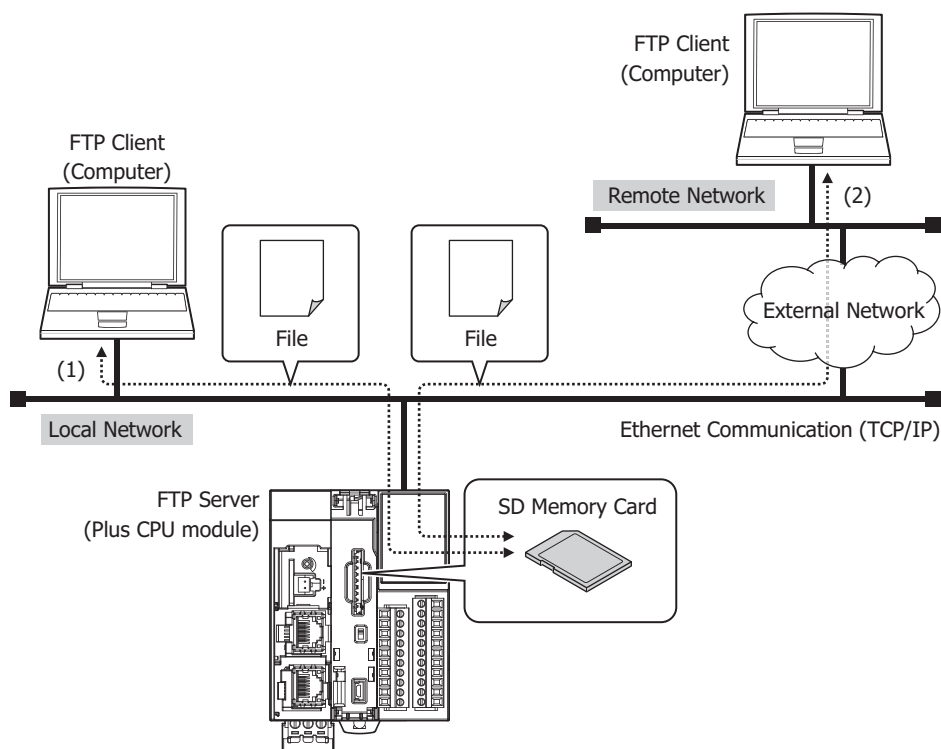


Connect Ethernet port 1 of the Plus CPU module to the network.

- (1) Access the Plus CPU module from an FTP client connected to the network, and read files from or write files to the SD memory card inserted into the Plus CPU module.
- (2) If the network is connected to an external network, configure the gateway and router of the local network for FTP clients connected via a remote network. Access the Plus CPU module from a remote FTP client, and read files from or write files to the SD memory card inserted into the Plus CPU module. Contact the administrator of the network to which the Plus CPU module is connected for information about the configurations for the gateway and router.

Files Handled by the FTP Server


All files on the SD memory card inserted into the Plus CPU module can be accessed with the FTP server. This section shows an example of the folder and file structure of the SD memory card.

 SD Memory Card



Arbitrary: File names and folder names that can be specified by the function area settings or instruction parameters.

Fixed: File names and folder names that are fixed by the system.

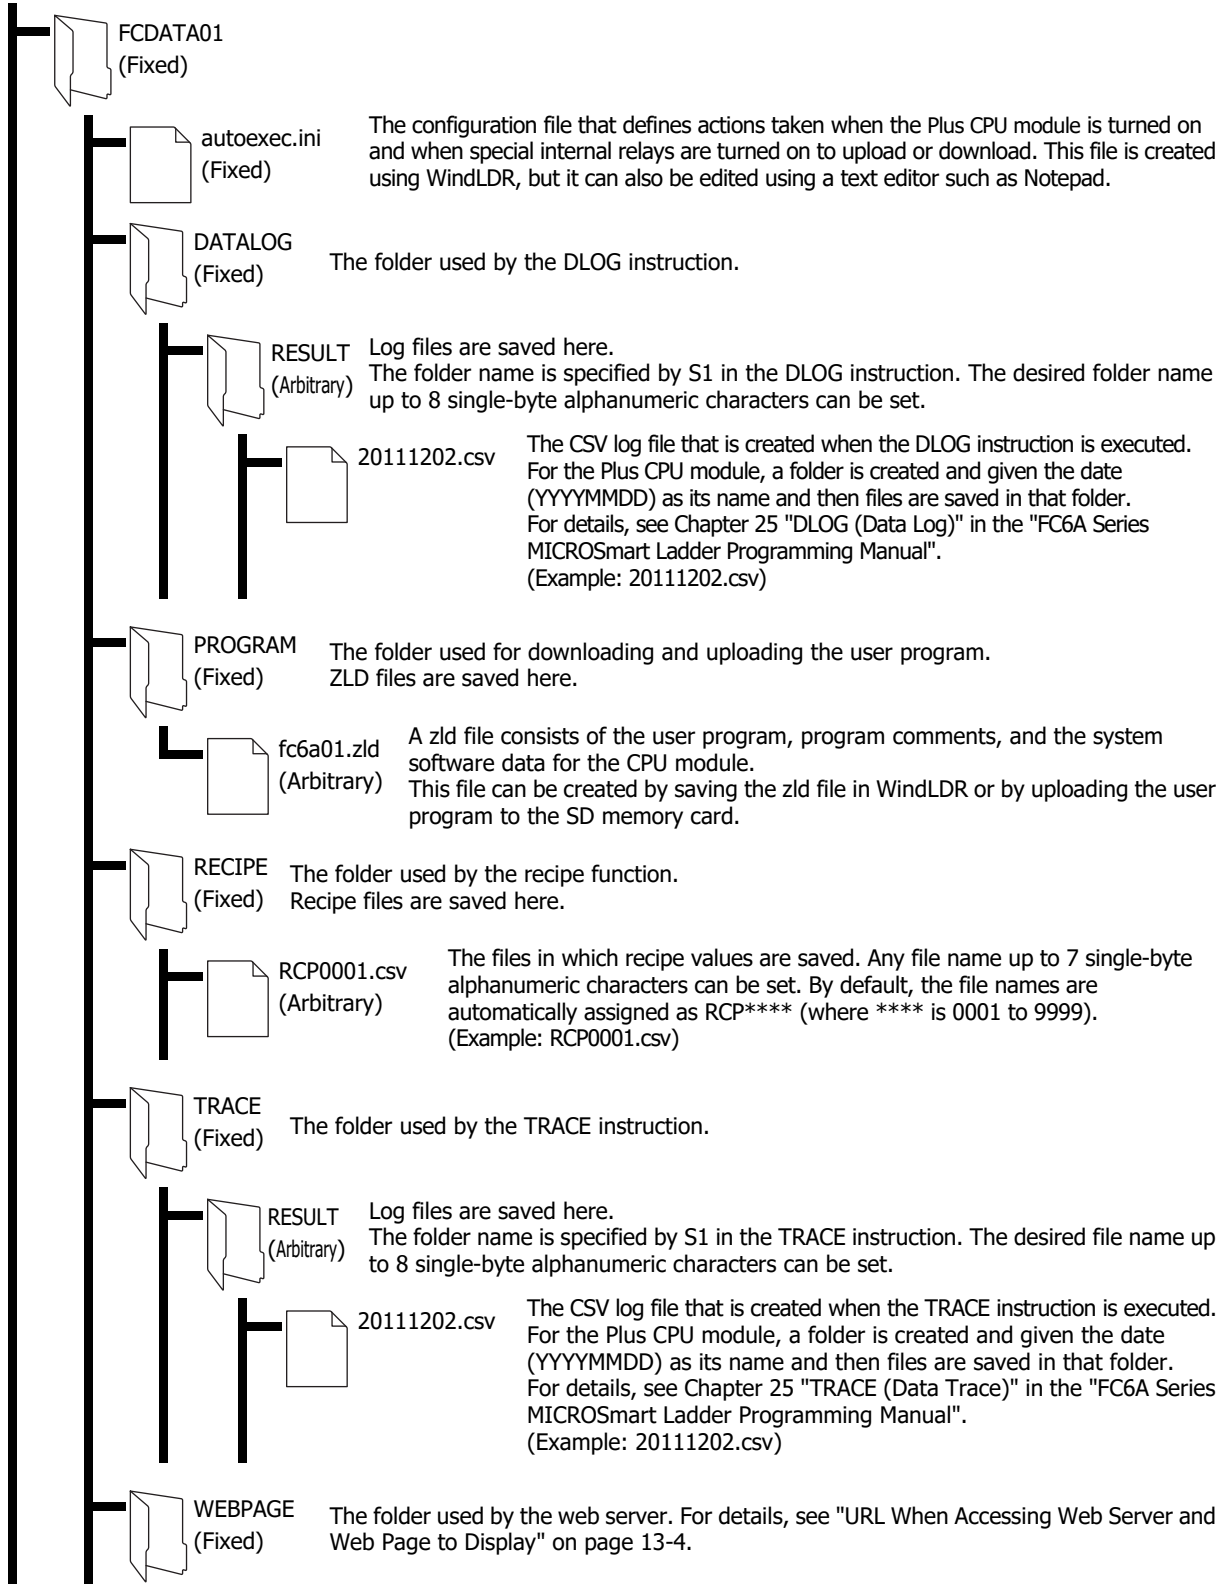

Supported Commands and Connection Methods


- Commands defined in RFC 959 are supported.
- Active mode and passive mode are supported.
- FTPS (FTP over SSL/TLS) is supported. Explicit mode is supported.
- Only one FTP client connection is allowed at one time.

The recommended FTP client software are as follows.

- FFFTP
- FileZilla
- Core FTP Lite

Programming WindLDR


1. On the **Configuration** tab, in the **Function Area Settings** group, click **Ethernet Port 1**.
2. Under **FTP Server Settings**, select the **Enable FTP Server** check box.
3. Configure the FTP server settings.

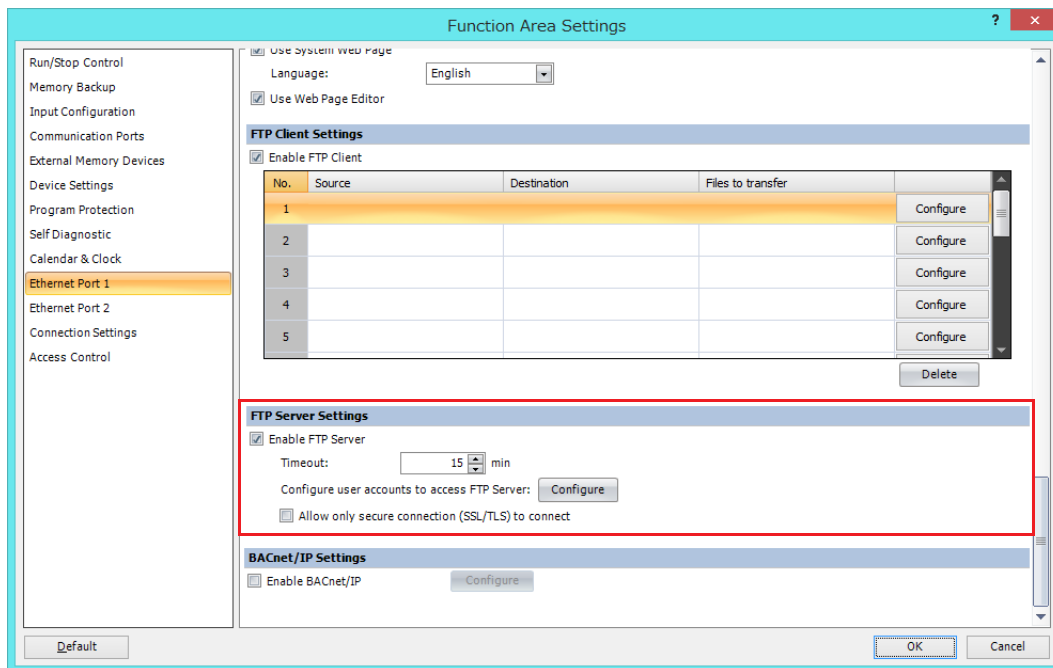

4. Download the user program to the Plus CPU module.

This concludes configuring the FTP server settings.

FTP Server Settings

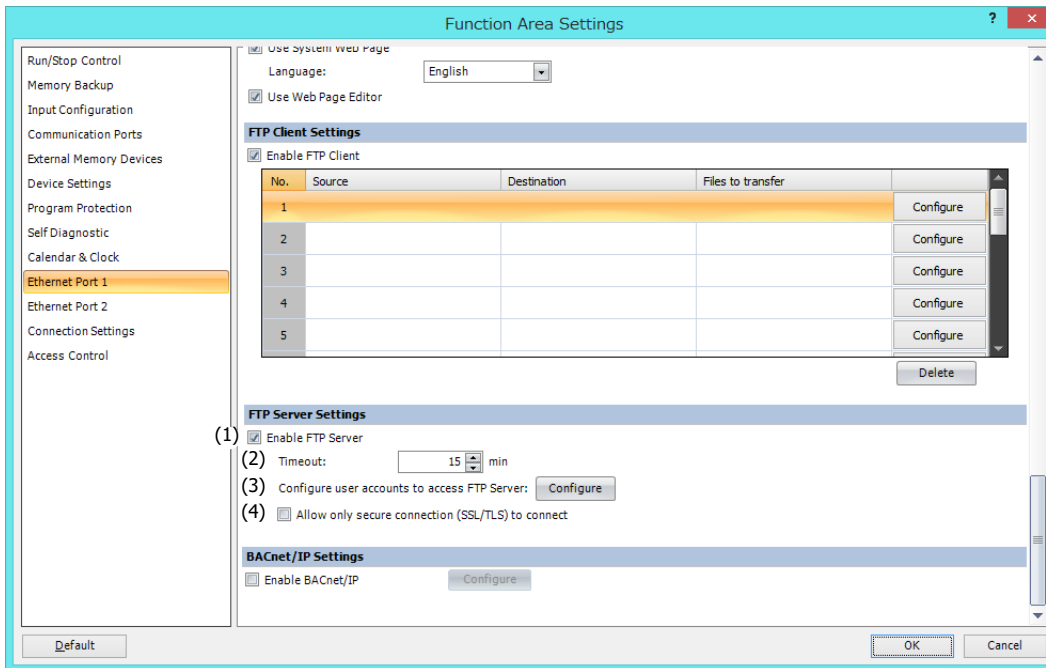

(1) Enable FTP Server

To use the FTP server function, select this check box and set the user account. The files on the SD memory card inserted into the Plus CPU module can be read and written from an FTP client. The port number used for the FTP server is 21.

(2) Timeout

Specify the duration of time to disconnect the FTP client. When an FTP client is logged in to the Plus CPU module and there is no communication between the FTP client and the Plus CPU module for the specified duration of time, the connection is automatically disconnected. (Default: 15 minutes)

(3) Configure user accounts to access FTP Server

Click **Configure** and create user accounts in the **User Account Settings** dialog box. For details, see "User Account Settings" on page 10-5.

(4) Allow only secure connection (SSL/TLS) to connect


Select this check box to allow logging in to the FTP server over SSL or TLS communication only.

User Account Settings


Creating User Accounts

• Operation procedure

1. In the **Function Area Settings** dialog box, under **FTP Server Settings**, select the **Enable FTP Server** check box.
2. Click **Configure**.
The **User Account Settings** dialog box is displayed.

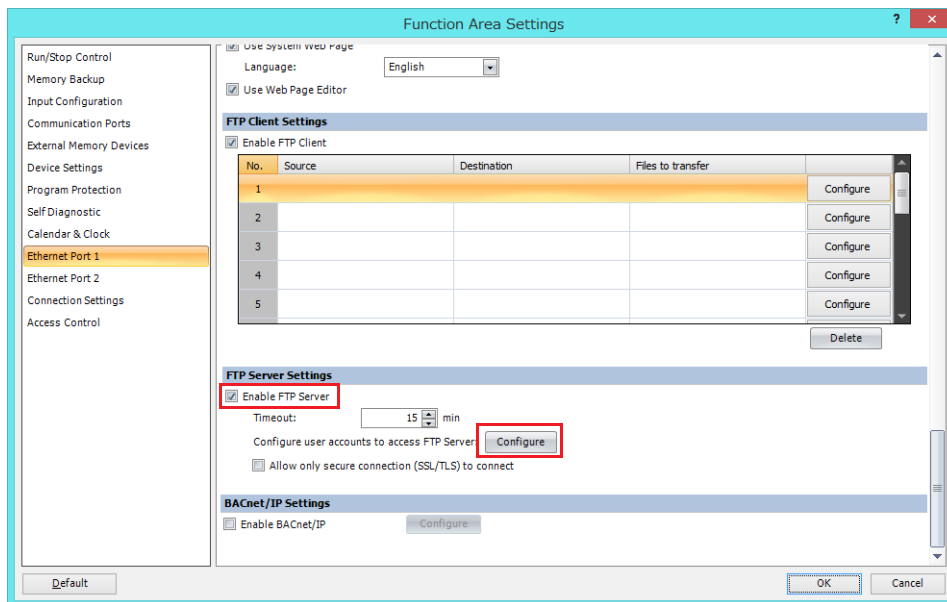


3. Click **New User**.
A user account is created in the list.

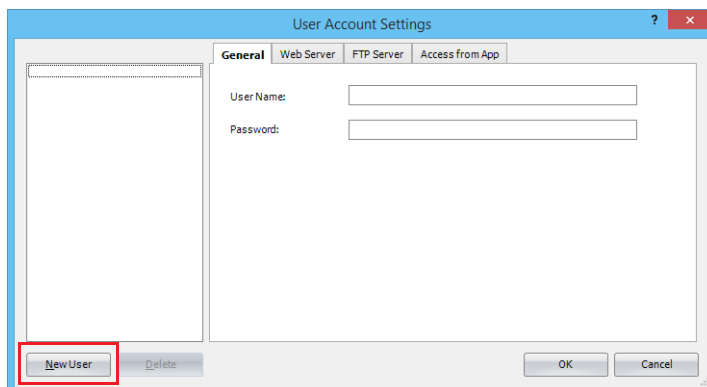


10: FTP SERVER/CLIENT

4. On the **General** tab, set **User Name** and **Password**.

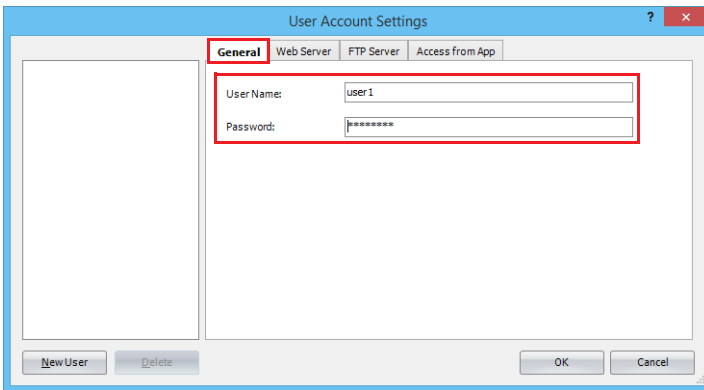


5. Click the **FTP Server** tab and select the **Allow access to FTP server** check box.
6. Under **Permission**, select **Read Only** or **Read/Write**.

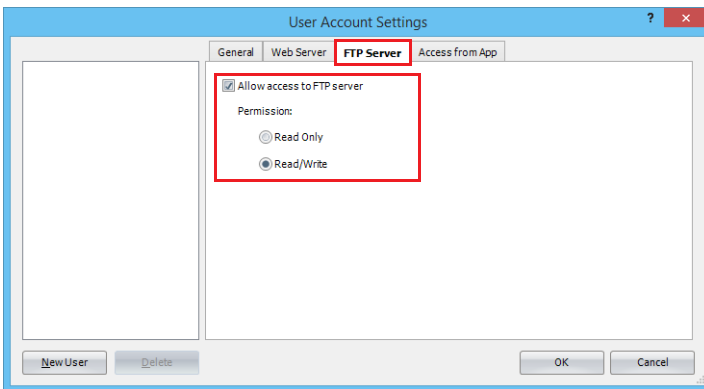

7. Repeat the steps 2 to 6 and create the required number of user accounts.

Note: If you select a user account on the list, you can edit the settings of the selected user account on the **General** and **FTP Server** tabs.

8. Click **OK**.

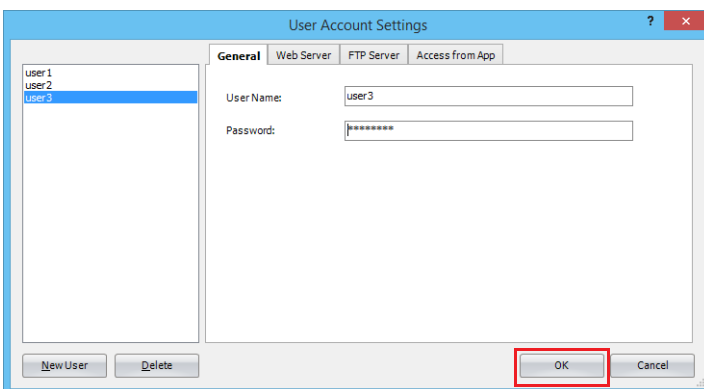


This concludes creating user accounts.


Deleting a Created User Account

• Operation procedure


1. Select the user account on the list and click **Delete**.
A confirmation message is displayed.

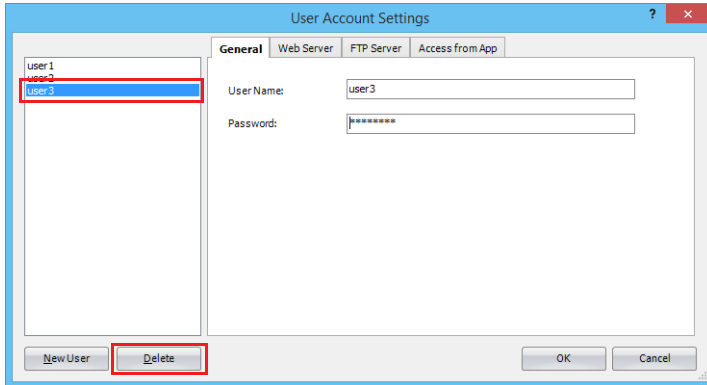

2. Click **OK**.

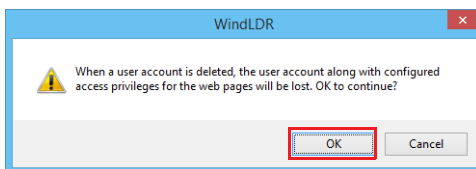

3. Click **OK**.

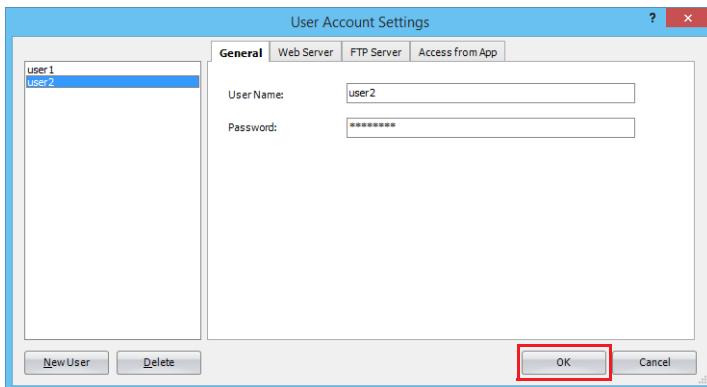

This concludes deleting a user account.

FTP Client

The FTP client is available with the Plus CPU module only.

FTP Client Overview

What the FTP Client Can Do

The FTP client allows the Plus CPU module to act as an FTP client and copy or move files between the SD memory card inserted into the Plus CPU module and an FTP server.


The Plus CPU module can perform the following actions as an FTP client.

- Copy or move files from the SD memory card inserted into the Plus CPU module to an FTP server.
- Copy files from an FTP server to the SD memory card inserted into the Plus CPU module.

Example of System Configuration

The following diagram shows an example of a system configuration for using the FTP client.

Connect Ethernet port 1 of the Plus CPU module to the network.

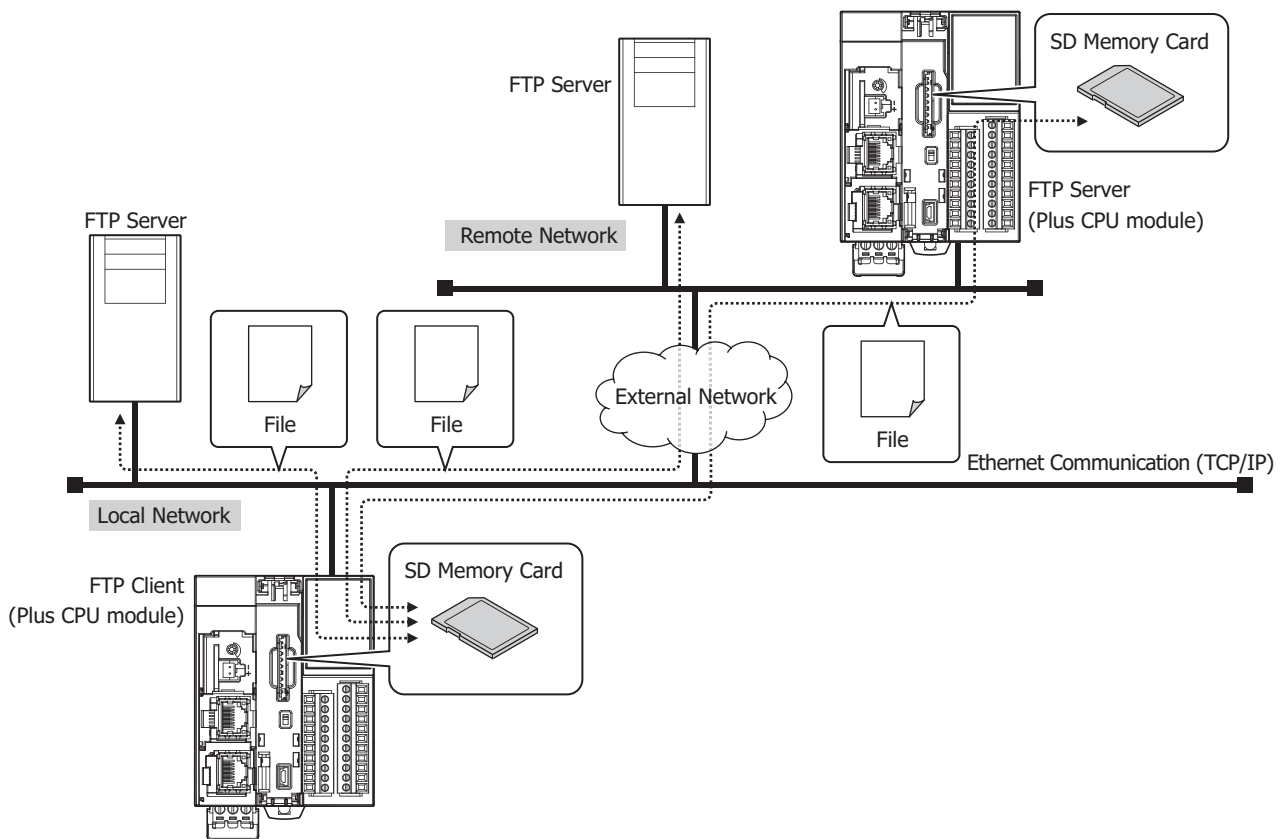

Configure the Ethernet settings of the Plus CPU module (IP address, subnet mask, and default gateway), and connect it to the local network.

Register the destination FTP server to the Plus CPU module.

 
When the operating conditions for the FTP client function (file transfer settings) are satisfied, the following content is executed.

- Copy or move files from the SD memory card inserted into the Plus CPU module to an FTP server.
- Copy files from an FTP server to the SD memory card inserted into the Plus CPU module.

Files Handled by the FTP Client


All files on the SD memory card inserted into the Plus CPU module can be accessed with the FTP client. This section shows an example of the folder and file structure of the SD memory card.

SD Memory Card



Arbitrary: File names and folder names that can be specified by the function area settings or instruction parameters.

Fixed: File names and folder names that are fixed by the system.

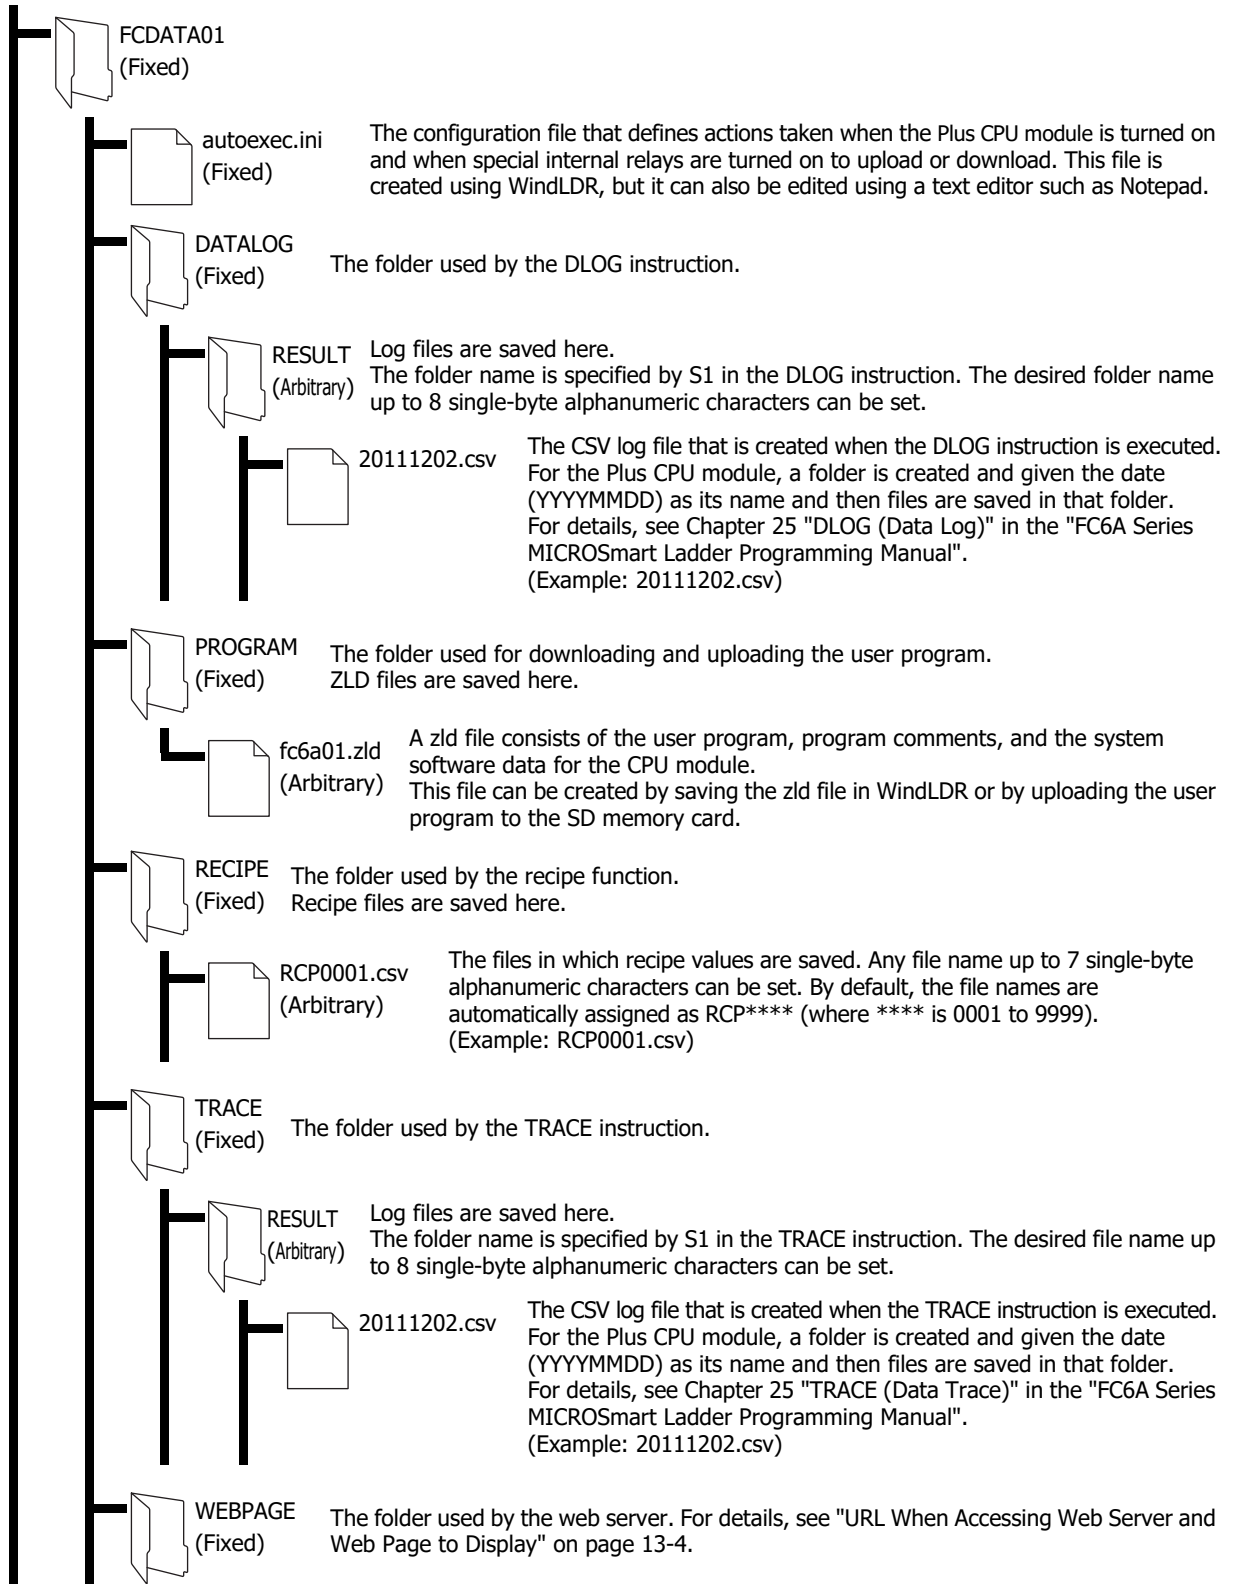

10: FTP SERVER/CLIENT


Supported Commands and Connection Methods

- Commands defined in RFC 959 are supported.
- Active mode and passive mode are supported.
- FTPS (FTP over SSL/TLS) is supported.


Note: The recommended FTP server software is Microsoft Internet Information Services.

Programming WindLDR

1. On the **Configuration** tab, in the **Function Area Settings** group, click **Ethernet Port 1**.
2. Select the **Enable FTP Client** check box.
3. Click **Configure** for the FTP client to configure on the FTP client registration list. The **File Transfer Settings** dialog box is displayed.

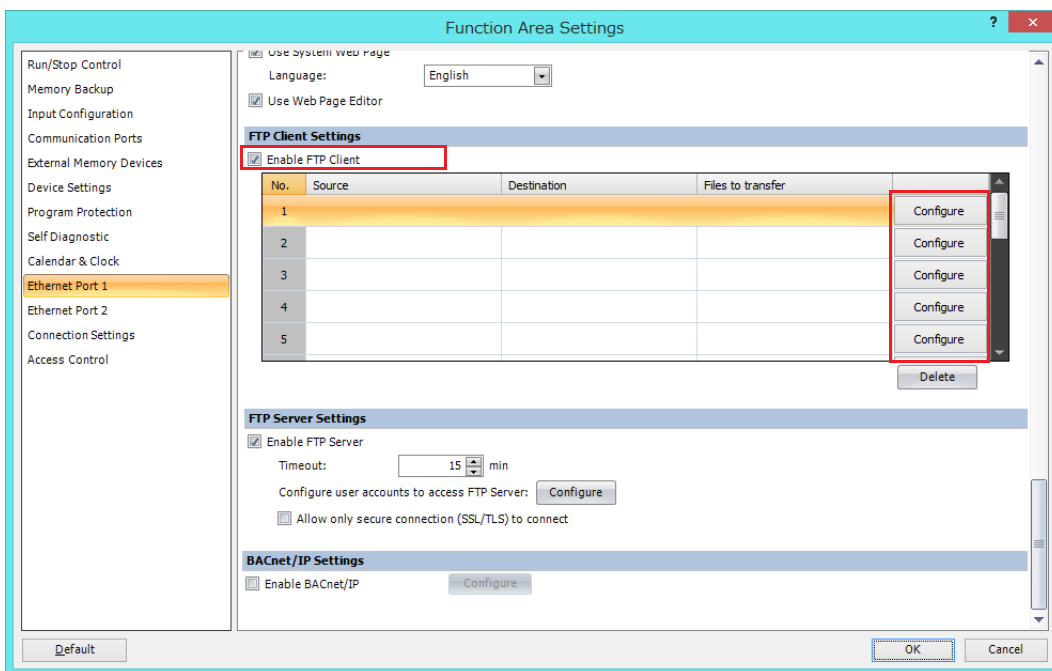

4. Configure the settings on the **General** and **Trigger Condition** tabs.

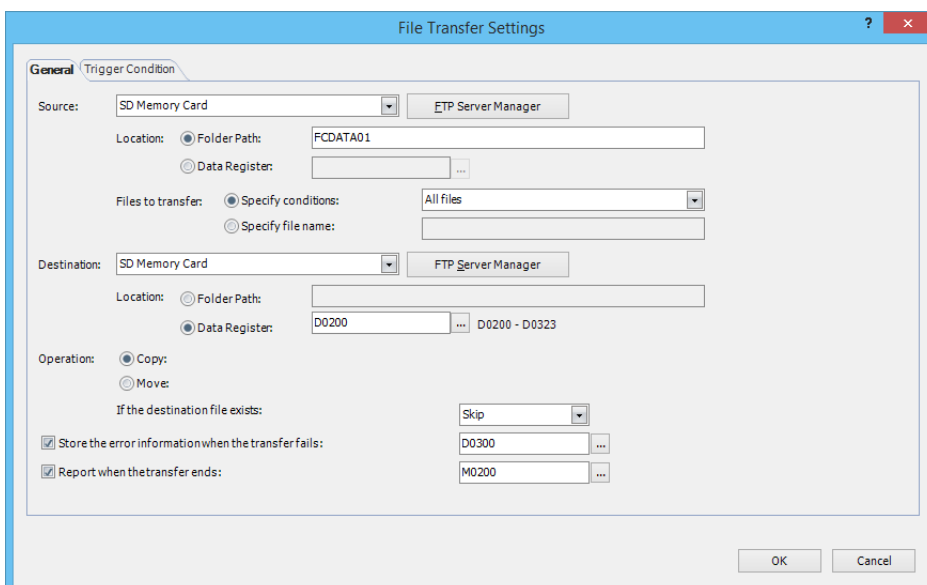

5. Click **OK**.
6. Repeat the steps 3 to 5 and create the required number of FTP client settings.
7. Download the user program to the Plus CPU module.

This concludes configuring the FTP client settings.

File Transfer Settings

General tab

(1) Source

Select **SD Memory Card** or **(FTP Server)** where the files that will be copied or moved are saved.
 [Number]+[(period)]+[Server name] as set in FTP Server Manager is displayed for (FTP Server).

Example: When [Number] is 1 and [Server name] is TestServer1
 "1.TestServer1"

Click **FTP Server Manager** to display the FTP Server Manager. The FTP Server Manager can be used to add and modify FTP servers. For details, see "FTP Server Manager" on page 10-17.

(2) Location

Select the specification method of the location where the files that will be copied or moved are saved.

- Folder Path/File Path : Specify the folder path or file path of the location where the files that will be copied or moved are saved with a character string. The maximum length of the character string is 247 single-byte alphanumeric characters.
 Example: To copy or move files in the "DATALOG" folder in the "FCDATA01" folder on the SD memory card
 FCDATA01\DATALOG
- Data Register : Specify a word device for reading the data that will be used as the folder path of the location where the files that will be copied or moved are saved. The values are read in order starting from the specified data register, and the data up to the NULL terminating character (0x00) is handled as the character data of the folder path or file path.

10: FTP SERVER/CLIENT

(3) Files to transfer

Select the specification method of the files that will be copied or moved.

Specify conditions : Specify the files that will be copied or moved with a condition. Select the condition from the following.

All files, Latest file only, Files updated within 24 Hours, Files updated within 7 days

Specify file name : Specify the file that will be copied or moved with a character string. The maximum length of the character string is 247 single-byte alphanumeric characters.

(4) Destination

Select **SD Memory Card** or **(FTP Server)** where the copied or moved files will be saved.

[Number]+[.(period)]+[Server name] as set in FTP Server Manager is displayed for (FTP Server).

Example: When [Number] is 1 and [Server name] is TestServer1

"1.TestServer1"

Click **FTP Server Manager** to display the FTP Server Manager. The FTP Server Manager can be used to add and modify FTP servers. For details, see "FTP Server Manager" on page 10-17.

(5) Location

Select the specification method of the destination where the copied or moved files will be saved.

Folder Path : Specify the folder path where the copied or moved files will be saved with a character string. The maximum length of the character string is 247 single-byte alphanumeric characters.

Example: When saving the copied or moved files to the "DATALOG" folder in the "20170423" folder on the FTP server

20170423\DATALOG

Data Register : Specify a word device for reading the data that will be used as the folder path of the location where the copied or moved files will be saved. The values are read in order starting from the specified data register, and the data up to the NULL terminating character (0x00) is handled as the character data of the folder path.

(6) Operation

Select the transfer method of the files from **Copy** or **Move**. Only **Copy** can be selected when **(FTP Server)** is selected as **Source**.

(7) If the destination file exists

Select the processing method when a file with the same name already exists in the transfer destination from **Skip** or **Overwrite**.

Note: The files to be transferred must have file extensions. When a file does not have an extension, it may not be transferred.

(8) Store the error information when the transfer fails

To store the error information in a device address when an error occurs while copying or moving files, select this check box and specify the device address to which the error information will be written. When copying or moving files is started, zero is written to the device address. If an error occurs, one is written to the corresponding bit. The following error information is stored in each bit of the specified device address.

Bit Position	Error Information	Details	Countermeasure
0	SD memory card access error	<ul style="list-style-type: none"> SD memory card specified as the source or destination is not inserted. SD memory card specified as the source or destination cannot be accessed. 	<ul style="list-style-type: none"> Insert an SD memory card that can be accessed. Mount the SD memory card.
1	SD memory card read/write error	<ul style="list-style-type: none"> The contents of the folder or file cannot be read from the SD memory card specified as the source or destination. Creating a folder, writing a file, or deleting file cannot be done in the SD memory card specified as the source or the destination. 	<ul style="list-style-type: none"> Insert an SD memory card that can be read/written. Insert an SD memory card that has sufficient available capacity.
2	FTP server connection error	FTP server that is specified as the transfer source or destination cannot be accessed within the time specified as the connection timeout.	<ul style="list-style-type: none"> Confirm that LAN cable is properly connected. Confirm that the network settings of the Plus CPU module are correct. Confirm that the IP address or port number of the FTP server are correct.

Bit Position	Error Information	Details	Countermeasure
3	FTP server authentication error	The user name or password is incorrect and the FTP server cannot be accessed.	Confirm that the user name or password is correct.
4	FTP server command error	An error was returned against the command sent to the FTP server.	Contact administrator of the FTP server.
5	FTP server transfer error	There is no response from the FTP server within the time specified as the transfer timeout.	Contact administrator of the FTP server.
6	— Reserved —	—	—
7	Other errors	Other errors	Contact administrator of the FTP server.
8 to 15	— Reserved —	—	—


(9) Report when the transfer ends

To provide a notification when copying or moving files is finished, select this check box and specify the device address to which the notification will be written.

Notes:

- Files cannot be copied or moved from one FTP server to another FTP server.
- Files cannot be copied or moved between SD memory cards inserted into the Plus CPU modules.
- Subfolders cannot be copied or moved.
- The following single-byte characters cannot be used in folder and file paths.
; : * ? " < > |
- When **Data Register** is selected and the folder path limitation is exceeded or invalid characters are used, the folder path is determined as follows:
 - If the folder or file path string exceeds the maximum number of device address points (no NULL), the character string stored from the top device address to the maximum device address becomes the folder path.
 - If the folder path contains a character that cannot be used, the character string up to that invalid character becomes the folder path.

Trigger Condition tab

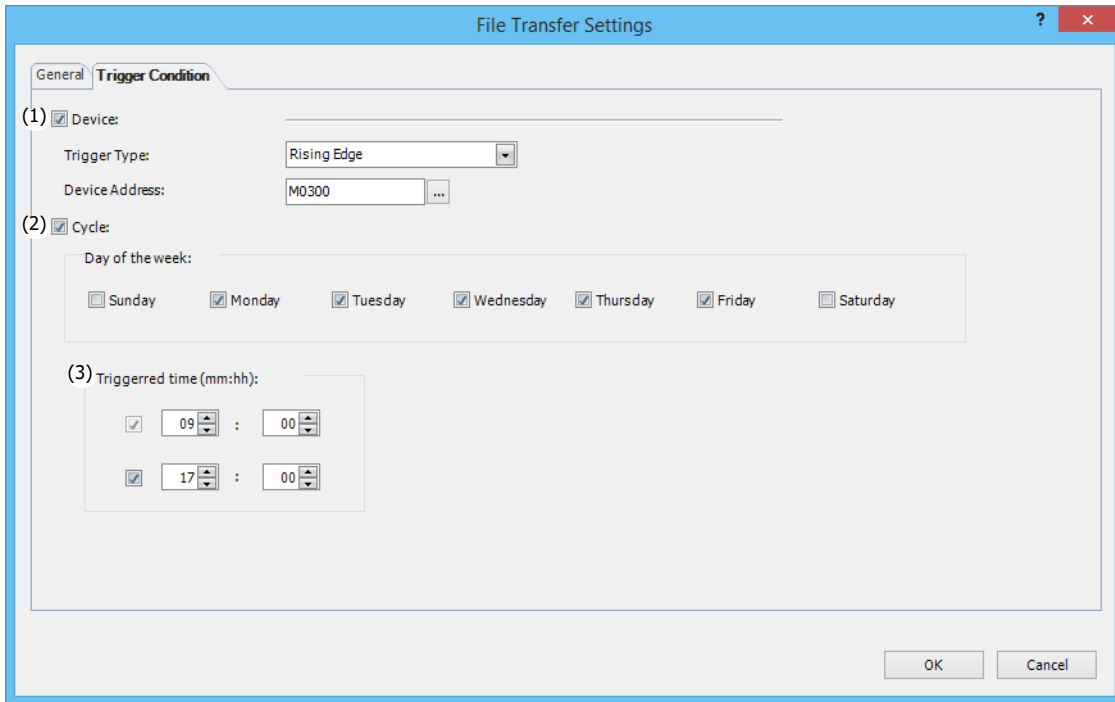

(1) Device

Select this check box to specify the condition for copying or moving files with a device address.

Select **Rising Edge** or **Falling Edge** and specify the device to act as the condition. Only an internal relay can be used.

(2) Cycle

To specify the condition to copy or move files with days of the week and time, select this check box and the check boxes for the days of the week to execute the file transfer.

(3) Triggerred Time


To specify the condition to copy or move files with a time, select this check box and specify the time. Up to two times can be set between 0:00 and 24:00 (24-hour time).

FTP Server Settings


Configure the destination FTP servers.

• Operation procedure

1. In the **File Transfer Settings** dialog box, on the **General** tab, click **FTP Server Manager**.
The FTP Server Manager is displayed.

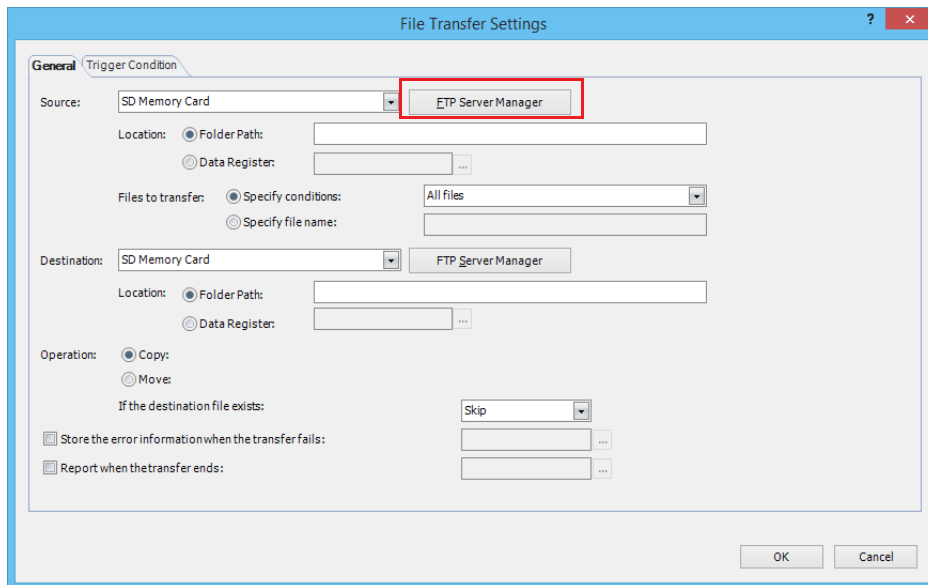

2. Select the number to use to register the FTP server on the FTP server list and click **Edit**.
The **FTP Server No. n Settings** dialog box for the selected number is displayed (where n: Number in FTP Server Manager).

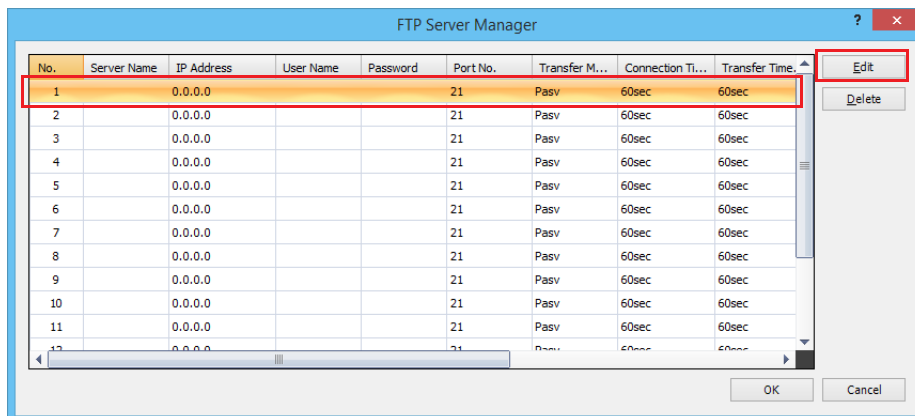

Note: To delete a registered FTP server, select the FTP server in the FTP server list, and then click **Delete**.

10: FTP SERVER/CLIENT

3. Configure each setting of the FTP server and click **OK**.

FTP Server No.1 Settings

FTP Server Settings:

FTP Server Name: FTPServer1

IP Address: IP Address: 192.168.0.44 (D0000 - D0020)
 Host Name:

User Name: test_user001 (D0021 - D0041)

Password: ***** (D0042 - D0062)

Port Number: 21 (D0063)

Transfer Mode: Pasv Active (D0064)

Connection Timeout: 60 sec (D0065)

Transfer Timeout: 60 sec (D0066)

Use secure connection (SSL/TLS) (D0067)

Advanced Settings:

Specify FTP Server Settings by values of device addresses

Top Device Address: D0000 ...

Copy the settings as default value to device address M0000 ...

OK Cancel

4. Repeat the steps 2 to 3 to register the required number of FTP servers.
5. Click **OK**.

FTP Server Manager


No.	Server Name	IP Address	User Name	Password	Port No.	Transfer M...	Connection Ti...	Transfer Time...
1	FTPServer1	192.168.0.44	test_user001	****	21	Pasv	60sec	60sec
2	FTPServer2	192.168.0.45	test_user002	****	21	Pasv	60sec	60sec
3		0.0.0.0			21	Pasv	60sec	60sec
4		0.0.0.0			21	Pasv	60sec	60sec
5		0.0.0.0			21	Pasv	60sec	60sec
6		0.0.0.0			21	Pasv	60sec	60sec
7		0.0.0.0			21	Pasv	60sec	60sec
8		0.0.0.0			21	Pasv	60sec	60sec
9		0.0.0.0			21	Pasv	60sec	60sec
10		0.0.0.0			21	Pasv	60sec	60sec
11		0.0.0.0			21	Pasv	60sec	60sec
12		0.0.0.0			21	Pasv	60sec	60sec

Edit
Delete

OK Cancel

This concludes configuring the FTP server settings.

FTP Server Manager

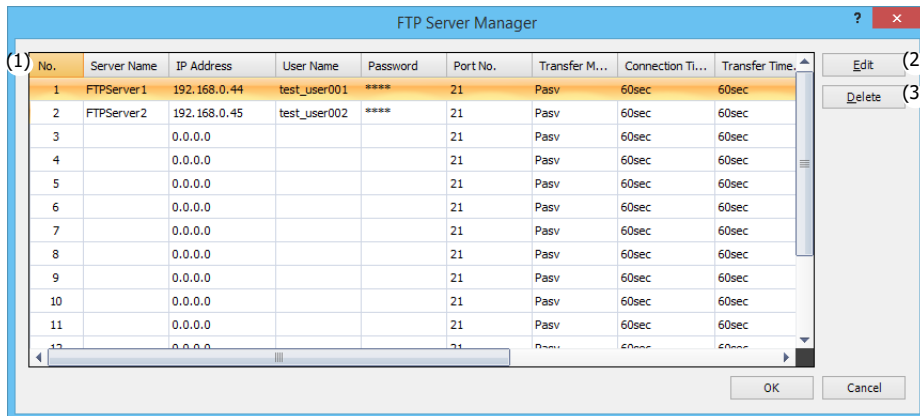

(1) FTP Server List

FTP server settings corresponding to each number are listed. Double click a cell to display the **FTP Server No. n Settings** dialog box (where n: Number in FTP Server Manager) where the settings can be edited. For details, see "Individual FTP Server Settings" on page 10-18.

- No. : Displays the number (1 to 16) used to manage the FTP server settings.
 - Server Name : Displays the name of the FTP server.
 - IP Address : Displays the IP address of the FTP server.
 - User Name : Displays the user name for the FTP server.
 - Password : Displays the password for the FTP server masked with * (asterisks).
 - Port No. : Displays the port number of the FTP server.
 - Transfer Mode : Displays the transfer mode of the FTP server.
 - Connection Timeout : Displays the time to automatically stop the connection process if there is no response from the FTP server after **Trigger Condition** set in **File Transfer Settings** is satisfied and the connection is attempted.
 - Transfer Timeout : Displays the time to automatically stop the file transfer process if there is no response from the FTP server after **Trigger Condition** set in **File Transfer Settings** is satisfied and the data connection is established.
 - Top Device Address : Displays the Top device address when the FTP server settings are specified with device address values.
- Copy the settings as default value to device address:
 Displays the bit device that acts as the condition to copy the FTP server settings as initial values.

(2) Edit button

Registers or changes the settings of the selected number.

Select a number in the FTP Server List (1) and click this button to display the **FTP Server No. n Settings** dialog box. The settings of the **FTP Server No. n Settings** dialog box are reflected in the selected number.

For details, see "Individual FTP Server Settings" on page 10-18.

(3) Delete button

Deletes the settings with the number selected in FTP Server List (1).

Individual FTP Server Settings

(1) FTP Server Name

Enter the name of the FTP server. The maximum length of the string is 40 characters.
The default is "FTPServern". (n: FTP Server Manager number)

(2) IP Address

Select the identification method of the FTP server.

IP Address : Enter the IP address of the FTP server.

The format is "xxx.xxx.xxx.xxx". "xxx" stands for a numeric value from 0 to 255.

Host Name : Enter the host name of the FTP server.

The maximum length of the host name is 40 single-byte characters. Only alphanumeric characters and symbols can be used.

(3) User Name

Enter the name of the user account for the FTP server.

The maximum length of the user name is 40 single-byte characters. Only alphanumeric characters and symbols can be used.

(4) Password

Enter the password for the FTP server.

The maximum length of the password is 40 single-byte characters. Only alphanumeric characters and symbols can be used.

(5) Port Number

Specify the port number (0 to 65535) of the FTP server.

(6) Transfer Mode

Select the transfer mode of the FTP server.

Pasv : Establishes the data connection using passive mode.

Active : Establishes the data connection using active mode.

(7) Connection Timeout

Specify the time (10 to 300 seconds) to automatically stop the connection process if there is no response from the FTP server after **Trigger Condition** set in **File Transfer Settings** is satisfied and the connection is attempted.

(8) Transfer Timeout

Specify the time (10 to 300 seconds) to automatically stop the file transfer process if there is no response from the FTP server after **Trigger Condition** set in **File Transfer Settings** is satisfied and the data connection is established.

(9) Use secure connection (SSL/TLS)

Select this check box when SSL or TLS communication is required by the FTP server to use.

(10) Specify FTP Server Settings by values of device addresses

Select this check box to specify the **FTP Server Settings** with device addresses.

Specify the device addresses to use with **Top Device Address**. The settings in the **FTP Server Settings** are allocated to device addresses starting from the address number of the specified device address.

(11) Copy the settings as default value to device address

Select this check box to copy the settings in the **FTP Server Settings** to the device addresses as the initial values.

Specify a device address acting as the condition for copying the settings.

When 1 is written to this device address, the values set in the **FTP Server Settings** are written to the allocated device addresses starting from the address number of the device address set with **Top Device Address**.

Address Allocations When Specifying the FTP Server with Device Address Values

When the **Specify FTP Server Settings by values of device addresses** check box is selected, the settings in the **FTP Server Settings** are allocated to device addresses starting from the address number of the device address set with **Top Device Address**. The details of allocated device addresses are as follows.

Settings	Address Number	Number of Words	Data Type
IP Address or Host Name	+0 to +20	21 ^{*1*2}	Numeric value
User Name	+21 to +41	21 ^{*2*3}	Character string
Password	+42 to +62	21 ^{*2*3}	Character string
Port Number	+63	1	Numeric value
Transfer Mode (0: Pasv, 1: Active)	+64	1	Numeric value
Connection Timeout (second)	+65	1	Numeric value
Transfer Timeout (second)	+66	1	Numeric value
Use Secure Connection (SSL/TLS) (0: SSL/TLS is used, 1: SSL/TLS is not used)	+67	1	Numeric value

*1 For an IP address, only the first four words are used, and the remaining 17 words are a reserved region.

*2 The 21st word is handled as the NULL terminating character (0x00), regardless of the value of the data register.

*3 When a character string to use is shorter than 20 words, add the NULL terminating character (0x00) as the end of the character string.

11: SEND PING FUNCTION

 
Introduction

This chapter describes the PING instruction that sends a ping packet to the specified remote host to check if communication is possible at the Internet Protocol (IP) layer.

Use the PING instruction to execute the send PING function.

PING (Ping)

The PING instruction sends a ping packet to the specified remote host. For the Plus CPU module, Ethernet port 1 or 2 can be selected.



Operation Details

When the input to the PING instruction is on, the PING instruction sends a ping packet to the remote host specified by S1. Once the FC6A Series MICROSmart receives the reply from the remote host, the completion output specified by D1 is turned on, and the operation status (operation transition state and error code) is stored in the device specified by D2. D2+1 is reserved for the system.

The PING instruction is executed when the input is on, and it sends a PING request. While that input remains on, the same PING instruction is executed after the ping is sent. To avoid this, use the PING instruction in combination with the SOTU (single output up) instruction or the SOTD (single output down) instruction so that the PING instruction input is on for only one scan. For the SOTU instruction and the SOTD instruction, see Chapter 4 "SOTU and SOTD (Single Output Up and Down)" in the "FC6A Series MICROSmart Ladder Programming Manual".

In order to use the PING instruction, the FC6A Series MICROSmart remote host list must be created in advance. For details about the remote host list, see "Remote Host List" on page 3-21.

Valid Devices

	Device	Function	I	Q	M	R	T	C	D	P	Constant	Repeat
S1	Source 1	Remote host number	-	-	-	-	-	-	X	-	1 - 255	-
D1	Destination 1	Completion output	-	X	X ^{*1}	-	-	-	-	-	-	-
D2	Destination 2	Operation status	-	-	-	-	-	-	X	-	-	-

*1 Special internal relays cannot be used.

Devices in PING Instructions

S1 (Source 1)

Specify the remote host number. A constant or data register can be specified.

D1 (Destination 1)

Specify an internal relay or output as the completion output bit. When the FC6A Series MICROSmart receives a reply from the remote host, the completion output bit is turned on. The completion output bit is also turned on when there is no reply from the remote host within the specified timeout that is configured in the **Function Area Settings**. For details about the timeout setting, see "Ping Settings" on page 3-13.

D2 (Destination 2)

Specify a data register as the operation status. Destination 2 occupies two consecutive data registers starting with the data register specified by D2. The operation status is stored in D2. D2+1 is reserved for the system. Specify the starting number so that the device range is not exceeded.

11: SEND PING FUNCTION


Notes:

- When a data register is specified as S1, do not change the data register value while PING instruction is executed.
- The FC6A Series MICROSmart does not respond to a ping packet that is sent by itself.

The operation status includes the operation transition state (status code) and the error detail (error code). The status code can be obtained by masking the least 4 bits of the operation status. The error code is stored in the least 4 bits of the operation status. When the value of the operation status data register is divided by 16, the remainder is the error code.

If the value of the operation status data register is 66:

$66 \div 16 = 4$ with a remainder of 2, so the error code is 2.

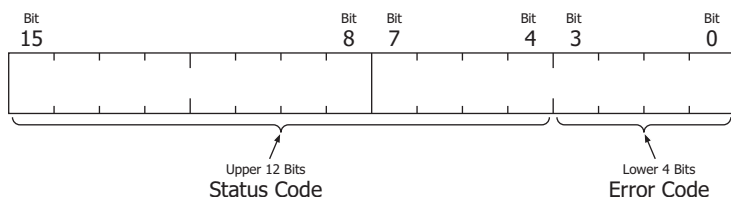

Status Code	Operation Transition State	Description
16 (00000010000)	Preparing transmission	The interval from turning on the PING instruction input to when the ping packet is sent to the specified remote host
32 (00000100000)	Waiting for response	From sending the ping packet to the specified remote host, until the response is received
64 (000001000000)	PING instruction complete	The execution of the PING instruction is completed, allowing for the next transmission to be processed

Note: If the status code is anything other than the codes listed above, an error of PING instruction is suspected.

Error Code	Error Details	Completion Output
0 (0000)	Normal	ON (The status code is 64)
1 (0001)	-	-
2 (0010)	Timeout error	ON
3 (0011)	The host name of the target remote host could not be resolved with DNS	ON
4 (0100)	The specified remote host does not exist in the remote host list	ON
5 (0101)	Multiple PING instructions are executed simultaneously	ON
6 (0110)	Parameter error	ON

12: SEND E-MAIL FUNCTION

Introduction

This chapter describes the EMAIL instruction that sends preregistered e-mails.

Overview

Ethernet port 1 of the Plus CPU module and the HMI-Ethernet port of the HMI module support the send e-mail function.

Up to 255 types of e-mails can be sent by executing the EMAIL instruction.

EMAIL Instruction (Send E-mail)

The EMAIL instruction sends an e-mail.



Operation Details

When the input is on, e-mail of the e-mail number set by S1 is sent from Ethernet port 1 of the Plus CPU module or the HMI-Ethernet port of the HMI module. Once the FC6A Series MICROSmart receives a response from the sending e-mail server, the completion output specified by D1 is turned on, and the operation status (operation transition state and error code) is stored in the device specified by D2. D2+1 is reserved for the system.

The EMAIL instruction is executed when the input to the instruction is on. When this input continues to be on, the same EMAIL instruction is executed after the e-mail is sent. To avoid this, use the EMAIL instruction in combination with the SOTU (single output up) instruction or the SOTD (single output down) instruction so that the EMAIL instruction start input is on for only one scan. For the SOTU instruction and the SOTD instruction, see Chapter 4 "SOTU and SOTD (Single Output Up and Down)" in the "FC6A Series MICROSmart Ladder Programming Manual".

To use the EMAIL instruction, you must first configure the mail server settings and create the FC6A Series MICROSmart e-mails in advance. When using the HMI-Ethernet port of the HMI module, click the HMI module that has been inserted into the module configuration area, click **Configure**, and configure the e-mail settings in the displayed **HMI Module Configuration** dialog box. When using Ethernet port 1 of the Plus CPU module, configure the e-mail settings under **Ethernet Port 1** in the **Function Area Settings**.

Valid Devices

	Device	Function	I	Q	M	R	T	C	D	P	Constant	Repeat
S1	Source 1	E-mail number	-	-	-	-	-	-	X ^{*1}	-	1 - 255	-
D1	Destination 1	Completion output	-	X	X ^{*2}	-	-	-	-	-	-	-
D2	Destination 2	Operation status	-	-	-	-	-	-	X ^{*1}	-	-	-

*1 Special data registers cannot be used.

*2 Special internal relays cannot be used.

12: SEND E-MAIL FUNCTION

Devices in EMAIL Instruction

Ethernet Port Number Settings

Configure the settings of the Ethernet port that will be used to send e-mails. Configure Ethernet port 1 of the Plus CPU module or the HMI-Ethernet port of the HMI module.

S1 (Source 1)

Specify the e-mail number. A constant or data register can be specified.

D1 (Destination 1)

Specify an internal relay or output as the completion output bit. When the FC6A Series MICROSmart receives a reply from the sending e-mail server, the completion output bit is turned on. The completion output bit is also turned on when there is no reply from the sending e-mail server within the timeout.

D2 (Destination 2)

Specify a data register as the operation status. Destination 2 occupies two consecutive data registers starting with the data register specified by D2. The operation status is stored in D2. D2+1 is reserved for the system. Data registers D0000 to D7998, and D10000 to 55998 can be specified. Specify the starting number so that the device range is not exceeded.

Note: When a data register is specified as S1, do not change the data register value while EMAIL instruction is executed.

The operation status includes the operation transition state (status code) and the error detail (error code). The status code can be obtained by masking the least 4 bits of the operation status. The error code is stored in the least 4 bits of the operation status.

When the value of the operation status data register is divided by 16, the remainder is the error code.

If the value of the operation status data register is 66:

$66 \div 16 = 4$ with a remainder of 2, so the error code is 2.

Status Code	Operation Transition State	Description
16 (00000010000)	Preparing transmission	From turning on the start input for an EMAIL instruction, until the e-mail is sent out to the sending e-mail server.
32 (000000100000)	Waiting for response	From sending the e-mail to the sending e-mail server, until the response is received.
64 (000001000000)	EMAIL instruction complete	The execution of the EMAIL instruction is completed, allowing for the next transmission to be processed.

If the status code is anything other than the codes listed above, an error of EMAIL instruction is suspected.

Error Code	Error Details	Completion Output
0 (0000)	Normal	ON (The status code is 64)
1 (0001)	HMI module connection error <ul style="list-style-type: none"> The HMI module is not connected The HMI module is not operating correctly 	ON
2 (0010)	Timeout error <ul style="list-style-type: none"> Port number may be incorrect. 	ON
3 (0011)	<ul style="list-style-type: none"> The host name of the sending e-mail server could not be resolved with DNS. The sending e-mail server could not be found. The SMTP server does not support the authentication function. Ethernet cable may be disconnected or broken. FC6A Series MICROSmart may not be connected to the network properly. 	ON
4 (0100)	The specified e-mail is not configured.	ON
5 (0101)	Multiple EMAIL instructions are executed simultaneously.	ON
6 (0110)	Parameter error <ul style="list-style-type: none"> If Use data registers to configure E-mail settings is enabled, the settings are not stored in data registers. 	ON
7 (0111)	Other errors ^{*1}	ON
8 (1000)	Converting a data register value failed ^{*2}	ON
9 (1001)	The size of one log file that will be attached to the e-mail has exceeded the maximum file size configured for the DLOG/TRACE instruction. ^{*3}	ON
10 (1010)	The specified log file that will be attached does not exist. ^{*3}	ON
11 (1011)	The number of attached log files exceeds seven. ^{*4}	ON

*1 The detail of the error code 7 is stored in special data register D8457 (HMI-Ethernet port) or D8759 (Ethernet port 1).

*2 When converting a data register value fails, ---- is inserted in the e-mail body instead of data register value.

*3 For error code 9 or 10, the corresponding log file will not be attached to the e-mail, and the e-mail will be sent without an attachment. For the configuration of the maximum log file size, see Chapter 5 "Functions and Settings" in the "FC6A Series MICROSmart User's Manual".

*4 E-mails in which seven files are attached will be sent.

E-mails can be sent to the recipients by the relay of the sending e-mail (SMTP) servers. Even when the value stored in D2 is 64 after the execution of an EMAIL instruction, the recipients of the e-mail may not be able to receive the e-mail if one of the following conditions is met. The FC6A Series MICROSmart also cannot judge that e-mails cannot be received.

- The SMTP server that relays the e-mails is not functioning normally.
- The e-mail recipient filters the in-coming e-mails by specifying the e-mail address or e-mail domain.

Special Data Registers

Confirm the error detail of EMAIL instruction

When the error code stored in D2 of EMAIL instruction is 7, the response from sending e-mail server can be confirmed with special data register. The allocation of special data registers is given in the following table.

Ethernet Port Used to Send the E-mail	Special Data Register That Stores the Detailed Error Code of the E-mail
HMI-Ethernet port of the HMI module	D8457
Ethernet port 1 of the Plus CPU module	D8759

The error code that the sending e-mail servers return could vary with each sending e-mail server. For details about the error code, contact the administrator of the sending e-mail server. An example of the error codes is as follows.


Error Code	Description	Possible Cause
451	The requested action is canceled	Sending e-mail server is not working normally
452	Insufficient system storage	The e-mail server storage is insufficient
500	Syntax error, unrecognizable command	The command is not recognized by the e-mail server
501	Parameter or argument syntax error	Invalid command parameter
502	Command not implemented	The command is not implemented on the e-mail server
504	Command parameter not implemented	The command parameter is not implemented on the e-mail server
521	Email not received	Email assumed to be spam
530	Access denied	The Authentication is required to send e-mail check box is not selected
535	Authentication error	Account name or password for the authentication is incorrect
550	The mailbox cannot be used	The command was refused due to the server policy
552	Allocated capacity has been exceeded	The message is too long
554	Transaction failure (or a no SMTP server response when starting the connection)	Sending e-mail server is not working normally

12: SEND E-MAIL FUNCTION


Programming WindLDR

1. Use the Module Configuration Editor to configure the HMI module EMAIL settings.
On the **Configuration** tab, in the **PLCs** group, select **Expansion Modules**.
2. Click the inserted HMI module in the module configuration area and click **Configure**.
The **HMI Module Configuration** dialog box is displayed.

Note: You can also display the **HMI Module Configuration** dialog box by double-clicking **HMI Module** in the Project Window.

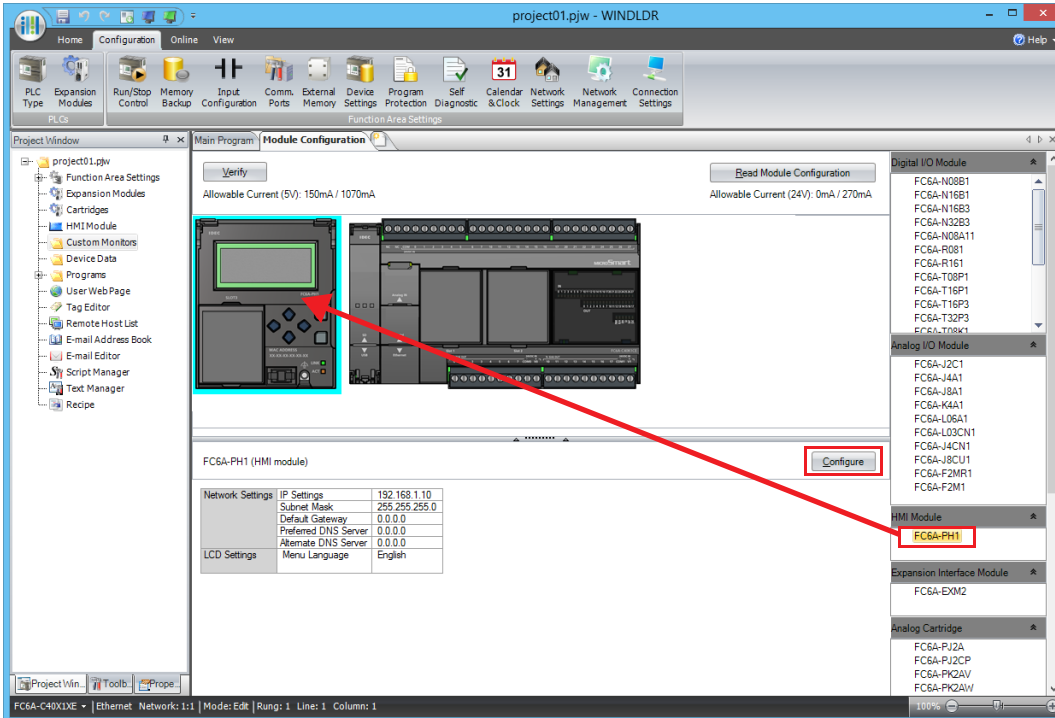

3. Click **E-mail Settings**.
4. Configure the settings in General Settings, Optional Settings, and Text Encoding.

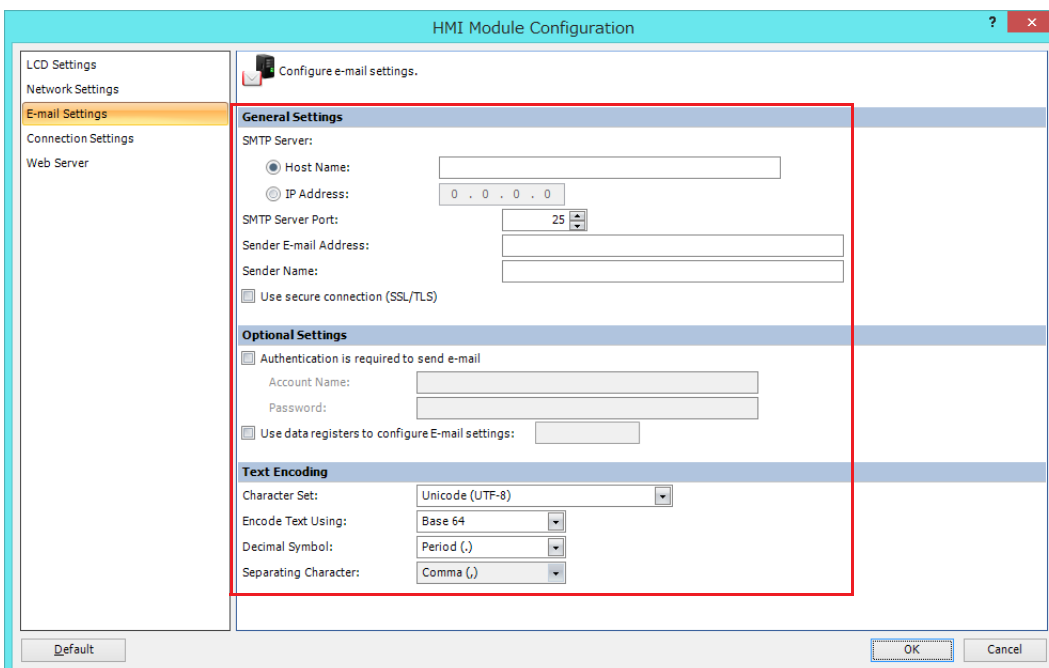


5. Download the user program to the FC6A Series MICROSmart.

This concludes configuring the e-mail settings.

Ethernet port 1 of the Plus CPU module

1. On the **Configuration** tab, in the **Function Area settings**, select **Ethernet Port 1**.
2. In **E-mail Settings**, configure the settings under General Settings, Optional Settings, and Text Encoding.

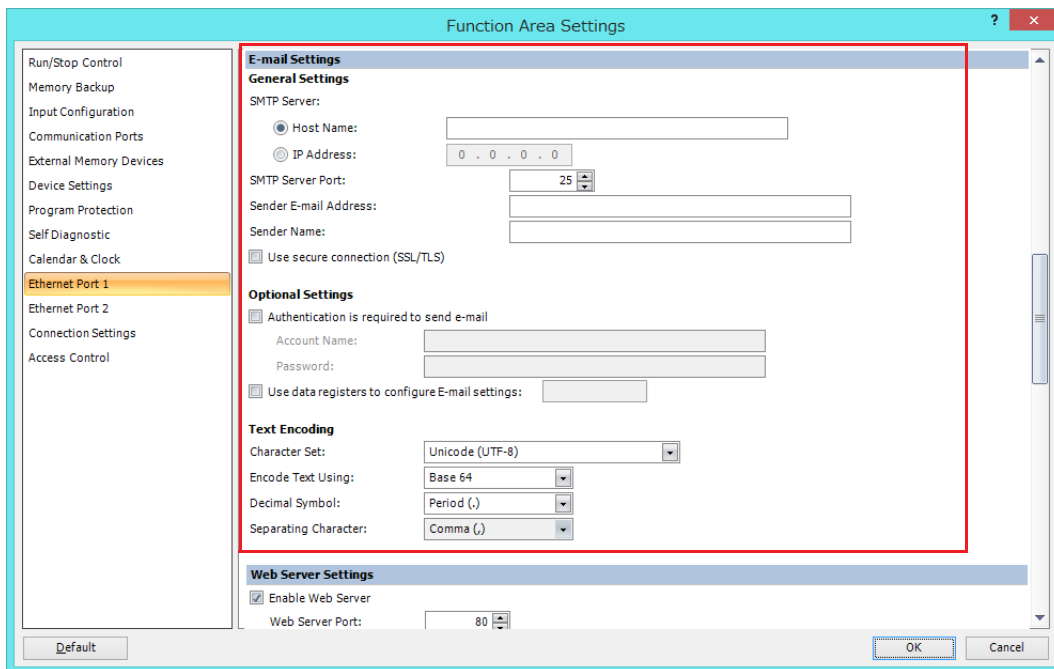

3. Download the user program to the Plus CPU module.

This concludes configuring the e-mail settings.

12: SEND E-MAIL FUNCTION

■ General Settings

HMI Module Configuration

Configure e-mail settings.

General Settings

(1) SMTP Server:

Host Name:

IP Address:

(2) SMTP Server Port:

(3) Sender E-mail Address:

(4) Sender Name:

(5) Use secure connection (SSL/TLS)

Optional Settings

(6) Authentication is required to send e-mail

(7) Account Name:

(8) Password:

(9) Authentication Method:

(10) Use data registers to configure E-mail settings:

Text Encoding

(11) Character Set:

(12) Encode Text Using:

(13) Decimal Symbol:

(14) Separating Character:

Default OK Cancel

(1) SMTP Server

Specify the IP address or the host name of the sending e-mail server that is used to send e-mails. A maximum of 40 ASCII characters can be entered.

(2) SMTP Server Port

Specify the port number of the sending e-mail server. Normally, SMTP uses port 25, SMTP-AUTH uses port 587, and SMTPs uses port 465.

(3) Sender E-mail Address

Specify the e-mail address that is included in the sender field of the e-mails to be sent from the FC6A Series MICROSmart. A maximum of 40 ASCII characters can be entered.

(4) Sender Name

Specify the name that is included in the sender field of the e-mails to be sent from the FC6A Series MICROSmart. A maximum of 40 ASCII characters can be entered.

(5) Use secure connection (SSL/TLS)

When SSL or TLS communication is required with the sending e-mail server that is used, select this check box.

Notes:

- When specifying the SMTP server with an IP address, 0 in the high order digits of the values is ignored. For example, when the IP address "192.168.1.234" and "192.168.001.234" are considered as the same IP address.
- When specifying the SMTP server with an SMTP server name, the host name of the SMTP server must be resolved using DNS. For DNS and DNS server settings, see "Network Settings" on page 3-3.

Configuration Example: The sender e-mail address and sender name are grouped and shown in the sender field of the e-mail. If the sender e-mail address is test@sample.com and the sender name is Test Mail, the text shown in the sender field will be as follows:

Test Mail <test@sample.com>

■ Optional Settings: SMTP Authentication

Depending on the SMTP server, SMTP-AUTH or SMTPs authentication may be required to send e-mails.

The FC6A Series MICROSmart supports SMTP-AUTH and SMTPs authentication, so if the SMTP server requires authentication, it can send e-mails using this function.

Contact the administrator of the SMTP server to confirm if it requires authentication.

(6) Authentication is required to send e-mail

Check if the sending e-mail server requires the SMTP authentication with the login method.

(7) Account Name

Specify the account name used for the login authentication. A maximum of 40 ASCII characters can be entered.

(8) Password

Specify the password used for the login authentication. A maximum of 40 ASCII characters can be entered.

(9) Authentication Method

Specify the authentication method used for the login authentication. One of the following five authentication methods can be

Authentication Method	Description
Automatic	Using CRAM-MD5, DIGEST-MD, LOGIN, and PLAIN authentication methods in that order, the FC6A Series MICROSmart communicates with the sending e-mail server using the authentication method that successfully connects.
CRAM-MD5	Using CRAM-MD5, the FC6A Series MICROSmart connects to the sending e-mail server.
DIGEST-MD5	Using DIGEST-MD5, the FC6A Series MICROSmart connects to the sending e-mail server.
LOGIN	Using LOGIN, the FC6A Series MICROSmart connects to the sending e-mail server.
PLAIN	Using PLAIN, the FC6A Series MICROSmart connects to the sending e-mail server.

specified.

Note: When "Automatic" is specified as the authentication method, the FC6A Series MICROSmart may not be able to connect to the sending mail server. In this case, specify the authentication method to be used on the sending mail server.

12: SEND E-MAIL FUNCTION

(10) Use data registers to configure E-mail settings

When the check box for this option is selected, the basic settings and authentication settings can be configured using strings and numeric values stored in data registers. E-mails are sent using the settings stored in 107 words of data registers starting from the specified data register.

For each setting item, the start address and end address as well as details about the setting value are as follows.

Setting Item	Data Type	Number of Used Words	Start Address of Setting Item	End Address of Setting Item	Setting Value		
SMTP Server	String (40 characters)	21 ^{*1}	Starting data register	Starting data register+20	Specify the IP address or the host name of the sending e-mail server that is used to send e-mails as a string. ^{*2}		
SMTP Server Port	Decimal value	1	Starting data register+21		Specify the port number of the sending e-mail server that is used to send e-mails as a decimal value.		
Sender E-mail Address	String (40 characters)	21 ^{*1}	Starting data register+22	Starting data register+42	Specify the e-mail address that is included in the sender field of the e-mails to be sent from the FC6A Series MICROSmart as a string. ^{*2}		
Sender Name	String (40 characters)	21 ^{*1}	Starting data register+43	Starting data register+63	Specify the name that is included in the sender field of the e-mails to be sent from the FC6A Series MICROSmart as a string. ^{*2}		
Authentication is required to send e-mail/ Authentication Method	Decimal value	1	Starting data register+64		Specify whether the authentication is required by the sending e-mail server that is used and the authentication method.		
					Value	Authentication required or not	Authentication Method
					0	Not required	-
					1	Required	Automatic
					3		CRAM-MD5
					5		DIGEST-MD5
7	LOGIN						
9	PLAIN						
Account Name	String	21 ^{*1}	Starting data register+65	Starting data register+85	Specify the account name that is used with authentication as a string. ^{*2}		
Password	String	21 ^{*1}	Starting data register+86	Starting data register+106	Specify the password that is used with authentication as a string. ^{*2}		
Use secure connection (SSL/TLS)	Decimal value	1	Starting data register+107		When SSL or TLS communication is required with the sending e-mail server that is used, specify 1. When SSL or TLS communication is not required, specify 0.		

*1 The string set to "Number of used words - 1" words is valid as the setting value. In order to represent the end of the string, the final word is handled as if 0000h was stored in it, regardless of the actual values in the data registers.

*2 If the set string is shorter than "Number of used words - 1", fill the data after the string with 00h.

Configuration Example: The e-mail settings shown below are configured by the data registers.

SMTP Server : smtp.example.com
 SMTP Server Port : 587
 Sender E-mail Address : test@example.com
 Sender Name : Test
 Authentication is required to send e-mail : Checked
 Account Name : test_account
 Password : test_password
 Authentication Method : LOGIN
 Use secure connection (SSL/TLS) : Checked

When D100 is specified as the starting data register, set the values for data registers D100 to D207 as follows.

Setting Item	Start Address of Setting Item	End Address of Setting Item	Setting Value										
			Data Register	D100	D101	D102	D103	D104	D105	D106	D107	D108	D109 to D120
SMTP Server	D100	D120	Data Register	D100	D101	D102	D103	D104	D105	D106	D107	D108	D109 to D120
			ASCII	's' 'm'	't' 'p'	'.' 'e'	'x' 'a'	'm' 'p'	'l' 'e'	'.' 'c'	'o' 'm'	'\0' '\0'	'\0' '\0'
			Value (hexadecimal)	736Dh	7470h	2E65h	7861h	6D70h	6C65h	2E63h	6F6Dh	0000h	0000h
SMTP Server Port	D121		Data Register	D121									
			Value (decimal)	587									
Sender E-mail Address	D122	D142	Data Register	D122	D123	D124	D125	D126	D127	D128	D129	D130	D131 to D142
			ASCII	't' 'e'	's' 't'	'@' 'e'	'x' 'a'	'm' 'p'	'l' 'e'	'.' 'c'	'o' 'm'	'\0' '\0'	'\0' '\0'
			Value (hexadecimal)	7465h	7374h	4065h	7861h	6D70h	6C65h	2E63h	6F6Dh	0000h	0000h
Sender Name	D143	D163	Data Register	D143	D144	D145	D146 to D163						
			ASCII	'T' 'e'	's' 't'	'\0' '\0'	'\0' '\0'						
			Value (hexadecimal)	5465h	7374h	0000h	0000h						
Authentication is required to send e-mail/ Authentication Method	D164		Data Register	D164									
			Value (decimal)	7									
Account Name	D163	D185	Data Register	D165	D166	D167	D168	D169	D170	D171	D172 to D185		
			ASCII	't' 'e'	's' 't'	'_' 'a'	'c' 'c'	'o' 'u'	'n' 't'	'\0' '\0'	'\0' '\0'		
			Value (hexadecimal)	7465h	7374h	5F61h	6363h	6F75h	6E74h	0000h	0000h		
Password	D186	D206	Data Register	D186	D187	D188	D189	D190	D191	D192	D193 to D206		
			ASCII	't' 'e'	's' 't'	'_' 'p'	'a' 's'	's' 'w'	'o' 'r'	'd' '\0'	'\0' '\0'		
			Value (hexadecimal)	7465h	7374h	5F70h	6173h	7377h	6F72h	6400h	0000h		
Use secure connection (SSL/TLS)	D207		Data Register	D207									
			Value (decimal)	1									

Note: Strings by data registers are composed of 1 or more consecutive data registers. 1 word of data is handled as 2 bytes and is used in high-order byte to low-order byte order, and the terminating character is 00h.

Special Data Registers/Special Internal Relays

Initialize sending e-mail server settings

The values set in the **Function Area settings** can be reflected to the corresponding data registers as the initial values by using special internal relay M8211.

Special Internal Relays

Device Address	Description	Details
M8211	Initialize HMI module sending e-mail server settings	When this relay is turned on, the values set in the function area settings are set as the initial values in the target data registers.
M8344	Initialize Ethernet port 1 sending e-mail server settings	When this relay is turned on, the values set in the function area settings are set as the initial values in the target data registers.

Note: Strings can be stored in data registers. Strings start from the specified data register. The end of each string is specified with 00h which is stored in the high-order byte or the low order byte of the value in a data register. 1 word of data is handled as 2 bytes and is used in high-order byte to low-order byte order.

■ Text Encoding

(11) Character Set

The character set for the e-mail subject, body, and attached file can be specified.

ASCII: Specify when e-mail subject and body consist of ASCII characters only.

Japanese (ISO-2022-JP): Specify when e-mail subject and body consist of ASCII and Japanese characters. The character set for the attached file is Shift_JIS.

Chinese (GB2312): Specify when e-mail subject and body consist of Chinese characters.

Western European (ISO-8859-1): Specify when e-mail subject and body consist of western European characters.

Unicode (UTF-8): Specify when using Unicode characters.

In general, any characters can be used using Unicode. Depending on sending e-mail servers that relay the e-mails or the mailer used by the recipients, the e-mails sent out from the FC6A Series MICROSmart may not reach the recipients or may not be viewed correctly in the mailer.

When ASCII is used, e-mails can be viewed in the same manner in any mailer though only ASCII characters can be used.

Contact the administrator of the sending e-mail server to confirm the supported character sets. Select the appropriate character set for the mailer of the recipients.

(12) Encode Text Using

The encoding format for e-mail body can be specified. Depending on the sending e-mail servers that relay the e-mails, the e-mails in which 8-bit characters are used cannot be sent. In such case, Base64 encoding can be used to convert the 8-bit characters into 7-bit characters.

None: The e-mail body is not encoded.

Base 64: The e-mail body is encoded with Base64 format.

(13) Decimal Symbol

The decimal symbol for the floating-point values can be specified. When the data type of a data register embedded in the e-mail body is float, data register value is converted and shown as a floating-point value in the e-mail body.

Period (.): Period '.' (2Eh) is used.

Comma (,): Comma ',' (2Ch) is used.

(14) Separating Character

The separator for the attached CSV file is automatically determined by the selected **Decimal Symbol**.

Decimal Symbol	Separator Character
Period '.' (2Eh)	Comma ',' (2Ch)
Comma ',' (2Ch)	Semicolon ';' (3Eh)


Note: The text encoding settings of HMI-Ethernet port and Ethernet port 1 are the identical. For example, the configured text encoding settings in Email Settings of the HMI Module Configuration dialog box are automatically reflected to the text encoding settings for the Ethernet port 1.

E-mail Address Book


The e-mail addresses and e-mail address groups can be configured in E-mail Address Book dialog box. E-mail addresses can be grouped into an e-mail address group. The e-mail address group can be used to specify a group of e-mail addresses in each e-mail. A maximum of 255 combined e-mail addresses and e-mail address groups can be registered.

Programming WindLDR

1. Double-click on the **E-mail Address Book** in the **Project Window**.
The **E-mail Address Book** dialog box appears.

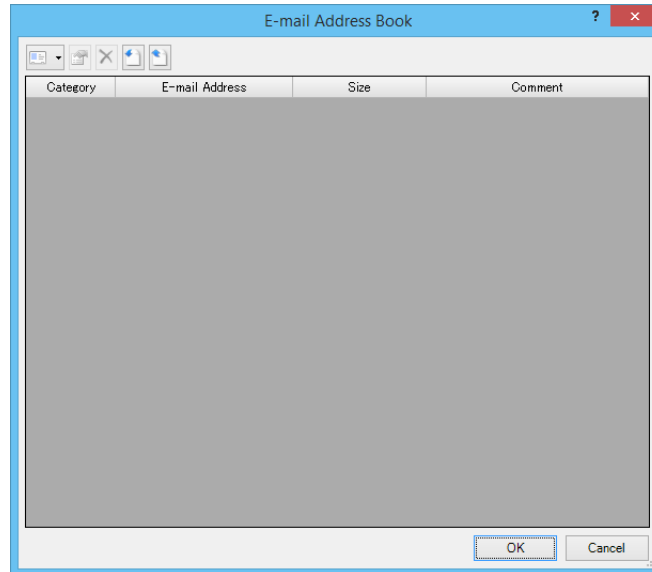

2. Click the ▼ next to the **New E-mail Address**, and then click **New E-mail Address**. Alternatively, select an existing E-mail address, and then click the **Edit** button.
The **E-mail Address** dialog box appears.
3. Configure the settings.

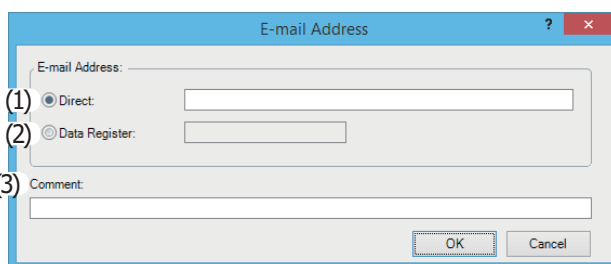

(1) Direct

Specify the e-mail address to register in the E-mail Address Book dialog box. A maximum of 40 ASCII characters can be entered.

(2) Data Register

Specify the data register to store the e-mail address. When sending an e-mail, the string stored in a maximum of 30 words of data registers starting from the specified data register is used as e-mail address for the E-mail recipients (To and CC). When specifying an e-mail address with a string using data registers, the length of the e-mail address is considered as 60 bytes fixed. When specifying all e-mail addresses with data registers, a maximum of eight e-mail addresses can be set for the E-mail recipients (To and CC).

(3) Comment

The comment for the e-mail address can be assigned. The contents or the length of the comment has no effect on the CPU module operation.

12: SEND E-MAIL FUNCTION

Configuration Example: To send an e-mail to test@example.com by specifying the data register D100, store the values in the data registers as follows.

Data Register	D100	D101	D102	D103	D104	D105	D106	D107	D108
ASCII	't' 'e'	's' 't'	'@' 'e'	'x' 'a'	'm' 'p'	'l' 'e'	'.' 'c'	'o' 'm'	'\0' '\0'
Value (hexadecimal)	7465h	7374h	4065h	7861h	6D70h	6C65h	2E63h	6F6Dh	0000h

To send an e-mail to you@example.com by specifying the data register D123, store the values in the data registers as follows.

Data Register	D123	D124	D125	D126	D127	D128	D129	D130
ASCII	'y' 'o'	'u' '@'	'e' 'x'	'a' 'm'	'p' 'l'	'e' '.'	'c' 'o'	'm' '\0'
Value (hexadecimal)	796Fh	7540h	6578h	616Dh	706Ch	652Eh	636Fh	6D00h

Notes:


- Strings by data registers are composed of 1 or more consecutive data registers. 1 word of data is handled as 2 bytes and is used in high-order byte to low-order byte order, and the terminating character is 00h.
- If 00h is not included in the 30 words (60 bytes) from the data register specified as the e-mail address, all 60 bytes are used as the e-mail address, and the FC6A Series MICROSmart operates as if the 61st byte is 00h.

4. Click **OK**.

5. Click the ▼ next to the **New E-mail Address**, and then click **New E-mail Group**. Alternatively, select an existing E-mail address, and then click the **Edit** button.

The **E-mail Group** dialog box appears.

6. Configure the settings.

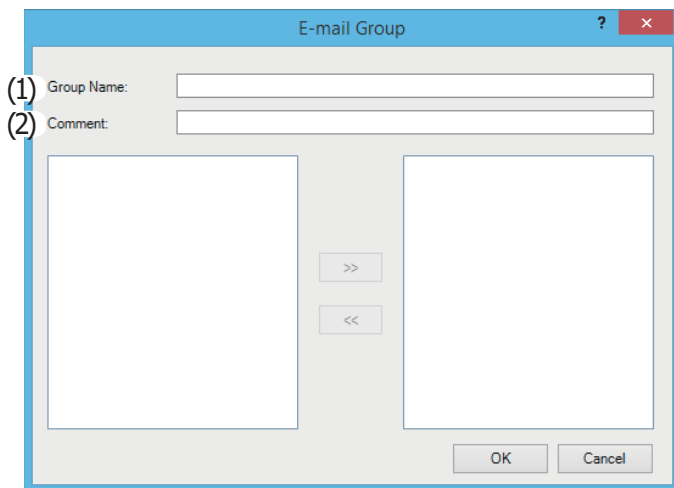

(1) Group Name

Specify the name of e-mail address group to register in the E-mail Address Book dialog box.

(2) Comment

The comment for the e-mail address group can be assigned. The contents or the length of the comment has no effect on the CPU module operation.

The e-mail addresses that have not been added to the e-mail address group are shown in the list box on the left. The e-mails addresses are listed in the order that they were registered in the E-mail Address Book dialog box. In order to add an e-mail address to the e-mail address group, select the e-mail address to add and click on the >> button. The selected e-mail address is moved to the list box on the right and listed to the bottom of the e-mails.

The e-mail addresses for the e-mail address group are shown on the list box on the right. The e-mail addresses are listed in the order that they were added to the e-mail address group. In order to remove an e-mail address from the e-mail address group, select the e-mail address to remove and click on the << button. The selected e-mail address is moved to the list box on the left and listed to the bottom of the e-mails.


In order to delete unused e-mail addresses or e-mail address groups from the E-mail address book, select the e-mail address or e-mail address group to delete and click Delete button in the E-mail Address Book dialog box. When the deleted e-mail address is used in the e-mail address groups, the deleted e-mail address is removed from all e-mail address groups.

7. Click **OK**.

This concludes configuring the settings.

E-mail Editor

The e-mails can be configured in E-mail Editor dialog box. The following five parameters should be configured for each e-mail.

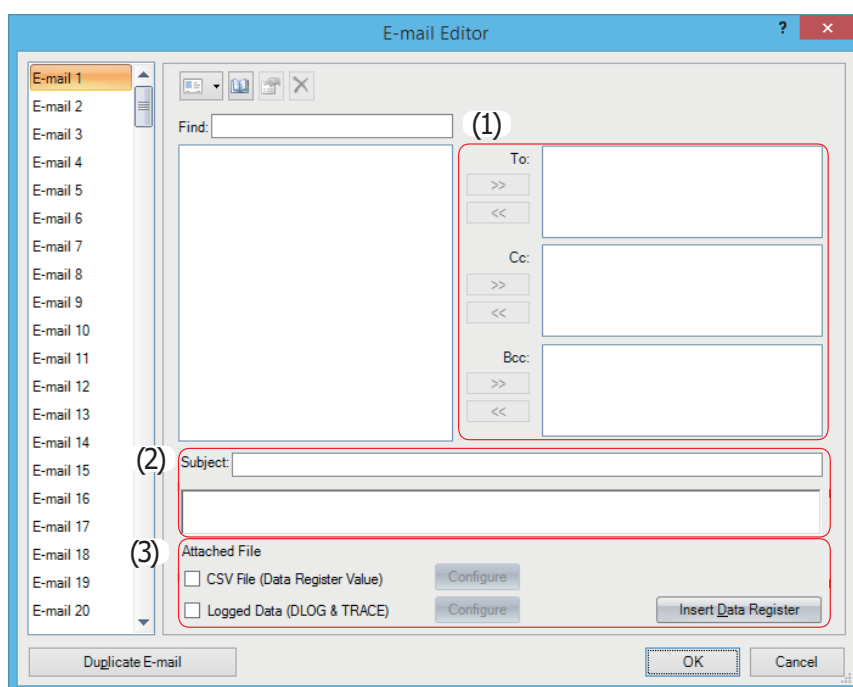

Settings in E-mail Editor

(1) E-mail recipients (To, Cc, and Bcc)

E-mail address or e-mail group can be specified as the recipients. The maximum size of texts for **To**, **Cc**, or **Bcc** is 512 bytes. Comma (,) is inserted as a separating character between e-mail addresses. For example, the total size of an e-mail group "ccc" containing two e-mail addresses "aa@example.com" (15 bytes including a comma) and "bbb@example.com" (16 bytes including a comma) is 31 bytes. If the size of e-mail addresses is 30 bytes, 16 e-mail addresses can be specified in **To**, **Cc**, and **Bcc** respectively. An e-mail can be sent to 32 e-mail addresses simultaneously.

(2) E-mail subject and body

The maximum size of texts is 256 bytes for **Subject** and 4,096 bytes for **e-mail body**. The e-mail subject and body are composed from the following elements.

- Strings that use **character set** under **E-mail Settings** in the **Function Area settings**
- Numeric value strings of the values of data registers that have been embedded in the body by inserting data registers
- Spaces and newlines

The size of the **e-mail subject** and **body** is the text that is composed of the combination of the above elements.

The result of encoding the composed text according to **Text encoding** under **E-mail Settings** in the **Function Area settings** is sent as the e-mail.

When only single-byte ASCII characters are used, approximately 200 characters can be entered for e-mail subject and 3,500 characters for e-mail body. When multi-byte characters are used, approximately 100 characters can be entered for e-mail subject and 2,000 characters for e-mail body

(3) Attached File

One CSV file can be attached to an e-mail. The attached file can include text and data register values. The file name of the CSV file is fixed as "data.csv". The maximum size of the attached file is 4,096 bytes.

The attached file composed from the following elements.

- Strings that use **character set** under **E-mail settings** in the **Function Area settings**
- Numeric value strings of the values of data registers that have been embedded in the body by inserting data registers
- Spaces, separator characters, and newlines


The size of the **attached file** is the text that is composed of the combination of the above elements.

The result of encoding the composed text according to **Text encoding** under **E-mail Settings** in the **Function Area settings** is attached to the e-mail.

When sending e-mails from Ethernet port 1 of the Plus CPU module, log files created with the DLOG and TRACE instructions can be attached to e-mails.

Programming WindLDR

1. Double-click on the **E-mail Editor** in the **Project Window**.
The **E-mail Editor** dialog box appears.
2. Create an e-mail.

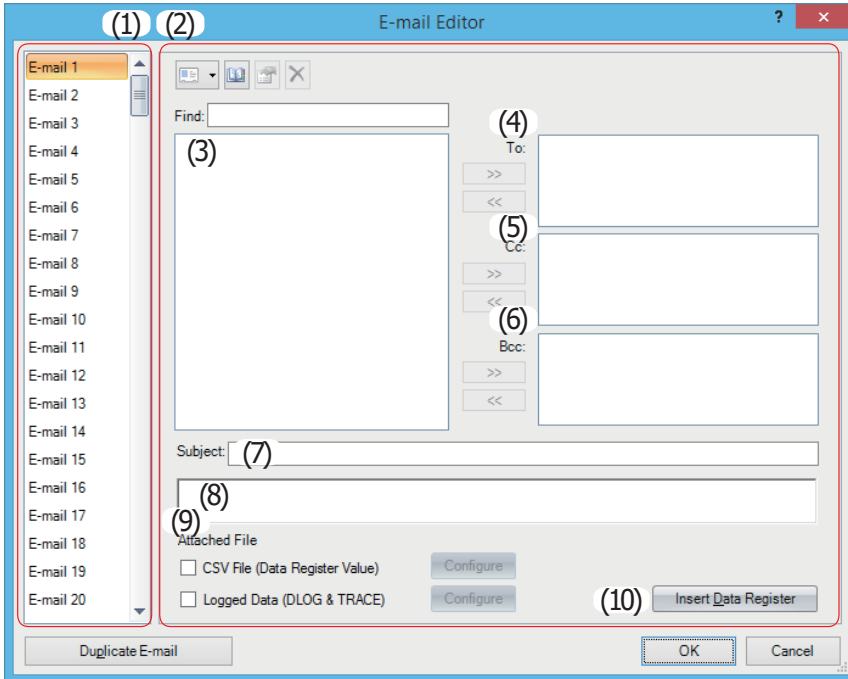

(1) E-mail

Displays the registered e-mails.

(2) E-mail content

Displays the content of the selected e-mail.

This area is composed of the following six elements: **To**, **Cc**, **Bcc**, **Subject**, **Body**, **Attached File**.

(3) E-mail addresses

Displays the e-mail addresses registered in the E-mail Address Book.

Select the e-mail address to add to **To**, **Cc**, or **Bcc** and click **>>** on the appropriate side to add that e-mail address to **To**, **Cc**, or **Bcc**.

Of the e-mail addresses in the **To**, **Cc**, or **Bcc** boxes, select the e-mail address to delete and click **<<** on the appropriate side to delete that e-mail address from **To**, **Cc**, or **Bcc**.

(4) To/(5) Cc/(6) Bcc

Specifies the addresses of the e-mail to send.

(7) Subject

Specifies the subject of the e-mail to send.

(8) Body

Specifies the e-mail body.

The e-mail body can be written in multiple lines.

(9) Attached File

Select this check box to attach a file to the e-mail.

CSV File (Data Register Value) : The attached file (CSV file) that includes text and data register values is configured with the Attached File Editor. Click **Edit** to display the Attached File Editor.

The layout and items can be freely configured in a range that fits in the file size limit.


For details, see "Attached File Editor" on page 12-16.

Logged Data (DLOG & TRACE) : For the Plus CPU module, log files created with the DLOG and TRACE instructions can be attached to e-mails. Configure these settings in **Attach Log Data** dialog box. Click **Configure** to display the **Attach Log Data** dialog box.

For details, see "Attach Log Data" on page 12-19.

(10) Insert Data Register

The **Variable (Data Register)** dialog box appears.

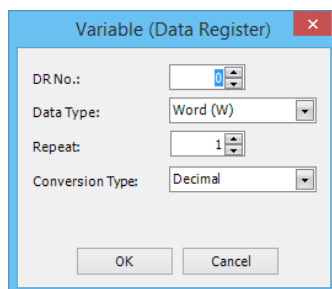

The data register values can be embedded in the e-mail body when the FC6A Series MICROSmart sends e-mails.

Item		Description
DR Number		Specify the data register number.
Data Type	Word (W)	The 1-word value stored in the specified data register is converted to an unsigned 16 bits value.
	Integer (I)	The 1-word value stored in the specified data register is converted to a signed 15 bits value.
	Double (D)	The 2-word value stored in the two consecutive data registers starting with the specified data register is converted to an unsigned 32 bits value.
	Long (L)	The 2-word value stored in the two consecutive data registers starting with the specified data register is converted to a signed 31 bits value.
	Float (F)	The 2-word value stored in the two consecutive data registers starting with the specified data register is converted to a floating-point value according to IEEE754 format. Digits can be specified between 1 and 7.
	String (S)	Values in the configured data registers are encoded to a character string with the character set for the text encoding. The length of character string Characters.

When word (W) or double (D) is selected, the conversion type can be specified. For example, when a data register value is 4660 (1234h), the data register value is converted and embedded in the e-mail body as follows:

Decimal: 4660

Hexadecimal: 1234

When the repeat is configured, the values in the consecutive data registers can be embedded in the e-mail body. A space is inserted between the data register values. For example, when the data register values are (D100) = 1234h, (D101) = 5678h, and (D102) = ABCDh, and the DR number is 100, the data type is Word, the repeat is 3, and the conversion type is hexadecimal, the following text will be embedded in the e-mail body:

1234 5678 ABCD


The text created in the E-mail Editor is encoded and sent according to the **Encoding method** settings specified on **E-mail Settings** in **Function Area Settings**.

3. Click **OK**.

Attached File Editor

Edit the content of the CSV file attached to the e-mail.

The desired text and data register values can be included in the CSV file. The file name of the CSV file is fixed as "data.csv".

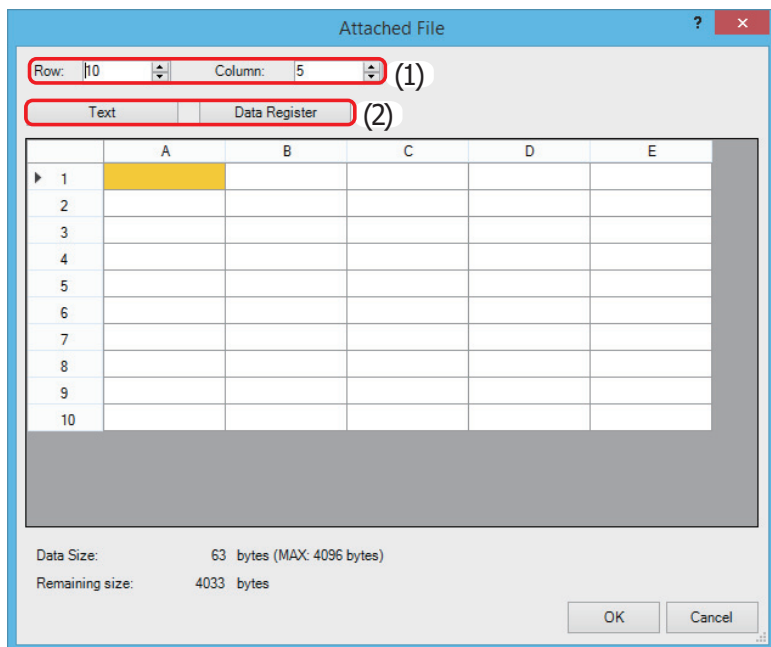

Settings in Attached File Editor

(1) Row, Column

The number of rows and columns in the CSV file can be changed. The number of rows and columns can be specified between 1 and 64. When the editing range is shrunk, the setting values outside the editing range are cleared.


(2) Text, Data Register

Set the text and data registers displayed in the table to determine the content of the attached file. The file size of the CSV file is a maximum of 4,096 bytes.

Note: The character set, separator, and decimal symbol configured in the Function Area Settings are applied to all attached files. For those settings, see "Programming WindLDR" on page 12-4 in this chapter.


Programming WindLDR

1. Select the **Attached File** check box in the **E-mail Editor** and click **Edit**.
The **Attached File** dialog box appears.
2. Specify **Row** and **Column**.
Set the number of rows and columns in the CSV file to determine the editing range.

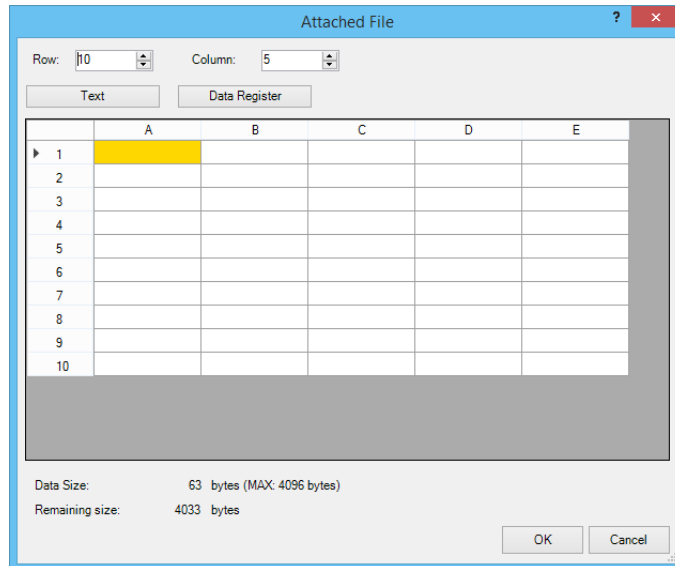

The content of the CSV file can be modified at the upper part of the dialog. The current file size and the remaining size that can be used for editing the content are displayed at the bottom of the dialog. You can expand the grid area by changing the size of the dialog. The file size includes separators and line breaks to be contained in the CSV file.


3. Select any cell and click **Text**.
The **Text** dialog box appears.
4. Enter the desired text in the selected cell.
The maximum length of the text that can be specified is 63 bytes.

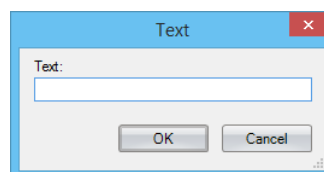

5. Click **OK**.
You are returned to the **Attached File** dialog box.
6. Select any cell and click **Data Register**.
The **Variable (Data Register)** dialog box appears.

12: SEND E-MAIL FUNCTION

7. Configure the settings.

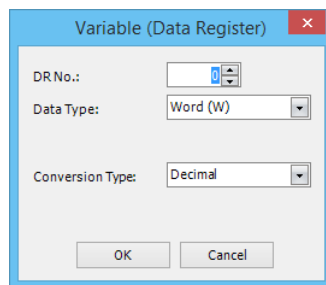

The value of the data register when the e-mail is sent can be included in the selected cell.

Item		Description
DR Number		Specify the data register number.
Data Type	Word (W)	The 1-word value stored in the specified data register is converted to an unsigned 16 bits value.
	Integer (I)	The 1-word value stored in the specified data register is converted to an unsigned 16 bits value.
	Double (D)	The 2-word value stored in the two consecutive data registers starting with the specified data register is converted to an unsigned 32 bits value.
	Long (L)	The 2-word value stored in the two consecutive data registers starting with the specified data register is converted to a signed 31 bits value.
	Float (F)	The 2-word value stored in the two consecutive data registers starting with the specified data register is converted to a floating-point value according to IEEE754 format. Digits can be specified between 1 and 7.

When word (W) or double (D) is selected, the conversion type can be specified. For example, when a data register value is 4660 (1234h), the data register value is converted and embedded in the e-mail body as follows:

Decimal: 4660

Hexadecimal: 1234

8. Click **OK**.

You are returned to the **Attached File** dialog box.

9. Click **OK**.

Attach Log Data

Set the log files that will be attached to the e-mail.

The screenshot shows a dialog box titled "Attach Log Data" with a close button in the top right corner. It contains two sections for selecting log file types: "DLOG" and "TRACE".

- (1) DLOG:** The radio button is selected. The "Folder Name" text box contains the text "RESULT". The "Files to transfer" dropdown menu is set to "Latest file only".
- (1) TRACE:** The radio button is not selected. The "Folder Name" text box is empty. The "Files to transfer" dropdown menu is set to "Latest file only".

At the bottom of the dialog are "OK" and "Cancel" buttons.

Settings

(1) Log File Type

Select the log file type to attach.

DLOG and **TRACE**

(2) Folder Name

Specify the folder name of the target folder to which the log files are saved by the DLOG or TRACE instructions. Up to 8 characters can be entered.

(3) Files to transfer

Select the specification method for the log files to attach from the following.


- Files updated within 24 hours
- Files updated within 7 days
- Latest file only

Note: The maximum number of log files that can be attached is seven. If the number of the log files exceeds seven, eighth or later log files are not attached and the error code 11 is stored in D2 of the EMAIL instruction.


12: SEND E-MAIL FUNCTION

Programming WindLDR

1. In the **E-mail Editor**, select the **Log Data (DLOG & TRACE)** check box and click **Configure**. The **Attach Log Data** dialog box is displayed.

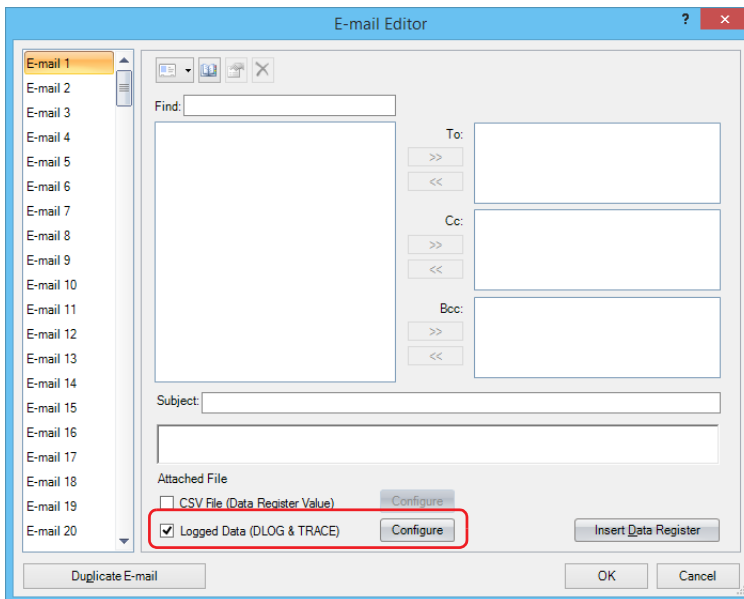

2. Select the type of the log file to attach to the e-mail from **DLOG** or **TRACE**.

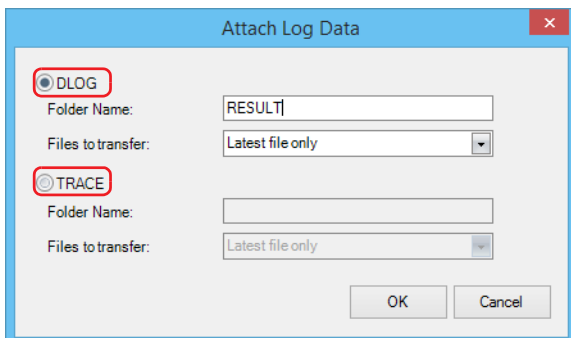

3. With **Folder Name**, specify the folder name of the target folder to which the log files are saved. Up to 8 characters can be entered.
4. With **Files to transfer**, select the specification method for the log files from the following.
 - Files updated within 24 hours
 - Files updated within 7 days
 - Latest file only
5. Click **OK**.

This concludes configuring the settings.

13: WEB SERVER

Introduction

This chapter describes the web server functions in the FC6A Series MICROSmart.

Overview

The Plus CPU module and HMI module support Web server function.

There are three types of web pages displayed by the web server function.

Web page	Description
System web page	On the system web page, the PLC status of the FC6A MicroSmart can be monitored and device values can be changed.
User web page	User web pages can be freely created by users using HTML and JavaScript.
Custom web page	Custom web pages can be created using WindLDR web page editor.

You can use these web pages to build an easy-to-use website for each project.

Web pages can be saved in the internal memory of the Plus CPU module, the SD memory card, or the internal memory of the HMI module. For details, see "URL When Accessing Web Server and Web Page to Display" on page 13-4.

The web server function of the Plus CPU module supports SSL/TLS, which prevents data eavesdropping, falsification, and spoofing by a third party.

Supported Models and Communication Ports

Supported models and communication ports are as follows.

Yes : Can be used as web server.

No : Cannot be used as web server.

— : Not equipped with the CPU module.

CPU Module	Communication Port		
	Ethernet Port 1	Ethernet Port 2	HMI-Ethernet Port
All-in-One CPU module	No	—	Yes*2*3
CAN J1939 All-in-One CPU module			
Plus CPU module	Yes*1	No	

*1 SSL/TLS communication is supported.

*2 The HMI-Ethernet port can be expanded and used for communication by connecting the HMI module to the CPU module.

*3 SSL/TLS communication is not supported.

Operating Environment

The recommended operating system and recommended web browser to use when browsing the web pages downloaded to FC6A MicroSmart are as follows.

When SSL/TLS communication is enabled

Operating System	Web Browser
Windows10	Google Chrome 90 or later
	Mozilla Firefox 88 or later
Android	Google Chrome 90 or later
iOS	Safari 14 or later

When SSL/TLS communication is disabled

Operating System	Web Browser
Windows10/8/7	Google Chrome 47 or later
	Mozilla Firefox 42 or later
	Microsoft Internet Explorer 11
Android	Google Chrome 47 or later
iOS	Safari 8 or later

Note: You can use the web server function other than the recommended operating system and recommended web browser, but there may be problems with the display or operation of the web page.

Standard Specifications

Save Locations of Web Pages

With the Plus CPU module, you can select the save location when downloading web pages. The All-in-One CPU module can only save web pages in the internal memory of the HMI module.

Yes : Web pages can be saved.


No : Web pages cannot be saved.

CPU Module	Internal memory of the CPU module	SD memory card inserted into the CPU module	Internal memory of the HMI module
All-in-One CPU module	No	No	Yes (5 MB maximum)
CAN J1939 All-in-One CPU module			
Plus CPU module	Yes (5 MB maximum)	Yes (32 GB maximum*1)	

*1 The maximum size of one file is 4 GB.

Locations of Web Pages Saved to SD Memory Card


When using the web server function with the Plus CPU module, web pages can be saved to the SD memory card. The following are the locations for saving web pages to SD memory card.

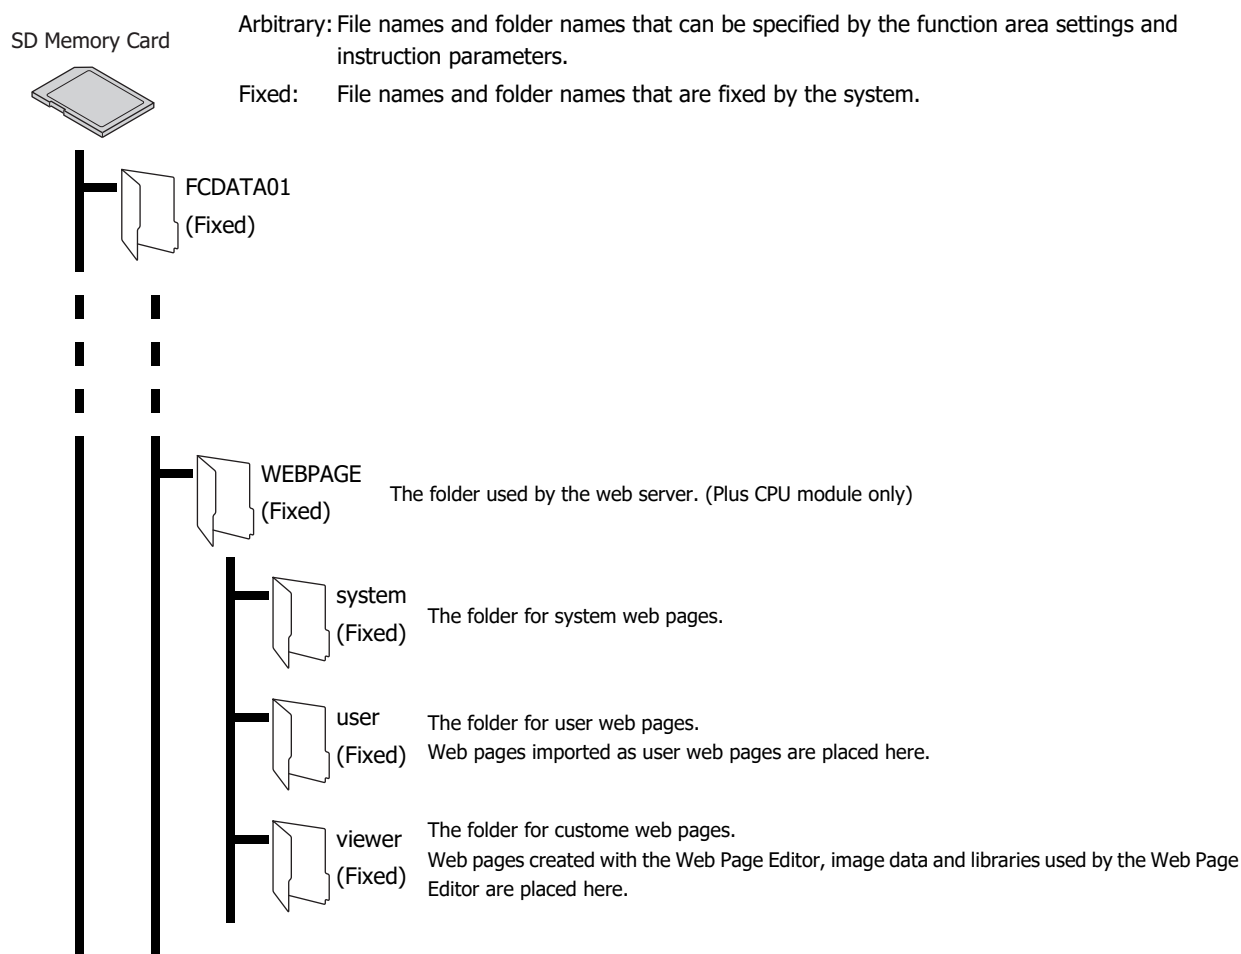

URL When Accessing Web Server and Web Page to Display

When accessing downloaded web pages, the URL to be accessed differs depending on the save location of the web page.

For example, when the IP address of the Plus CPU module is 192.168.1.20 and the IP address of the HMI module connected to the Plus CPU module is 192.168.1.10, the URLs to use when accessing the downloaded web pages are as follows.

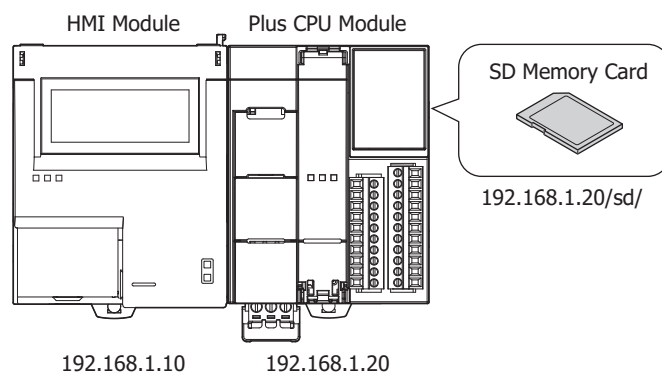

Save Location	URL When Accessing Web Pages
Internal memory of the Plus CPU module	http://192.168.1.20/
SD memory card inserted into the Plus CPU module	http://192.168.1.20/sd/
Internal memory of the HMI module	http://192.168.1.10/

When the web pages are stored in the internal memory of the Plus CPU module and you access the web server using a web browser, the web page displayed is as follows.

URL When Accessing Web Server	Displayed Web Page
http://192.168.1.20	The web page selected in Redirect Target of Web Server Settings is displayed. When Disable Redirect is selected in Redirect Target , the error occurs.
http://192.168.1.20/system/	The PLC Status page*1 of the system web page is displayed.
http://192.168.1.20/user/	If there is a file called index.html in the user folder, that index.html is displayed.

*1 For details on the PLC Status page, see "PLC Status" on page 13-29.

Note:

- Even if you access http://192.168.1.20/viewer/, you are not redirected to the custom web page. When you want to display a custom web page, select the custom web page in **Redirect Target** of **Web Server Settings** and access http://192.168.1.20/.
- When you access the web page, you will be asked to enter your user name and password. For details, see "(10) User Settings" on page 13-9.

Number of Connections

When SSL/TLS communication is enabled on the Plus CPU module web server, up to 8 connections can be established.


Note: Depending on the configuration of the client connecting to the Plus CPU module web server, the number of connections the client used while connecting to it and viewing web pages varies. The current number of connections can be checked in D8822 (Web Server Current Number of Connections (Plus CPU Module)). For details, see "Special Data Register Device Addresses" on page 2-17.

Plus CPU Module Web Server

This section describes the web server settings when using the web server function in the Plus CPU module.


• Operation procedure

1. On the **Configuration** tab, in the **Function Area Settings** group, click **Ethernet Port 1**.
2. Under **Web Server Settings**, configure the web server settings and the settings for the web page and options.

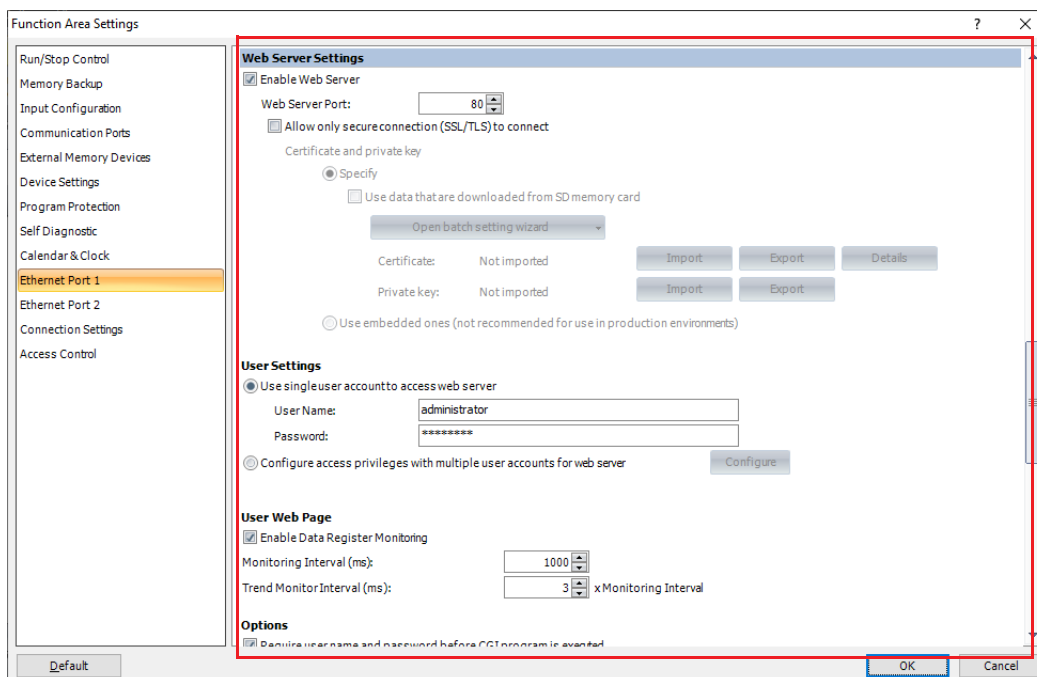

For details on each setting item, see "Web Server Settings" on page 13-7.

3. Download the user program to the Plus CPU module.
From the WindLDR menu bar, select **Online** > **Transfer** > **Download**. The **Download** dialog box appears.
4. Select the **Download web pages** check box.

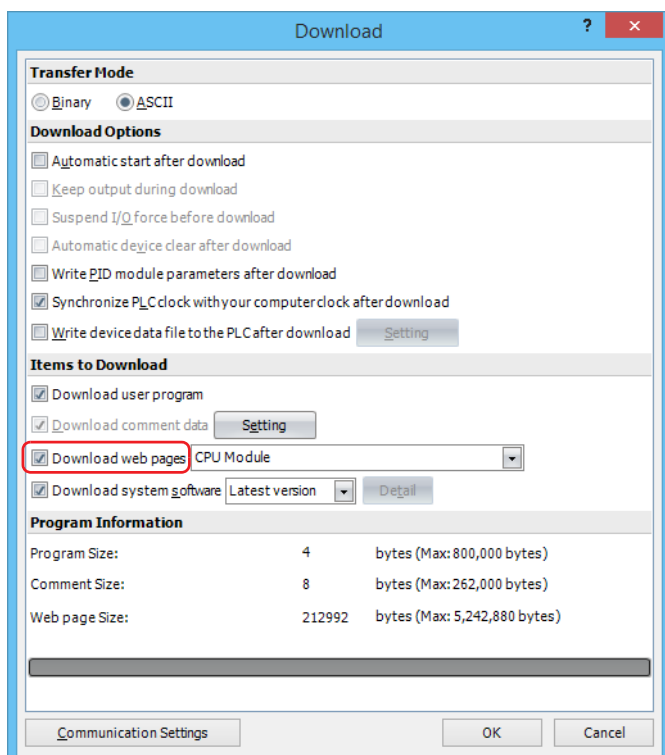

5. Select the save location of web pages from the following.

Setting	Description
No Download	Web pages is not be downloaded.
CPU Module	Downloaded web pages are saved to the internal memory of the Plus CPU module.
CPU Module (High-speed and Non-retentive)	Downloaded web pages are saved to the internal memory of the Plus CPU module. When the Plus CPU module is turned off, the downloaded web pages are erased.
CPU Module (SD Memory Card)	Downloaded web pages are saved to the SD memory card inserted into the Plus CPU module.

Note: CPU Module (High-speed and Non-retentive) allows web pages to be downloaded faster than when **CPU Module** is selected, but the downloaded web pages will be deleted when the power to the Plus CPU module is turned off. Select **CPU Module (High-speed and Non-retentive)** when you will repeatedly edit and download web pages, such as to check the operation of created web pages.


Caution on downloading web pages to SD memory card

When **CPU Module (SD Memory Card)** is selected, download the web pages to the SD memory card with write-protection removed in the Plus CPU module.

6. Click **OK**.

The web pages are downloaded to the selected save location.

When the following message appears, the download has completed successfully.

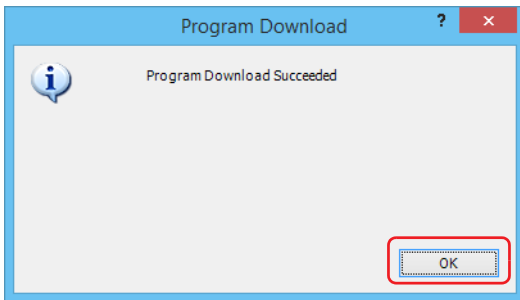

This concludes configuring the web server settings.

Web Server Settings

On the **Configuration** tab, in the **Function Area Settings** group, click **Ethernet Port 1**, and configure the settings for using the web server function under **Web Server Settings**.

When Use data that are downloaded from SD memory card check box is cleared

Function Area Settings

Web Server Settings

(1) Enable Web Server

(2) Web Server Port: 443

(3) Allow only secure connection (SSL/TLS) to connect

(4) Certificate and private key

Specify

(5) Use data that are downloaded from SD memory card

(7) Open batch setting wizard

(8) Certificate: Not imported Import Export Details

(9) Private key: Not imported Import Export

Use embedded ones (not recommended for use in production environments)

When Use data that are downloaded from SD memory card check box is selected

Function Area Settings

Web Server Settings

Enable Web Server

Web Server Port: 443

Allow only secure connection (SSL/TLS) to connect

Certificate and private key

Specify

Use data that are downloaded from SD memory card

(6) Configure SD memory card

(1) Enable Web Server

Select this check box when you want to use the web server function. The check box is selected by default.

(2) Web Server Port

Configure the port number for the web server of the Plus CPU module. Normally, 80 is used for HTTP and 443 is used for HTTP over TLS. Configure the port number in the range of 0 to 65,535. The default port number is 80.

(3) Allow only secure connection (SSL/TLS) to connect

Select this check box to enable SSL/TLS communication. The check box is cleared by default. For restrictions when SSL/TLS communication is enabled, see "Restrictions" on page 13-60.

(4) Certificate and private key

Select the certificate and private key to be used for SSL/TLS communication from the following setting. The default value is "Specify".

Setting	Description
Specify	You can freely specify the certificate and private key you want to use for SSL/TLS communication.
Use embedded ones	The self-signed certificate and private key built into the Plus CPU module as standard are used.

Note: When **Use embedded ones** is selected, if you try to access the Plus CPU module web server by entering "https://..." in the address bar of your web browser, a warning message will be displayed on your web browser. If you ignore this warning message, you can use SSL/TLS communication and access the Plus CPU module web server.

(5) Use data that are downloaded from SD memory card

Configure whether or not to use the SD memory card to write the certificate and private key to the Plus CPU module.

When this check box is selected, (6) is displayed, and (7) to (9) are hidden. When this check box is selected, configure (7) to (9) in the **SD Memory Card Configuration** dialog box. For details on the **SD Memory Card Configuration** dialog box, see Chapter 11 "SD Memory Card" in the "FC6A Series MICROSmart User's Manual".

(6) Configure SD memory card

The **SD Memory Card Configuration** dialog box is opened. Only when **Use data that are downloaded from SD memory card** check box is selected, the **Configure SD memory card** button is displayed. For details on the **SD Memory Card Configuration** dialog box, see Chapter 11 "SD Memory Card" in the "FC6A Series MICROSmart User's Manual".

(7) Open batch setting wizard

The **Batch setting of certificate and private key** wizard is opened and you can create a certificate and private key in a wizard. Follow the displayed procedure to create them.

Note: In this wizard, a certification authority's root certificate is configured and imported into Windows certificate store (Logical system store: "Trusted Root Certification Authorities"). In addition, the certificate and private key to be used in the web server function of the Plus CPU module are configured and imported into the function area settings. For details, see "Batch setting of certificate and private key wizard" on page 13-11.

(8) Certificate

Click **Import** to import the certificate to be used for SSL/TLS communication. Files in pem or der format can be imported. WindLDR converts pem format files to der format. Files in der format that are larger than 2K bytes cannot be imported.

The certificate can be imported when the **Allow only secure connection (SSL/TLS) to connect** check box is selected and **Use data that are downloaded from SD memory card** check box is cleared.

Click **Details** to display the **Certificate Information** dialog box that shows the imported certificate.

Click **Export** to export the imported certificate (der format file).

(9) Private key

Click **Import** to import the private key (encryption method: RSA, key length: up to 2,048 bits) to be used for SSL/TLS communication. WindLDR supports files in the following formats.

- PKCS#1 format pem file or der file
- PKCS#8 format (unencrypted) pem file or der file

The certificate can be imported when the **Allow only secure connection (SSL/TLS) to connect** check box is selected and **Use data that are downloaded from SD memory card** check box is cleared.

Click **Export** to export the imported private key (der format file).

Function Area Settings

Run/Stop Control (10) **User Settings**

Memory Backup

Input Configuration

Communication Ports

External Memory Devices

Device Settings

Program Protection

Self Diagnostic (14) Enable Data Register Monitoring

Calendar & Clock (15) Monitoring Interval (ms): 1000

Ethernet Port 1 (16) Trend Monitor Interval (ms): 3 x Monitoring Interval

Ethernet Port 2

Connection Settings (17) Require user name and password before CGI program is executed

Access Control (18) Redirect Target: System Web Top Page

(19) Use System Web Page

(20) Language: English

(21) Use Web Page Editor

Configure access privileges with multiple user accounts for web server (13)

Use single user account to access web server

(11) User Name: administrator

(12) Password: *****

CPU Module

SD Memory Card

(10) User Settings

Select the number of accounts to create (one or multiple) from the following. The default value is "Use single user account to access web server".

User Setting	Description
Use single user account to access web server	Select to access the web server with a single common user account.
Configure access privileges with multiple user accounts for web server	Select to access the web server with multiple user accounts.

Note: Multiple user accounts are configured in the **User Account Settings** dialog box. For details, see "User Account Settings" on page 13-26.

(11) User Name**(12) Password**

Configure the user name and password. The maximum length of the user name is 40 characters, and the maximum length of the password is 16 characters. Only alphanumeric characters and symbols can be used. These settings are available only when the **Use single user account to access web server** is selected.

Item	Factory default settings
User Name	administrator
Password	password

(13) Configure

You can open the **User Account Settings** dialog box and create user accounts in the displayed **User Account Settings** dialog box. For details, see "User Account Settings" on page 13-26.

(14) Enable Data Register Monitoring

Select this check box in the following situations:

- When using a data register monitor with embedded metacharacters in an HTML page
- When using the graphics library

Only files with html and htm extensions are valid.

(15) Monitoring Interval (ms)

When monitoring, set the interval in ms to send requests from the web browser to the FC6A Series MICROSmart.

(16) Trend Monitor Interval (ms)

When performing monitoring that uses the trend graph, set the interval in milliseconds to send requests from the web browser to the FC6A Series MICROSmart as a whole number multiple of the monitoring interval.

(17) Require user name and password before CGI program is executed

Select this check box when you want to require the user name and password before running the CGI program.

This check box is selected as default. For details, see "CGI (Common Gateway Interface)" on page 13-58.

(18) Redirect Target

You can redirect to the web page configured in **Redirect Target**.

Settings	Description	Redirect Target Setting
Disable Redirect	The web page cannot redirect to a web page.	Unnecessary
System Web Top Page	The web page can redirect to the top page of the system web pages.	
User Web Page and Custom Web Page*1	The web page can redirect to the configured user web page or custom web page.	Necessary

*1 Select the folder name or the file name that you imported or saved.

You can select the save location of the web page configured as the redirect target from **CPU Module** or **SD Memory Card**.

Redirect Destination	Description
CPU Module	The web page redirects to the redirect target saved in the internal memory of the Plus CPU module.
SD Memory Card	The web page redirects to the redirect target saved in the SD memory card inserted into the Plus CPU module.

For example, if the IP address of Ethernet port 1 of Plus CPU module is 192.168.1.20, and you select **SD Memory Card** as the **Redirect Target** to download web pages to the SD memory card, the redirect target can be displayed at the following URL.

- <http://192.168.1.20/sd/>

Note: Make sure that the redirect destination configured in **Redirect Target** and the save location when downloading web pages are the same.

(19) Use System Web Page

Select this check box to use the system web pages.

(20) Language


Select the language of the system web pages from Japanese, English, Chinese, German, or Spanish.

(21) Use Web Page Editor

Select this check box to use the Web Page Editor. For details, see "Web Page Editor" on page 13-46.

Batch setting of certificate and private key wizard

In the Plus CPU module, the certificate and private key used for SSL/TLS communication can be configured with the **Batch setting of certificate and private key** wizard. This section describes the procedure to configure the certificate and private key when using the web server function in the following system configuration.

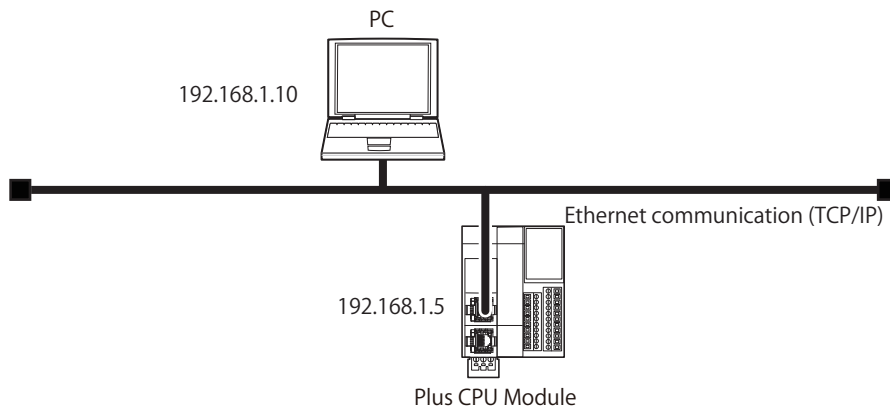


• Operation procedure

1. Click **Open batch setting wizard**.


The **Batch setting of certificate and private key** wizard is displayed.

2. Click **Next**.

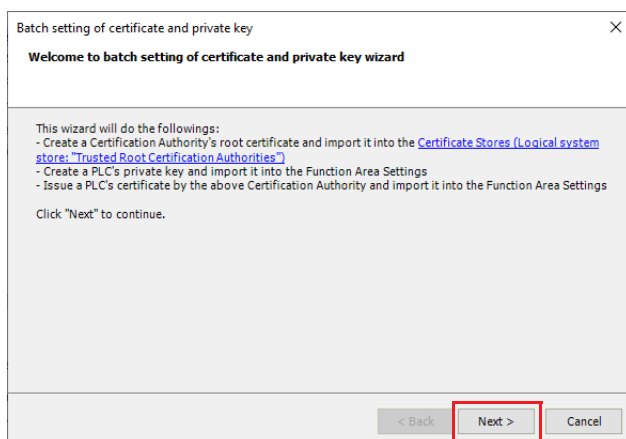

Note: The certificate store (certmgr.msc) for the user currently logged on to Windows is opened when clicking on the **Certificate Stores (Logical system store: "Trusted Root Certification Authorities")** link.

3. Select **I have read and accept the above note** and then click **Next**.

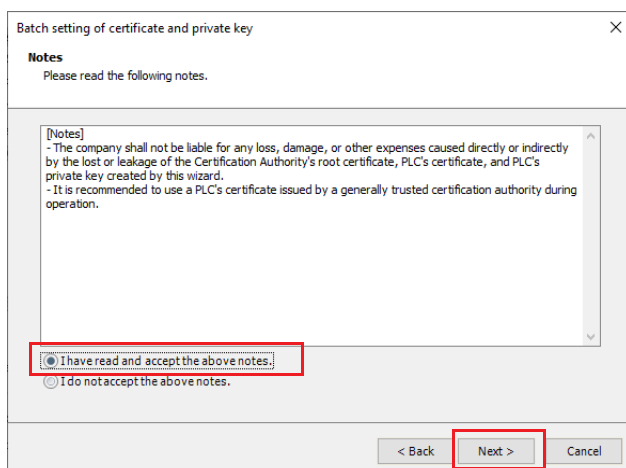

4. Configure the items you want to configure and click **Next**. If there is no items to configure, click **Next** without configuring those items.

The description of each setting item is as follows.

(1) Create a Certification Authority's root certificate with the following settings

Select this radio button to create a new Certification Authority's root certificate. The check box is selected by default.

(2) Common name

Configure the common name of the Certification Authority's root certificate. The maximum length of the common name is 128 characters. Only alphanumeric characters, the following special characters, and space characters can be used.

' () - . / : ?

Only when **Create a Certification Authority's root certificate with the following settings** is selected, the common name can be configured. MyRootCA is configured as default.

(3) Country

Configure the Certification Authority's location (country). The maximum length of the country is 2 characters. Only alphabet characters (capital characters) can be used.

Only when the **Create a Certification Authority's root certificate with the following settings** and the **Country** check box are selected, the country can be configured.

(4) State or province

Configure the Certification Authority's location (state or province). The maximum length of the state or province is 128 characters. Only alphanumeric characters, the following special characters and space characters can be used.

' () - . / : ?

Only when the **Create a Certification Authority's root certificate with the following settings** and the **State or province** check box are selected, the state or province can be configured.

(5) Locality

Configure the Certification Authority's location (locality). The maximum length of the locality is 128 characters. Only alphanumeric characters, the following special characters and space characters can be used.

' () - . / : ?

Only when the **Create a Certification Authority's root certificate with the following settings** and the **Locality** check box are selected, the locality can be configured.

(6) Organization name

Configure the Certification Authority's organization name. The maximum length of the organization name is 64 characters. Only alphanumeric characters, the following special characters and space characters can be used.

' () - . / : ?

Only when the **Create a Certification Authority's root certificate with the following settings** and the **Organization name** check box are selected, the organization name can be configured.

(7) Organization unit

Configure the Certification Authority's organization unit. The maximum length of the organization unit is 64 characters. Only alphanumeric characters, the following special characters and space characters can be used.

' () - . / : ?

Only when the **Create a Certification Authority's root certificate with the following settings** and the **Organization unit** check box are selected, the organization unit can be configured.

(8) Valid from

Configure the validity period (start date) of the Certification Authority's root certificate. The default value is the date of your PC.

Only when the **Create a Certification Authority's root certificate with the following settings** is selected, the start date can be configured.

(9) Valid to

Configure the validity period (end date) of the Certification Authority's root certificate. The default value is 365 days after your PC date.

Only when the **Create a Certification Authority's root certificate with the following settings** is selected, the end date can be configured.

(10) Reuse Certification Authority's root certificate that is previously created

Select this radio button to reuse the Certification Authority's root certificate that is previously created. Only when the Certification Authority's root certificate that is previously created exists, this radio button can be selected.

Click **Details** to display the **Certificate Information** dialog box, which shows the Certification Authority's root certificate that is previously created.

5. Select 2048 bits or 1024 bits and click Next.

6. Enter the IP address of Ethernet port 1 on the Plus CPU module in the **Common name** and **Subject alternative name**, and click **Next**. When there are other items you want to configure, configure those settings and click **Next**.

The description of each setting item is as follows.

(1) Common name

Configure the domain name or IP address of the PLC. For a domain name, the maximum length of the domain name is 128 characters. Only alphanumeric characters, - (hyphen), and . (period) can be used. For an IP address, the input format is "xxx.xxx.xxx.xxx". Enter a value between 0 and 255 to "xxx".

Note: A wildcard certificate can be created by specifying a domain name starting with "*".

(2) Country

Configure the location (country) of the target to be certified by the Certification Authority. The maximum length of the country is 2 characters. Only alphabet characters (capital characters) can be used. Only when the **Country** check box is selected, the country can be configured.

(3) State or province

Configure the location (state or province) of the target to be certified by the Certification Authority. The maximum length of the state or province is 128 characters. Only alphanumeric characters, the following special characters, and space characters can be used.

' () - . / : ?

Only when the **State or province** check box is selected, the state or province can be configured.

(4) Locality

Configure the location (locality) of the target to be certified by the Certification Authority. The maximum length of the locality is 128 characters. Only alphanumeric characters, the following special characters, and space characters can be used.

' () - . / : ?

Only when the **Locality** check box is selected, the locality can be configured.

(5) Organization name

Configure the name of the organization to be certified by the Certification Authority. The maximum length of the organization name is 64 characters. Only alphanumeric characters, the following special characters, and space characters can be used.

' () - . / : ?

Only when the **Organization name** check box is selected, the organization name can be configured.

(6) Organization unit

Configure the name of the organization unit to be certified by the Certification Authority. The maximum length of the organization unit is 64 characters. Only alphanumeric characters, the following special characters, and space characters can be used.

' () - . / : ?

Only when the **Organization unit** check box is selected, the organization unit can be configured.

(7) Subject alternative name

Configure the domain name or IP address of the PLC. For a domain name, the maximum length of the domain name is 128 characters. Only alphanumeric characters, - (hyphen), and . (period) can be used. For an IP address, the input format is "xxx.xxx.xxx.xxx". Enter a value between 0 and 255 to "xxx". The maximum number of domain names or IP addresses that can be configured is 10.



Note: A wildcard certificate can be created by specifying a domain name starting with "*".

(8) Valid from


Configure the validity period (start date) of the PLC. The default value is the date of your PC. You cannot configure the date prior than the validity period (start date) of the Certification Authority's root certificate.

(9) Valid to

Configure the validity period (end date) of the PLC. The default value is 60 days after your PC date. You cannot configure the date later than the validity period (end date) of the Certification Authority's root certificate.

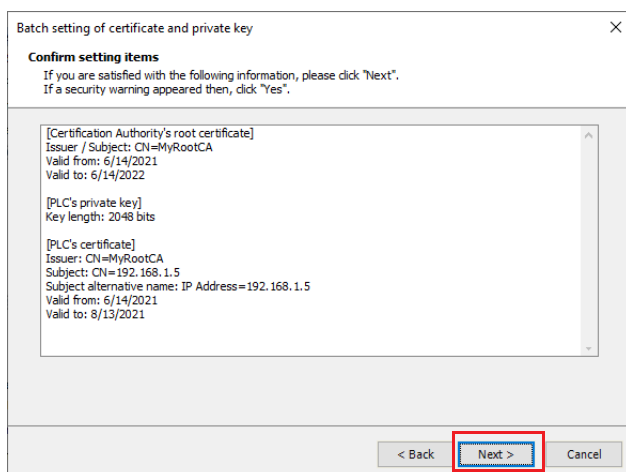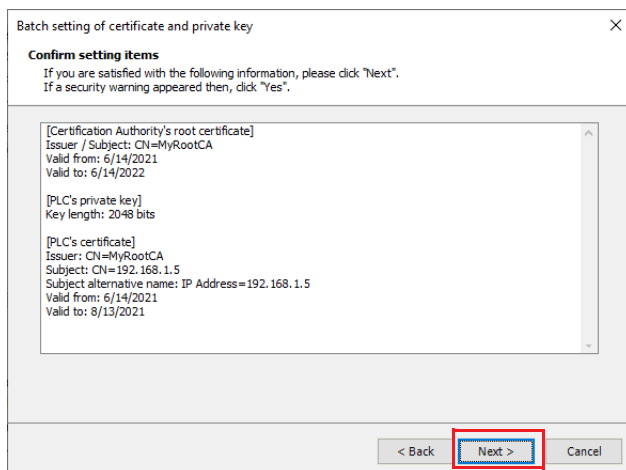7. Confirm the settings and click **Next.****8. Click **Yes**.**

9. Click **Finish**.

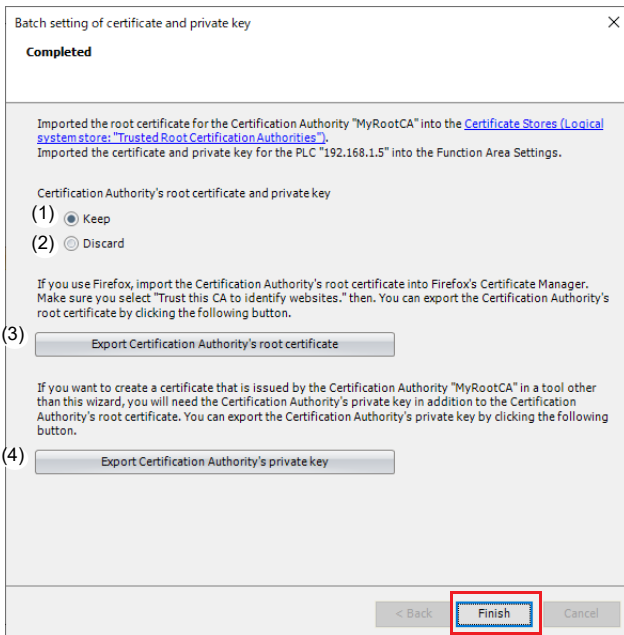

The description of the setting item and buttons are as follows.

(1) **Keep**

Select this radio button to store the root certificate and private key of the Certification Authority in the project. The check box is selected by default.

(2) **Discard**

Select this radio button to remove the root certificate and private key of the Certification Authority from the project.

(3) **Export Certification Authority's root certificate**


The Certification Authority's root certificate (der file) can be exported.

(4) **Export Certification Authority's private key**

The Certification Authority's private key (der file) can be exported.

Note:

- The certificate store (certmgr.msc) for the user currently logged on to Windows is opened when clicking on the **Certificate Stores (Logical system store: "Trusted Root Certification Authorities")** link. In the left window of the figure below, you can expand the **Trusted Root Certification Authorities** folder and click **Certificates** to see that MyRootCA (Certification Authority's root certificate) has been added.

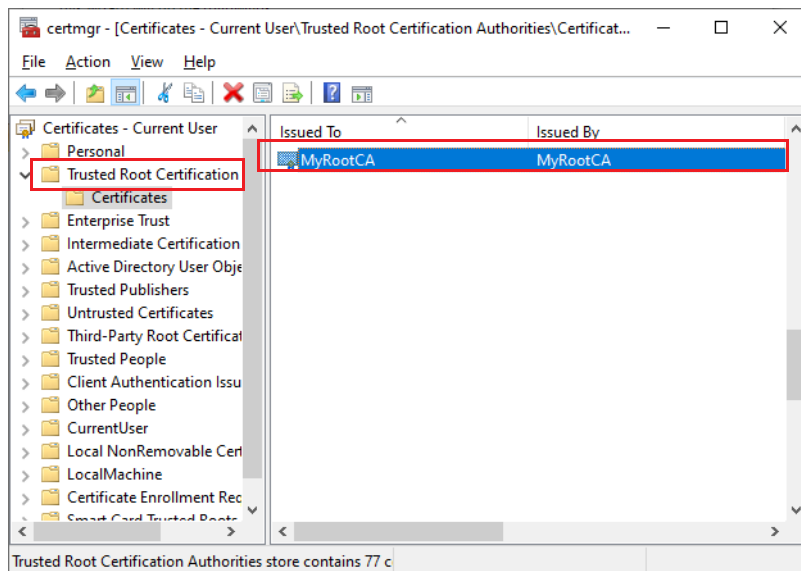


- When you use a web browser to access a web server from a PC that does not have a Certification Authority's root certificate imported into the Certificate Store, a warning is displayed on the web browser. You can hide this warning by clicking **Export Certification Authority's root certificate** to export the Certification Authority's root certificate and import it to your PC. For details, see "Import of the Certification Authority's root certificate" on page 13-18.

This concludes configuring the certificate and private key.

Import of the Certification Authority's root certificate


When you use a web browser to access a web server from a PC that does not have a Certification Authority's root certificate imported into the Certificate Store, a warning is displayed on the web browser. You can hide this warning by importing the Certification Authority's root certificate to your PC.

The procedure for configuring the Certification Authority's root certificate on PC 1 shown in the figure below and importing the certificate into the Certificate Store on PC 2 is as follows.

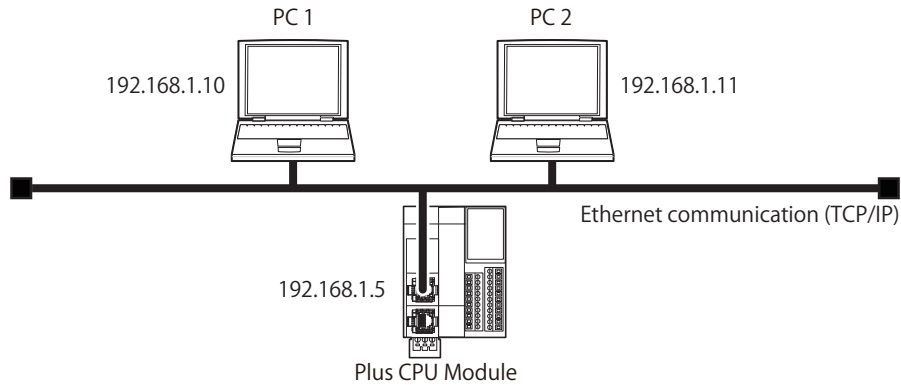


• **Operation procedure**

1. Perform step 1 to step 8 of "Batch setting of certificate and private key wizard" on page 13-11 on PC 1.
2. Click **Export Certification Authority's root certificate** to save the Certification Authority's root certificate on PC 1.

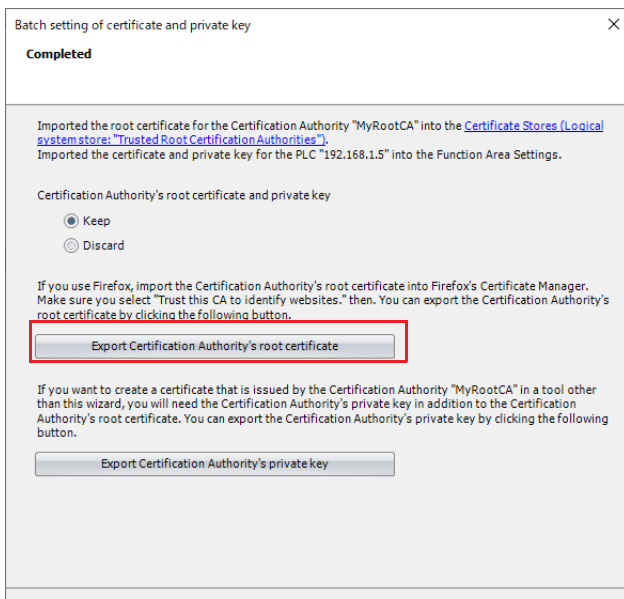


3. Copy the Certification Authority's root certificate saved in step 1 to PC 2.

4. On the Explorer of PC 2, double-click the Certification Authority's root certificate to open its properties, and then click **Install Certificate**.

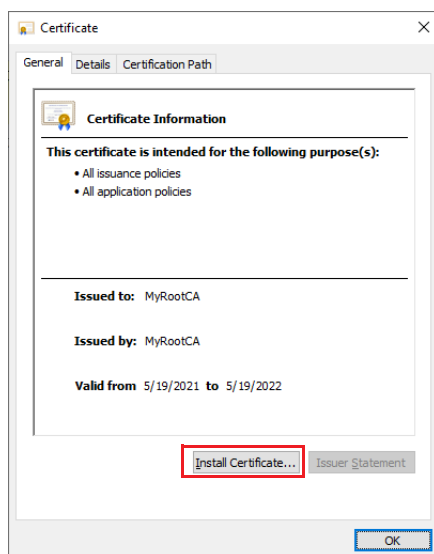


The Certificate Import Wizard is opened.

5. Click **Next**.

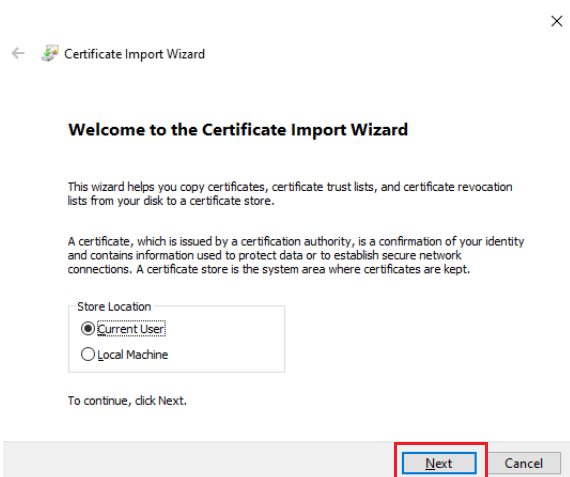


Note: Select **Local Machine** to enable all users of PC 2 to refer to the Certification Authority's root certificate. The Certification Authority's root certificate is imported into the certificate store (certlm.msc) on the local machine. (Administrative privileges are required.)


6. Click **Place all certificates in the following store**, and then click **Browse**.


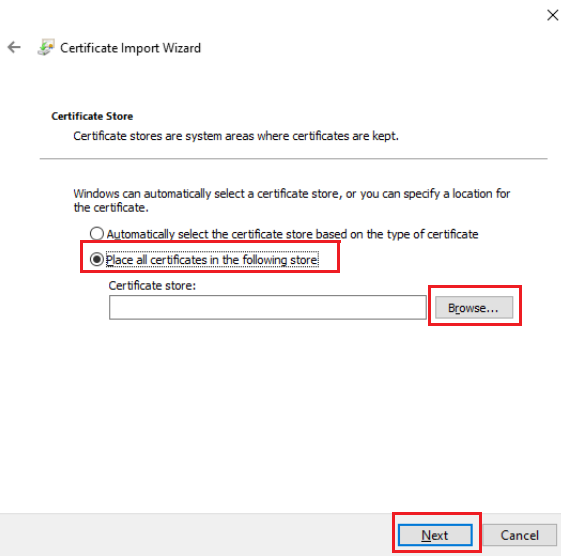


7. Select **Trusted Root Certification Authorities**, and then click **OK**.

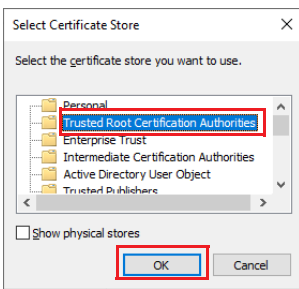

8. Click **Finish**.

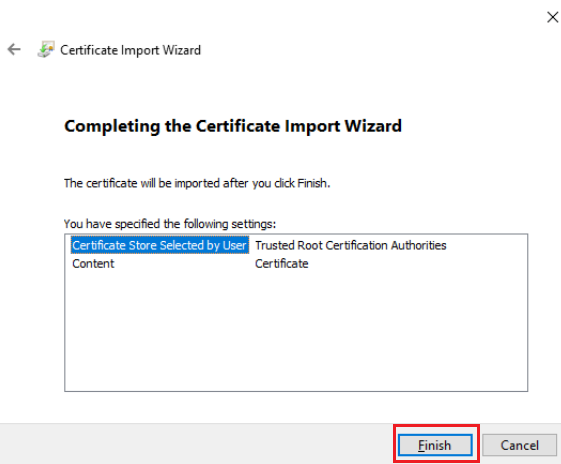

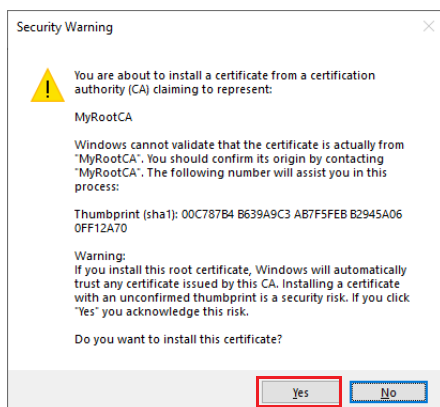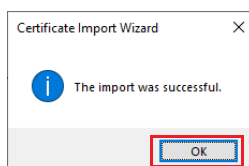9. Click Yes.**10. Click OK.**


This concludes importing the Certification Authority's root certificate to PC 2.

HMI Module Web Server

This section describes the web server settings when using the web server function on the HMI-Ethernet port of the HMI module.

• Operation procedure


1. Use the Module Configuration Editor to configure the HMI module Web server settings.
On the **Configuration** tab, in the **PLCs** group, select **Expansion Modules**.
2. Right click the inserted HMI module in the module configuration area and click **Configure**.
The **HMI Module Configuration** dialog box is displayed.

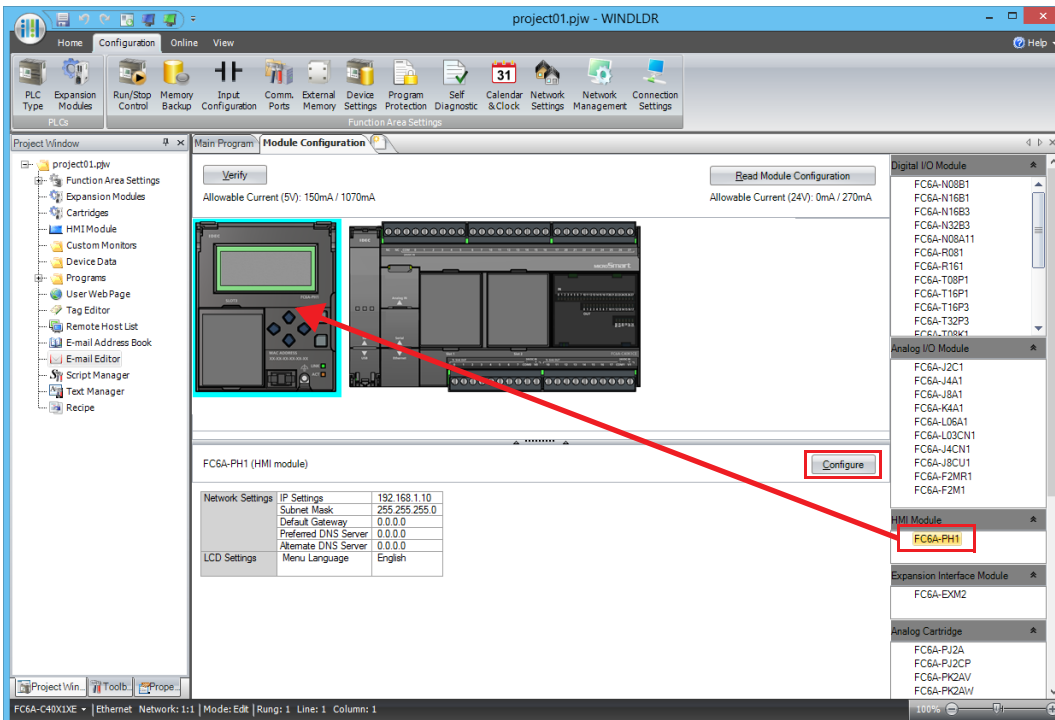

Note: The **HMI Module Configuration** dialog box can also be opened in the following way.

- Double-click **HMI Module** in the **Project Window**.
 - Double-click the HMI module in the module configuration area.
3. Click the **Web Server** tab and configure each setting item. For details on each setting, see "Web Server Settings" on page 13-24.
 4. Download the user program to the CPU module.
From the WindLDR menu bar, select **Online** > **Transfer** > **Download**. The **Download** dialog box appears.


5. Select the **Download web pages** check box.

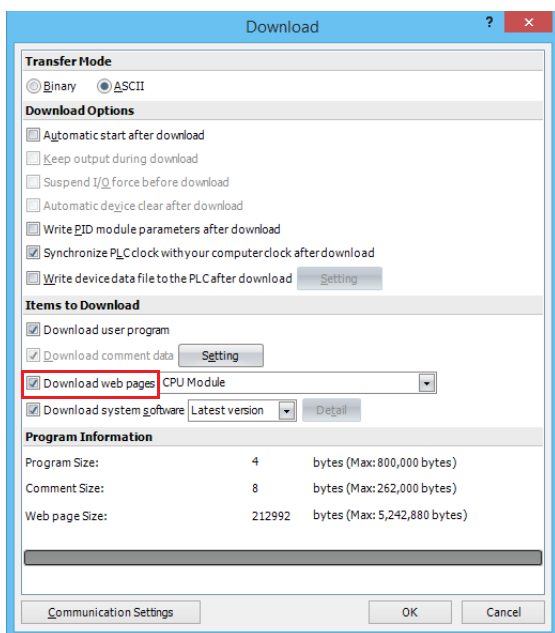

Note: The web pages are saved only in the internal memory of the HMI module.

6. Click **OK**.


The created web pages are downloaded to the internal memory of the HMI module. When the following message appears, the download has completed successfully.

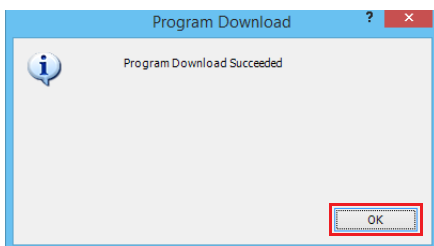

This concludes configuring the web server settings.

Web Server Settings

Configure the settings for using the web server function in the **Web Server** tab of the **HMI Module Configuration** dialog box.

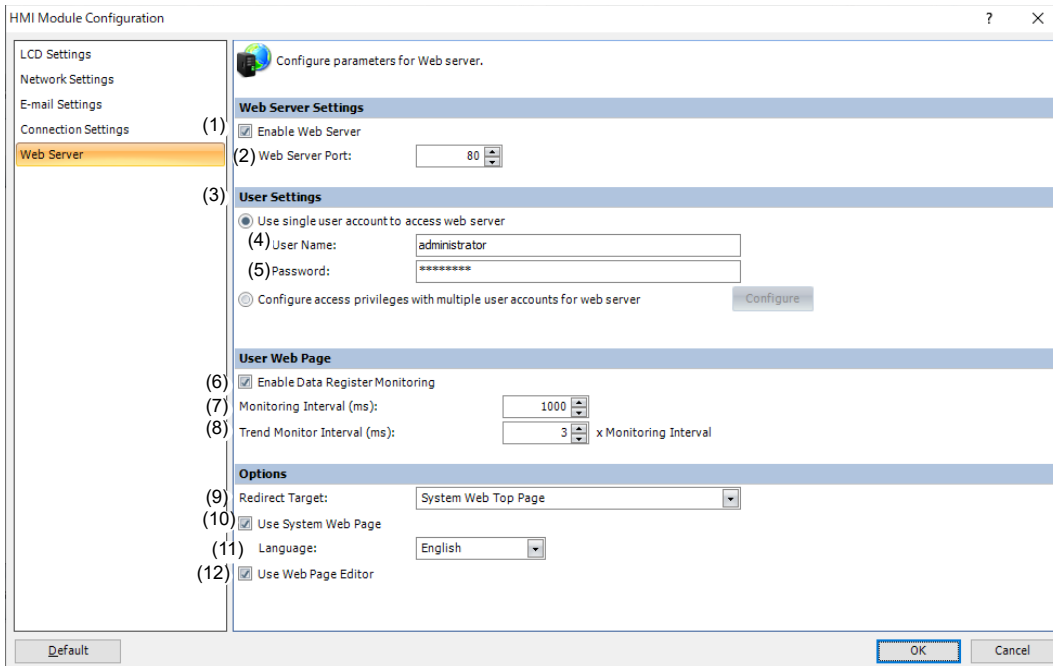

(1) Enable Web Server

Select this check box when you want to use the Web server function. The check box is selected by default.

(2) Web Server Port

Configure the port number for the web server of the HMI module. Configure the port number in the range of 0 to 65,535. The default port number is 80.

(3) User Settings

Select the number of accounts to create (one or more) from the following. The default value is **Use single user account to access web server**.

User Setting	Description
Use single user account to access web server	Select to access the web server with a single common user account.
Configure access privileges with multiple user accounts for web server	Select to use multiple accounts and limit access to the web server.

Note: Multiple user accounts are configured in the **User Account Settings** dialog box. For details, see "User Account Settings" on page 13-26.

(4) User Name

(5) Password

Configure the user name and password. The maximum length of the user name is 40 characters, and the maximum length of the password is 16 characters. Only alphanumeric characters and symbols can be used. These settings are available only when the **Use single user account to access web server** is selected.

Item	Factory default settings
User Name	administrator
Password	password

(6) Enable Data Register Monitoring

Select this check box in the following situations:

- When using a data register monitor with embedded metacharacters in an HTML page
- When using the graphics library

Only files with html and htm extensions are valid.

(7) Monitoring Interval (ms)

When monitoring, set the interval in ms to send requests from the web browser to the FC6A Series MICROSmart.

(8) Trend Monitor Interval (ms)

When performing monitoring that uses the trend graph, set the interval in milliseconds to send requests from the web browser to the FC6A Series MICROSmart as a whole number multiple of the monitoring interval.

(9) Redirect Target

The web page can redirect to the web page configured in **Redirect Target**.

Settings	Description
Disable Redirect	The web page cannot redirect to a web page.
System Web Top Page	The web page can redirect to the top page of the system web pages.
User Web Page and Custom Web Page* ¹	The web page can redirect to the configured user web page or custom web page.

*1 Select the folder name or the file name that you imported or saved.

For example, if the IP address of HMI-Ethernet port of HMI module is 192.168.1.10, the redirect target can be displayed at the following URL.

- <http://192.168.1.10/>

(10) Use System Web Page

Select this check box to use the system web pages.

(11) Language

Select the language of the system web pages from Japanese, English, Chinese, German, or Spanish.

(12) Use Web Page Editor

Select this check box to use the Web Page Editor. For details, see "Web Page Editor" on page 13-46.


User Account Settings

■ Creating Multiple User Accounts

- Operation procedure


1. In the **Function Area Settings** dialog box, under **Ethernet Port 1** and **Web Server Settings** or in the **HMI Module Configuration** dialog box, on the **Web Server** tab, select **Configure access privileges with multiple user accounts for web server** and click **Configure**.

The **User Account Settings** dialog box is displayed.

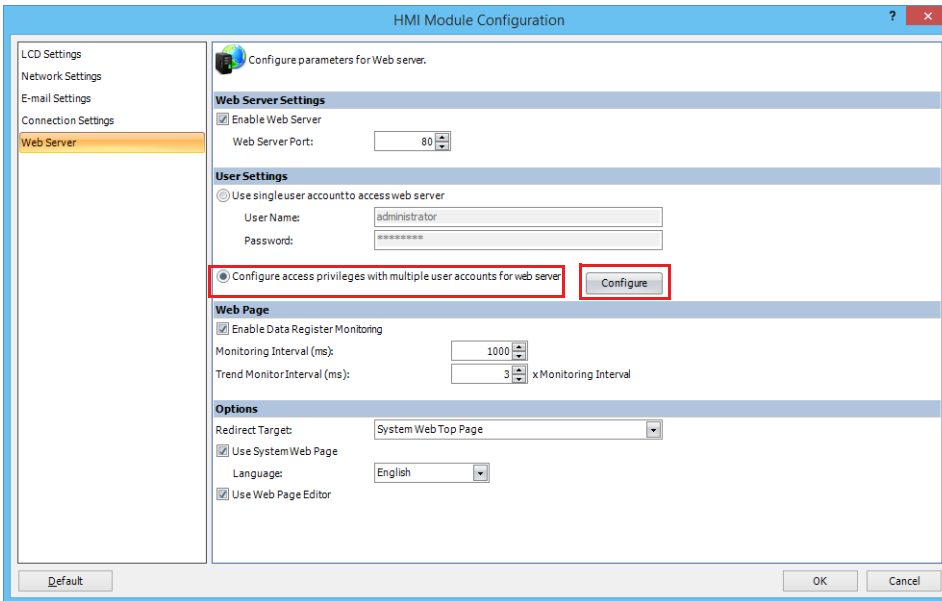


2. Click **New User**.


A user account is created in the list.

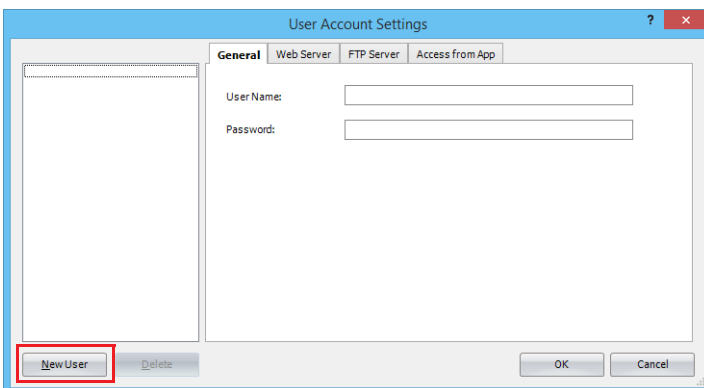

3. On the **General** tab, set **User Name** and **Password**.

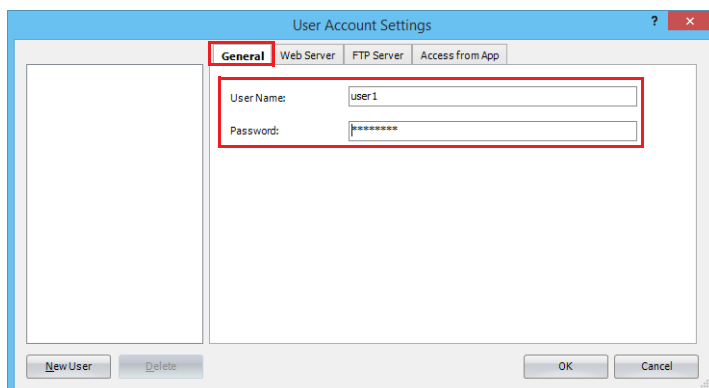


4. Click the **Web Server Access Management** tab and select the check boxes of folders and servers where access will be permitted.

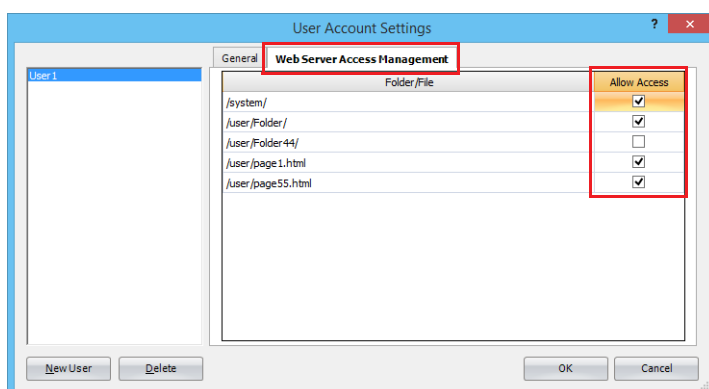

5. Repeat steps 2 to 4 and create the necessary number of user accounts.

Note: If you select a user account on the list, you can edit the settings of the selected account on the **General** and **Web Server Access Management** tabs.

6. Click **OK**.

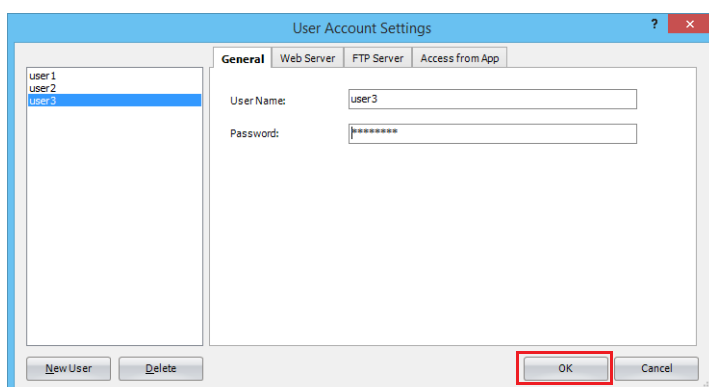


This concludes creating multiple user accounts.

■Deleting a Created User Account


• Operation procedure

1. Select the user account on the list and click **Delete**.


A confirmation message is displayed.

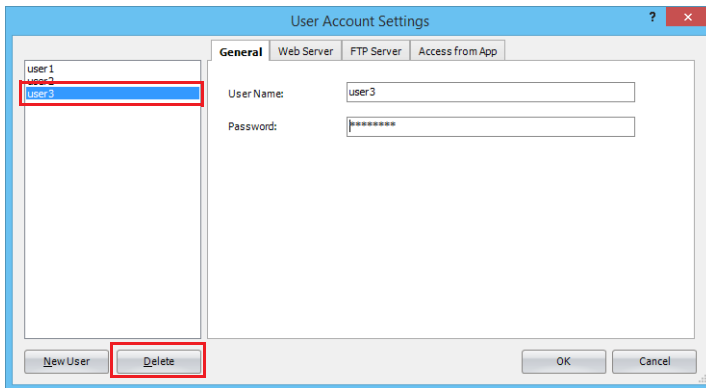

2. Click **OK**.

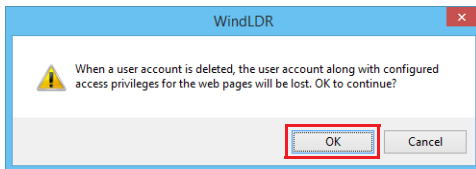

3. Click **OK**.

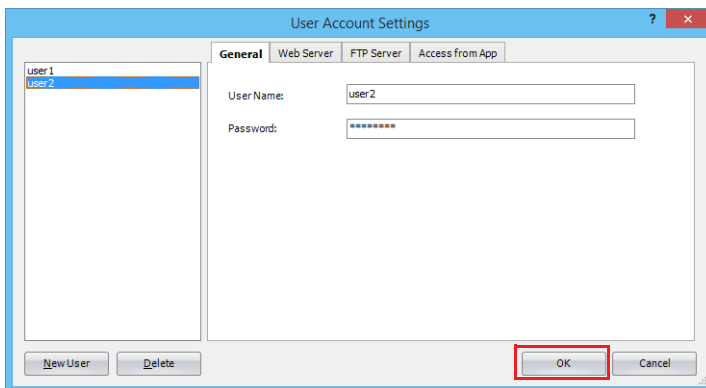

This concludes deleting a user account.

System Web Page

The system web pages consist of four web pages (PLC Status, Batch Monitor, Custom Monitor and LCD Monitor page).

PLC Status

In the PLC status page, the FC6A Series MICROSmart status, such as the system program version or scan time, can be confirmed. You can also run or stop the FC6A Series MICROSmart using the Run/Stop button.

IDEC Think Automation and beyond...

- [PLC Status](#)
- [Batch Monitor](#)
- [Custom Monitor](#)
- [LCD Monitor](#)

MICROSmart System Status

(1) System Information

Item	Value
PLC Type	FC6A-C40
System Program Version	1.00

(2) Operating Status

Item	Value
Run / Stop Status	<input type="button" value="Stop"/>
Scan Time (Current)	1ms
Scan Time (Maximum)	2ms
Battery Voltage	3182mV
General Error Code	0000

(3) Calendar / Clock

Item	Value
Clock (yy/mm/dd/DoW/hh/mm/ss)	2015/12/02 (Wed) 15:56:58

(4) Network Settings

Item	Value
MAC Address	00-03-7b-f0-16-5f
IP Address	192.168.1.5
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
Preferred DNS Server	0.0.0.0
Alternate DNS Server	0.0.0.0

(5) Connection Settings

Item	Value
Connection1 - Maintenance Communication Server	0.0.0.0
Connection2 - Maintenance Communication Server	0.0.0.0
Connection3 - Maintenance Communication Server	0.0.0.0
Connection4 - Maintenance Communication Server	0.0.0.0
Connection5 - Maintenance Communication Server	0.0.0.0
Connection6 - Maintenance Communication Server	0.0.0.0
Connection7 - Maintenance Communication Server	0.0.0.0
Connection8 - Maintenance Communication Server	0.0.0.0

For details about web server, see FC6A User's Manual - Communication Volume.

The following data can be confirmed on the PLC status page:

(1) System Information

Type number and system program version of the FC6A Series MICROSmart can be confirmed.

(2) Operating Status

Run/Stop, scan time, and error code can be confirmed. By clicking on the button in the run/stop status, the FC6A Series MICROSmart can be started or stopped.

(3) Calendar/Clock

The time information obtained with SNTP can be checked here.

(4) Network Settings


The network settings of the FC6A Series MICROSmart can be confirmed.

(5) Connection Settings

The IP addresses of the devices with which the FC6A Series MICROSmart communicates. The IP addresses of the client devices that are accessing the server ports are shown for the **Maintenance Communication Server** and the **Server Connections**. The IP addresses of the remote hosts to which the FC6A Series MICROSmart communicates are shown for the **Client Connections**. For the Plus CPU module, the IP addresses of the remote hosts on connections 1 to 16 are displayed.

Batch Monitor

In the batch monitor, 200 consecutive data registers can be monitored and controlled with the specified data type. For details on data type, see "Data Type" on page 13-32.

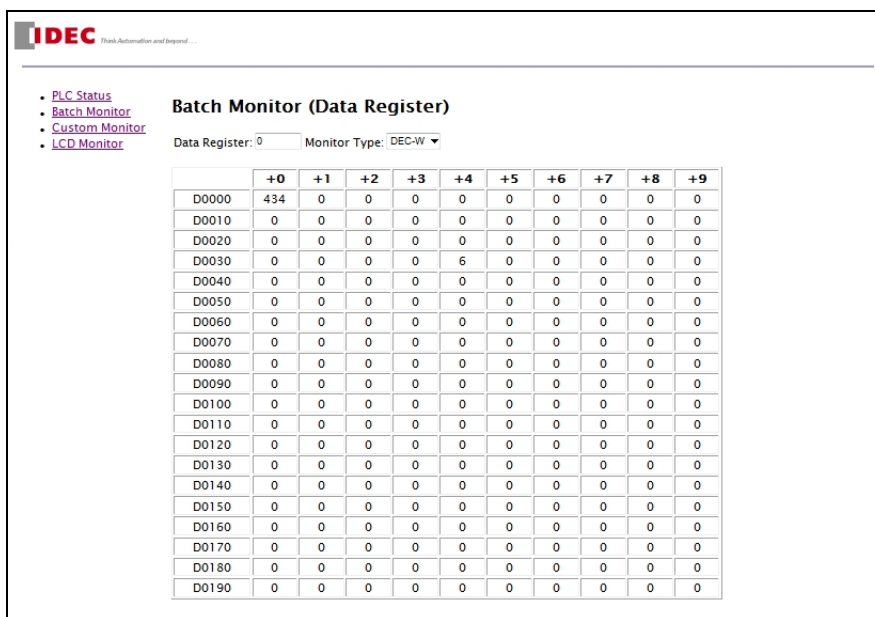

• **Operation procedure**

1. In **Device Number**, specify the device number to monitor.
200 consecutive data registers starting with the specified data register are monitored. The valid device numbers are as follows. If an invalid value is entered or if the last device of the 200 consecutive data registers is out of the range, the value is corrected to a valid value automatically.

CPU Module Type	Device Address Range
All-in-One CPU module	0000 to 7800
	8000 to 8300
	10000 to 55800
Plus CPU module	0000 to 7800
	8000 to 8700
	10000 to 61800
	70000 to 269800

2. Select the **Monitor Type** to display the data registers in the desired format.
Data register values are shown in the format specified by the monitor type. See the web data type for the available data types.
3. Click on a cell in which data register value is shown.
A dialog box to write a data is shown. The entered value is written to the FC6A Series MICROSmart.

Custom Monitor

In the custom monitor, a maximum of 30 devices and corresponding data types can be specified to monitor and control. For details on data type, see "Data Type" on page 13-32.

• [PLC Status](#)
• [Batch Monitor](#)
• [Custom Monitor](#)
• [LCD Monitor](#)

Custom Monitor

Enter data register/internal relay and select monitor type to monitor.


No.	Device Address	Type	Value
1	D0000	DEC-W ▼	434
2	D0004	DEC-H ▼	6
3		DEC-W ▼	
4		DEC-W ▼	
5		DEC-W ▼	
6		DEC-W ▼	
7		DEC-W ▼	
8		DEC-W ▼	
9		DEC-W ▼	
10		DEC-W ▼	
11		DEC-W ▼	
12		DEC-W ▼	
13		DEC-W ▼	
14		DEC-W ▼	
15		DEC-W ▼	
16		DEC-W ▼	
17		DEC-W ▼	
18		DEC-W ▼	
19		DEC-W ▼	
20		DEC-W ▼	
21		DEC-W ▼	
22		DEC-W ▼	
23		DEC-W ▼	
24		DEC-W ▼	
25		DEC-W ▼	
26		DEC-W ▼	
27		DEC-W ▼	
28		DEC-W ▼	
29		DEC-W ▼	
30		DEC-W ▼	

• Operation procedure

1. Enter the device (type and number) in the **Device Address**.
"D" (data register) or "m" (internal relay) can be specified. Specify data device number in decimal, such as D2058 or m0112.
2. Select the **Type** to display the corresponding device in the desired format.
Data registers or internal relays values are shown in the format specified by the monitor type. See the web data type for the available data types.
3. Click the monitored data that is displayed under **Value**.
A dialog box to write a data is shown. The entered value is written to the FC6A Series MICROSmart.

LCD Monitor

In the LCD monitor, the HMI module screen can be monitored. The HMI module can also be operated by clicking on the displayed buttons and shortcuts. This page can be displayed only when using the HMI-Ethernet port of the HMI module.

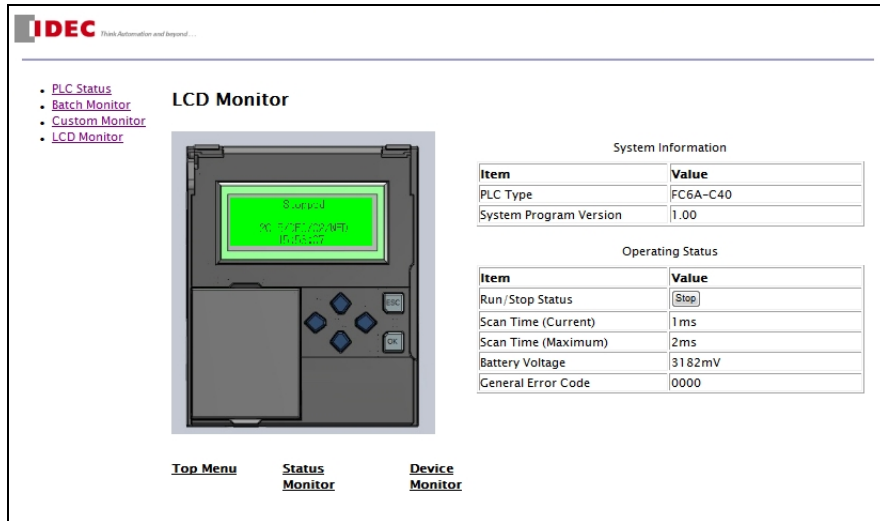

• Operation procedure

The monitoring procedure is as follows.

1. The menus and messages displayed on the HMI module LCD are displayed on this page.
2. Click a button to perform the same operation on the HMI module as when the HMI module's own button is pressed.

Data Type

On the batch monitor page and the custom monitor page, you can configure the type of value to be displayed when displaying the value of the data register or the status of the internal relay, and the type of value to be input to the data register or the internal relay. The following data types can be specified in batch monitor, custom monitor.

Data Type	Description
DEC-W	Word (Decimal value)
DEC-I	Integer (Decimal value)
DEC-D	Double Word (Decimal value)
DEC-L	Long (Decimal value)
DEC-F	Float (Decimal value)
HEX-W	Word (Hexadecimal value)
HEX-D	Double Word (Hexadecimal value)
BIN-B	Binary


For details on Word, Integer, Double Word, Long and Float, see Chapter 3 "Data Type" in the "FC6A Series MICROSmart Ladder Programming Manual".

User Web Pages

You can create web pages with a high degree of freedom by importing web pages (user web pages) freely created using HTML or JavaScript.

User Web Page Tree Operations

The User Web Page tree can be built by performing the following operations on user web page items on the Project window and files and folders that are registered as web pages.

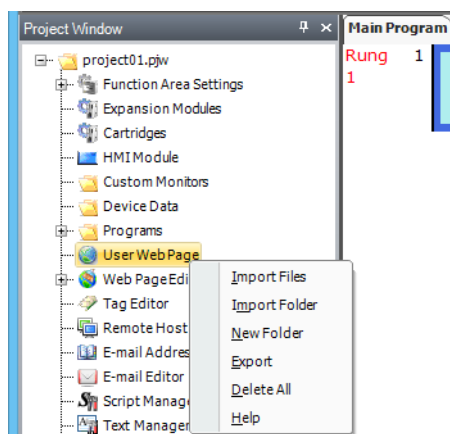

Creating a Web Page Tree

The web page tree is created on the Project window.

The following procedure describes an example of creating a web page tree with the following structure.

Web page tree structure


page1.html
Folder/page2.html

Before this procedure, create "page1.html" and "page2.html" that will be displayed on the FC6A Series MICROSmart.


• Operation procedure

1. Right-click **User Web Page** and click **Import Files**.

The **Open** dialog box is displayed.

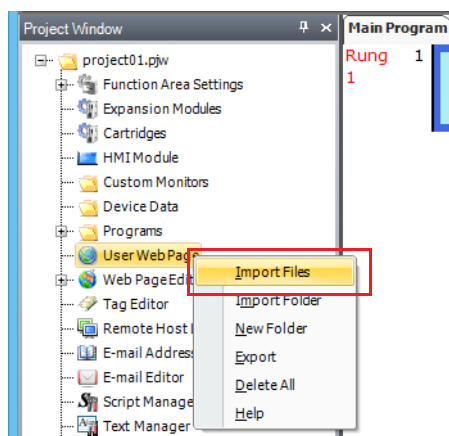


- 2. Select "page1.html" and click **Open**.

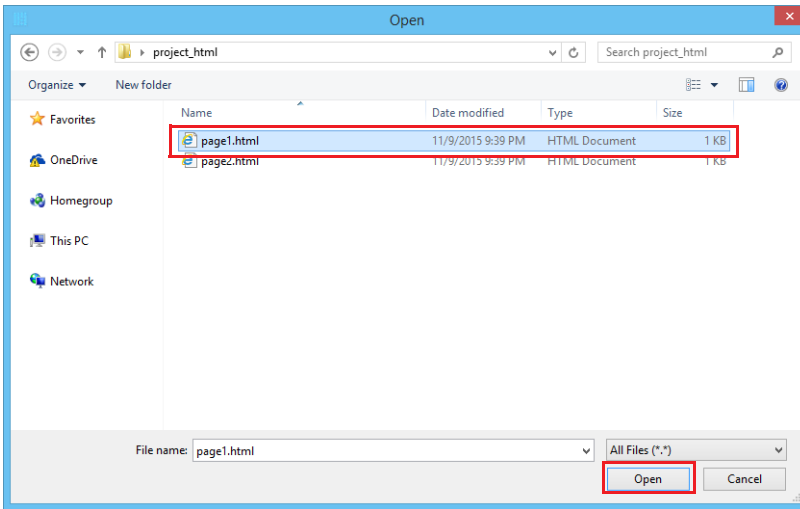


- 3. Right-click **User Web Page** and click **New Folder**.

The **New Folder** dialog box is displayed.

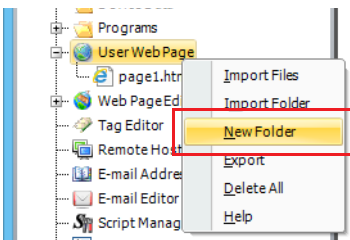

- 4. Enter "Folder" as the name of the folder to create and click **OK**.


The folder titled "Folder" is created in **User Web Page**.

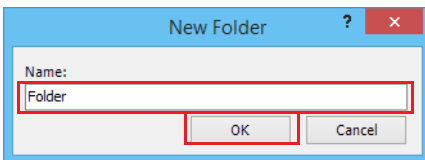


If you want to rename the folder, right click the folder and click **Rename Folder** to change the folder name.

- 5. Right-click **Folder** created in step 4 and click **Import Files**.


The **Open** dialog box is displayed.

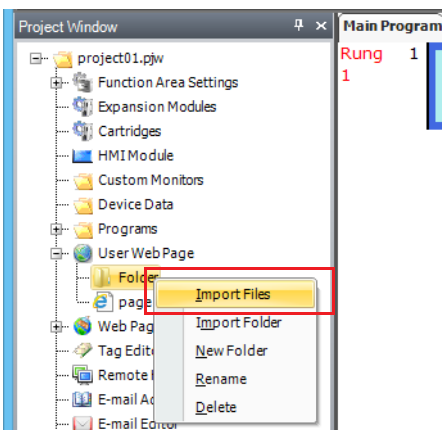

6. Select "page2.html" and click **Open**.

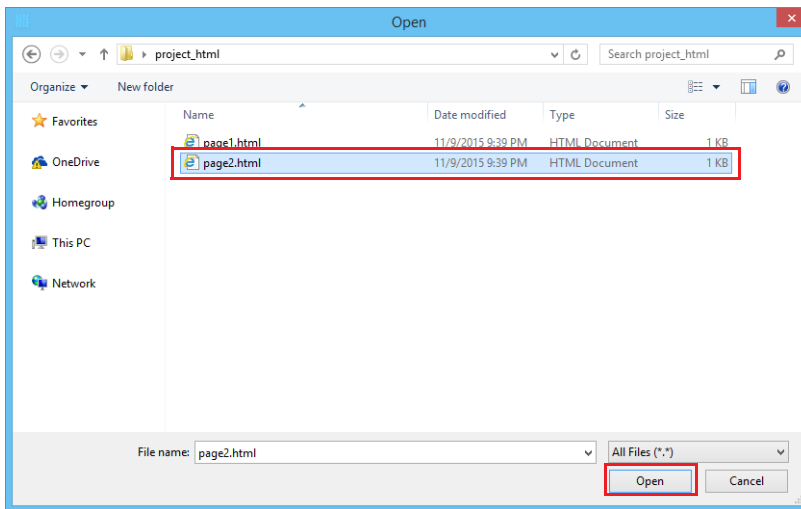

The following is displayed in the Project Window.

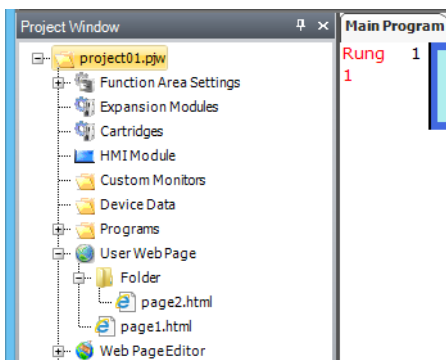

Web Page Tree Import

If you already have an HTML file tree to use for building the tree, that entire tree can be imported and added to the user web pages.

In the Project window, right-click **User Web Page** or a folder under **User Web Page** and click **Import Folder**. A dialog box is displayed. Select the folder that contains the web page tree to import, and all of the files under the set folder will be imported.

Web Page Tree Export


You can rebuild the user web page tree or change files by exporting the user web page data.

In the Project window, right-click **User Web Page** and click **Export**. A dialog box is displayed. Set the folder where the files will be exported, and the user web page data will be exported to that folder.

Deleting User Web Pages

The web page tree is deleted on the Project window.


The following procedure describes an example of deleting "page33.html" and "Folder44" from the web page tree.

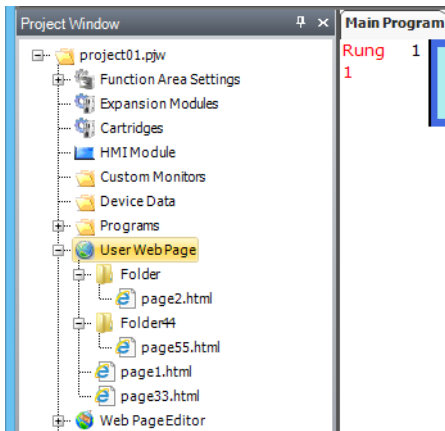

• **Operation procedure**


1. Right-click "page33.html" and click **Delete**.

A delete confirmation message is displayed.

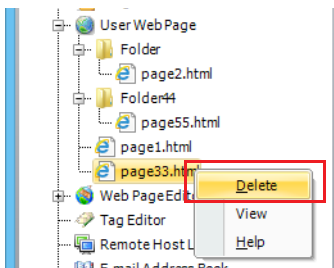


2. Click **OK**.

"Page33.html" is deleted.

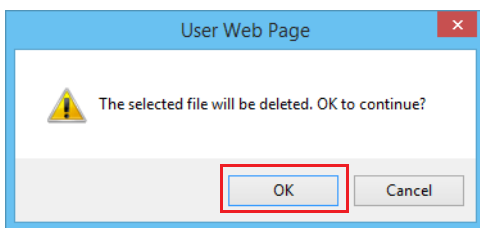


3. Right-click "Folder44" and click **Delete**.

A delete confirmation message is displayed.

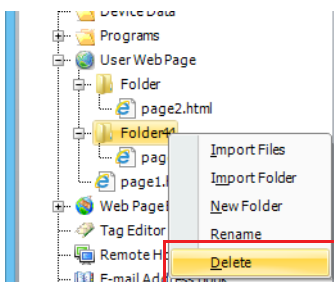


4. Click OK.

All of the files and folders under "Folder44" are deleted.

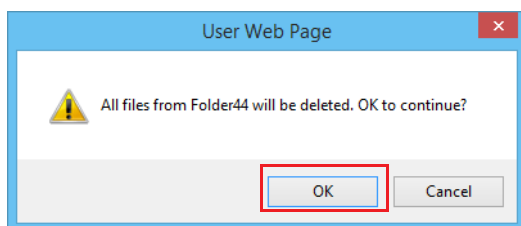**Notes:**

- To delete all user web pages, right-click **User Web Page** in the Project window and click **Delete All**. The delete confirmation message is displayed. Click **OK** to delete all registered files and folders.

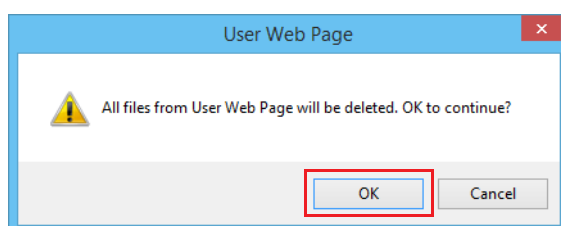

- Use UTF-8 as the encoding for all htm and html files that will be imported as user web pages. Separately back up all files on the PC that will be imported into WindLDR. The operation of the web browser may change due to the type and version of the web browser. Fully validate operation using the web browser on the device that will actually be used to access the web server.

Monitor Function

When a user web page contains a string of a specific format (metacharacters), the string is replaced with the value of a data register or the status of an internal relay and displayed. Select the **Enable Data Register Monitoring** check box to use this function, under **Web Server Settings** in the **Ethernet Port 1** of the **Function Area Settings** dialog box or in **Web Server** tab of the **HMI Module Configuration** dialog box.

Note: When converting a program in WindLDR, the following script elements are added in the head elements of the imported htm/html files.

```
<script type="text/javascript" src="/system/lib/jquery.js"></script>
<script type="text/javascript" src="/system/lib/idec.js"></script>
<script type="text/javascript" src="/system/lib/idec_glib.js"></script>
<script type="text/javascript" src="/system/lib/idec_tag_start.js"></script>
```

Metacharacter Format

Data Register Value

{{Read/write type,Device,Device number,Driver number,Network number,Data type,Maximum size}}

Parameter	Description
Read/write type	Set R or W. When R is set, the value is read only. When W is set, the value can also be written.
Device	Set the device to monitor. The device that can be set is D (data register).
Device number	Set the device number to monitor as a decimal value.
Driver number	The driver number. Set to 0.
Network number	The network number. Set to 0.
Data type	Set the data type*1
Maximum size	When the data type is numeric type, this setting is not required. When the data type is character string type, set the maximum size in bytes to be read or written. The minimum value is 1 and the maximum value is 63.

*1 Set the data type from the following.

Type	Data type	Description
Numeric Type	DEC-W	Word (Decimal value)
	DEC-I	Integer (Decimal value)
	DEC-D	Double Word (Decimal value)
	DEC-L	Long (Decimal value)
	DEC-F	Float (Decimal value)
	HEX-W	Word (Hexadecimal value)
	HEX-D	Double Word (Hexadecimal value)
	BIN-B	Binary
Character String Type	STR_ASCII	ASCII string
	STR_HOSTNAME	ASCII string
	STR_EMAILADR	ASCII string
	STR_PASSWORD	ASCII string

For details on Word, Integer, Double Word, Long, and Float, see Chapter 3 "Data Type" in the "FC6A Series MICROSmart Ladder Programming Manual".

Note:

- When W (Write) is set in **Read/write type** and you click on the value in the web browser, the write dialog box is displayed, and you can write a value to the device.
- When communication with the Plus CPU module or HMI module is not successful, or when try to get data for a non-existent device number, the metacharacter is replaced with a - (hyphen).

When a data type of character string type is set in **Data type**, reading and writing are processed in word units, in the order of high-order byte and low-order byte.

When reading, the data from the high-order byte of the set device to the terminating character NULL (0x00) are read, or the data from the high-order byte of the set device to the data of the size set in **Maximum size** are read.

When writing, **Maximum size** / 2 words (rounded up to the nearest whole number) from the high-order byte of the set device are written. The end of the input string are filled with the terminator NULL (0x00).

Note:

- When W (Write) is set in **Read/write type** and STR_HOSTNAME is set in **Data type**, the writing process is executed only when the string entered in the write dialog box is in the correct format as a host. The format check is executed at the start of the writing process.
- When W (Write) is set in **Read/write type** and STR_EMAILADR is set in **Data type**, the writing process is executed only when the string entered in the write dialog box is in the correct format as an e-mail address. The format check is executed at the start of the writing process.
- When STR_PASSWORD is set in **Data type**, the value of the data register is displayed in hidden type. The characters used in hidden type vary in a web browser.

Internal relay status

{{Read/write type,Device,Device number,Driver number,Network number,Data type,OFF data,ON data}}

Parameter	Description
Read/write type	Set R or W. When R is set, the value is read only. When W is set, the value can also be written.
Device	Set the device to monitor. The device that can be set is m (internal relay).
Device number	Set the device number to monitor as a decimal value.
Driver number	The driver number. Set to 0.
Network number	The network number. Set to 0.
Data type	Set the data type ^{*1}
OFF data	When BIT_FORM is set in Data type , set the string to be displayed when the set internal relay is off. When BIT is set in Data type , set the image to be displayed when the set internal relay is off. Set the image by file name and set the relative path to the folder where this user web page is located.
ON data	When BIT_FORM is set in Data type , set the string to be displayed when the set internal relay is on. When BIT is set in Data type , set the image to be displayed when the set internal relay is on. Set the image by file name and set the relative path to the folder where this user web page is located.

*1 Set the data type from the following.

Data type	Description
BIT_FORM	The status of a bit device is displayed as a string.
BIT	The status of a bit device is displayed as an image.

Note:

- When W (Write) is set in **Read/write type** and BIT_FORM is set in **Data type**, the button for the form is displayed. The on/off status of the internal relay is displayed on the button. You can toggle the internal relay on and off by clicking the button.
- When W (Write) is set in **Read/write type** and BIT is set in **Data type**, you can toggle the internal relay on and off by clicking on the image.
- When communication with the Plus CPU module or HMI module is not successful, or when try to get data for a non-existent device number, the metacharacter is replaced with a - (hyphen).

Example:

Description example	Description
{{R,m,123,0,0,BIT_FORM,BITOFF,BITON}}	When M0123 is off, "BITOFF" is displayed. When M0123 is on, "BITON" is displayed.
{{R,m,123,0,0,BIT,img/BIT_IMG_OFF.jpg,img/BIT_IMG_ON.jpg}}	When M0123 is off, the image (BIT_IMG_OFF.jpg) in the img folder is displayed. When M0123 is on, the image (BIT_IMG_ON.jpg) in the img folder is displayed.

Note: When saving user web pages to the SD memory card, even if a folder above the WEBPAGE folder is set in **OFF data** and **ON data**, the WEBPAGE folder is assumed to be set.

■ Cautions on using metacharacters

All strings between "{" and "}" are recognized as metacharacters. Do not put any extra spaces, line feed characters, or strings like HTML tag in this part.

Graph Format

Bar Graph (Vertical)

When the monitor function is enabled and the div tag and parameters are coded on the HTML file, it will be automatically converted to a JavaScript request and the values of the data registers acquired via CGI will be displayed in a vertical bar graph.

To draw a vertical bar graph, first set the id attribute to a string that indicates a unique ID for each graph, set the data-graph attribute to "vbar" that indicates the type of data, and code the parameters in the div tag.

The parameters that can be set are as follows. If the default value of the parameter is acceptable, it does not need to be set.

device	: The device. Set this to "D" (data register).
address	: The device number. Set this as a numeric value.
driver	: The driver number. Set this to 0.
net_no	: The network number. Set this to 0.
format	: The web data type string.
width	: The width of the div border in pixels. The default value is 300.
height	: The height of the div border in pixels. The default value is 300.
line_col	: The line color of the div border. The default value is "#000000".
barvgutter	: The vertical space from the div border to the graph in pixels. The default value is 30.
barwidth	: The width of the graph in pixels. The default value is 20.
gutter	: The space between graphs in pixels when displaying multiple graphs. The default value is 20.
type	: The shape of the ends of the graph. Select "square", "round", "sharp", or "soft". The default setting is "square".
scalewidth	: The width of the scale in pixels. The default value is 5.
labelvgutter	: The vertical space from the graph where the label will be displayed in pixels. The default value is 20.
labelhgutter	: The horizontal space from the graph where the label will be displayed in pixels. The default value is 30.
bars[]	: An array of parameters that configures each graph. Code the parameters for each array in { } and separate each array element with ",".


The parameters that can be set as an element of `bars[]` are as follows. If the default value of the parameter is acceptable, it does not need to be set.

`min_val` : The minimum value of the graph. This parameter is required.
`max_val` : The maximum value of the graph. This parameter is required.
`label` : The label name. The default is a string that combines the device and device number.
`back_col` : The background color of the graph. The default value is "#FFFFFF".
`front_col` : The foreground color of the graph. The default value is a color that differs for each element.
`scale_on` : This parameter sets whether or not the graph has a scale. The default setting is false (no scale).
`scale_lbl_on` : This parameter sets whether or not there is a label for the scale on the graph. The default setting is false (no label).

When the `div` tag is coded as follows, two vertical bar graphs are displayed using the data in double words D2040 and D2042 (decimal).

```
<div id="div11" data-graph="vbar">
```

```
device:"D", address:2040, driver:0, net_no:0, format:"DEC-D",
width:300, height:300, line_col:"#000000",
barvgutter:30, barwidth:20,
gutter:20, type:"square", scalewidth:5,
bars:[
{
min_val:0, max_val:100, label:"dev A",
back_col:"#FFFFFF", front_col:"#0000FF",
scale_on:true, scale_lbl_on:true
},
{
min_val:0, max_val:100, label:"dev B",
back_col:"#FFFFFF", front_col:"#FF0000",
scale_on:false, scale_lbl_on:false
}
]
</div>
```

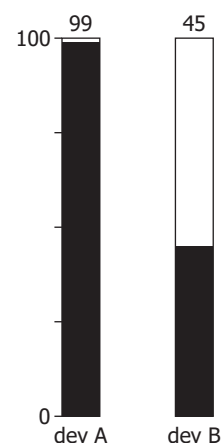

Bar Graph (Horizontal)

When the monitor function is enabled and the `div` tag and parameters are coded on the HTML file, it will be automatically converted to a JavaScript request and the values of the data registers acquired via CGI will be displayed in a horizontal bar graph. To draw a horizontal bar graph, first set the `id` attribute to a string that indicates a unique ID for each graph, set the `data-graph` attribute to "hbar" that indicates the type of data, and code the parameters in the `div` tag.

The parameters that can be set are as follows. If the default value of the parameter is acceptable, it does not need to be set.

`device` : The device. Set this to "D" (data register).
`address` : The device number. Set this as a numeric value.
`driver` : The driver number. Set this to 0.
`net_no` : The network number. Set this to 0.
`format` : The web data type string.
`width` : The width of the `div` border in pixels. The default value is 300.
`height` : The height of the `div` border in pixels. The default value is 300.
`line_col` : The line color of the `div` border. The default value is "#000000".
`barhgutter` : The horizontal space from the `div` border to the graph in pixels. The default value is 30.
`barwidth` : The width of the graph in pixels. The default value is 20.
`gutter` : The space between graphs in pixels when displaying multiple graphs. The default value is 20.
`type` : The shape of the ends of the graph. Select "square", "round", "sharp", or "soft". The default setting is "square".
`scalewidth` : The width of the scale in pixels. The default value is 5.
`labelvgutter` : The vertical space from the graph where the label will be displayed in pixels. The default value is 20.

13: WEB SERVER

- labelgutter : The horizontal space from the graph where the label will be displayed in pixels.
The default value is 30.
- bars[] : An array of parameters that configures each graph. Code the parameters for each array in { } and separate each array element with ",".

The parameters that can be set as an element of bars[] are as follows. If the default value of the parameter is acceptable, it does not need to be set.

- min_val : The minimum value of the graph. This parameter is required.
- max_val : The maximum value of the graph. This parameter is required.
- label : The label name. The default is a string that combines the device and device number.
- back_col : The background color of the graph. The default value is "#FFFFFF".
- front_col : The foreground color of the graph. The default value is a color that differs for each element.
- scale_on : This parameter sets whether or not the graph has a scale. The default setting is false (no scale).
- scale_lbl_on : This parameter sets whether or not there is a label for the scale on the graph.
The default setting is false (no label).

When the div tag is coded as follows, two horizontal bar graphs are displayed using the data in double words D2040 and D2042 (decimal).

```
<div id="div21" data-graph="hbar">
  device:"D", address:2040, driver:0, net_no:0, format:"DEC-D",
  width:300, height:300, line_col:"#000000",
  barhgutter:30, barwidth:20,
  gutter:20, type:"square", scalewidth:5,
  bars:[
    {
      min_val:0, max_val:100, label:"dev A",
      back_col:"#FFFFFF", front_col:"#0000FF",
      scale_on:true, scale_lbl_on:true
    },
    {
      min_val:0, max_val:100, label:"dev B",
      back_col:"#FFFFFF", front_col:"#FF0000",
      scale_on:false, scale_lbl_on:false
    }
  ]
</div>
```



Trend Graph

When the monitor function is enabled and the div tag and parameters are coded on the HTML file, it will be automatically converted to a JavaScript request, and the values of the data registers acquired via CGI will be displayed in a trend graph.

To draw a trend graph, first set the id attribute to a string that indicates a unique ID for each graph, set the data-graph attribute to "trend" that indicates the type of data, and code the parameters in the div tag.

The parameters that can be set are as follows. If the default value of the parameter is acceptable, it does not need to be set.

device	: The device. Set this to "D" (data register).
address	: The device number. Set this as a numeric value.
driver	: The driver number. Set this to 0.
net_no	: The network number. Set this to 0.
format	: The web data type string.
width	: The width of the div border in pixels. The default value is 300.
height	: The height of the div border in pixels. The default value is 300.
line_col	: The line color of the div border. The default value is "#000000".
min_val	: The minimum value of the graph. This parameter is required.
max_val	: The maximum value of the graph. This parameter is required.
plot_num	: This parameter sets the number of plots of data. This parameter is required.
scale_col	: The color of the scale. The default value is "#000000".
x_val_col	: The color of the X-axis label. The default value is "#000000".
y_val_col	: The color of the Y-axis label. The default value is "#000000".
g_x	: The position to start drawing the graph border in the horizontal direction in pixels. The default value is 50.
g_y	: The position to start drawing the graph border in the vertical direction in pixels. The default value is 30.
g_width	: The horizontal width of the graph border in pixels. The default value is 200.
g_height	: The vertical of the graph border in pixels. The default value is 100.
g_line_col	: The color of the graph border. The default value is the same as line_col.
g_line_width	: The thickness of the graph border in pixels. The default value is 1.
g_back_col	: The background of the graph border. The default value is "#C0C0C0".
mode	: This parameter sets the data that will be truncated when the data exceeds the plot area. Select "one" (only one will be truncated), "half" (half of the entire amount will be truncated), or "all" (all will be truncated). The default setting is "all".
legend_gutter	: The width from the graph border to the legend in pixels. The default value is 30.
legend_margin_x	: The horizontal margin inside the legend in pixels. The default value is 10.
legend_margin_y	: The vertical margin inside the legend in pixels. The default value is 10.
legend_line_width	: The length of the line inside the legend in pixels. The default value is 20.
legend_line_gutter	: The vertical width in pixels when multiple lines are displayed inside the legend. The default value is 20.
legend_line_col	: The color of the lines inside the legend. The default value is the same as line_col.
legend_width	: The horizontal width inside the legend in pixels. The default value is 100.
line_width	: The initial value for the thickness of lines on the graph in pixels. The default value is 1.
marker_on	: The initial setting for whether or not to display markers on the graph. The default value is false (no markers).
marker_width	: The initial value for the size of markers on the graph in pixels. The default value is 3.
lines[]	: An array of parameters that configures each line. Code the parameters for each array in { } and separate each array element with ",".


13: WEB SERVER

The parameters that can be set as an element of lines[] are as follows. If the default value of the parameter is acceptable, it does not need to be set.

label	: The label name. The default is a string that combines the device type and device number.
front_col	: The foreground color of the line that can be set for each line. The default value is a color that differs for each element.
marker_col	: The marker color of the line. The default value is the same as front_col.
line_width	: The thickness of the line in pixels that can be set for each line. This parameter has priority over the initial value of line_width.
marker_width	: The size of the marker in pixels that can be set for each line. This parameter has priority over the initial value of marker_width.

When the div tag is coded as follows, the trend graph is displayed with 10 plots and markers using the data in double words D2040 and D2042 (decimal).

```
<div id="div31" data-graph="trend">
  device:"D", address:2040, driver:0, net_no:0, format:"DEC-D",
  width:400, height:300, line_col:"#000000",
  min_val:0, max_val:100, plot_num:10,
  line_width:3, marker_on:true, marker_width:5,
  lines:[
    {
      label:"dev A",
      front_col:"#0000FF"
    },
    {
      label:"dev B",
      front_col:"#FF0000"
    }
  ]
</div>
```

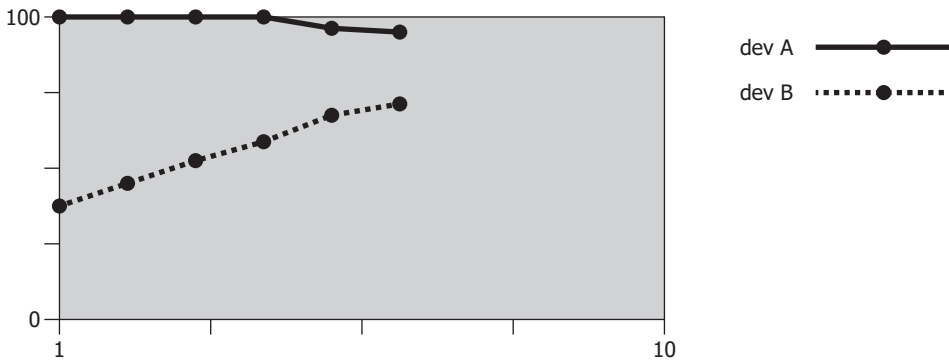

Notes:

Notes on Drawing Graphs

- The string between <div> and </div> that describes the graph is passed as a JavaScript program parameter. Note that when coding the div tag, the content can contain spaces and line breaks for formatting, but it cannot contain comments.
- If a numeric value will not be set as a parameter, enclose it with "".
- All parameters must be separated with ",". Do not put "," after the last parameter. The div tag will not be drawn as a graph if the parameter format is invalid.
- The manner in which the graph is displayed may differ according to the type of web browser.
- There may be a delay in updating the web browser display due to the update frequency and the number of data plots.

JavaScript Functions

When the monitor function is enabled, device data can be read and written using JavaScript functions.

The raw data obtained via CGI can be used and processed in a more complicated manner than that when using metacharacters. See the appendix for details about the CGI interface.

■ Read Device Data Function

`idec.device_read (device, address, length, driver, net_no)`

- `device` : Sets the device to read as a string.
Currently only D (data register) can be used.
- `address` : Sets the device number to read.
- `length` : Sets the size of the data from the start of address to read.
Set this as a decimal value between 1 and 64.
- `driver` : The driver number. Set this to 0.
- `net_no` : The network number. Set this to 0.

The return value is a hexadecimal numeric value in a string with the format "XXXX". If length is 2 or larger, "_" is inserted between items of data. The return value is "" if there was no response from the server or if the parameters are incorrect.

Note: The function is as follows when D2058 is 49910 (C2F6h) and D2059 is 59768 (E978h).

```
var raw_data = idec.device_read ("D", 2058, 2, 0, 0);
```

The variable `raw_data` will be "C2F6_E978" when the function normally terminates.

■ Write Device Data Function

`idec.device_write (device, address, length, driver, net_no, data)`

- `device` : Sets the device to write as a string. Currently only D (data register) can be used.
- `address` : Sets the device number to write.
- `length` : Sets the size of the data from the start of address to write. Set this as a decimal value between 1 and 64.
- `driver` : The driver number. Set this to 0.
- `net_no` : The network number. Set this to 0.
- `data` : Sets the data to write as a hexadecimal numeric value in a string. If length is 2 or larger, insert "_" between items of data.

The return value is true when the function normally terminates and false in all other cases.

Note: The function is as follows when writing 49910 (C2F6h) to D2058 and 59768 (E978h) to D2059.

```
var status_write = idec.device_write ("D", 2058, 2, 0, 0, "C2F6_E978");
```

The variable `status_write` is true when the function normally terminates.

Custom Web Pages

Using the web page editor of the tools provided with WindLDR, you can easily create web pages (custom web pages) according to your purpose and use. For details on creating custom web pages, see "Web Page Editor" on page 13-46.

Web Page Editor

Web Page Editor is used to create custom web pages that are downloaded to the FC6A Series MICROSmart.

Custom web pages that have been downloaded to the FC6A Series MICROSmart can be accessed with a web browser from a PC or other device, and the custom web pages can be displayed according to FC6A Series MICROSmart device values.

To use Web Page Editor, click the HMI module inserted into the module configuration area, click **Configure**, and in the **HMI Module Configuration** dialog box, select **Use Web Page Editor**.

 
The behavior of custom web pages according to the device values in FC6A Series MICROSmart can be checked without downloading the custom web pages to the FC6A Series MICROSmart by linking the WindLDR simulation function to the created custom web pages.

Creating Custom Web Pages


This section describes the procedure to create custom web pages in Web Page Editor.

A web page will be created that turns on output Q1 when input M0000 is on and input M0001 is off.

Components to place on the web page



Program to create in WindLDR

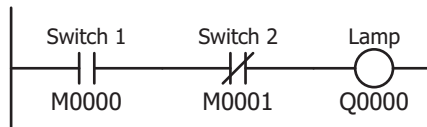

Note:


For details on devices, see "Devices" on page 2-1.

For details on instructions, see the "FC6A Series MICROSmart Ladder Programming Manual".

• **Operation procedure**


1. Create a program that turns on output Q1 when input M0000 is on and input M0001 is off.

For details, see Chapter 4 "Create Ladder Program" in the "FC6A Series MICROSmart User's Manual".

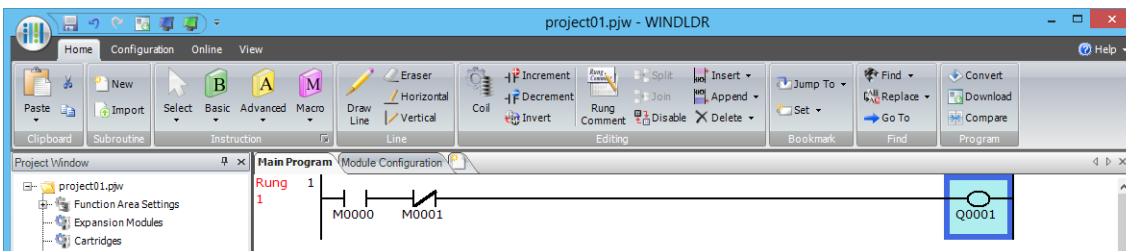


2. Double-click **Web Page Editor** in the Project window.


Web Page Editor starts.

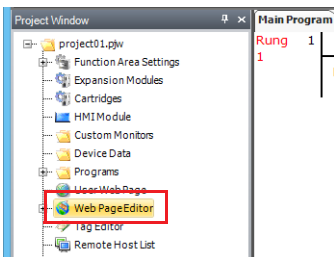

Note: If the **Windows Security Alert** dialog box is displayed, click **Allow access**.

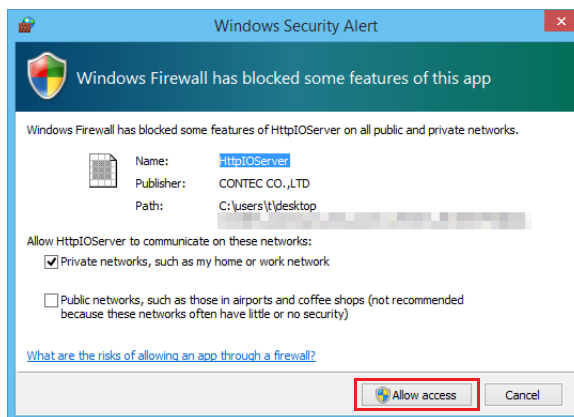


3. For the Web Page Editor **Mode**, click **Edit**.

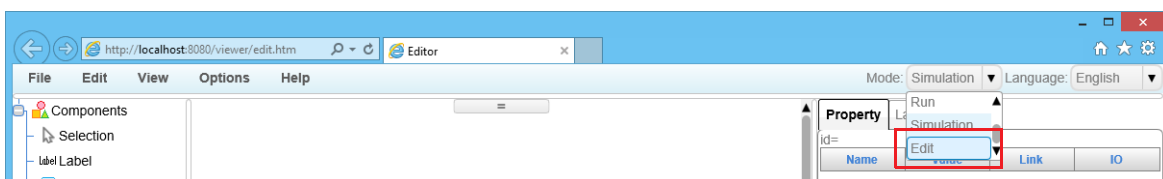


4. Place Switch 1 on the work area and set it to a normally open contact (M0000).

Select **Switch** in the **Components** list, and drag and drop it on the work area.


The switch will be placed on the area with the predefined size.

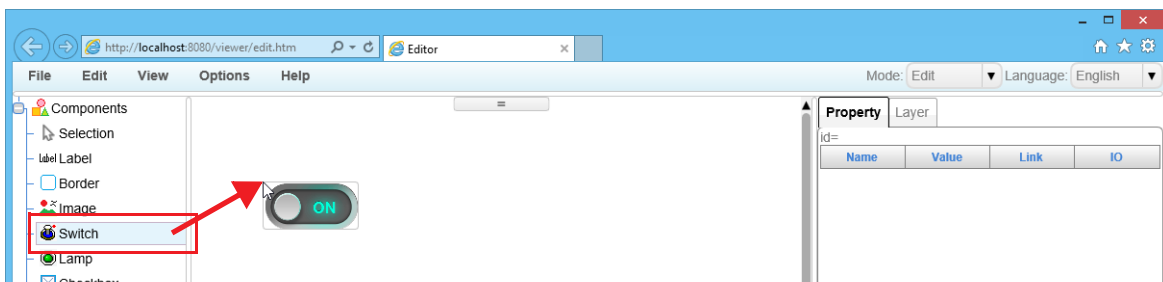

Note: To place a switch on the area with the desired size, click **Switch** in the **Components** list, and then drag the precision select mouse cursor on the work area.


5. Click the switch placed on the work area and on the **Property** tab, for **Link Box**, click .

The **Device Tree** dialog box is displayed.

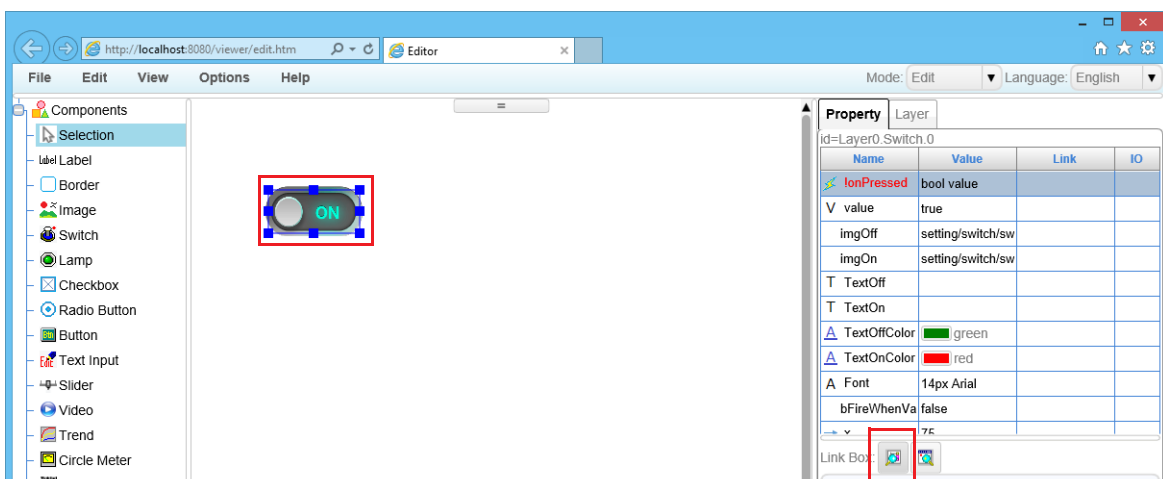

13: WEB SERVER


- Click the device address to set to Switch 1 and click **OK**.

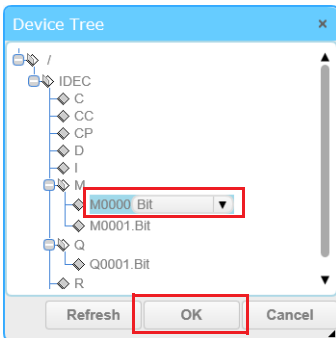

Notes:

- The devices that are used in WindLDR are displayed in the **Device Tree** dialog box.
- If the device address to set is not in the Device Tree, click **Cancel**, and then directly enter the device address in the text box for **Link Box** on the **Property** tab.


This sets Switch 1 to a normally open contact (M0000).

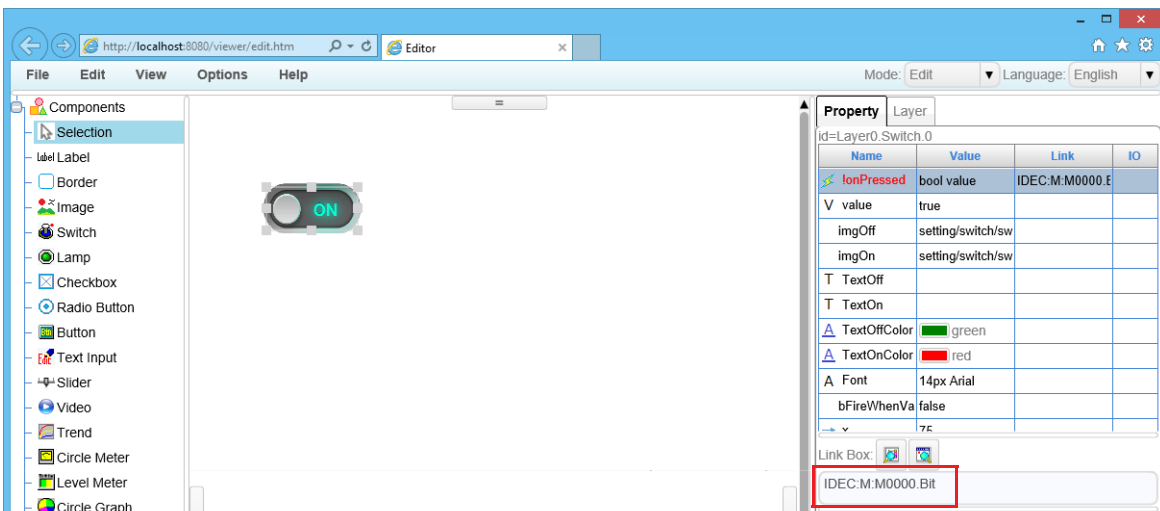

- Repeat steps 4 through 6 and set Switch 2 and the lamp.


- On the menu bar, click **File > Save page as**.


The **Save Page** dialog box is displayed.

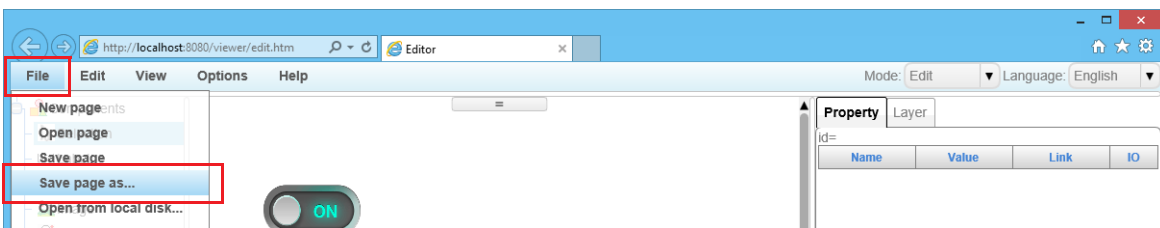

- Enter the file name in **Save Name**, specify the folder to save to, and click **OK**.

A confirmation message is displayed.

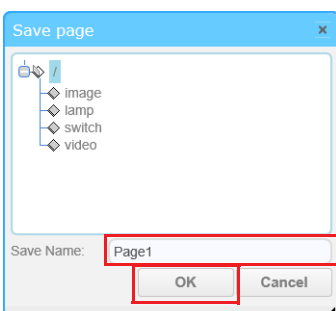


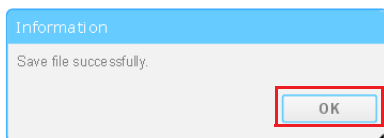10. Click **OK**.

This concludes creating a custom web page.

Notes:


- For details on Web Page Editor, refer to the Web Page Editor help that is displayed by clicking **Help > Help** on the menu bar.
- The created custom web page will be created in Web Page Editor on the Project window. Image files, video files, image files for switches, and image files for lamps that have been imported with custom web pages are displayed in their respective folders on the list. Double-clicking a created custom web page will start Web Page Editor and open that custom web page. The created custom web page can then be edited.

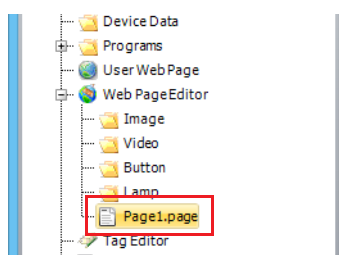**Checking Operation of Custom Web Pages**


This section describes the procedure to execute operation of the created custom web page in Web Page Editor to check its behavior.

• **Operation procedure**

1. On the WindLDR **Online** tab, click **Simulation**.

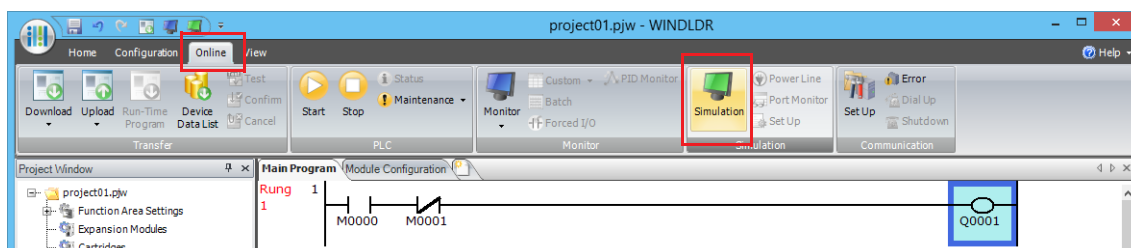


2. For the Web Page Editor **Mode**, click **Run**.

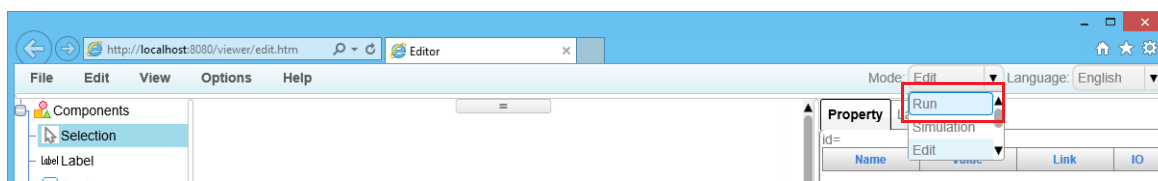


13: WEB SERVER

 
3. Check the following operation while turning Switch 1 and Switch 2 on and off.
- The lamp turns on when Switch 1 is on and Switch 2 is off



 - The lamp turns off when Switch 1 is off



 - The lamp turns off when Switch 2 is on



Note: The WindLDR program also turns on and off according to the status of Web Page Editor.

This concludes checking operation of the custom web page.

You can view the custom web page from a web browser if you download the user program in WindLDR to the FC6A Series MICROSmart after saving the created web page.

For detailed configuration methods, see "HMI Module Web Server" on page 13-22.


Log Data Integration on Custom Web Pages

Log data can be integrated on custom web pages created with Web Page Editor. The log data that can be integrated is as follows.

- Log data saved to the SD memory card with the DLOG (Data Log) instruction.

This section describes the operation procedure to reference log data saved to the SD memory card with the DLOG (Data Log) instruction from custom web pages created with Web Page Editor.

Component to place on the web page

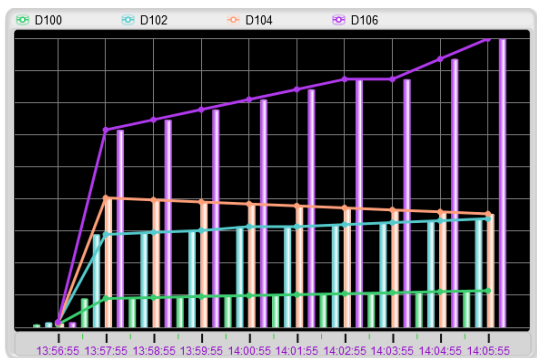


Program to create in WindLDR

DLOG	S1	D1	D2
	RESULT	M0100	D0100

Notes:

- For details on the DLOG (Data Log) instruction, see Chapter 25 "DLOG (Data Log)" in the "FC6A Series MICROSmart Ladder Programming Manual".
- Log data integration on custom web pages can be used only with internal memory on the Plus CPU module and the SD memory card inserted into the Plus CPU module. Log data cannot be integrated on custom web pages saved to the internal memory on the HMI module.
- Log data cannot be integrated on custom web pages if the separating character for log data in the CSV file format is set to semicolon (;) in the external memory device settings. For details on the external memory device settings, see Chapter 5 "Functions and Settings" in the "FC6A Series MICROSmart User's Manual".
- Web Page Editor has operation status graph, table, list, and drop-down list components that can be used as components for log data integration on custom web pages. Log data integration can also be set using these components.

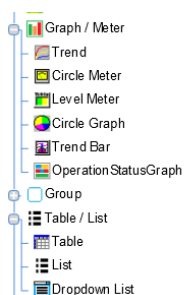


- Log data cannot be integrated on custom web page on Simulation of WindLDR.


13: WEB SERVER

• Operation procedure

1. Insert the DLOG instruction.

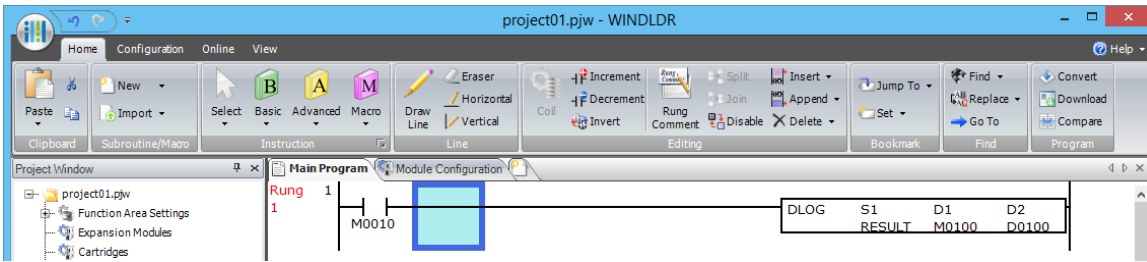



2. On the **Settings** tab, set the device addresses of the data to output to CSV file. The values of the set device addresses are displayed on the components integrated with the log data on the custom web pages.

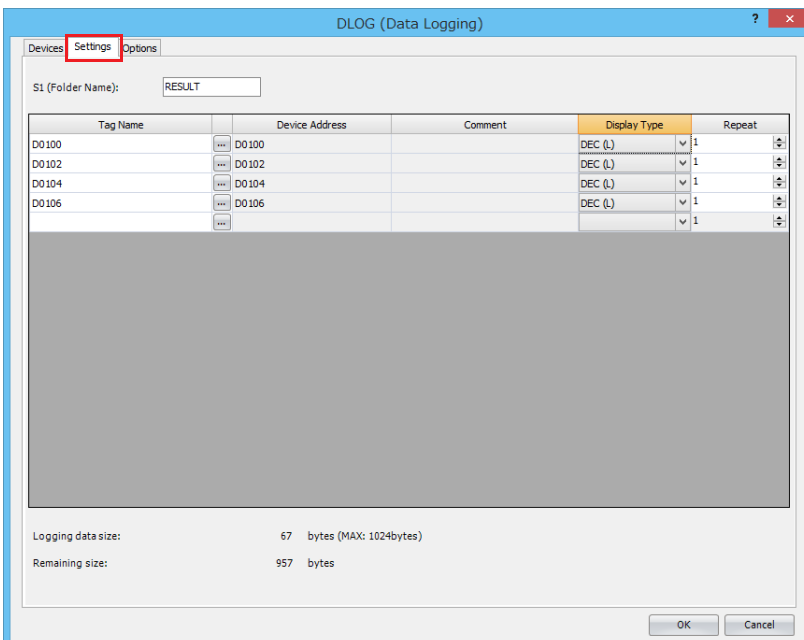

Note: To use the operation status graph component in the log data integration components on custom web pages, create a ladder program so the values of data output to the CSV file with the DLOG instruction match the input values of the operation status graph.

In this example, the value of the data that was output to the CSV file is output using the operation status graph component with the operation status as 0 ("Stop") and 1 ("Running").

Operation status graph

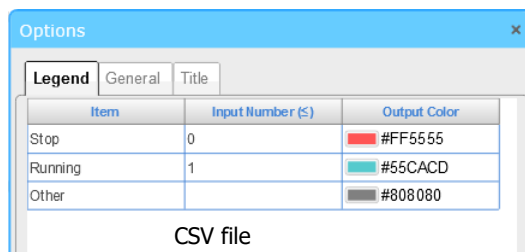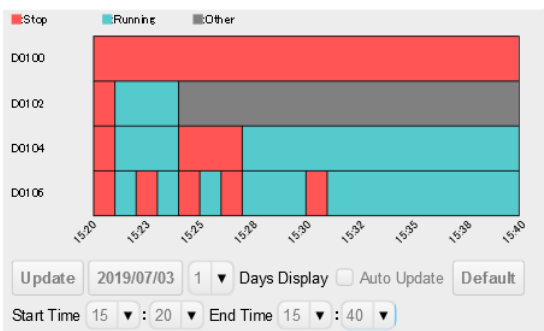

CSV file

#_date_time_	D0100	D0102	D0104	D0106
2019/7/3 15:18:01	0	0	0	0
2019/7/3 15:19:01	0	0	0	1
2019/7/3 15:20:01	0	0	0	0
2019/7/3 15:21:01	0	1	1	1
2019/7/3 15:22:01	0	1	1	0
2019/7/3 15:23:01	0	1	1	1
2019/7/3 15:24:01	0	2	0	0
2019/7/3 15:25:01	0	3	0	1
2019/7/3 15:26:01	0	4	0	0
2019/7/3 15:27:01	0	5	1	1
2019/7/3 15:30:15	0	6	1	0
2019/7/3 15:31:15	0	7	1	1

3. Select **Output only first line of file** in the **Header output**.

Under **Header format**, select **For web page editor** for **Label of date and time column**.

Select the **Store file path of csv file** check box, and specify the starting data register for storing the file path.

Store file path of csv file:

If this check box is selected, the graph will be displayed simply by setting a device address on **Link Box** of the trend bar component.

If this check box is cleared, the graph will not be displayed when the path to the CSV file is not directly specified in the properties of the trend bar component.

Output only first line of file:

If this check box is selected, this header is applied as the header on the X-axis of the trend bar component when the FC6A Series MICROSmart is changed from STOP to RUN. If this check box is cleared, the graph will not be displayed on the trend bar component even when the FC6A Series MICROSmart is changed from STOP to RUN.

Header format:

Label of date and time column:

If **For web page editor** is selected, this header is applied as the the header on the X-axis of the trend bar component.

If **Optional** is selected, the graph will not be displayed on the trend bar component.

Header output: If set to output the header, this header is applied as the header on the X-axis of the trend bar component.

If set to not output the header, the graph will not be displayed on the trend bar component.


There are no **Options** settings required for the trend bar component except the settings described above. For details on the **Options** settings, see Chapter 25 "DLOG (Data Log)" in the "FC6A Series MICROSmart Ladder Programming Manual".

Notes:


- To perform log data integration with Web Page Editor and display a non-ASCII strings, select **Unicode (UTF-8) with BOM** or **Unicode (UTF-8) without BOM** for **Character set**.
For **Unicode (UTF-8) with BOM**, the BOM values (0xEF 0xBB 0xBF) are output as the first 3 bytes of data.
For **Unicode (UTF-8) without BOM**, if the file is opened in a specific application, the characters may be unreadable because the application does not open the file as **UTF-8** data.
- To use the table, list, and drop-down list components, the content to set under **Common Settings** on the **Options** tab will vary depending on the properties that can be used with each component. For the properties that can be used with each component, refer to the Web Page Editor help that is displayed by clicking **Help > Help** on the menu bar of Web Page Editor.

13: WEB SERVER


4. Double-click **Web Page Editor** in the Project window.
Web Page Editor starts.

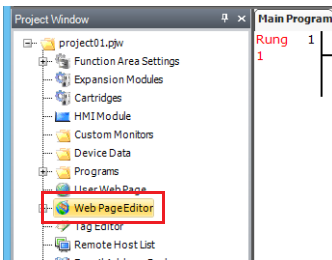

5. For the Web Page Editor **Mode**, click **Edit**.

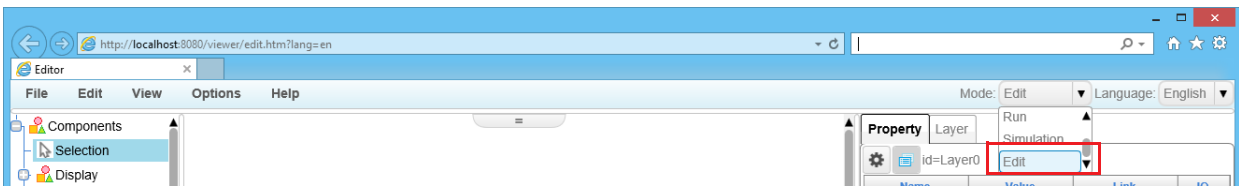


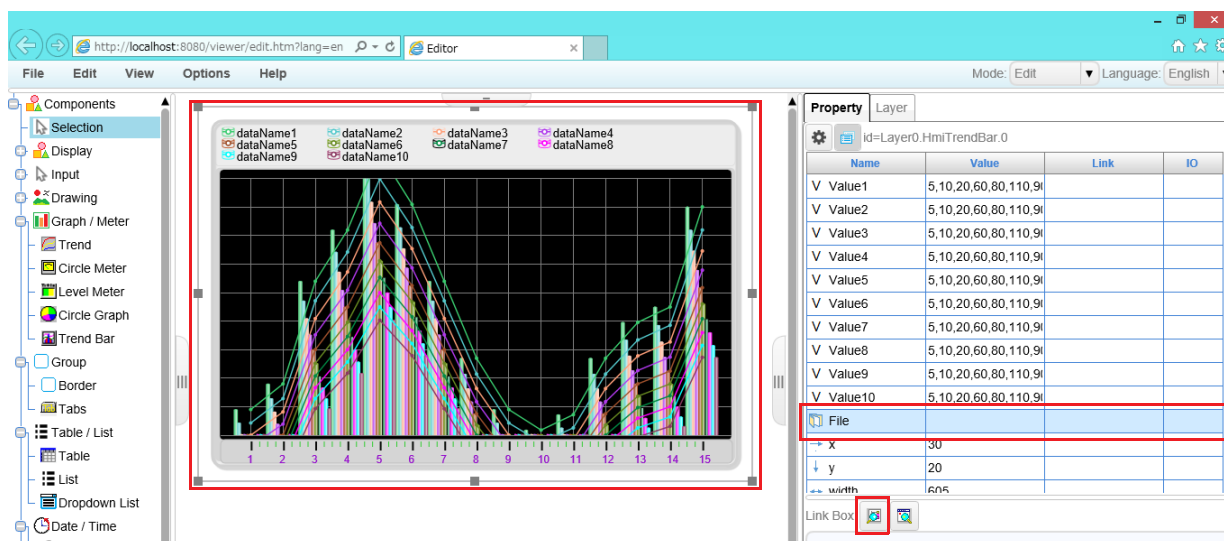
6. Place a trend bar on the work area and set the data register (D0100).
Select **Trend Bar** in the **Components** list, and drag and drop it on the work area.
The trend bar will be placed on the area with the predefined size.

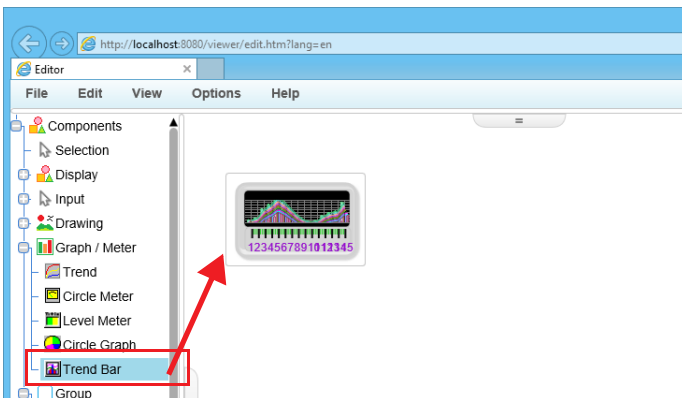


Notes:

- To place a trend bar on the area with the desired size, click **Trend Bar** in the **Components** list, and then drag the precision select mouse cursor on the work area.
- To use the table, list, and drop-down list components, select **Table**, **List**, or **Dropdown List**, and then drag and drop that component to the work area. For details on the table, list, and drop-down list components, refer to the Web Page Editor help that is displayed by clicking **Help** > **Help** on the menu bar.

7. Click the trend bar placed on the work area and on the **Property** tab, click **File**. Next, for **Link Box**, click . The **Device Tree** dialog box is displayed.



8. Click the device address to set to the trend bar and click **OK**.

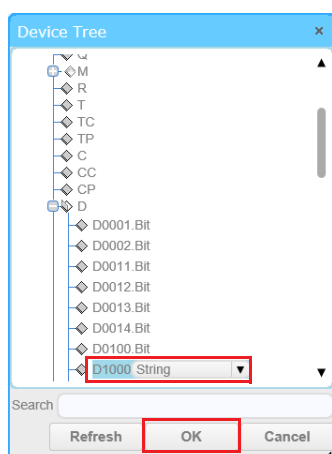


Notes:

- The devices that are used in WindLDR are displayed in the **Device Tree** dialog box.
- If the device address to set is not in the Device Tree, click **Cancel**, and then directly enter the device address in the variable link input area for **Link Box** on the **Property** tab.
- To specify the file path as the file property value, add "<D>" to the front of the folder name.
File path format:
<D>\Folder Name\CSV File Name
The DLOG instruction stores the path of the file being updated in the data register specified by **Store file path of csv file**.


9. Double-click the trend bar that has been placed in the area.
The trend bar **Options** dialog box is displayed.

10. On the **X-scaling** tab, under **X-scaling Type**, select **CSV File**.

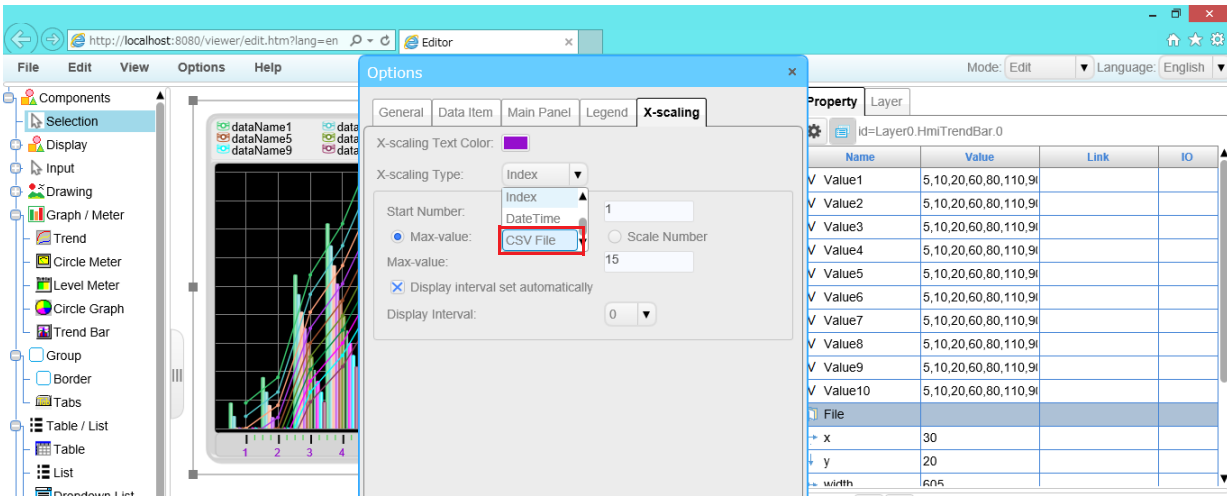


Note: In the **Options** dialog box, on the **General**, **Data Item**, **Main Panel**, and **Legend** tabs, the color, scale, data items, units, tool tips, legend, and other settings of components can be configured.


11. On the menu bar, click **File > Save page as**.
The **Save page** dialog box is displayed.

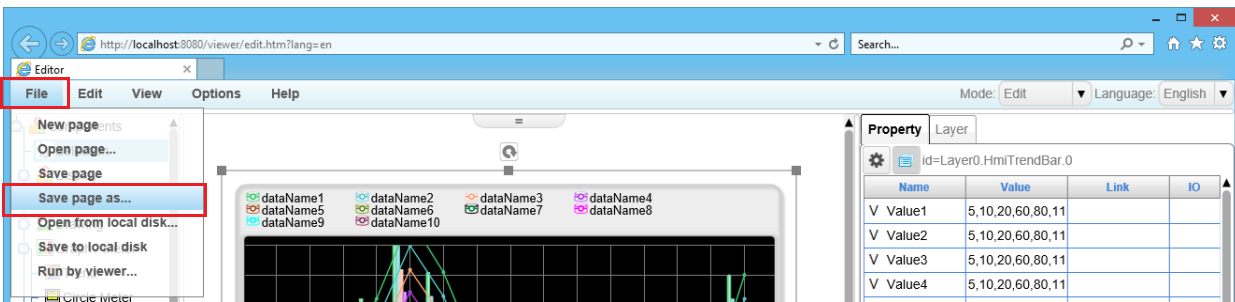

12. Enter the file name in **Save Name**, specify the folder to save to, and click **OK**.
A confirmation message is displayed.

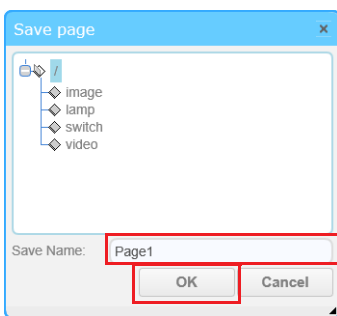


13. Click **OK**.

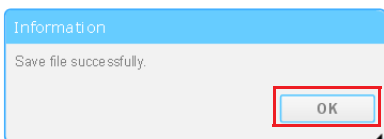

14. Download the user program to the Plus CPU module.
On the **Online** tab, in the **Transfer** group, click **Download**.
The **Download** dialog box is displayed.

15. Select the **Download web pages** check box.

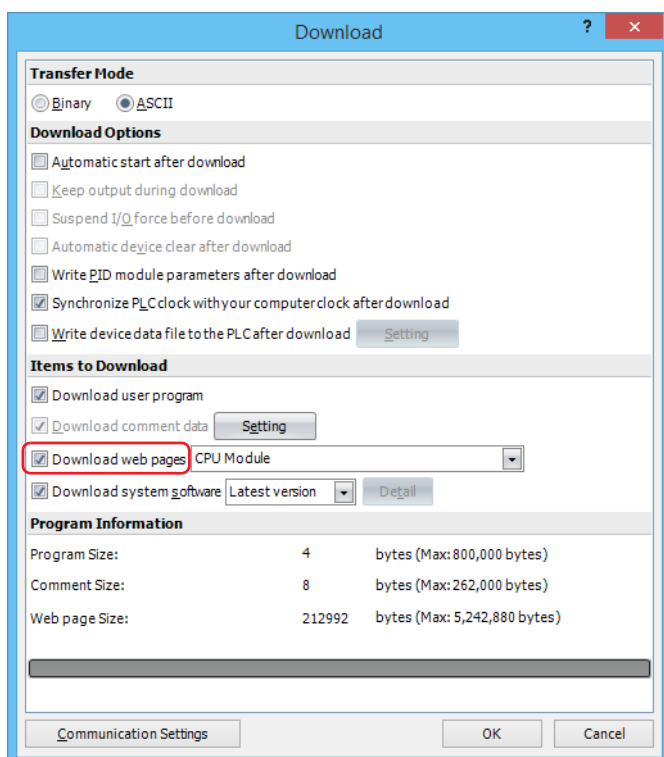


16. Select **CPU Module** or **CPU Module (SD Memory Card)** as the destination for saving the web pages.

Note: Web pages will not be downloaded when no SD memory card is inserted into the Plus CPU module but **CPU Module (SD Memory Card)** is selected.

17. Click **OK**.

The web pages will be downloaded to the selected save location.

When the following message appears, the download has completed successfully. Click **OK**.

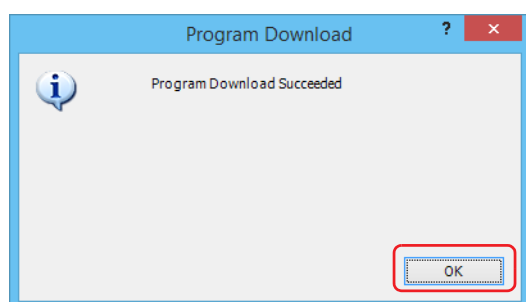

18. When the DLOG (Data Log) instruction is executed, a CSV file is saved to the SD memory card. The saved CSV file can be viewed as a graph from the custom web page.

Note: If the size of the CSV file is large, it may take some time until it is displayed on the graph on the web page.

Adjust the maximum size of the CSV file according to the conditions of the communication line.

For the configuration of the maximum log data file size, see Chapter 5 "Functions and Settings" in the "FC6A Series MICROSmart User's Manual".

CGI (Common Gateway Interface)

Plus CPU modules and HMI modules support CGI programs for reading and writing device data. This section describes the CGI formats.

Request Format (Reading Device Data)

Device data can be read from the Web server CPU module with the following format using the GET method.

```
/system/device_read.cgi?device=DEV&address=XXXX&length=XXXX&driver=XX&net_no=XX
```

The CGI parameters are as follows:

/system/device_read.cgi	: CGI file name
device	: Specify the device type of the target device using a character. "D" (Data Register) is supported.
address	: Specify the device number of the target device in hexadecimal.
length	: Specify the number of data registers to read in hexadecimal. The valid range is 1 to 64 (0001h to 0040h).
driver	: Reserved for the system. Specify "00".
net_no	: Reserved for the system. Specify "00".

Example: When reading two consecutive data registers from D2058, the format for CGI is as follows:

```
/system/device_read.cgi?device=D&address=080A&length=0002&driver=00&net_no=00
```

Reply Format (Reading Device Data)

The Web server CPU module returns the following reply after receiving above request.

```
Content-type: text/javascript+json; charset=utf-8
{
  "STATUS": "0",
  "DEVICE": "D",
  "ADDRESS": "080A",
  "LENGTH": "0002",
  "DRIVER": "00",
  "NET_NO": "00"
  "DATA": "C2F6_E978"
}
```

STATUS: 0 indicates normal reply. Any other values indicate an error.

DEVICE, ADDRESS, LENGTH, DRIVER, and NET_NO: The parameters in the request are stored.

DATA: Values of the specified devices are stored. When the length is bigger than or equal to 2, “_” is inserted between device values.

Request Format (Writing Device Data)

Device data can be written to the Web server CPU module with the following format using the POST method.

```
/system/device_write.cgi?device=DEV&address=XXXX&length=XXXX&driver=XX&net_no=XX&data=XXXX
```

The CGI parameters are as follows:

```
/system/device_write.cgi : CGI file name
device                   : Specify the device type of the target device using a character. "D" (Data Register) is supported.
address                  : Specify the device number of the target device in hexadecimal.
length                   : Specify the number of data registers to write in hexadecimal. The valid range is 1 to 64 (0001h to 0040h).
driver                   : Reserved for the system. Specify "00".
net_no                   : Reserved for the system. Specify "00".
data                     : Specify the values to write to the target data registers in hexadecimal.
```

When the length is bigger than or equal to 2, insert “_” between the values to write to the data registers.

Example: When writing 49910 (C2F6h) to D2058 and 59768(E978h) to D2059, the format for CGI is as follows:

```
/system/device_write.cgi?device=D&address=080A&length=0002&driver=00&net_no=00&data=C2F6_E978
```

Reply Format (Writing Device Data)

The Web server CPU module returns the following reply after receiving above request.

```
Content-type: text/javascript+json; charset=utf-8
{
  "STATUS": "0",
  "DEVICE": "D",
  "ADDRESS": "080A",
  "LENGTH": "0002",
  "DRIVER": "00",
  "NET_NO": "00",
}
```

STATUS: 0 indicates normal reply. Any other values indicate an error.

DEVICE, ADDRESS, LENGTH, DRIVER, and NET_NO: The parameters in the request are stored.

Reading from SD Memory Card (Downloading a file)

When using the web server function with the Plus CPU module, you can download files in the WEBPAGE folder or in the DATALOG folder in the SD memory card to your PC.

When downloading a file in the WEBPAGE folder in the SD memory card, specify the relative path from the WEBPAGE folder in the SD memory card, following the URL (see "URL When Accessing Web Server and Web Page to Display" on page 13-4) when accessing a web page in the SD memory card.

When downloading a file in the DATALOG folder on the SD memory card, add "/viewer/<D>/" to the URL (see "URL When Accessing Web Server and Web Page to Display" on page 13-4) when accessing the web page in the internal memory of the Plus CPU module and specify the relative path from the DATALOG folder in the SD memory card.

Example:

`http://192.168.1.5/sd/viewer/img/picture.png`

The "picture.png" file in the \FCDATA01\WEBPAGE\viewer\img\ folder on the SD memory card is downloaded to your PC.

`http://192.168.1.5/viewer/%3CD%3E/RESULT/LOG04.csv`

The "LOG04.csv" file in the \FCDATA01\DATALOG\RESULT\ folder on the SD memory card is downloaded to your PC.

Note: While downloading a file, the web page stops refreshing for a few seconds.

Restrictions

When SSL/TLS communication is enabled, the following restrictions apply.


- It takes some time to complete the display of the web page.
- When a web page is being accessed, and another web browser accesses the same web server, the web page stops refreshing for a few seconds.
- When you access the web server on a low-speed line or in a network environment through a proxy, the web page may not be displayed properly because it requires more connections than the maximum number of simultaneous connections of the web server. For custom web pages, reduce the number of components placed on a web page by splitting it into multiple web pages.

14: COMMUNICATION MONITOR

This chapter describes the Communication Monitor.

Overview

The Communication Monitor is a function that monitors the communication data exchanged between the FC6A Series MICROSmart and an external device in the **Communication Monitor** dialog box of WindLDR. The communication protocols that can be monitored are user communication and Modbus communication. The communication monitor can be used with the Plus CPU module only.

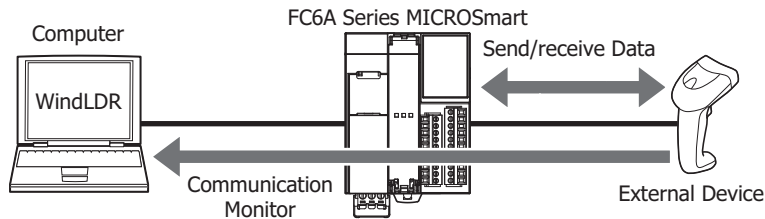


Starting and Stopping the Communication Monitor

This section describes how to start the Communication Monitor and how to start and stop monitoring of an external device.

• Operation procedure

1. On the **Online** tab, in the **Monitor** group, click **Communication Monitor**.

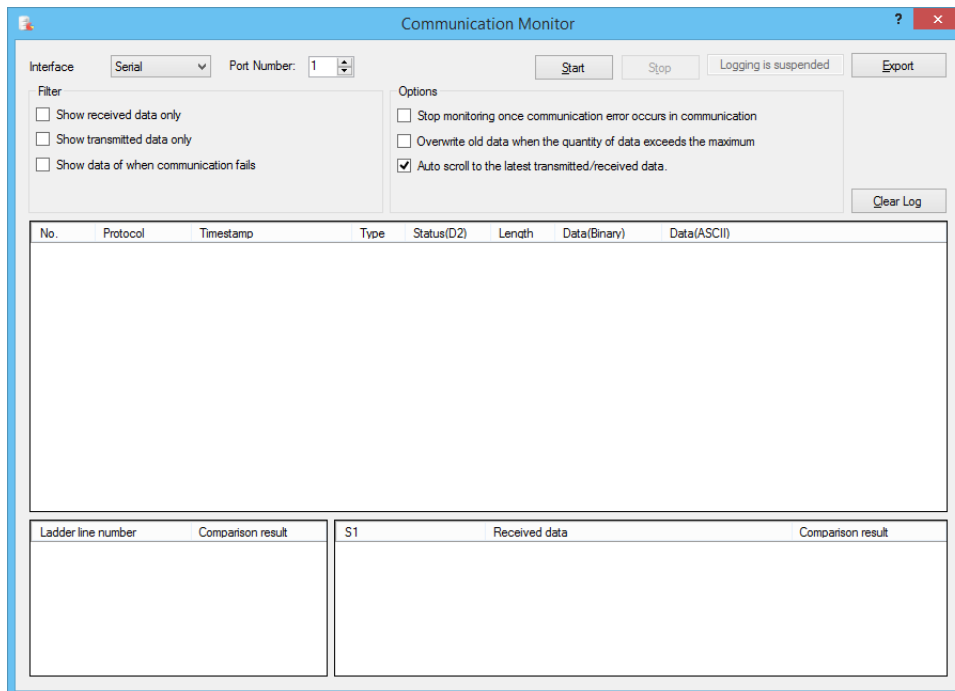

The external device that will be monitored is specified by the communication interface, port number, and connection number. The communication data that will be monitored is that which the FC6A Series MICROSmart saves to internal memory from when **Start** is clicked. Click **Stop** or close the **Communication Monitor** dialog box to stop saving the communication data to internal memory. For this reason, you cannot view send and receive data exchanged while the Communication Monitor is not monitoring.


Up to 65,535 items of data can be monitored. The monitor will automatically stop when the maximum amount of data has been reached. To continue monitoring even when the maximum amount of data has been reached, select the **Overwrite old data when the quantity of data exceeds the maximum** check box. Monitoring will continue and the data will be overwritten from the oldest data.

If the communication interval with the monitored external device is faster than the interval used to display and update send and receive data in the Communication Monitor in WindLDR, the FC6A Series MICROSmart may have insufficient internal memory to temporarily save data. In this case, saving data to internal memory will stop.


The display on the Communication Monitor after saving data to internal memory has stopped will change to the monitor stopped status after all send and receive data temporarily saved to internal memory has been displayed.

Communication Monitor

Monitoring Serial Communication

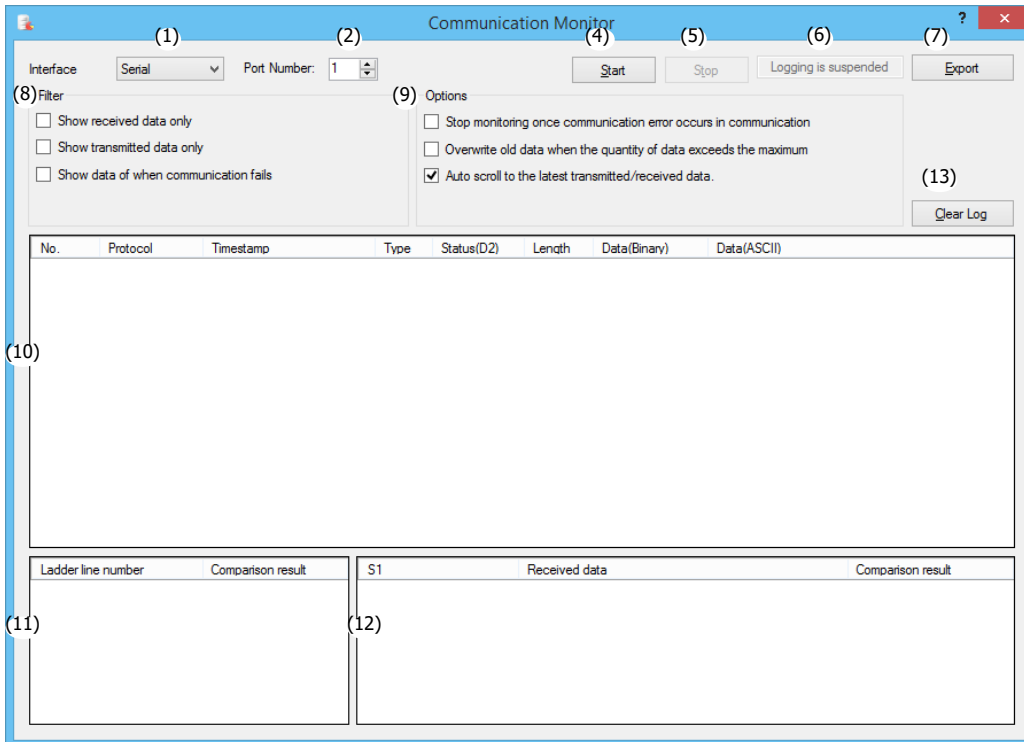

Monitoring Ethernet Communication

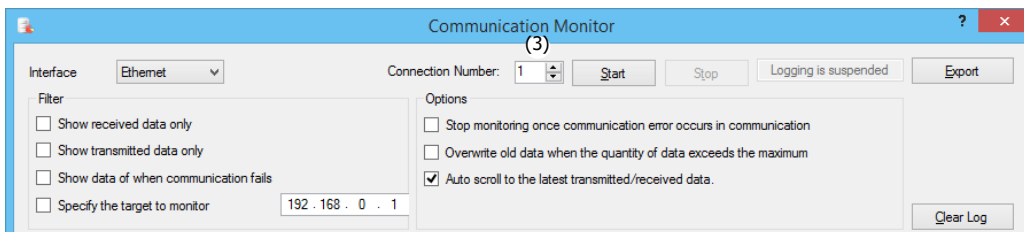

(1) Interface

Select the communication interface to monitor from **Serial** or **Ethernet**.

(2) Port Number

Set the port of the communication interface to monitor. This can be set only when Interface (1) is **Serial**.

Port: 1 to 33

(3) Connection Number

Sets the connection number to monitor.

This can be set only when Interface (1) is **Ethernet**.

Connection: 1 to 16

(4) Start button

Click this button to start the Communication Monitor. WindLDR will acquire communication data from the PLC at a regular interval.

(5) Stop button

Click this button to stop the Communication Monitor.

Accumulation the communication data at the PLC stops while the Communication Monitor is stopped.

(6) Status Indicator

Displays the status of the Communication Monitor.

(7) Export button

The communication data displayed in Send and Receive Data Display (10) can be exported.

Click this button, enter the file name in the **Save As** dialog box, and click **Save**.

(8) Filter

The items displayed in the Send and Receive Data Display (10) can be filtered. Select the check boxes for the items to display. Multiple filters can be selected.

When the **Specify Send/Receive Device** check box is selected, enter the IP address.

(9) Options

Select the relevant check boxes to operate the communication monitor with the following processing types:

Stop monitoring once communication error occurs in communication:

Stops monitoring when an error occurs.

Overwrite old data when the quantity of data exceeds the maximum:

When the communication data reaches the maximum amount of data (65,535 items), the monitor will continue by deleting old data instead of stopping the monitor.

Auto scroll to the latest transmitted/received data:

The latest send and receive data will be automatically displayed when send and receive data is added.

(10) Send and Receive Data Display

Displays the communication data exchanged between the FC6A Series MICROSmart and external device. The displayed content is as follows.

- Protocol
- Time stamps (Plus CPU module with system version 1.01 or later)
- Send/receive type
- IP address of target device to send/receive (Ethernet only)
- Status
- Data length
- Data (binary or ASCII)

Note: Time stamps are based on the calendar and clock data of the FC6A Series MICROSmart when the monitor is started, and they are implemented by adding the time difference from the start of the monitor that is appended to the send and receive data. The purpose of time stamps is to indicate the approximate communication interval of communication data. The time of the time stamps may not match the current time of the computer and it may not be adjusted for daylight savings time.

The calendar/clock display format of the computer is used as the display format of the time stamps.

(11) User Communication Instruction Selection

Displays the list of user communication instructions corresponding to the selected send/receive data in Send and Receive Data Display (10). This is not displayed when the protocol is Modbus.

- | | | |
|--------------------|---|---|
| Ladder line number | : | Displays the line number of the user communication instruction (RXD/ERXD/TXD/ETXD) in WindLDR. The relevant user communication instruction is determined by searching for the instruction in WindLDR based on the device address of D2 obtained from the PLC. |
| Comparison result | : | Displays the receive result of the user communication receive instructions. (Not displayed for send instructions.) |

(12) Comparison Result Details

Displays details of the comparison result between the actual communication data and the communication format (S1) of the user communication instruction selected in User Communication Instruction Selection (11). In this way, you can check the difference between the format of the user communication receive instruction and the actual received data. However, this is not displayed when the protocol is Modbus.

- | | | |
|------------------------|---|---|
| S1 | : | Displays the format of the user communication receive instruction selected in User Communication Instruction Selection (11). <ul style="list-style-type: none"> • Constant (Character) • Constant (Hexadecimal) • Data Register • BCC • Skip (receive data only) |
| Receive Data/Send Data | : | Displays the content of the communication data. |
| Comparison Result | : | Displays the comparison result.
Match: OK
Mismatch: NG |

Note: The data received by the FC6A Series MICROSmart is verified against the format specified by the user communication instruction in WindLDR, and the comparison result with the format is associated with the actual communication data and then displayed. For this reason, the user program opened in WindLDR and the user program in the FC6A Series MICROSmart must be the same. If the user programs are different, a warning message will be displayed stating that the comparison results cannot be displayed when the **Communication Monitor** dialog box is displayed, and only Send and Receive Data Display (10) will be displayed.

14: COMMUNICATION MONITOR

(13) Clear Log button

Erases the displayed communication data.

15: BACNET/IP


This chapter describes the BACnet communication function.

Overview

The Plus CPU module supports BACnet communication using the Internet protocol (IP), which is called BACnet/IP.

BACnet stands for "Building Automation and Control Networking Protocol". In building equipment, it is an open protocol that has been standardized for interoperability between systems built by different manufacturers, and a communication standard for building networks.

Previous air conditioning, lighting, security, and fire protection systems were connected using methods unique to the building equipment and systems manufacturers. However, conforming to BACnet allows equipment and systems to be connected and monitored using a common method.

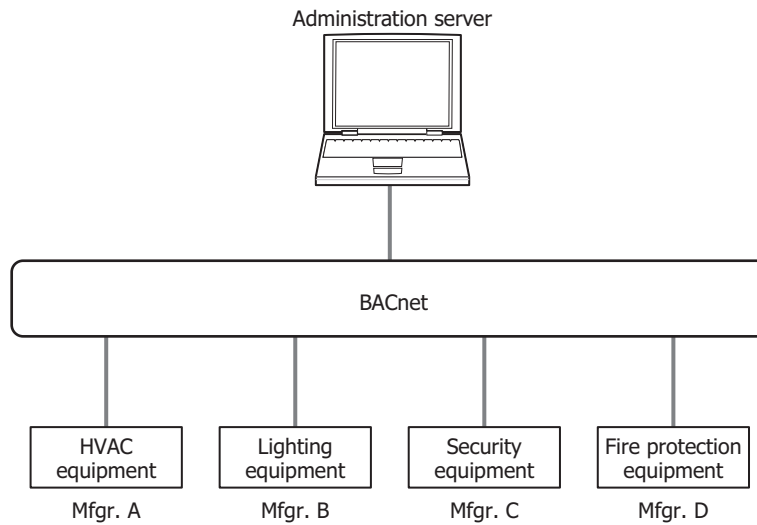

Communication Ports Used in BACnet/IP

Supported models and communication ports are as follows.

Communication Port	All-in-One CPU Module			CAN J1939 All-in-One CPU Module	Plus CPU Module	
	16-I/O Type	24-I/O Type	40-I/O Type		Plus 16-I/O Type	Plus 32-I/O Type
Ethernet Port 1	—	—	—	—	Yes	Yes
Ethernet Port 2	—	—	—	—	—	—
HMI-Ethernet Port	—	—	—	—	—	—

BACnet/IP cannot be used with ports 1 to 33.

BACnet Specifications

Model Number		FC6A-D16R1CEE, FC6A-D16R4CEE FC6A-D16K1CEE, FC6A-D16K4CEE FC6A-D16P1CEE, FC6A-D16P4CEE	FC6A-D32K3CEE, FC6A-D32K4CEE FC6A-D32P3CEE, FC6A-D32P4CEE
Communication Port		Ethernet Port 1	
Applicable Standards		ANSI/ASHRAE135-2012	
Standard Specifications	Protocol	BACnet/IP	
	Profile	B-ASC	
	Object Type	Device Object, Analog Input Object, Analog Output Object, Analog Value Object, Binary Input Object, Binary Output Object, Binary Value Object	
	Number of Objects	256 maximum*1	
	BIBBs	DS-RP-B, DS-WP-B, DS-RPM-B, DS-WPM-B, DS-COV-B, DS-COVU-B, DM-DDB-B, DM-DOB-B, DM-DCC-B	
	BBMD	None-BBMD Device	
	Virtual Device	No	
	Foreign Device	Yes	
Subscribed COV Function	Number of Requests That Can Be Accepted	256 requests maximum	
Unsubscribed COV Function	Transmission Unit	Every object	
	Transmission Cycle	1 to 65,535 [s]*2	
Foreign Device Function	Registration Method	Registration as needed by registration trigger device	
	Lifetime	0 to 65,535 [s]	
Device Binding Function		<ul style="list-style-type: none"> • Synchronization between properties and devices*3 • Data type conversion of Present _Value*4 • Coefficient conversion of Present _Value*4 	

*1 Device Object is not included.

*2 The transmission cycle is set for all objects.

*3 The properties of objects created in internal memory are synchronized with specified devices.

*4 Supported objects are Analog Input Object, Analog Output Object, and Analog Value Object.

About BACnet

Applicable Standards

BACnet/IP in the Plus CPU module conforms to the following BACnet standards.

- ANSI/ASHRAE135-2012

Profile

BACnet/IP in the Plus CPU module supports the following profile.

- B-ASC

Objects

Information, such as input and output values handled by devices that support BACnet/IP, are managed in units called objects. Objects are separated into a number of different types, depend on the content of the object, and these are called object types. The object types supported by BACnet/IP in the Plus CPU module are as follows.

Object Type			Standard	
Name	Abbreviation	Identifier	ANSI/ASHRAE135-2012	
Basic input and output	Analog Input Object Type	AI	0	Yes
	Analog Output Object Type	AO	1	Yes
	Analog Value Object Type	AV	2	Yes
	Binary Input Object Type	BI	3	Yes
	Binary Output Object Type	BO	4	Yes
	Binary Value Object Type	BV	5	Yes
BACnet device attributes	Device Object Type	DV	8	Yes

The Plus CPU module can set a number of objects for each object type. This information can be written to and read from BACnet devices on the same BACnet/IP network.

For details on objects, see "Objects" on page 15-33.

Properties

Properties are the detailed information and attributes of each object. A portion of the properties held by objects can be allocated to Plus CPU module devices, such as data registers, and those devices can be written to and read from a ladder program.

For details on the properties of each object type, see "Objects" on page 15-33.

Services

Services are interfaces used to exchange information between BACnet devices. Services are classified into the client side that initiates services and the server side that executes services.

The Plus CPU module supports the following services.

Services	Initiate* ¹	Execute* ²
ReadProperty	—	Yes
ReadPropertyMultiple	—	Yes
WriteProperty	—	Yes
WritePropertyMultiple	—	Yes
SubscribeCOV	—	Yes
ConfirmedCOVNotification	Yes	—
UnconfirmedCOVNotification	Yes	—
Who-Is	—	Yes
I-Am	Yes	—
Who-Has	—	Yes
I-Have	Yes	—
DeviceCommunicationControl	—	Yes

*1 The Plus CPU module initiates services for other BACnet devices.

*2 The Plus CPU module executes services that are initiated from other BACnet devices.

Note: For details on services, refer to the ANSI/ASHRAE 135-2012 (ISSN 1041-2336) standard or "BACnet Building Automation Data Communication Protocol", a book published by the Institute of Electrical Installation Engineers of Japan.

15: BACNET/IP

BIBB

BACnet interoperability building blocks (BIBB) are groupings of multiple services for each function that will be implemented. BIBBs are classified into the client side that uses the function and the server side that provides the function. '-A' is appended to the end of the client-side BIBBs, and '-B' is appended to the end of the server-side BIBBs. BACnet devices define the functions they support using BIBBs.

BACnet/IP in the Plus CPU module supports the following BIBBs.

BIBB Category	BIBB		Services
Data Sharing	DS-RP-B	Data Sharing Read Property B	ReadProperty
	DS-WP-B	Data Sharing Write Property B	ReadPropertyMultiple
	DS-RPM-B	Data Sharing Read Property Multiple B	WriteProperty
	DS-WPM-B	Data Sharing Write Property Multiple B	WritePropertyMultiple
	DS-COV-B	Data Sharing COV B	SubscribeCOV ConfirmedCOVNotification UnconfirmedCOVNotification
	DS-COVU-B	Data Sharing COV Unsubscribed B	UnconfirmedCOVNotification
Device & Network Management	DM-DDB-B	Device Management Dynamic Device Binding B (Who-Is, I-Am)	Who-Is I-Am
	DM-DOB-B	Device Management Dynamic Object Binding B (Who-Has, I-Have)	Who-Has I-Have
	DM-DCC-B	Device Management Device Communication Control B	DeviceCommunicationControl

Note: For details on BIBBs, refer to "BACnet Building Automation Data Communication Protocol".

Function

The Plus CPU module provides the following functions as a single BACnet device.


- Object and Device Binding function
- Read Property function
- Write Property function
- Subscribed COV function
- Unsubscribed COV function
- Foreign Device function

Object and Device Binding Function

A portion of the properties held by objects created in the Plus CPU module can be allocated to devices, such as data registers, and those devices can be written to and read from a ladder program.

For example, the analog input value of the Plus CPU module can be stored in a data register (D0000) allocated as Present_Value of the Analog Input object, and that analog input value can be read by BACnet devices. The analog output value of the Plus CPU module can also be changed from BACnet devices by allocating the data register (D0004) that stores the analog output value as Present_Value of the Analog Output object.

The types and numbers of objects can be freely set. The initial values of properties are also set with WindLDR.

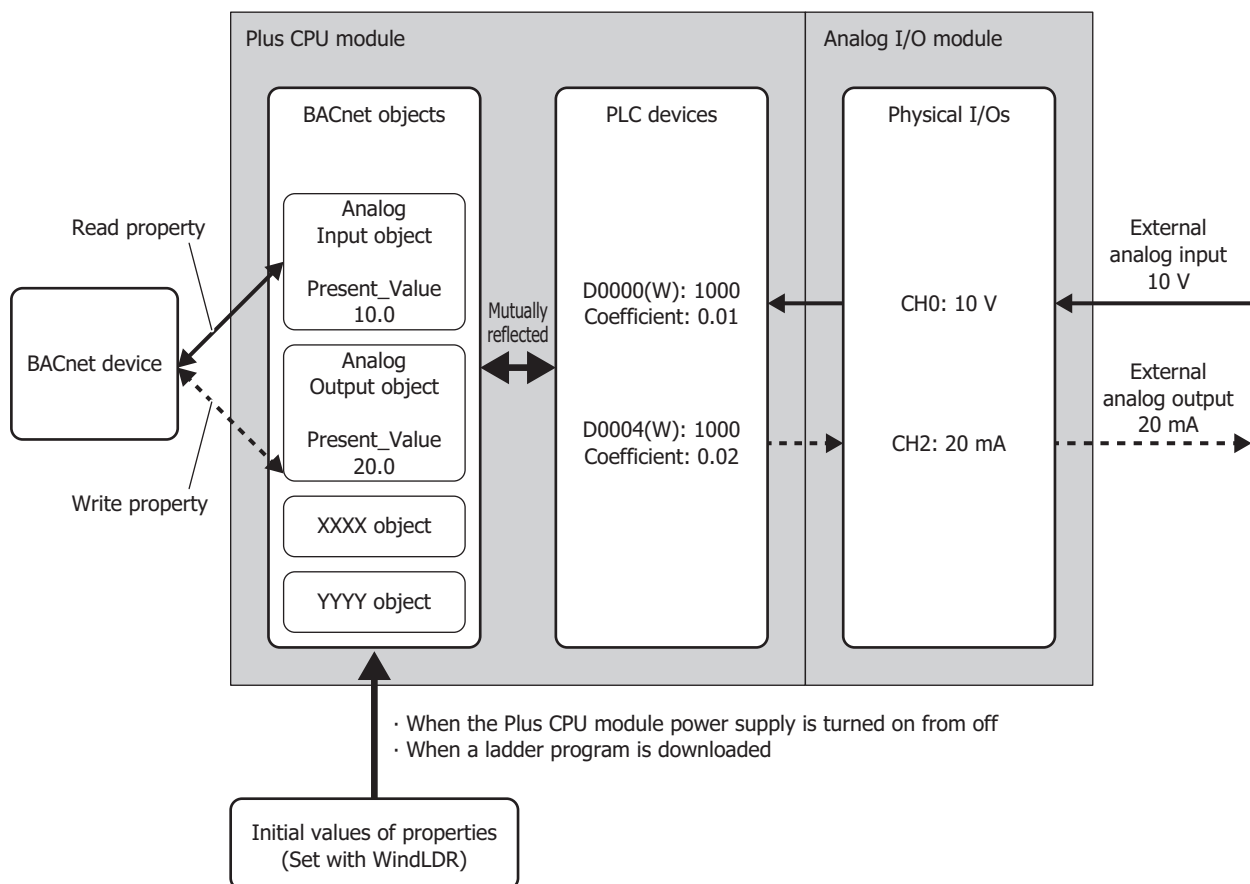


Notes:

- The processing to mutually reflect properties and devices is performed with no relationship to the execution cycle of the ladder program. Because devices allocated to objects will be written and read during execution of the ladder program, create the ladder program so that no problems will occur when devices are referenced or refreshed.
- If a device changes at an interval which is shorter than the cycle at which changes are reflected to the property of an object, those changes may not be reflected to the property. To reflect those changes to the property, keep the value of the device for 1 second. For example, the changes may not be reflected to the property when M0000, which has been allocated to Present_Value of a Binary Input object, is turned on for only 10 ms. To reflect those changes to the property, ensure that M0000 stays on for 1 second.

Read Property Function

In the Read Property function, the Plus CPU module returns the value of a property when there is a read property request from a BACnet device. This function is implemented using DS-RP-B (Data Sharing Read Property B) and DS-RPM-B (Data Sharing Read Property Multiple B).


The below diagram shows a BACnet device reading the analog input value of the Plus CPU module that has been associated with the Analog Input object. The BACnet device is reading the analog input value of the Plus CPU module.

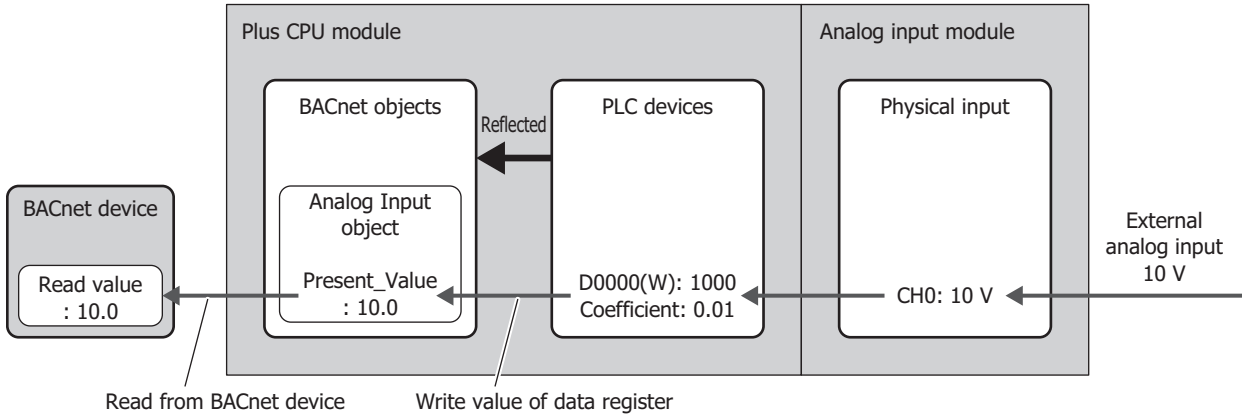

Write Property Function

In the Write Property function, the Plus CPU module writes a value to the property of an object when there is a write property request from a BACnet device. This function is implemented using DS-WP-B (Data Sharing Write Property B) and DS-WPM-B (Data Sharing Read Property Multiple B).

The below diagram shows a BACnet device changing the analog output value of the Plus CPU module that has been associated with the Analog Output object.

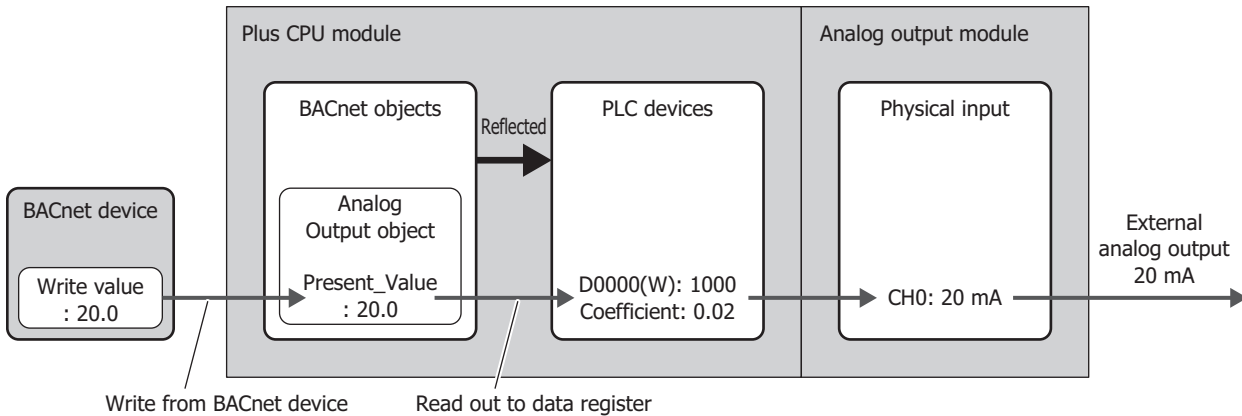

Subscribed COV (COV) function


In the COV (Change Of Value) function, the Plus CPU module monitors an object for which a report request has been received from a BACnet device. Then when Present_Value or Status_Flags has changed, the Plus CPU module notifies the BACnet device of the change.

The properties of objects that correspond to the COV function and the timing of when to provide notification of changes are given as follows.

Object	Properties	Timing to Provide Notification of Change
Analog Input Analog Output Analog Value	Present_Value Status_Flags	Notification of change is provided when (1) or (2) as follows. (1) When Present_Value has changed to a value greater than or equal to the value set for COV_Increment (starting point is from when the previous COV notification was sent)*1 (2) When any of the bits in Status_Flags have changed
Binary Input Binary Output Binary Value	Present_Value Status_Flags	Notification of change is provided when (1) or (2) as follows. (1) When Present_Value has changed (2) When any of the bits in Status_Flags have changed

*1 For example, the following diagram shows when a report request is received from a BACnet device and AI-10 (Analog Input object, instance number 10) has the status in the following table.

AI-10 Properties	Value
Present_Value	10.0
COV_Increment	3.0

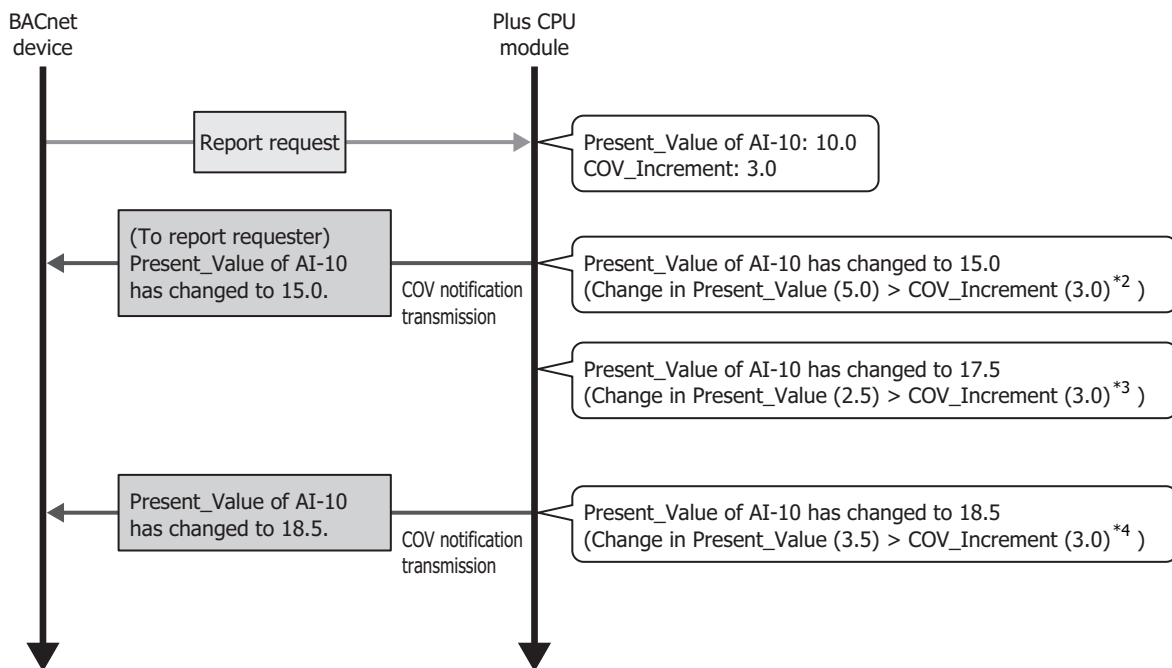

*2 This change corresponds to timing to provide notification of change (1).

Change in Present_Value = Present value - Value when report request was received = 15.0 - 10.0 = 5.0
Because COV_Increment = 3.0, change in present value ≥ COV_Increment has been satisfied.

*3 Change in Present_Value = Present value - Value when previous COV notification was transmitted = 17.5 - 15.0 = 2.5
Change in Present_Value < COV_Increment, and the condition for timing to provide notification of change (1) is not satisfied.
Therefore, COV notification is not sent.

*4 This change corresponds to timing to provide notification of change (1).
Change in Present_Value = Present value - Value when previous COV notification was transmitted = 18.5 - 15.0 = 3.5
Because COV_Increment = 3.0, Change in Present Value ≥ COV_Increment has been satisfied.

Notes:

- Notification may not be provided for changes in values that are faster than the synchronization cycle of objects and devices.
- The transmit queue for issuing BACnet services is 30 services. Services may not be transmitted if there are simultaneous transmit requests that exceed the transmit queue limit.

15: BACNET/IP


The Plus CPU module implements the COV function by sending the Confirmed COV Notification service/Unconfirmed COV Notification service to the report requesting BACnet device according to the parameters contained in the report request when that report request (Subscribe COV service) was transmitted from the BACnet device.

The key parameters contained in the report request are as follows.

Key Parameters	Description
Monitored Object Identifier	Type and ID of object for which to enable the COV function.
Issue Confirmed Notifications	Selects whether or not to confirm messages that will be sent from the Plus CPU module to the BACnet device. <ul style="list-style-type: none"> • With confirmation (ConfirmedCOVNotification) • Without confirmation (UnconfirmedCOVNotification)
Lifetime	The time to enable the COV function in 1 sec increments. If 0 or omitted, the COV function is enabled with no time limit.

The following diagram shows when the Plus CPU module has received a report request transmitted from a BACnet device like that in the following table.

Key Report Request Parameters	Description
Monitored Object Identifier	Analog Input object (instant number: 10)
Issue Confirmed Notifications	With confirmation (ConfirmedCOVNotification)
Lifetime	360 sec

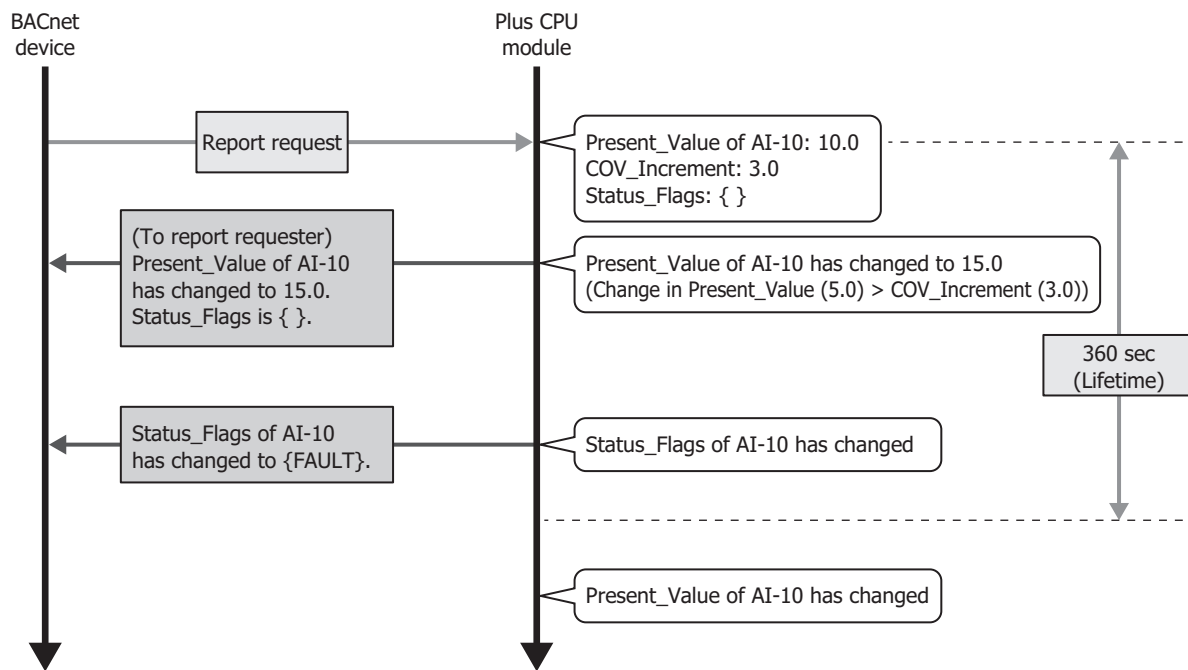

Notes:

- The maximum number of COVs that can be registered is 256.
- For details on the parameters in a response request, refer to "BACnet Building Automation Data Communication Protocol".

Unsubscribed COV (COVU) function

In the COVU (Change Of Value Unsubscribed) function, the Plus CPU module spontaneously provides notification that Present_Value or Status_Flags of a specific object has changed to all BACnet devices connected to the same network.

The properties of objects that correspond to the COVU function and the timing of when to provide notification of changes are given as follows.


Object	Properties	Timing to Provide Notification of Change
Analog Input Analog Output Analog Value	Present_Value Status_Flags	Notification of the status is provided at the interval of the Unsubscribed COV frequency*1. Notification of change is also provided when (1) or (2) as follows. (1) When Present_Value has changed to a value greater than or equal to the value set for COV_Increment (starting point is from when the previous COV notification was sent) (2) When any of the bits in Status_Flags have changed
Binary Input Binary Output Binary Value	Present_Value Status_Flags	Notification of change is provided when (1) or (2) as follows. (1) When Present_Value has changed (2) When any of the bits in Status_Flags have changed

*1 See "Basic Settings" on page 15-14.

The Plus CPU module implements the COVU function by sending the Unconfirmed COV Notification service to BACnet devices.

For example, when BACnet/IP is started with AI-10 (Analog Input object, instant number 10) having the status in the following table, notification is provided on the status of the properties at the set cycle (Unsubscribed COV frequency).

AI-10 Properties	Value
Present_Value	10.0
COV_Increment	3.0
Status_Flags	{ }

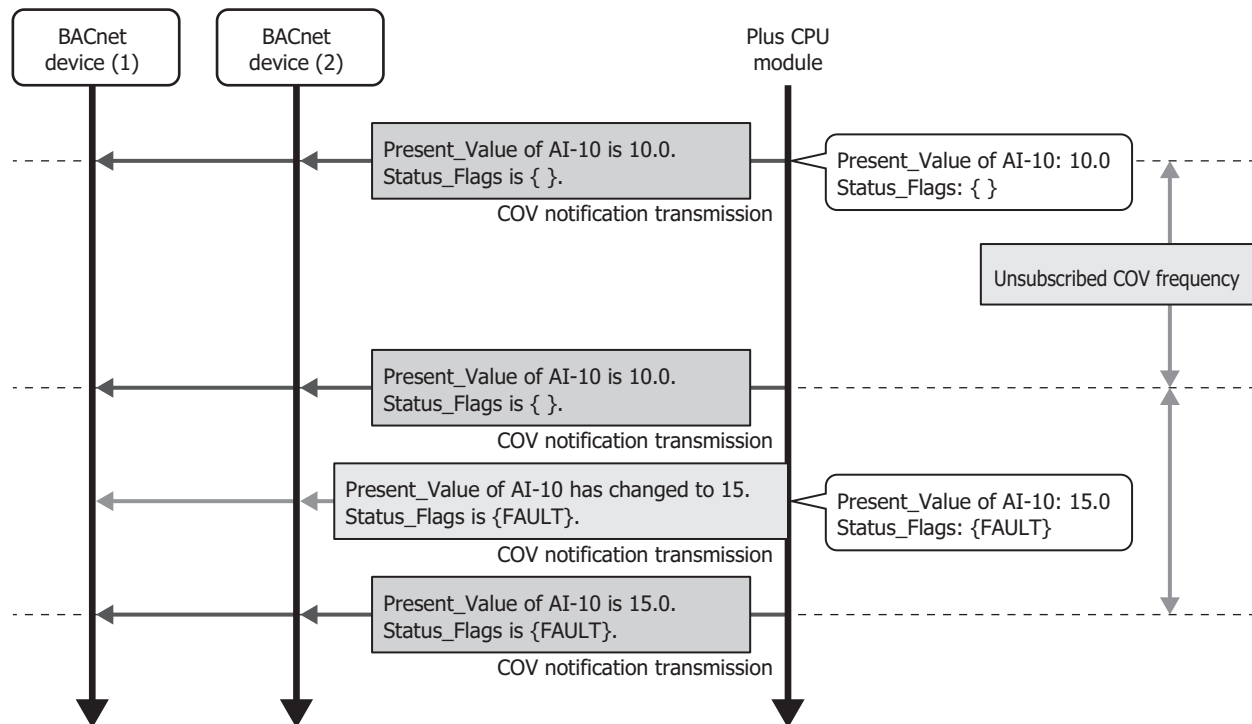


Notes:

- When using the COVU function, the values of properties can be regularly sent to BACnet devices, regardless of any change in the value of the properties.
- The COVU function can be set for each object.
- Only one common Unsubscribed COV Frequency can be set. Different frequencies cannot be set for each object.
- If the Unsubscribed COV Frequency is set to 0, regular notifications will not be provided. Notifications will be provided only when there is a change in the target property.
- When the Unsubscribed COV frequency is changed by a device, the change will be applied after the service is next initiated.
- Notification may not be provided for changes in values that are faster than the synchronization cycle of objects and devices.
- The transmit queue for issuing BACnet services is 30 services. Services may not be transmitted if there are simultaneous transmit requests that exceed the transmit queue limit.

Foreign device function

When the BACnet/IP network is built with multiple IP subnets, install one BBMD (BACnet Broadcast Management Device) on each IP subnet. A BBMD is a device that transfers broadcast communications of BACnet devices to different IP subnets. BACnet devices perform broadcast communications with BACnet devices on different IP subnets via BBMDs. The Foreign Device function is used for performing broadcast communications with BACnet devices on different IP subnets even when there is no BBMD on the IP subnet of the Plus CPU module. Broadcast communications can be performed with a BACnet device on the BACnet/IP network by registering the Plus CPU module as a foreign device for a specified BBMD.

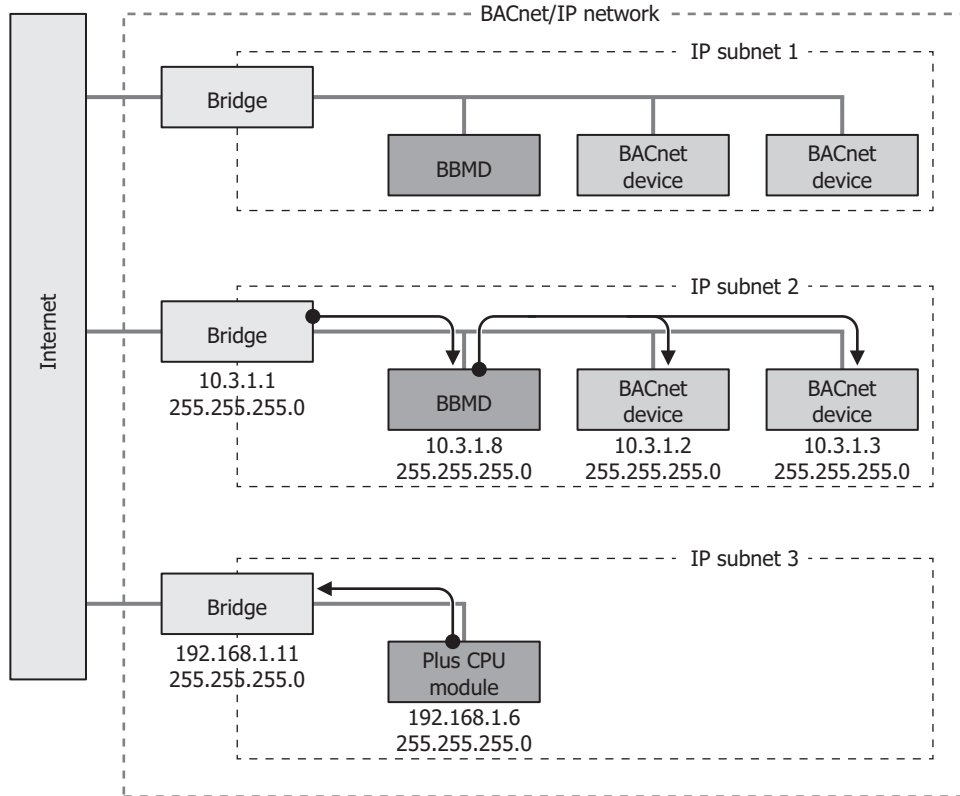

BACnet/IP Operation

Special Devices Used in BACnet/IP

This table shows the special data registers and special internal relays used in BACnet/IP.

Special Data Register	Description	
D8782	BACnet Operation Status	This special data register stores the operation status of BACnet communication. 0: Stopped 1: Ready 2: Operating 3: Stopped by error
D8783	BACnet Error Information	This special data register stores error information that has occurred in BACnet communication. Information for the error that last occurred is stored. 0: Normal 1: Invalid device ID 2: Invalid IP address 3: Invalid BBMD IP address 4: BBDM registration failure

Special Internal Relay	Description	
M8450	BACnet Communication Bit	The special internal relay permits or prohibits BACnet communication. OFF: BACnet communication prohibited ON: BACnet communication permitted

Note: To resume BACnet communication when BACnet Operation Status (D8782) is stopped by an error, first turn off M8450 and wait for BACnet Operation Status (D8782) to become stopped, and then turn on M8450.

Operations during RUN and STOP

BACnet/IP is enabled and disabled according to BACnet Communication Bit (M8450), regardless of the RUN/STOP status.

Properties with allocated devices work by referencing those devices.

When BACnet/IP is enabled and properties or the values of devices that are associated with properties are changed, even during STOP, they operate with the values after the change.

RUN/STOP Status	BACnet/IP Enabled/Disabled	Properties with Allocated Devices and the Values of Those Devices
STOP	Enabled	Bound
	Disabled	Not bound

Note: Output during STOP is performed according to the status of M8025 (Maintain Outputs While CPU Stopped), regardless of whether or not BACnet/IP is enabled or disabled. For details on M8025 (Maintain Outputs While CPU Stopped), see "M8025: Maintain Outputs While Stopped" on page 2-10.

Operation During STOP→RUN

Properties with allocated devices work by referencing those devices.

When the power supply is turned on and off or the Plus CPU module is switched between STOP and RUN and the values of devices associated with properties are changed, such as due to changing device values with the ladder program, the devices operate with the values after the change. Use caution because the Plus CPU module may operate unexpectedly for this reason.

For example, when M0000 is allocated to Out_Of_Service, the value of Out_Of_Service may differ by the memory backup setting of the device.

(1) When internal relays are set to "Clear All" by STOP→RUN

RUN/STOP Status	BACnet/IP Enabled/Disabled	Out_Of_Service	M000
STOP	Enabled	TRUE	ON
↓			
RUN	Enabled	FALSE	OFF

At the start of RUN, Out_Of_Service=FALSE because the status of internal relays is cleared.

(2) When internal relays are set to "Keep All" by STOP→RUN

RUN/STOP Status	BACnet/IP Enabled/Disabled	Out_Of_Service	M000
STOP	Enabled	TRUE	ON
↓			
RUN	Enabled	TRUE	ON

Out_Of_Service=TRUE because the status of internal relays is kept.

Notes:

- Set devices that are allocated to properties so that their statuses are kept at STOP→RUN.
- The default settings of memory backup for internal relays and data registers are as follows.

Device	Default Setting
Internal relay	Clear All
Data register	Keep All


For the memory backup settings of devices, see Chapter 5 "Functions and Settings" in the "FC6A Series MICROSmart User's Manual".

BACnet/IP Settings


This section describes operation procedures and details about items for performing communication using BACnet/IP.

• Operation procedure

1. On the **Configuration** tab, in the **Function Area Settings** group, click **Ethernet Port 1**.
The **Function Area Settings** dialog box is displayed.

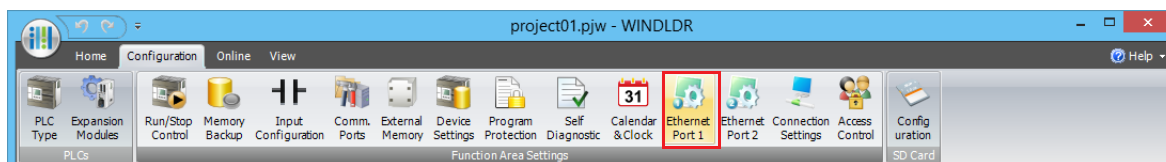


2. Under BACnet/IP settings, select the **Enable BACnet/IP** check box and click **Configure**.
The **BACnet Settings** dialog box is displayed.

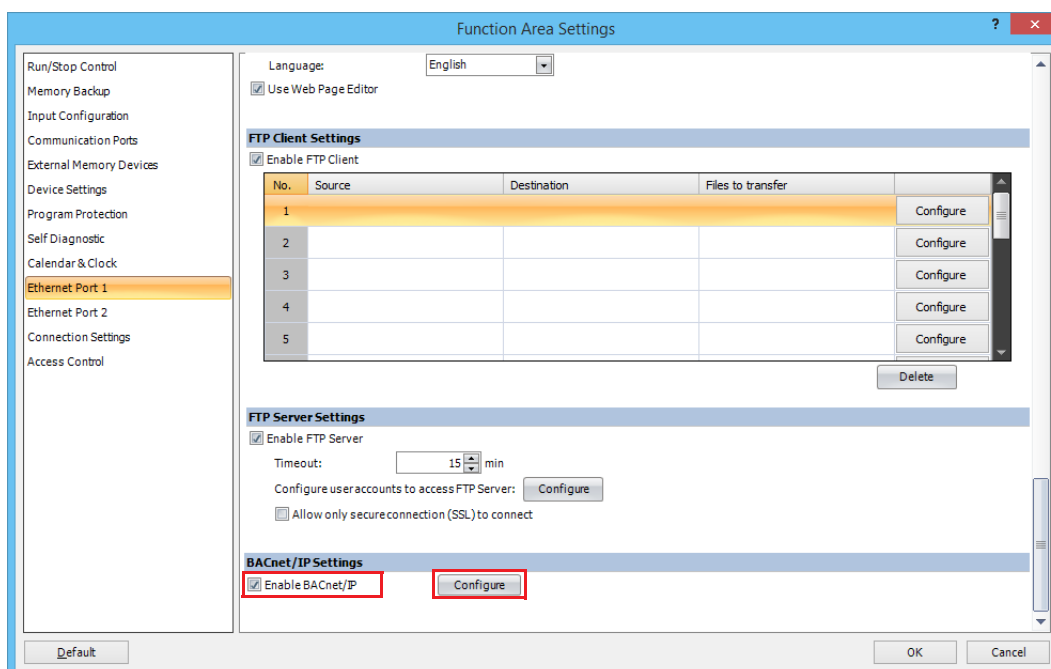

Basic Settings

This section describes the basic settings for using BACnet/IP.

This screenshot shows an example of when **BACnet/IP Settings** was selected on the **BACnet Settings** dialog box.

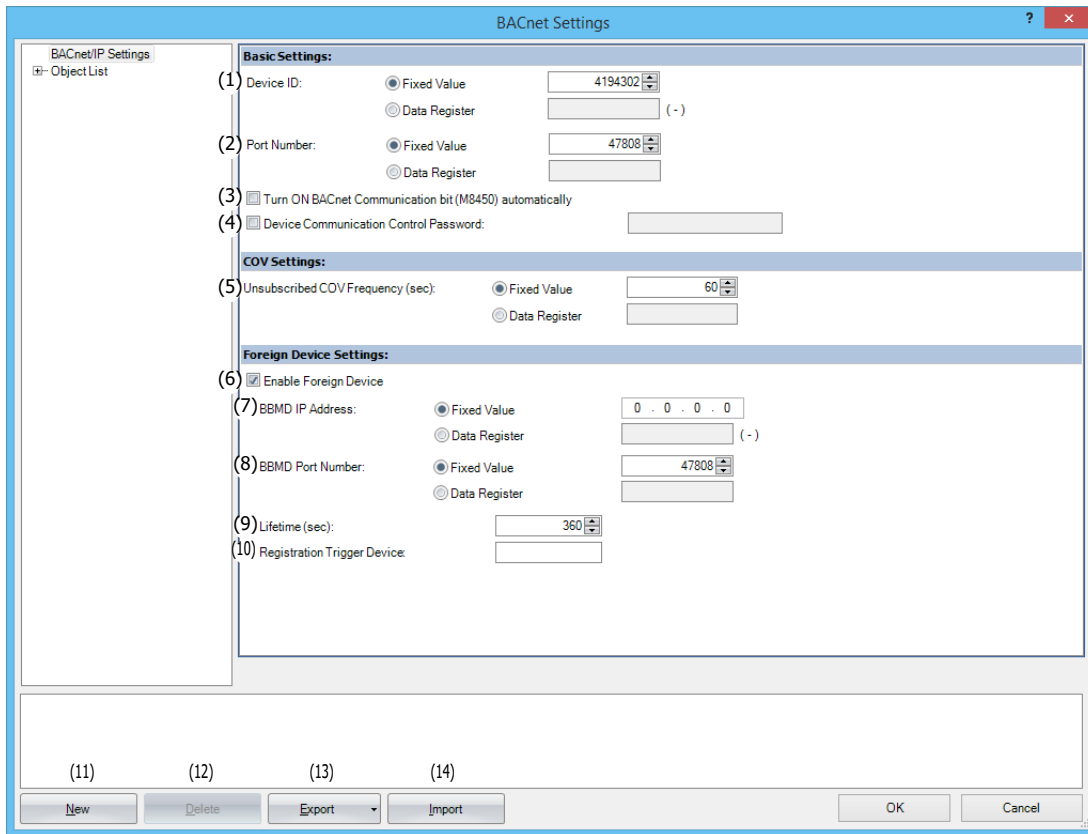

Basic Settings

(1) Device ID

The assigned ID used to identify BACnet devices on the BACnet/IP network.

The Plus CPU module device ID can be set from the following two types.

Setting Method	Description
Fixed Value	Sets a fixed value for the device ID. Set the fixed value between 1 and 4,194,302. The default value is 4,194,302.
Data Register	Sets the device ID with data registers. Starting from the specified data register, 2 continuous words of data registers are used. Specify the first data register so that the device range is not exceeded. Set the device ID between 1 and 4,194,302.

(2) Port Number

Sets the port number for performing BACnet/IP communication.

The port number can be set from the following two types.

Setting Method	Description
Fixed Value	Sets a fixed value for the port number. Set the fixed value between 0 and 65,535. The default value is 47,808 (BAC0h).
Data Register	Sets the port number with a data register. Set the port number between 0 and 65,535.

(3) Turn ON BACnet Communication bit (M8450) automatically

Sets whether or not to turn on BACnet Communication Bit (M8450) in the END processing of the first scan when starting operation (RUN). During Online Edit, BACnet Communication Bit (M8450) is turned on in the END processing of the first scan in which downloading the user program has completed.

The following table shows the statuses.

M8450 Status	RUN/STOP Status	BACnet/IP	Present_Value* ¹ and Device Value	Overridden Flag in Status_Flags* ²
ON	STOP	Enabled	Bound	TRUE
	RUN			FALSE
OFF	STOP	Disabled	Not bound	—
	RUN			

*1 For Present_Value, see "Objects" on page 15-33 and "Present_Value" on page 15-41.

*2 For Status_Flags, see "Objects" on page 15-33 and "Status_Flags" on page 15-54.

Notes:

BACnet Communication Bit (M8450) is turned off in the following cases.

- After the user program has been downloaded, regardless STOP or RUN status
- When the Plus CPU module power is turned off

(4) Device Communication Control Password

Sets the password to request when the Device Communication Control service is received from a BACnet device. Up to 20 single-byte alphanumeric characters can be set. When the Device Communication Control service is received, the Plus CPU module does not initiate a service or provide a response for the specified period of time.

COV Settings**(5) Unsubscribed COV Frequency (sec)**

Sets the cycle to regularly provide notifications of property values with the COVU function in 1 sec increments.

The range that can be set is 0 to 65,535. If 0 is set, the COVU function is stopped, and notification is provided only when there is a change in the target property.

Setting Method	Description
Fixed Value	Sets a fixed value for the frequency. The default value is 60 sec.
Data Register	Sets the frequency with a data register. The frequency can be changed during RUN.

Notes:

- Only one Unsubscribed COV frequency can be set for the Plus CPU module, and different frequencies cannot be set per object.
- Whether or not to use the COVU function can be selected per object. The COVU function can also be enabled and disabled by specifying a data register and changing its value.
- When changing the Unsubscribed COV frequency by setting a data register for the Unsubscribed COV frequency and changing the value of the data register, the Unsubscribed COV frequency after it has been changed will be applied after the service is next initiated.

Foreign Device Settings

(6) Enable Foreign Device

Sets whether or not to use the Foreign Device function.

(7) BBMD IP Address

(8) BBMD Port Number

To join a BACnet/IP network when there is no BBMD on the IP subnet of the Plus CPU module, set the IP address and port number of the BBMD on the other IP subnet. The Plus CPU module registers itself as a Foreign Device on the set BBMD.

The IP address of the BBMD can be set from the following two types.

Setting Method	Description
Fixed Value	Sets a fixed value for the IP address of the BBMD.
Data Register	Sets the IP address of the BBMD with data registers. Starting from the specified data register, 4 continuous words of data registers are used. Specify the first data register so that the device range is not exceeded. For example, to set the IP address of the BBMD as 192.168.2.5, write the following values to the data registers. Starting data register+0 = 192 Starting data register+1 = 168 Starting data register+2 = 2 Starting data register+3 = 5

The port number of the BBMD can be set from the following two types.

Setting Method	Description
Fixed Value	Sets a fixed value for the port number of the BBMD. Set the fixed value between 0 and 65,535. The default value is 47,808 (BAC0h).
Data Register	Sets the port number of the BBMD with a data register. Set the port number of the BBMD between 0 and 65,535.

(9) Lifetime (sec)

Sets the interval of time to register the Plus CPU module with the BBMD as a Foreign Device in 1 sec increments.

When (Lifetime + 30) sec has elapsed from registration, the registered content will be deleted from the BBMD.

The range that can be set is 0 to 65,535. The default value is 360 sec.

Setting Method	Description
Fixed Value	Sets a fixed value for the lifetime. The default value is 360 sec.

(10) Registration Trigger Device

The device used to register the Plus CPU module with the BBMD set with (7) above as a Foreign Device. The Plus CPU module is registered with the BBMD when the registration trigger device is turned on from off. To continuously register the Plus CPU module with the BBMD, use the registration trigger device to re-register the Plus CPU module before (Lifetime + 30) sec elapses.


Set an internal relay for the registration trigger device.

Adding and Deleting Objects

(11) New button

Adds a new object.

Click **New** to display the **New Object** dialog box. Use this dialog box to set the object type and instance number. Set the instance number between 0 and 4,194,302, and ensure that objects of the same object type do not have the same instance number.

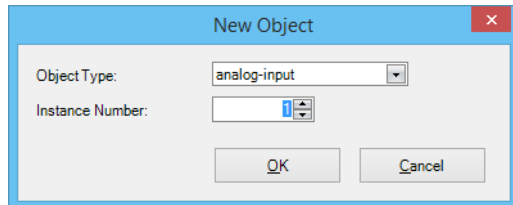

(12) Delete button

Deletes the object under the node selected in the object list.

(13) Export button

Exports the settings of the following objects as a CSV file.

Analog Input Object, Analog Output Object, Analog Value Object, Binary Input Object, Binary Output Object, Binary Value Object

(14) Import button

Imports a CSV file that was export and automatically creates objects.


Objects cannot be imported if the format of the CSV file is invalid or if the maximum number of objects has been reached.

Adding a New Object


This section describes the procedure to add a new object.

1. Click New.


The **New Object** dialog box is displayed.

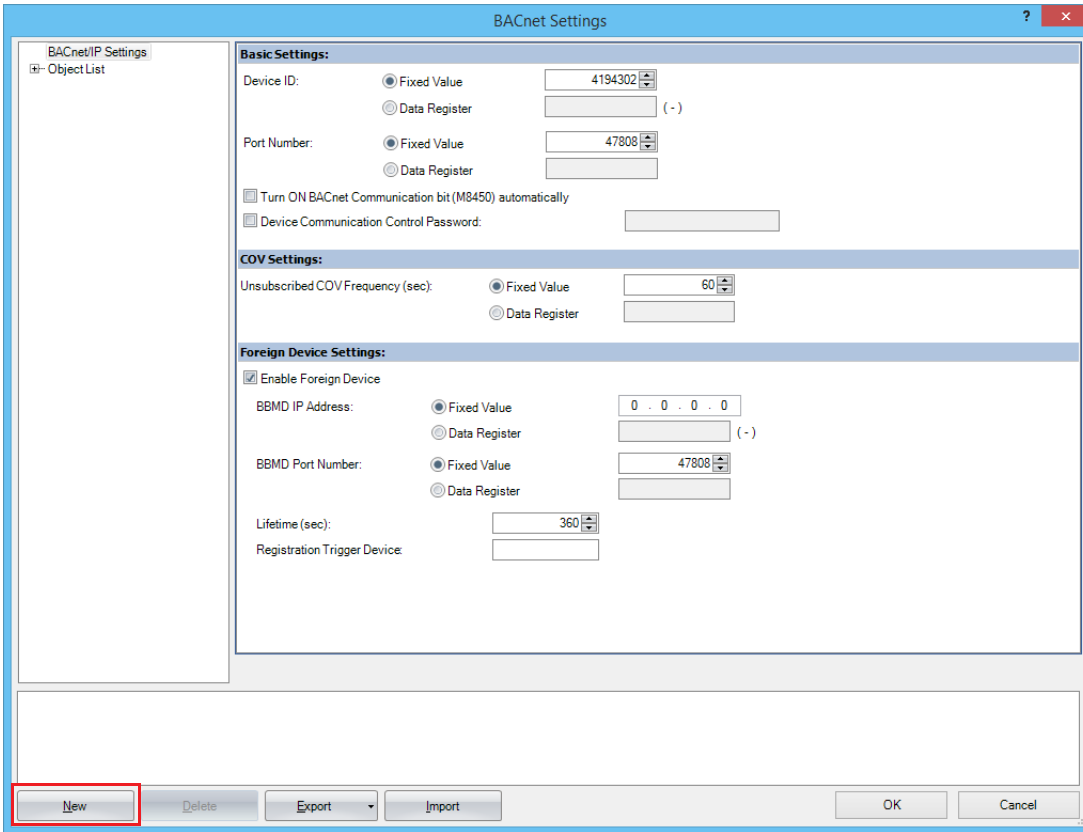

2. Select the object type of the object to register, and assign it an instance number. Click OK.

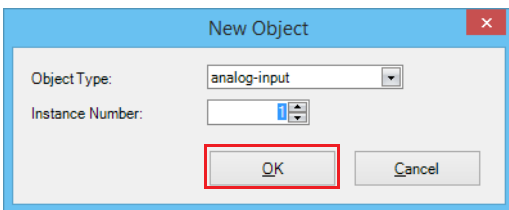

- Click the registered object ID in the object list.
The properties are displayed.

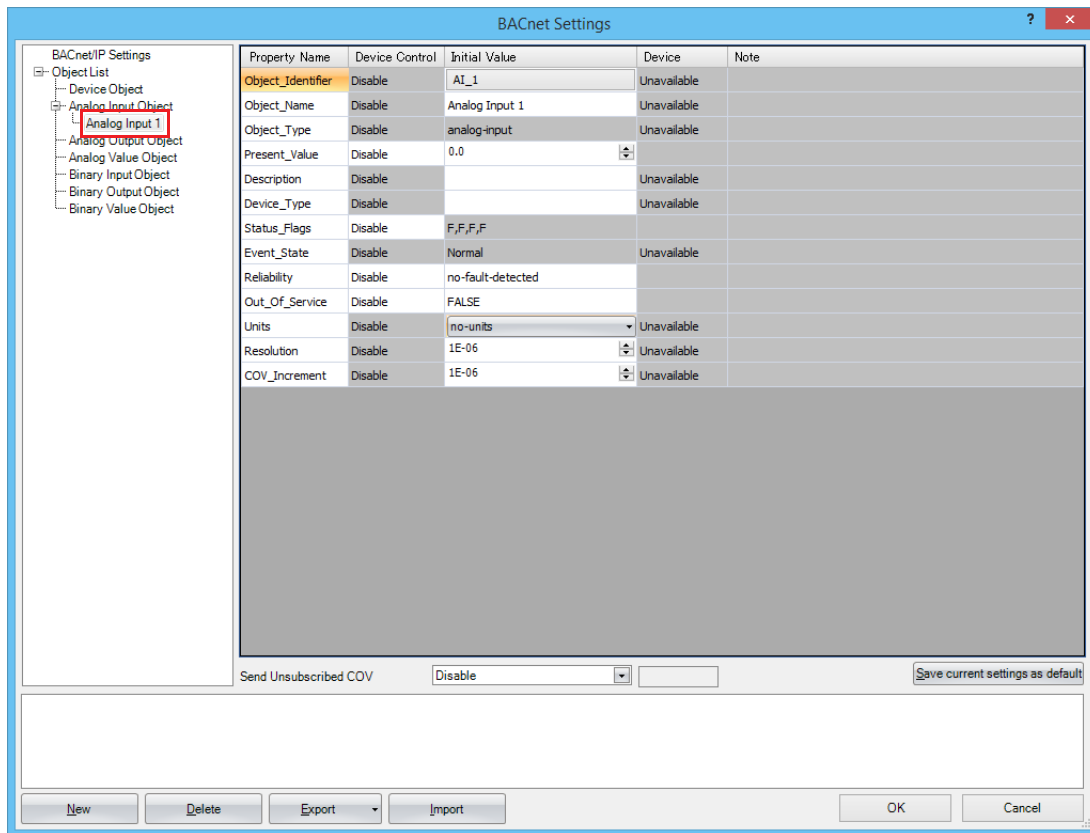


- Configure the properties and click **OK**.
For details, see "Object Settings" on page 15-20.

Note: The maximum number of objects that can be registered is 256.

Object Settings

This section describes the settings of properties held by objects.

This screenshot shows an example of when a registered object ID was selected on the **BACnet Settings** dialog box.

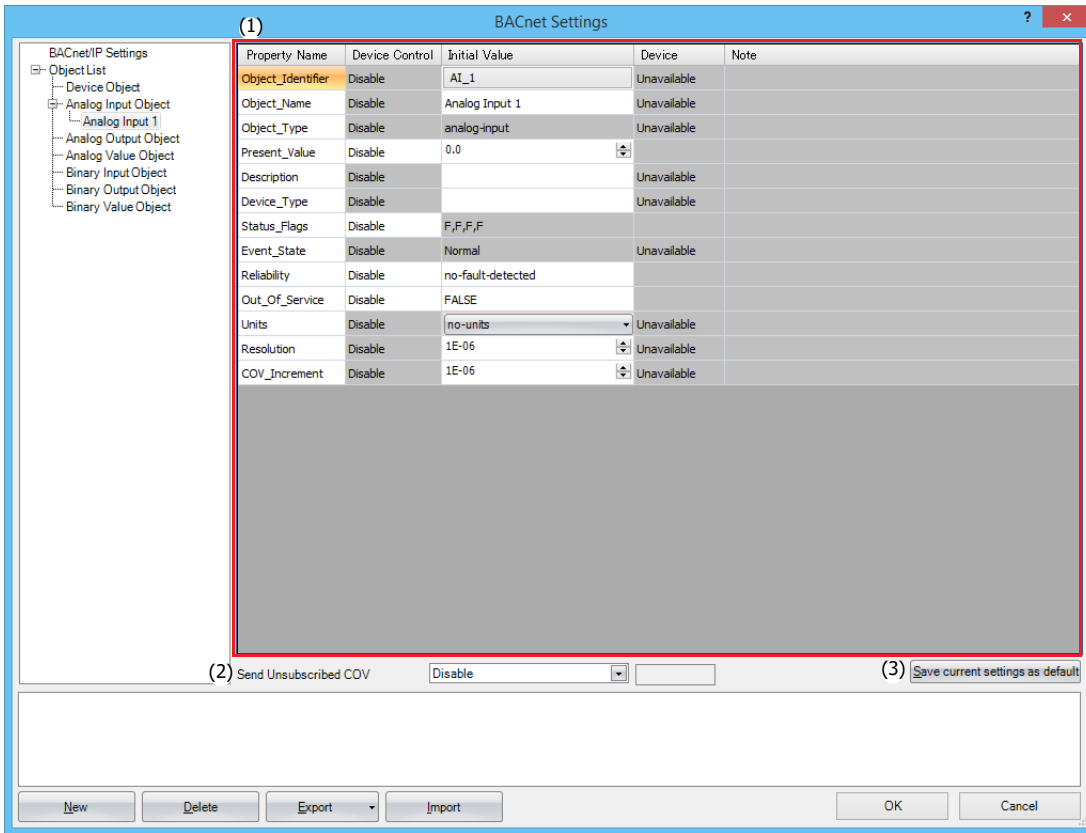

(1) Property settings

This area displays the properties of the object ID selected in the object list.

A portion of the properties can be edited.

(2) Send Unsubscribed COV

Sets whether or not to send Unsubscribed COV.

This property can be set from the following three types.

- Enable
- Disable
- Control by device

Setting	Description
Enable	When BACnet Communication Bit (M8450) is on, the COVU function is always enabled and the Unconfirmed COV Notification service is sent.
Disable	The COVU function is always disabled and the Unconfirmed COV Notification service is not sent.
Control by device	The function can be enabled and disabled by setting an internal relay and turning it on and off. A special internal relay cannot be set.

(3) Save current settings as default button

Saves the settings of the properties as the default values of the object.


Present_Value Settings

This section describes how to configure Present_Value.

Analog Input Object

Use these settings to configure fixed values and devices for Present_Value of the Analog Input object.

This screenshot shows an example of when an Analog Input object ID is selected in the object list.

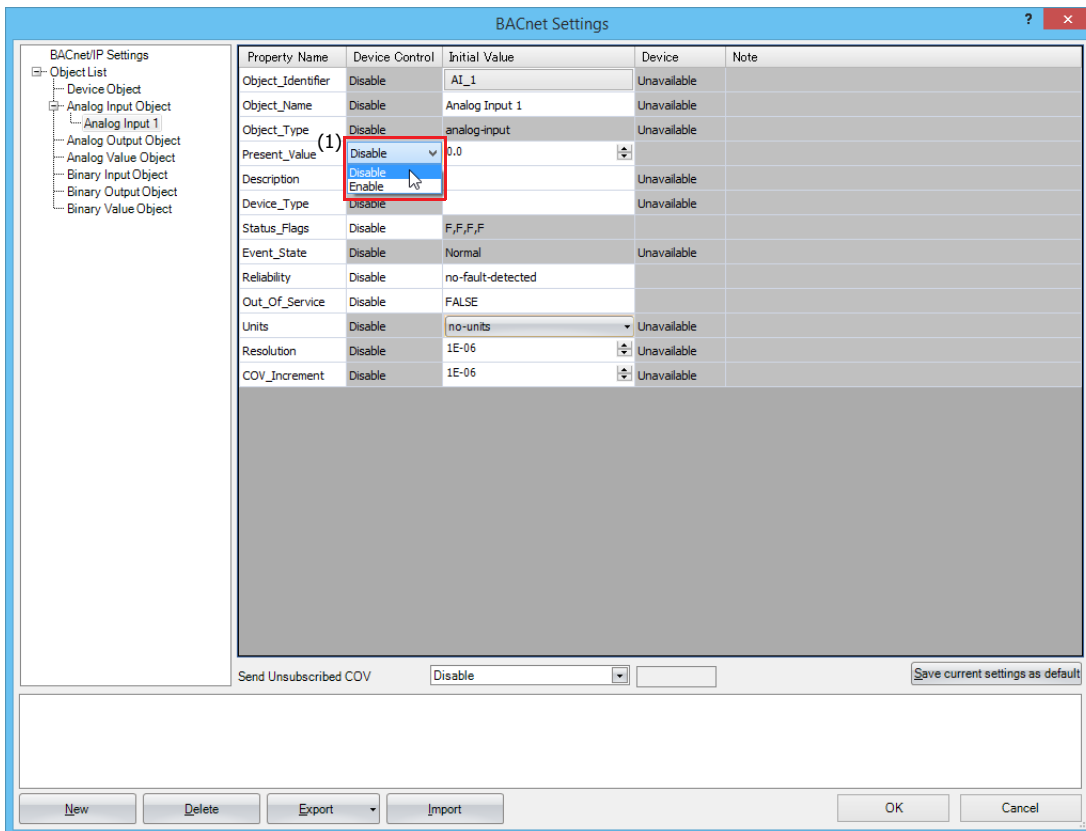


(1) Device Control

Selects whether to set a fixed value for Present_Value or to allocate data registers.

Device Control	Description
Disable	Set a fixed value for Present_Value.
Enable	Allocate data registers for Present_Value.


■ Setting a Fixed Value for Present_Value

Set device control of Present_Value (1) to **Disable**, and enter a fixed value for the initial value.

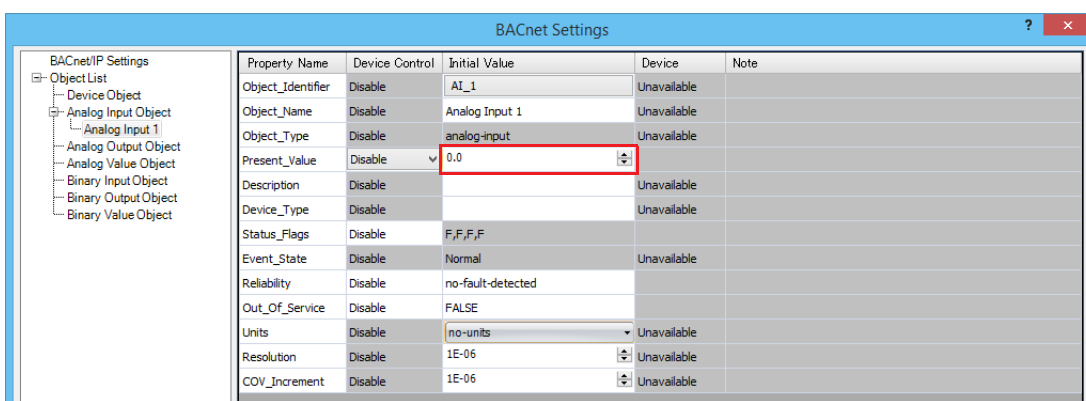

■Allocating Devices to Present_Value

Set device control of Present_Value (1) to **Enable**, and configure the parameters in the **Present_Value Settings** dialog box.

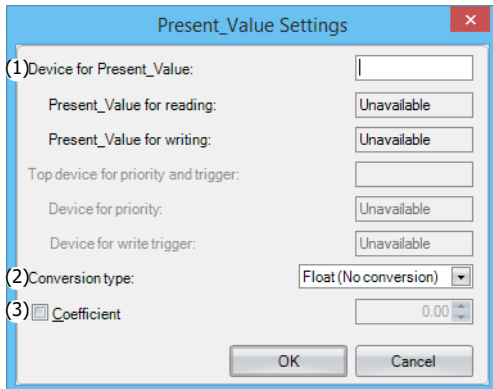

(1) Device for Present_Value

Sets the device to store Present_Value.

Data registers are the only device that can be allocated to Present_Value.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	—	—	—	—	—	Yes*1	—

*1 Special data registers cannot be used.

According to **Conversion type** (2), 1 or 2 continuous words of data registers are used starting from the specified data register. Specify the first data register so that the device range is not exceeded.

Device for Present_Value	Storage Destination	
	Word Integer	Double Word Long Float (No Conversion)
Present_Value for writing	Starting number+0	Starting number+0, starting number+1

(2) Conversion type

Sets the data type of the device to which Present_Value (float) is allocated. For details, see Present_Value in "Analog Input Object" on page 15-45.

(3) Coefficient

Sets Present_Value as the product of the value stored in the data registers multiplied by the coefficient.

$$\text{Present_Value} = \text{Value stored in the data registers} \times \text{Coefficient}$$

For example, Present_Value is calculated as shown in the following table.

Plus CPU module			Coefficient	BACnet Settings Device
Data Register	Data Type	Value		Present_Value
D0000	Word	1,000	0.01	10.0
D0000, D0001	Float	2.5	0.5	1.25

Notes:


The coefficient is multiplied as a float-type value. The conversion order is as follows.

- (1) The value of the data registers is converted to a float-type value.
- (2) The coefficient is multiplied by the conversion result in (1).

Analog Output Object

Use these settings to configure devices for Present_Value of the Analog Output object.

This screenshot shows an example of when an Analog Output object ID is selected in the object list.

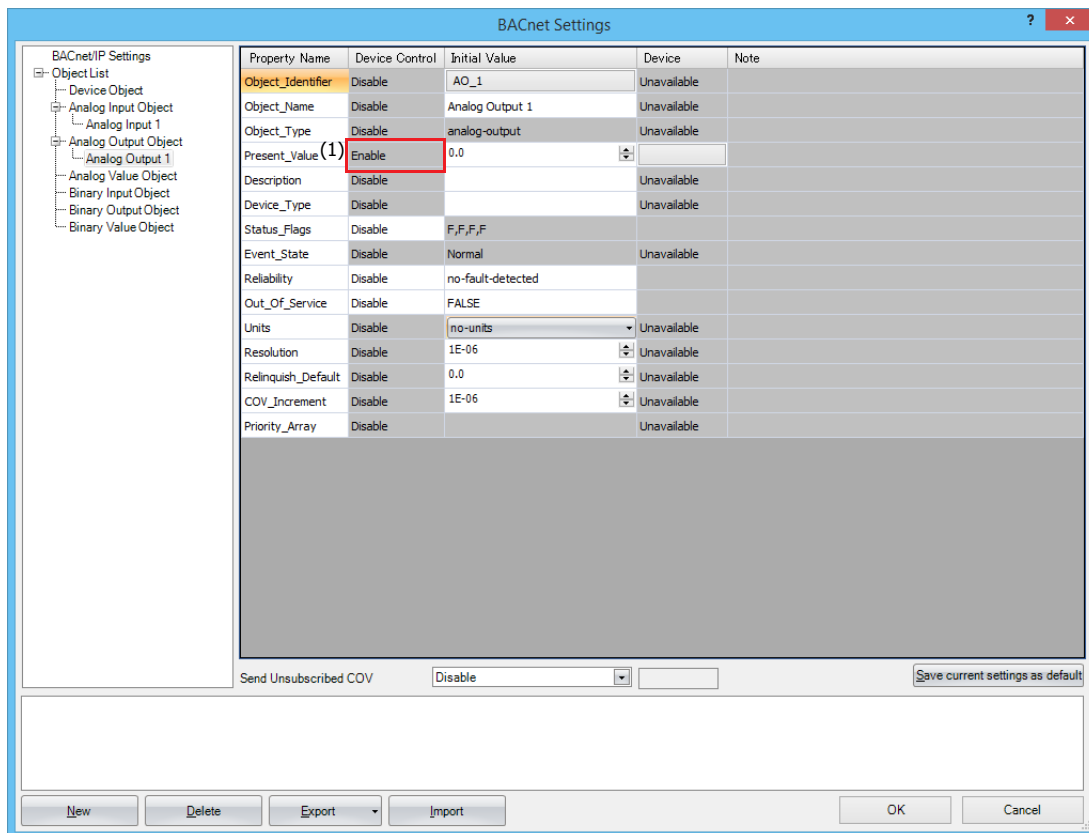


(1) Device Control

Device control for Present_Value is fixed to **Enable**.

Note: A fixed value cannot be set for Present_Value of the Analog Output object.

■Allocating Devices to Present_Value

Configure the parameters in the **Present_Value Settings** dialog box.

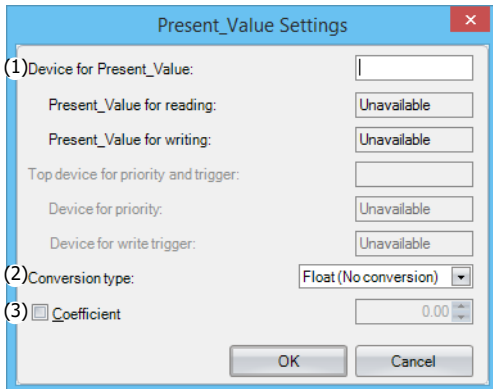

(1) Device for Present_Value

Sets the device to store Present_Value.

Data registers are the only device that can be allocated to Present_Value.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	—	—	—	—	—	Yes*1	—

*1 Special data registers cannot be used.

According to **Conversion type** (2), 1 or 2 continuous words of data registers are used starting from the specified data register. Specify the first data register so that the device range is not exceeded.

Device for Present_Value	Storage Destination	
	Word Integer	Double Word Long Float (No Conversion)
Present_Value for reading	Starting number+0	Starting number+0, starting number+1

(2) Conversion type

Sets the data type of the device to which Present_Value (float) is allocated. For details, see Present_Value in "Analog Output Object" on page 15-46.

(3) Coefficient

The product of Present_Value multiplied by 1/coefficient multiplied is stored in the data registers.

$$\text{Value of data registers} = \text{Present_Value} \times (1/\text{coefficient})$$

For example, when the coefficient and data type are set as follows, Present_Value is stored in the data registers as follows.

BACnet Device Present_Value	Coefficient	Plus CPU module		
		Data Register	Data Type	Value
10.0	0.01	D0000	Word	1,000
1.25	0.5	D0000, D0001	Float	2.5

Notes:


The coefficient is multiplied as a float-type value. The conversion order is as follows.

- (1) Present_Value is multiplied by (1/coefficient).
- (2) The data type of the result of (1) (float) is converted.

Analog Value Object

Use these settings to configure devices for Present_Value of the Analog Value object.

This screenshot shows an example of when an Analog Value object ID is selected in the object list.

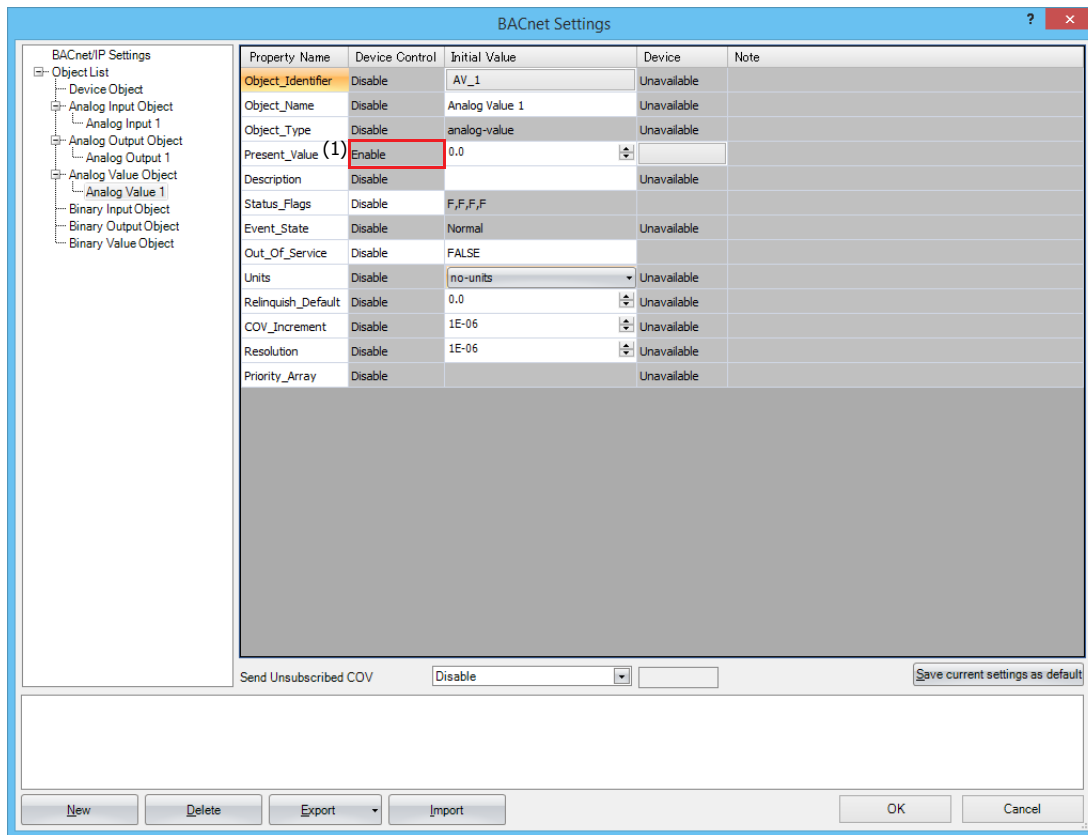


(1) Device Control

Device control for Present_Value is fixed to **Enable**.

Note: A fixed value cannot be set for Present_Value of the Analog Value object.

■ Allocating Devices to Present_Value

Configure the parameters in the **Present_Value Settings** dialog box.

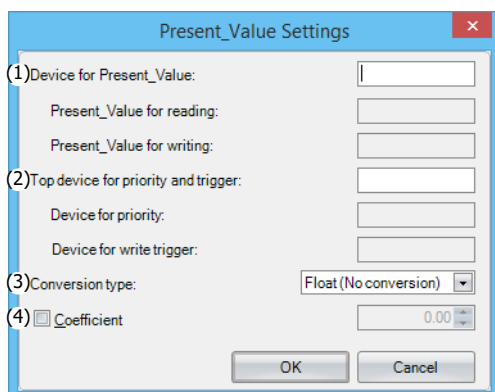

(1) Device for Present_Value

Sets the device for reading Present_Value and the device for writing Present_Value. Data registers are the only device that can be allocated to Present_Value.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	—	—	—	—	—	Yes*1	—

*1 Special data registers cannot be used.

The devices for reading Present_Value and writing Present_Value are automatically assigned according to the set device and **Conversion type** (3). Starting from the specified data register, 2 or 4 continuous words of data registers are used. Specify the first data register so that the device range is not exceeded.

Device for Present_Value	Storage Destination	
	Word Integer	Double Word Long Float (No Conversion)
Present_Value for reading	Starting number+0	Starting number+0, starting number+1
Present_Value for writing	Starting number+1	Starting number+2, starting number+3

(2) Top device for priority and trigger

Use this device when writing the value of the devices to Present_Value. For details, see Present_Value in "Analog Value Object" on page 15-47.

Device for priority and **Device for write trigger** are automatically assigned when the data register is set. Starting from the specified data register, 2 continuous words of data registers are used. Specify the first data register so that the device range is not exceeded.

Storage Destination	Description	
Starting number+0	Device for priority	
	Bit 15	Write NULL flag*1 OFF: Writes the value of the Present_Value for writing device. ON: Writes NULL.
	Bits 14 to 5	Disabled
	Bits 4 to 0	Priority*2
Starting number+1	Device for write trigger	

*1 When the Write NULL flag is on and the device for write trigger is turned on from off, NULL will be written to Priority_Array of the index number indicated by the priority.

*2 Specify the priority between 1 and 16. If the priority is out of range, the value will not be written, even if the device for write trigger is used.

(3) Conversion type

Sets the data type of the device to which Present_Value (float) is allocated. For details, see Present_Value in "Analog Value Object" on page 15-47.

(4) Coefficient

The product of Present_Value multiplied by 1/coefficient is stored in the data registers allocated as Present_Value for reading.
 $Present_Value \text{ for reading} = Present_Value \times (1/coefficient)$

When the device for write trigger is turned on from off, the product of multiplying the value of the data registers allocated as Present_Value for writing by the coefficient is set as Present_Value.

$Present_Value = Present_Value \text{ for writing} \times Coefficient$

Present_Value	Coefficient	Conversion Type	Data Registers Allocated as Present_Value for Reading/Writing	
			Address	Value
10.0	0.01	Word	D0000	1,000
1.25	0.5	Float	D0002, D0003	2.5

The coefficient is multiplied as a float-type value. The conversion order is as follows.

Data registers → Present_Value

- (1) The value of the data registers is converted to a float-type value.
- (2) The coefficient is multiplied by the conversion result in (1).


Present_Value → Data registers

- (1) Present_Value is multiplied by (1/coefficient).
- (2) The data type of the result of (1) (float) is converted.

Binary Input Object

Use these settings to configure fixed values and devices for Present_Value of the Binary Input object.

This screenshot shows an example of when a Binary Input object ID is selected in the object list.

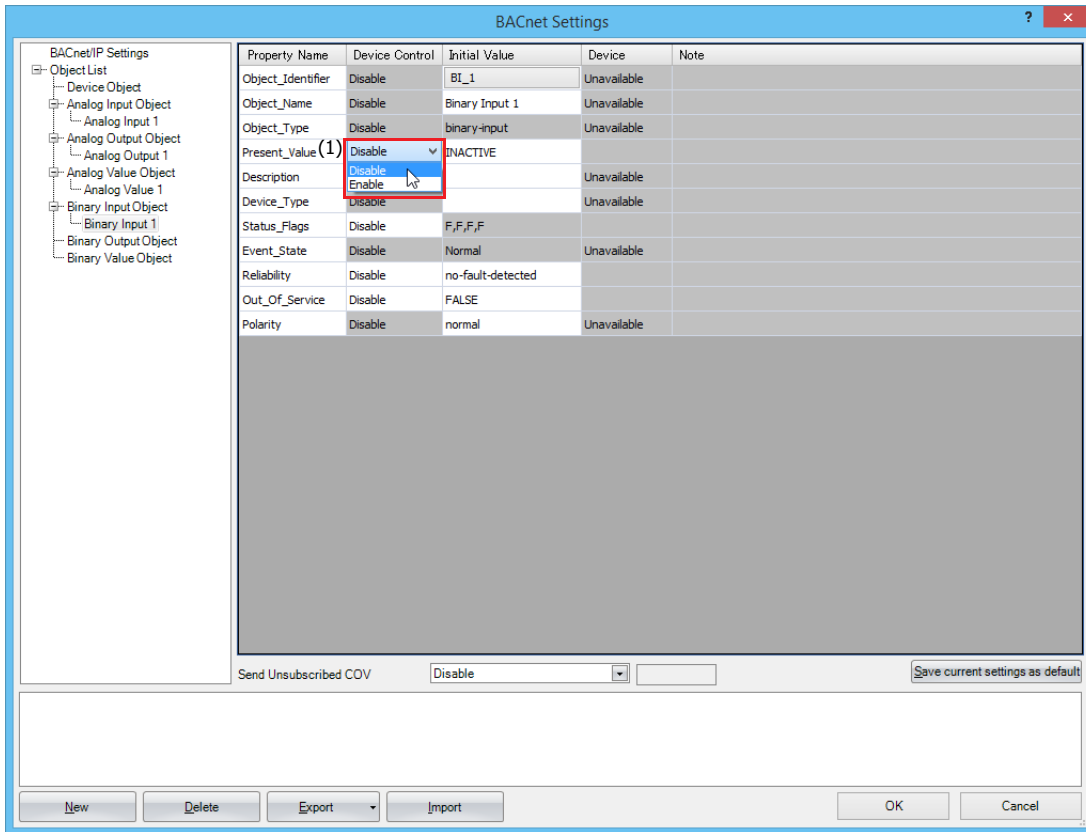


(1) Device Control

Selects whether to set a fixed value for Present_Value or to allocate data registers.

Device Control	Description
Disable	Set a fixed value for Present_Value.
Enable	Allocate data registers for Present_Value.


■ Setting a Fixed Value for Present_Value

Set device control of Present_Value (1) to **Disable**, and set a fixed value for the initial value.

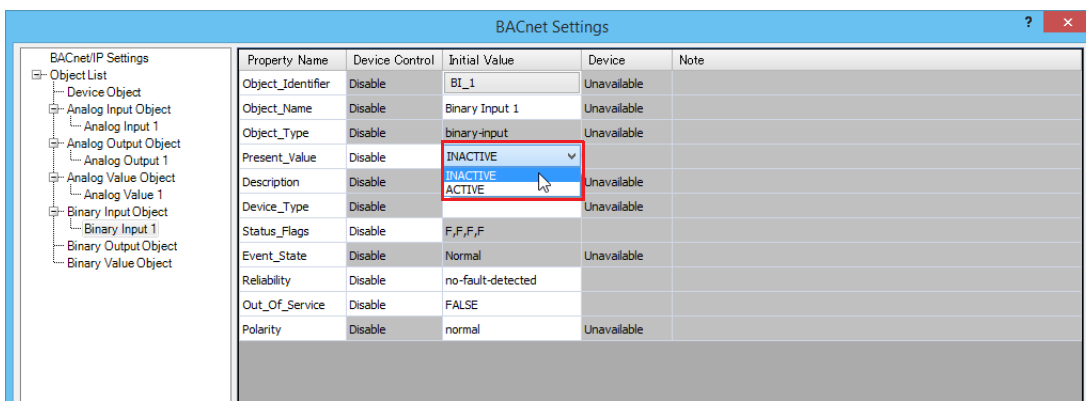

■Allocating Devices to Present_Value

Set device control of Present_Value (1) to **Enable**, and configure the parameters in the **Present_Value Settings** dialog box.

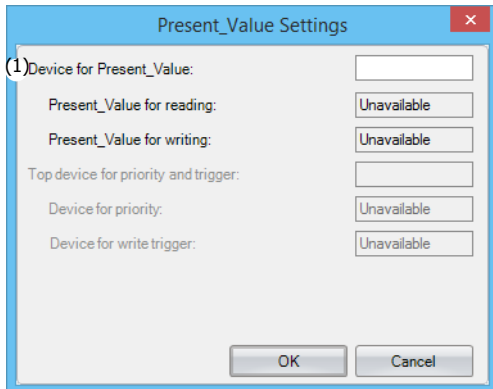

(1) Device for Present_Value

Sets the device to store Present_Value.


Properties	I	Q	M	R	T	C	D	Constant
Present_Value	Yes	—	Yes*1	—	—	—	—	—

*1 Special internal relays cannot be used.

Binary Output Object

Use these settings to configure devices for Present_Value of the Binary Value object.

This screenshot shows an example of when a Binary Output object ID is selected in the object list.

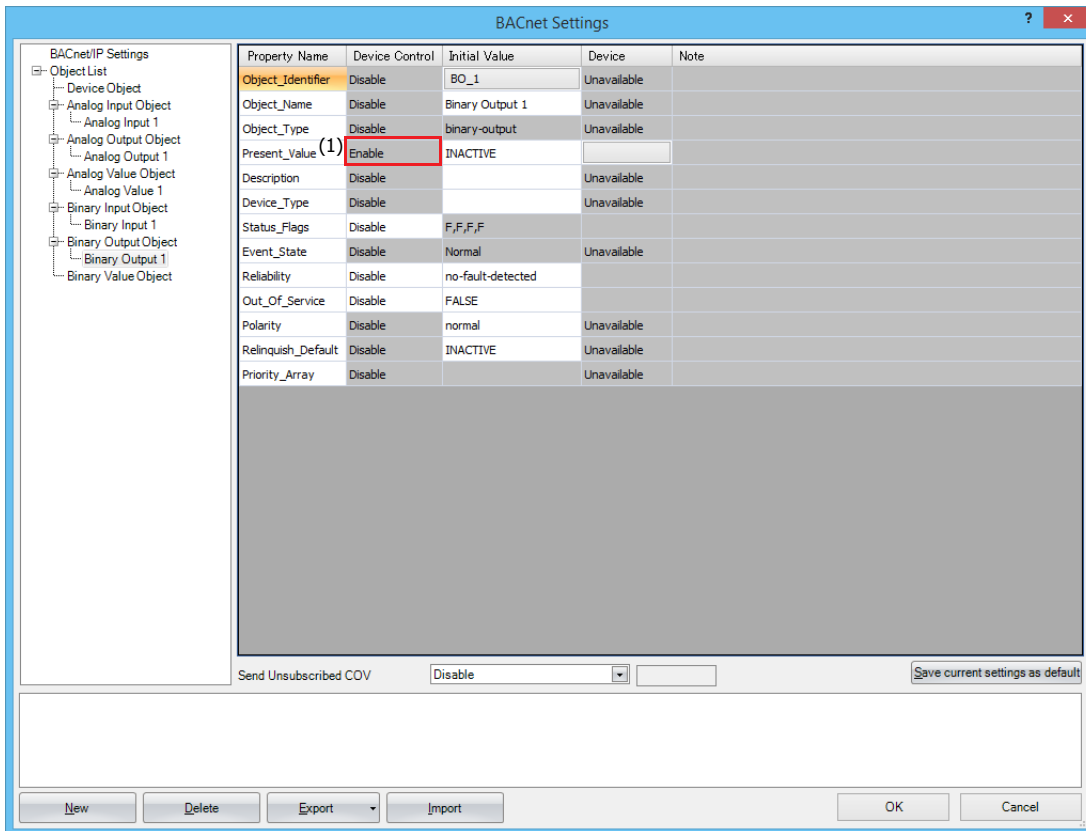


(1) Device Control

Device control for Present_Value is fixed to **Enable**.

Note: A fixed value cannot be set for Present_Value of the Binary Output object.

■ Allocating Devices to Present_Value

Configure the parameters in the **Present_Value Settings** dialog box.

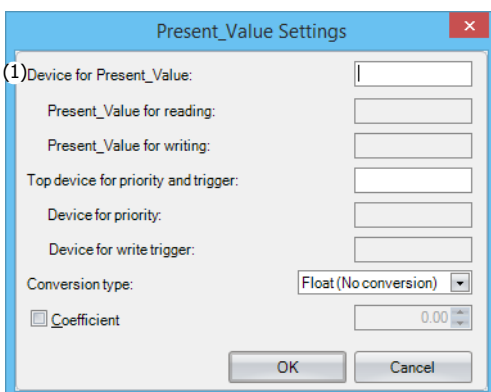

(1) Device for Present_Value

Sets the device to store Present_Value.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	Yes	Yes*1	—	—	—	—	—


*1 Special internal relays cannot be used.

15: BACNET/IP

Binary Value Object

Use these settings to configure devices for Present_Value of the Binary Value object.

This screenshot shows an example of when a Binary Value object ID is selected in the object list.

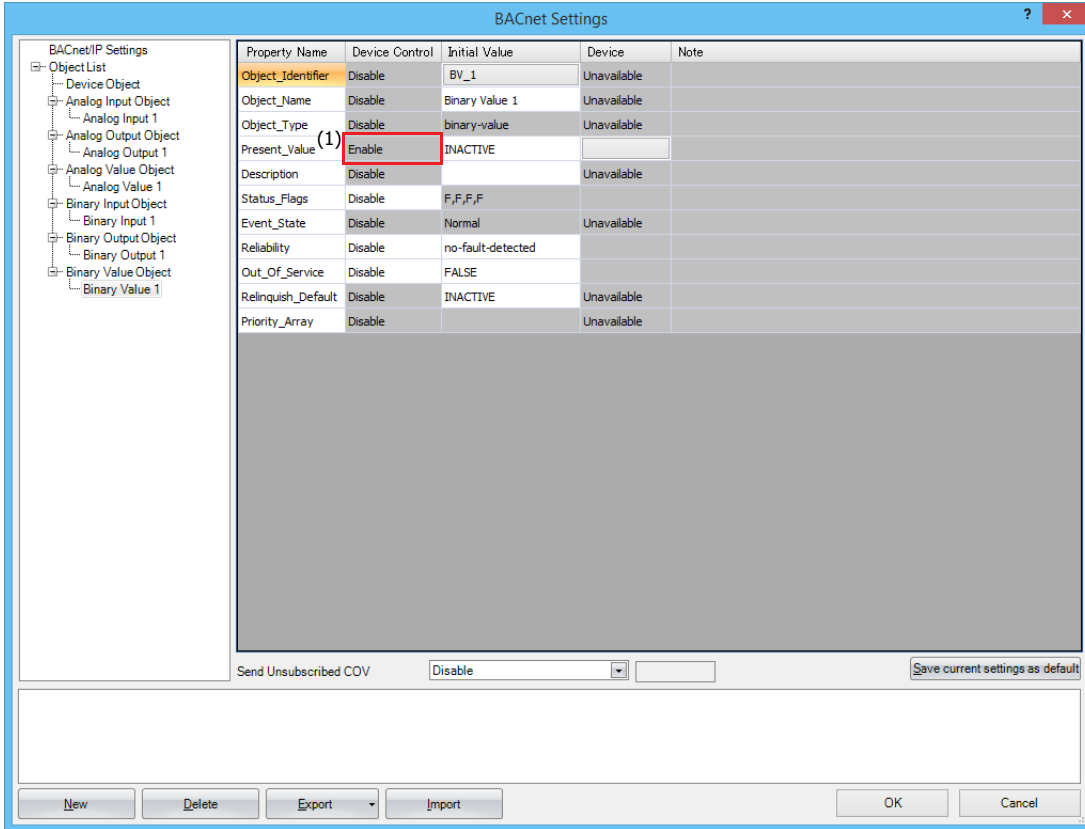


(1) Device Control

Device control for Present_Value is fixed to **Enable**.

Note: A fixed value cannot be set for Present_Value of the Binary Value object.

■ **Allocating Devices to Present_Value**

Configure the parameters in the **Present_Value Settings** dialog box.

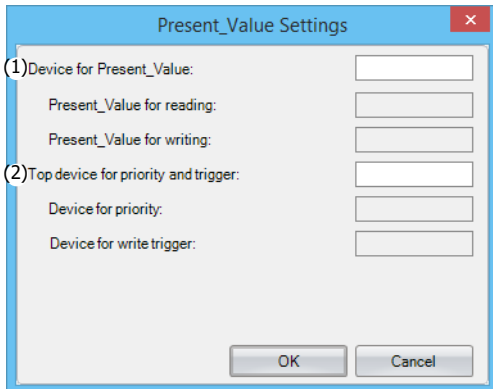

(1) Device for Present_Value

Sets the device for reading Present_Value and the device for writing Present_Value.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	—	Yes*1	—	—	—	—	—

*1 Special internal relays cannot be used.

The devices for reading Present_Value and writing Present_Value are automatically assigned according to the set device. Starting from the specified data register, 2 bits of the bit device are used. Specify the first bit device so that the device range is not exceeded.

Device for Present_Value	Storage Destination
Present_Value for reading	Starting number+0
Present_Value for writing	Starting number+1

(2) Top device for priority and trigger

Use this device when writing the value of the devices to Present_Value. For details, see Present_Value in "Binary Value Object" on page 15-52.

Device for priority and **Device for write trigger** are automatically assigned when the data register is set. Starting from the specified data register, 2 continuous words of data registers are used. Specify the first data register so that the device range is not exceeded.

Storage Destination	Description	
Starting number+0	Device for priority	
	Bit 15	Write NULL flag*1 OFF: Writes the value of the Present_Value for writing device. ON: Writes NULL.
	Bits 14 to 5	Disabled
	Bits 4 to 0	Priority*2
Starting number+1	Device for write trigger	


*1 When the Write NULL flag is on and the device for write trigger is turned on from off, NULL will be written to Priority_Array of the index number indicated by the priority.

*2 Specify the priority between 1 and 16. If the priority is out of range, the value will not be written, even if the device for write trigger is used.

Object List

Select an object node to display the list of registered objects.

For example, select Analog Input to display the list of Analog Input objects, and select the object list node to display the list of all objects. The properties can also be changed when the list is displayed.

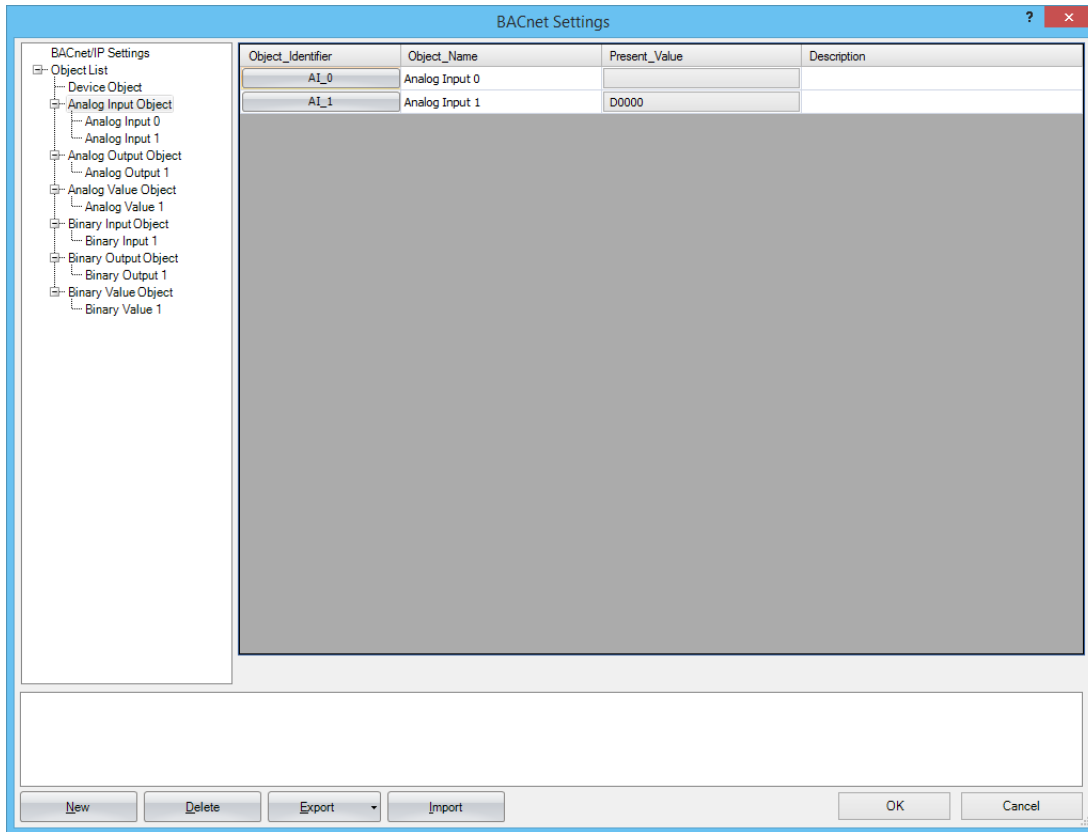

Objects


The Plus CPU module holds objects registered with WindLDR in internal memory. A portion of the properties held by objects can be allocated to devices, and those devices can be written to and read from a ladder program. BACnet devices can read and write the properties of objects on the Plus CPU module using services.

Properties of objects on the Plus CPU module and values of devices allocated to properties are continually synchronized.

For how to register objects using WindLDR, see "Adding a New Object" on page 15-18. The maximum number of objects that can be registered is 256.

The following diagram shows two concepts.

- (1) The BACnet device reads the analog input value of the Analog Input object.
- (2) The BACnet device writes the analog output value of the Analog Output object.

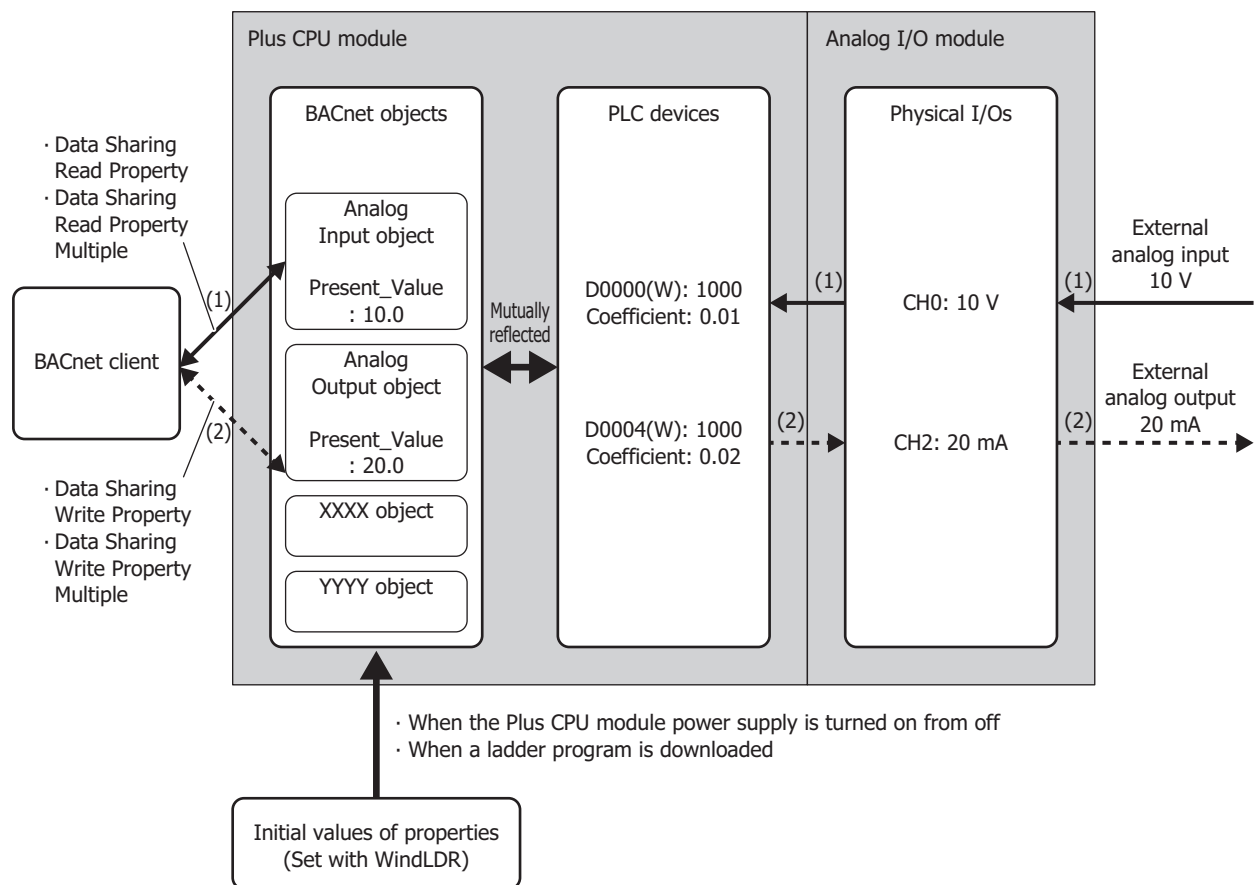

For details on properties held by objects, refer to "BACnet Building Automation Data Communication Protocol".

Analog Input Object

This object manages a float-type numeric value. The Plus CPU module can make arbitrary numeric values available to BACnet devices. For example, use this object when handling analog values input with the analog input module, the measured room temperature, and other analog values.

Properties List

This list shows the properties supported by the Analog Input object.

- (1): Read/write from BACnet devices
- (2): Read/write from ladder programs when properties are allocated to devices

R: Read-only, W: Write-only, R/W: Readable/writable, -: Not readable/writable

Property Identifier	Data Type of Property	(1)	(2)	Comments
Object_Identifier	BACnetObjectIdentifier	R	-	Set a fixed value with WindLDR.
Object_Name	Character string*1	R	-	Set a fixed value with WindLDR.
Object_Type	BACnetObjectType	R	-	Set a fixed value with WindLDR.
Present_Value	Real number	R	W	See "Present_Value" on page 15-41.
Description	Character string*1	R	-	Set a fixed value with WindLDR.
Device_Type	Character string*1	R	-	Set a fixed value with WindLDR.
Status_Flags	BACnetStatus_Flags	R	R	See "Status_Flags" on page 15-54.
Event_State	BACnetEventState	R	-	Normal (fixed).
Reliability	BACnetReliability	R	R/W	Indicates whether or not the value of Present_Value is reliable.
Out_Of_Service	Logical value	R/W	R/W	See "Out_Of_Service" on page 15-55.
Units	BACnetEngineeringUnits	R/W	-	Set the initial value with WindLDR.
Resolution	Real number	R	-	Set a fixed value with WindLDR.
COV_Increment	Real number	R/W	-	See "COV_Increment" on page 15-54.
Property_List	BACnetARRAY[N] of type BACnetPropertyIdentifier	Hidden	-	Hidden in WindLDR.

*1 Character encoding is ISO 10646 (UTF-8), and the maximum size is 64 bytes.

Analog Output Object

This object manages a float-type numeric value. The Plus CPU module can receive arbitrary numeric values from BACnet devices. For example, this object is used when receiving analog values such as those values that are output with the analog output module and temperature set points used as operating parameters from BACnet devices.

Properties List

This list shows the properties supported by the Analog Output object.

(1): Read/write from BACnet devices

(2): Read/write from ladder programs when properties are allocated to devices

R: Read-only, W: Write-only, R/W: Readable/writable, -: Not readable/writable

Property Identifier	Data Type of Property	(1)	(2)	Comments
Object_Identifier	BACnetObjectIdentifier	R	-	Set a fixed value with WindLDR.
Object_Name	Character string* ¹	R	-	Set a fixed value with WindLDR.
Object_Type	BACnetObjectType	R	-	Set a fixed value with WindLDR.
Present_Value	Real number	R	R	See "Present_Value" on page 15-41.
Description	Character string* ¹	R	-	Set a fixed value with WindLDR.
Device_Type	Character string* ¹	R	-	Set a fixed value with WindLDR.
Status_Flags	BACnetStatus_Flags	R	R	See "Status_Flags" on page 15-54.
Event_State	BACnetEventState	R	-	Normal (fixed).
Reliability	BACnetReliability	R	R/W	Indicates whether or not the value of Present_Value is reliable.
Out_Of_Service	Logical value	R/W	R/W	See "Out_Of_Service" on page 15-55.
Units	BACnetEngineeringUnits	R/W	-	Set the initial value with WindLDR.
Resolution	Real number	R	-	Set a fixed value with WindLDR.
Priority_Array	BACnetPriority_Array	R/W	-	See "Priority_Array" on page 15-54.
Relinquish_Default	Real number	R/W	-	See "Relinquish_Default" on page 15-54.
COV_Increment	Real number	R/W	-	See "COV_Increment" on page 15-54.
Property_List	BACnetARRAY[N] of type BACnetPropertyIdentifier	Hidden	-	Hidden in WindLDR.

*1 Character encoding is ISO 10646 (UTF-8), and the maximum size is 64 bytes.

Analog Value Object

This object can be used in the same manner as the Analog Input object and Analog Output object.

Properties List

This list shows the properties supported by the Analog Value object.

(1): Read/write from BACnet devices

(2): Read/write from ladder programs when properties are allocated to devices

R: Read-only, W: Write-only, R/W: Readable/writable, -: Not readable/writable

Property Identifier	Data Type of Property	(1)	(2)	Comments
Object_Identifier	BACnetObjectIdentifier	R	-	Set a fixed value with WindLDR.
Object_Name	Character string*1	R	-	Set a fixed value with WindLDR.
Object_Type	BACnetObjectType	R	-	Set a fixed value with WindLDR.
Present_Value	Real number	R	R	See "Present_Value" on page 15-41.
Description	Character string*1	R	-	Set a fixed value with WindLDR.
Status_Flags	BACnetStatus_Flags	R	R	See "Status_Flags" on page 15-54.
Event_State	BACnetEventState	R	-	Normal (fixed).
Reliability	BACnetReliability	R	R/W	Indicates whether or not Present_Value is reliable.
Out_Of_Service	Logical value	R/W	R/W	See "Out_Of_Service" on page 15-55.
Units	BACnetEngineeringUnits	R/W	-	Set the initial value with WindLDR.
Priority_Array	BACnetPriority_Array	R/W	R/W	See "Priority_Array" on page 15-54.
Relinquish_Default	Real number	R/W	-	See "Relinquish_Default" on page 15-54.
COV_Increment	Real number	R/W	-	See "COV_Increment" on page 15-54.
Resolution	Real number	R	-	Set a fixed value with WindLDR.
Property_List	BACnetARRAY[N] of type BACnetPropertyIdentifier	Hidden	-	Hidden in WindLDR.

*1 Character encoding is ISO 10646 (UTF-8), and the maximum size is 64 bytes.

Binary Input Object

This object manages a binary value (on/off). Use this object when the Plus CPU module makes binary values available to BACnet devices.

Properties List

This list shows the properties supported by the Binary Input object.

(1): Read/write from BACnet devices

(2): Read/write from ladder programs when properties are allocated to devices

R: Read-only, W: Write-only, R/W: Readable/writable, -: Not readable/writable

Property Identifier	Data Type of Property	(1)	(2)	Comments
Object_Identifier	BACnetObjectIdentifier	R	-	Set a fixed value with WindLDR.
Object_Name	Character string*1	R	-	Set a fixed value with WindLDR.
Object_Type	BACnetObjectType	R	-	Set a fixed value with WindLDR.
Present_Value	BACnetBinaryPV	R	W	See "Present_Value" on page 15-41.
Description	Character string*1	R	-	Set a fixed value with WindLDR.
Device_Type	Character string*1	R	-	Set a fixed value with WindLDR.
Status_Flags	BACnetStatus_Flags	R	R	See "Status_Flags" on page 15-54.
Event_State	BACnetEventState	R	-	Normal (fixed).
Reliability	BACnetReliability	R	R/W	Indicates whether or not the value of Present_Value is reliable.
Out_Of_Service	Logical value	R/W	R/W	See "Out_Of_Service" on page 15-55.
Polarity	BACnetPolarity	R/W	-	See "Polarity" on page 15-54.
Property_List	BACnetARRAY[N] of type BACnetPropertyIdentifier	Hidden	-	Hidden in WindLDR.

*1 Character encoding is ISO 10646 (UTF-8), and the maximum size is 64 bytes.

Binary Output Object

This object manages a binary value (on/off). Use this object when the Plus CPU module receives binary values from BACnet devices.

Properties List

This list shows the properties supported by the Binary Output object.

(1): Read/write from BACnet devices

(2): Read/write from ladder programs when properties are allocated to devices

R: Read-only, W: Write-only, R/W: Readable/writable, -: Not readable/writable

Property Identifier	Data Type of Property	(1)	(2)	Comments
Object_Identifier	BACnetObjectIdentifier	R	-	Set a fixed value with WindLDR.
Object_Name	Character string*1	R	-	Set a fixed value with WindLDR.
Object_Type	BACnetObjectType	R	-	Set a fixed value with WindLDR.
Present_Value	BACnetBinaryPV	R	R	See "Present_Value" on page 15-41.
Description	Character string*1	R	-	Set a fixed value with WindLDR.
Device_Type	Character string*1	R	-	Set a fixed value with WindLDR.
Status_Flags	BACnetStatus_Flags	R	R	See "Status_Flags" on page 15-54.
Event_State	BACnetEventState	R	-	Normal (fixed).
Reliability	BACnetReliability	R	R/W	Indicates whether or not the value of Present_Value is reliable.
Out_Of_Service	Logical value	R/W	R/W	See "Out_Of_Service" on page 15-55.
Polarity	BACnetPolarity	R/W	-	See "Polarity" on page 15-54.
Priority_Array	BACnetPriority_Array	R/W	-	See "Priority_Array" on page 15-54.
Relinquish_Default	BACnetBinaryPV	R/W	-	See "Relinquish_Default" on page 15-54.
Property_List	BACnetARRAY[N] of type BACnetPropertyIdentifier	Hidden	-	Hidden in WindLDR.

*1 Character encoding is ISO 10646 (UTF-8), and the maximum size is 64 bytes.

Binary Value Object

This object can be used in the same manner as the Binary Input object and Binary Output object.

Properties List

This list shows the properties supported by the Binary Value object.

(1): Read/write from BACnet devices

(2): Read/write from ladder programs when properties are allocated to devices

R: Read-only, W: Write-only, R/W: Readable/writable, -: Not readable/writable

Property Identifier	Data Type of Property	(1)	(2)	Comments
Object_Identifier	BACnetObjectIdentifier	R	-	Set a fixed value with WindLDR.
Object_Name	Character string ^{*1}	R	-	Set a fixed value with WindLDR.
Object_Type	BACnetObjectType	R	-	Set a fixed value with WindLDR.
Present_Value	BACnetBinaryPV	R	R	See "Present_Value" on page 15-41.
Description	Character string ^{*1}	R	-	Set a fixed value with WindLDR.
Status_Flags	BACnetStatus_Flags	R	R	See "Status_Flags" on page 15-54.
Event_State	BACnetEventState	R	-	Normal (fixed).
Reliability	BACnetReliability	R	R/W	Indicates whether or not the value of Present_Value is reliable.
Out_Of_Service	Logical value	R/W	R/W	See "Out_Of_Service" on page 15-55.
Priority_Array	BACnetPriority_Array	R/W	R/W	See "Priority_Array" on page 15-54.
Relinquish_Default	BACnetBinaryPV	R/W	-	See "Relinquish_Default" on page 15-54.
Property_List	BACnetARRAY[N] of type BACnetPropertyIdentifier	Hidden	-	Hidden in WindLDR.

*1 Character encoding is ISO 10646 (UTF-8), and the maximum size is 64 bytes.

15: BACNET/IP

Device Object

Use this object when the Plus CPU module makes basic information available to BACnet devices.

Properties List

This list shows the properties supported by the Device object.

(1): Read/write from BACnet devices

(2): Read/write from ladder programs when properties are allocated to devices

R: Read-only, W: Write-only, R/W: Readable/writable, -: Not readable/writable

Property Identifier	Data Type of Property	(1)	(2)	Comments
Object_Identifier	BACnetObjectIdentifier	R	-	Cannot be edited with WindLDR.
Object_Name	Character string*1	R	-	Set a fixed value with WindLDR.
Object_Type	BACnetObjectType	R	-	Cannot be edited with WindLDR.
System_Status	BACnetDeviceStatus	R	-	Cannot be edited with WindLDR.
Vendor_Name	Character string*1	R	-	Cannot be edited with WindLDR.
Vendor_Identifier	16-bit unsigned integer	R	-	Cannot be edited with WindLDR.
Model_Name	Character string*1	R	-	Set a fixed value with WindLDR.
Firmware_Revision	Character string*1	R	-	Cannot be edited with WindLDR.
Application_Software_Version	Character string*1	R	-	Set a fixed value with WindLDR.
Location	Character string*1	R/W	-	Set the initial value with WindLDR.
Description	Character string*1	R/W	-	Set the initial value with WindLDR.
Protocol_Version	Unsigned integer	R	-	Cannot be edited with WindLDR.
Protocol_Revision	Unsigned integer	R	-	Cannot be edited with WindLDR.
Protocol_Services_Supported	BACnetServicesSupported	R	-	Cannot be edited with WindLDR.
Protocol_Object_Types_Supported	BACnetObjectType Supported	R	-	Cannot be edited with WindLDR.
Object_List	BACnetARRAY[N] of type BACnetObjectIdentifier	R	-	Cannot be edited with WindLDR.
Max_APDU_Length_Accepted	Unsigned integer	R	-	Cannot be edited with WindLDR.
Segmentation_Supported	BACnetSegmentation	R	-	Cannot be edited with WindLDR.
Local_Time	Time	R	-	Cannot be edited with WindLDR.
Local_Date	Date	R	-	Cannot be edited with WindLDR.
APDU_Timeout	Unsigned integer	R	-	Cannot be edited with WindLDR.
Number_of_APDU_Retries	Unsigned integer	R	-	Cannot be edited with WindLDR.
Device_Address_Binding	BACnetLIST of type BACnetAddressBiding	R	-	Cannot be edited with WindLDR.
Database_Revision	Unsigned integer	R	-	Cannot be edited with WindLDR.
Property_List	BACnetARRAY[N] of type BACnetPropertyIdentifier	Hidden	-	Hidden in WindLDR.
Profile_Name	Character string*1	R	-	Set a fixed value with WindLDR.

*1 Character encoding is ISO 10646 (UTF-8), and the maximum size is 64 bytes.

Key Properties

Present_Value


This property represents the current value. This property handles input and output values associated with objects.

Priority Mechanism

Objects*1 with Present_Value that can be written from BACnet devices use a priority mechanism with Priority_Array in which write instructions are ranked and the value of Present_Value is determined. In this case, values cannot be directly written to Present_Value. To write a value to Present_Value, the value is first stored in Priority_Array ("Present_Value Settings" on page 15-21) at the index number indicated by **Priority** ((4) "Priority_Array" on page 15-54). Then the value stored in Priority_Array with the smallest index number out of all non-NULL values is used as the value of Present_Value.

*1 Analog Output/Analog Value/Binary Output/Binary Value objects

■ Writing the Value of a Data Register as Present_Value from a Ladder Program or Writing Present_Value from a BACnet Device

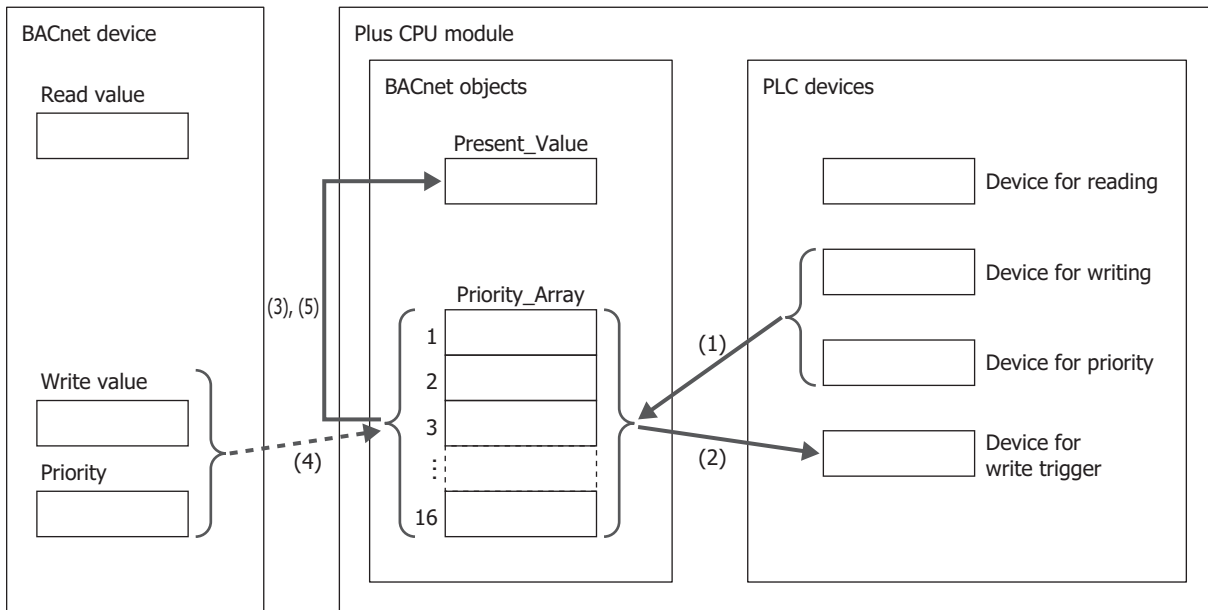

The items used in the above diagram are described in the following table.

Item	Description
Device for reading	This device stores Present_Value read from the BACnet device.
Device for writing	This device stores the value to be written to the BACnet device as Present_Value.
Device for priority	This device stores the index number in the array (Priority_Array) where the priority value is stored.
Device for write trigger	When this device is 1, the value stored in the device for writing is stored in Priority_Array at the index number stored in device for priority.
Present_Value	Present_Value held by the BACnet object in the Plus CPU module.
Priority_Array	See "Priority_Array" on page 15-54.
Read value	Current Present_Value.
Write value	Present_Value to be written from the BACnet device.

Writing from a Ladder Program

- (1) When bit 15 of **Device for priority** is 0 and **Device for write trigger** is 1, the value of **Device for writing** is written to Priority_Array at the index number stored in **Device for priority**.
- (2) **Device for write trigger** is automatically reset to 0.
- (3) The value stored in Priority_Array with the smallest index number out of all non-NULL values is used as the value of Present_Value. (The value of Priority_Array at the index number is used as Present_Value until it is reset to NULL.)

Note: When bit 15 of **Device for priority** is 1 and **Device for write trigger** is 1, NULL is written to Priority_Array at the index number stored in **Device for priority**.

For details on the bit assignments of the device for priority, see "Analog Value Object" on page 15-25 in "(2) Top device for priority and trigger" on page 15-26.


Writing from the BACnet Device

- (4) The BACnet device writes the value of Present_Value to Priority_Array at the index number indicated by the specified priority.
- (5) The value stored in the Priority_Array property with the smallest index number out of all non-NULL values is used as the value of Present_Value. (The value of Priority_Array at the index number is used as Present_Value until it is reset to NULL.)

Note: If all values stored in Priority_Array are NULL, "Relinquish_Default" on page 15-54 is used as Present_Value.

Writing the Value of a Data Register to Present_Value from a Ladder Program


For example, when D0000 is allocated to the Present_Value device, D0010 is allocated to the top device for priority and trigger, and float (no conversion) is allocated to the conversion type, the devices are allocated as follows: D0000 is the device for reading, D0002 is the device for writing, D0010 is the device for priority, and D0011 is the device for write trigger.

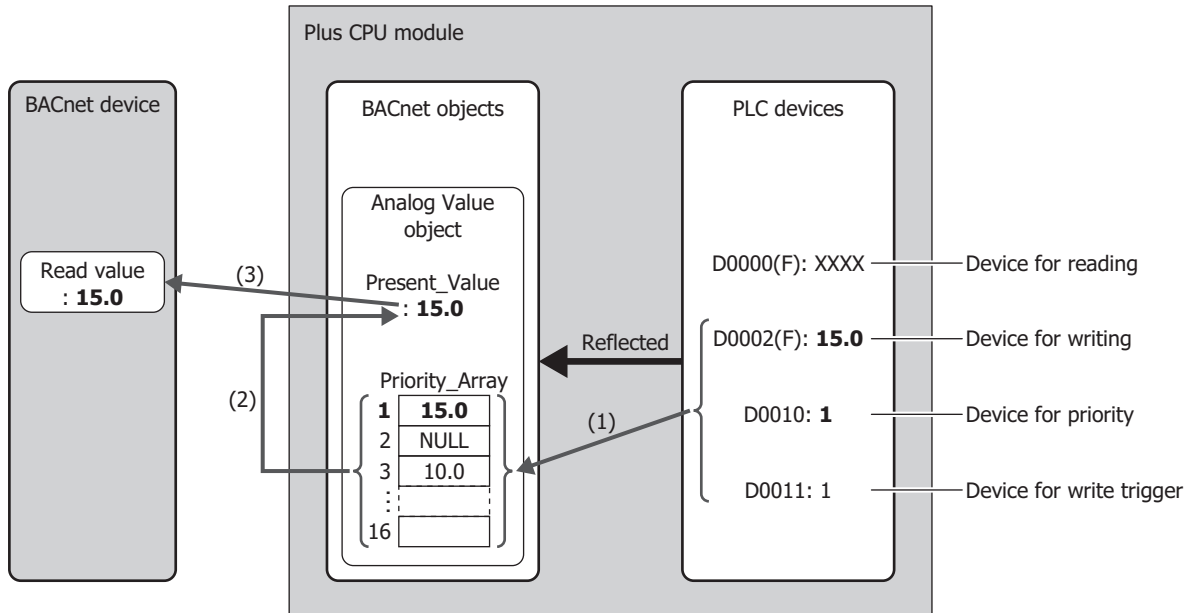

- (1) When the device for write trigger (D0011) is 1, the device for priority (D0010) is 1, so the value (15.0) of the device for writing (D0002) is written to element 1 of Priority_Array. After the write has completed, the device for write trigger (D0011) is reset to 0.
- (2) Priority_Array with the smallest index number out of all non-NULL values is element 1 (15.0), so 15.0 is used as the value of Present_Value.
- (3) Present_Value (15.0) is read from the BACnet device.

Writing a Value to Present_Value from the BACnet Device

For example, when D0000 is allocated to the Present_Value device, D0010 is allocated to the top device for priority and trigger, and float (no conversion) is allocated to the conversion type, the devices are allocated as follows: D0000 is the device for reading, D0002 is the device for writing, D0010 is the device for priority, and D0011 is the device for write trigger.

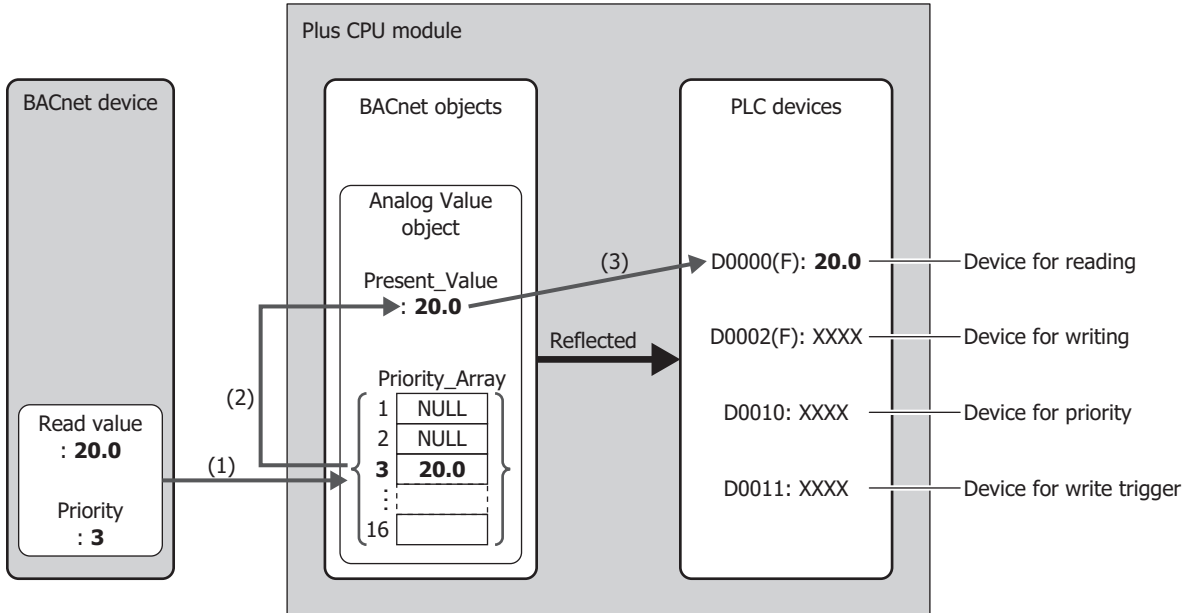


- (1) The BACnet device writes the write value (20.0) to Priority_Array at the index number indicated by the specified priority (3).
- (2) Priority_Array with the smallest index number out of all non-NULL values is element 3 (20.0), so 20.0 is used as the value of Present_Value.
- (3) Present_Value (20.0) is written to the device for reading (D0000).

Analog Input Object

Present_Value of the Analog Input object can be set to a fixed value or allocated data registers and set to the value of those data register. Present_Value is a float-type numeric value. When data registers are allocated to Present_Value, Present_Value is set to the product of those data registers multiplied by the coefficient.

The following diagram illustrates the concept when data registers are allocated to Present_Value of the Analog Input object and the BACnet device reads out the analog input value.

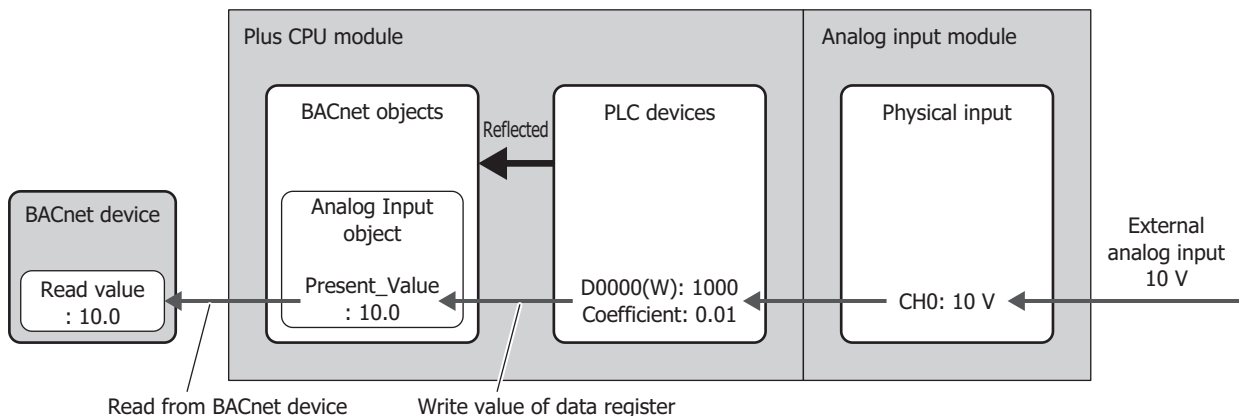

Data registers are the only device that can be allocated to Present_Value of the Analog Input object.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	—	—	—	—	—	Yes*1	—

*1 Special data registers cannot be used.

When writing the value of data registers as Present_Value, Present_Value changes in the following manner.

Data Type	Value of Data Registers	Present_Value of BACnet Device
Word	Value within range of each data type	Value of Data Registers
Integer		
Double Word		
Long		
Float (No Conversion)	±0	±0.0
	Denormalized number	Value of Data Registers
	Normalized number	
	±∞ (±infinity) Non-number	Present_Value does not change


The number of data registers required for writing Present_Value of the Analog Input object handled by the Plus CPU module depends on the data type.

Data Type of Present_Value Handled by the Plus CPU Module	Number of Data Registers
Word	1
Integer	
Double Word	2
Long	
Float (No Conversion)	

Analog Output Object

Present_Value of the Analog Output object can be allocated data registers and set to the value of those data registers. Present_Value is a float-type numeric value. When data registers are allocated to Present_Value, the product of Present_Value multiplied by 1/coefficient is stored in the data registers.

The following diagram illustrates the concept when data registers are allocated to Present_Value of the Analog Output object and the BACnet device writes the analog output value.

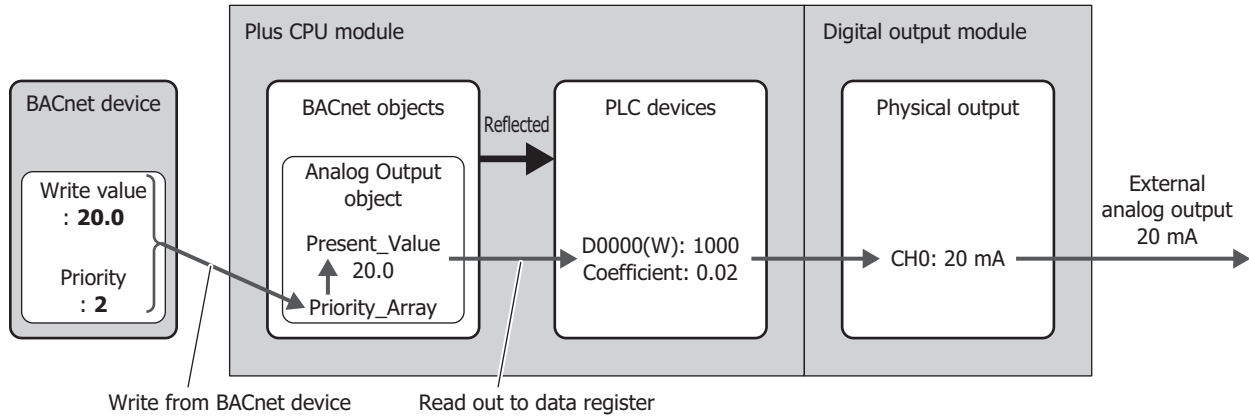

Note: Present_Value of the Analog Output object cannot be changed from a ladder program.

Data registers are the only device that can be allocated to Present_Value of the Analog Output object.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	—	—	—	—	—	Yes*1	—

*1 Special data registers cannot be used.

When reading out Present_Value to data registers, you must be aware of the data type. Depending on the data type of the data registers, the value is stored in the data registers as follows. Set the data type according to the value of Present_Value. The data type of Present_Value is set in "(2) Conversion type" on page 15-24 of the **Present_Value Settings** dialog box (page 15-24).

Data Type	Present_Value of BACnet Device	Value of Data Registers
Word	Value within range of 0 to 65,535	Present_Value
	Value outside range of 0 to 65,535	0
Integer	Value within range of -32,768 to 32,767	Present_Value
	Value outside range of -32,768 to 32,767	0
Double Word	Value within range of 0 to 4,294,967,295	Present_Value
	Value outside range of 0 to 4,294,967,295	0
Long	Value within range of -2,147,483,648 to 2,147,483,647	Present_Value
	Value outside range of -2,147,483,648 to 2,147,483,647	0
Float (No Conversion)	—	Present_Value

The number of data registers required for reading Present_Value of the Analog Output object handled by the Plus CPU module depends on the data type.

Data Type of Present_Value Handled by the Plus CPU Module	Number of Data Registers
Word	1
Integer	
Double Word	2
Long	
Float (No Conversion)	


Analog Value Object

Present_Value of the Analog Value object can be used as Present_Value of both the Analog Input and Analog Output objects. Present_Value is a float-type numeric value.

The following diagram illustrates the concept when data registers are allocated to Present_Value of the Analog Value object and the temperature of an office air conditioner is temporarily lowered from the base temperature (27.0°C) to 26.5°C.


For example, when D0000 is allocated to the Present_Value device, D0010 is allocated to the top device for priority and trigger, and float (no conversion) is allocated to the conversion type, the devices are allocated as follows: D0000 is the device for reading, D0002 is the device for writing, D0010 is the device for priority, and D0011 is the device for write trigger.

Writing the Value of a Data Register to Present_Value from a Ladder Program

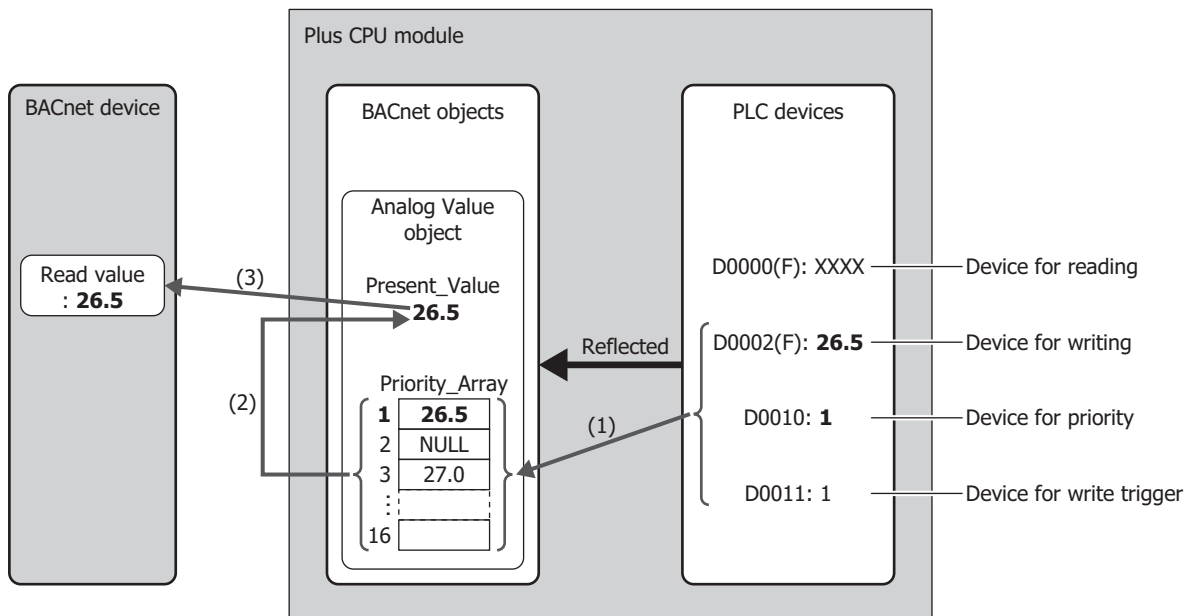

- (1) When the device for write trigger (D0011) is 1, the value of the device for writing (D0002) is written to Priority_Array at the index number stored in the device for priority (D0010).
- (2) The device for write trigger (D0011) is automatically reset to 0.
- (3) Priority_Array with the smallest index number out of all non-NULL values is element 1 (26.5), so 26.5 is used as the value of Present_Value.

Writing a Value to Present_Value from the BACnet Device

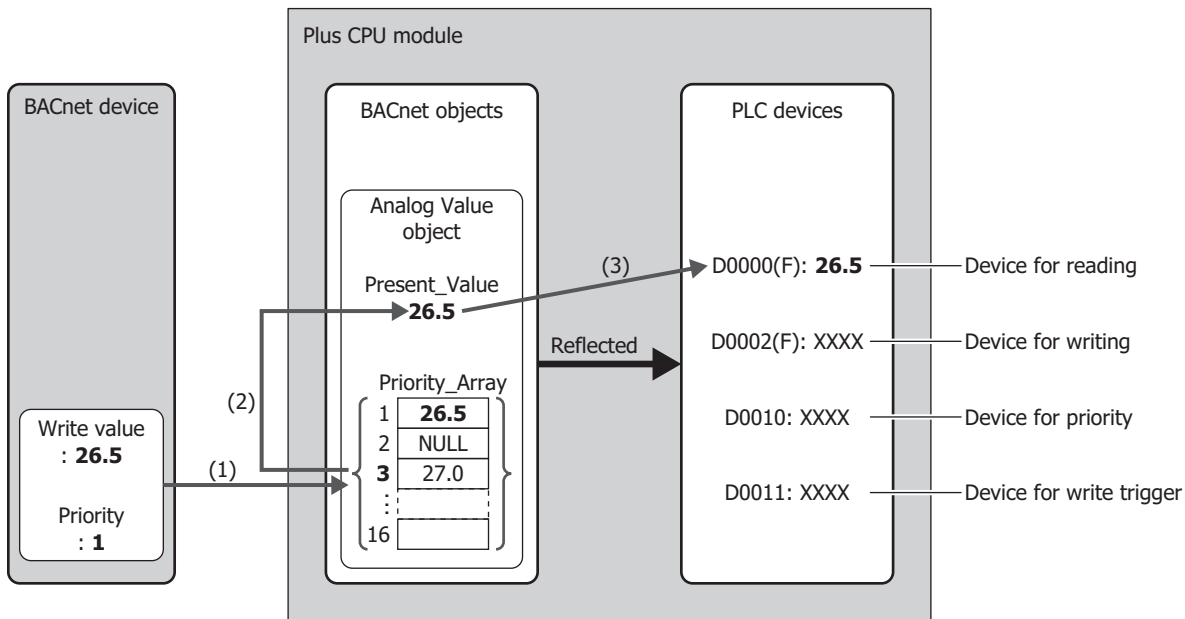

- (1) The BACnet device writes the write value (26.5) to Priority_Array at the index number indicated by the specified priority (1).
- (2) Priority_Array with the smallest index number out of all non-NULL values is element 1 (26.5), so 26.5 is used as the value of Present_Value.
- (3) Present_Value (26.5) is written to the device for reading (D0000).

Note: Element 1 (26.5) of Priority_Array is used as the value of Present_Value until it is reset to NULL. When element 1 is reset to NULL, element 3 (27.0) is used as the value of Present_Value.
 For how to write NULL, see "Analog Value Object" on page 15-25 in "(2) Top device for priority and trigger" on page 15-26.

Data registers are the only device that can be allocated to Present_Value of the Analog Value object.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	—	—	—	—	—	Yes*1	—

*1 Special data registers cannot be used.

The number of data registers required for reading and writing depends on the data type of Present_Value of the Analog Value object handled by the Plus CPU module. Starting from the specified data register, 2 or 4 data registers are used.

Data Type of Present_Value Handled by the Plus CPU Module	Number of Data Registers		
	Read	Write	Total
Word	1	1	2
Integer			
Double Word	2	2	4
Long			
Float (No Conversion)			

Depending on the data type of the allocated data registers, Present_Value is stored in the data registers as follows. Set the data type according to the value of Present_Value. The data type of Present_Value is set in "(3) Conversion type" on page 15-26 of the **Present_Value Settings** dialog box (page 15-25).

Data Type	Present_Value of BACnet Device × (1/Coefficient)	Value of Data Registers
Word	Value within range of 0 to 65,535	Present_Value
	Value outside range of 0 to 65,535	0
Integer	Value within range of -32,768 to 32,767	Present_Value
	Value outside range of -32,768 to 32,767	0
Double Word	Value within range of 0 to 4,294,967,295	Present_Value
	Value outside range of 0 to 4,294,967,295	0
Long	Value within range of -2,147,483,648 to 2,147,483,647	Present_Value
	Value outside range of -2,147,483,648 to 2,147,483,647	0
Float (No Conversion)	—	Present_Value


Additionally, when writing the value of data registers to Present_Value, Present_Value changes in the following manner.

Data Type	Value of Data Registers	Present_Value of BACnet Device
Word	Value within range of each data type	Value of data registers × Coefficient
Integer		
Double Word		
Long		
Float (No Conversion)	±0	±0.0
	Denormalized number	Value of data registers × Coefficient
	Normalized number	
	±∞ (±infinity) Non-number	Present_Value does not change

Binary Input Object

Present_Value of the Binary Input object can be set to a fixed value or allocated to a bit device and set to the value of that bit device. Present_Value is a binary value.

The following diagram illustrates the concept when an external input is allocated to Present_Value of the Binary Input object and the BACnet device reads out the state of the external input.

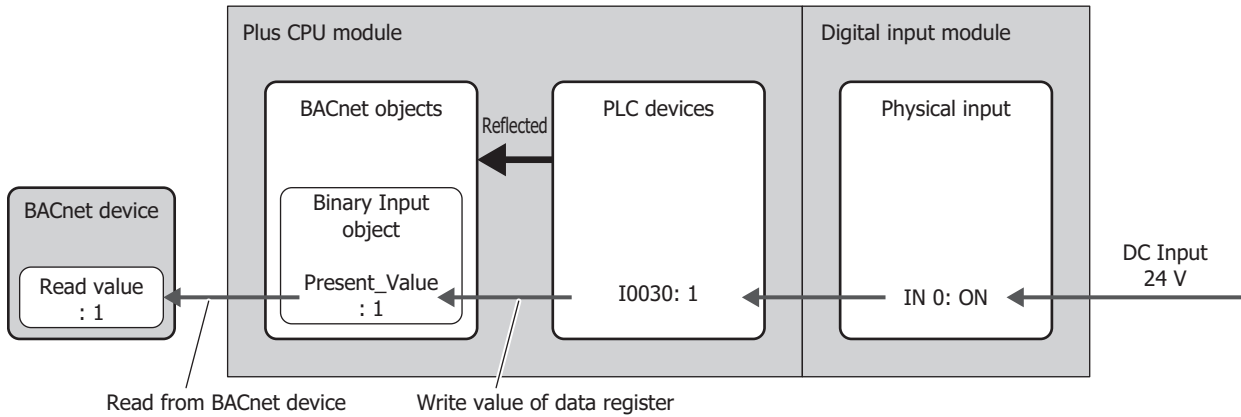

The devices that can be allocated to Present_Value of the Binary Input object are as follows.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	Yes	—	Yes*1	—	—	—	—	—

*1 Special internal relays cannot be used.


The following table shows Present_Value, Polarity, and the physical state of the input.

Present_Value	Polarity	Physical State of Input
INACTIVE	NORMAL	OFF or INACTIVE
ACTIVE	NORMAL	ON or ACTIVE
INACTIVE	REVERSE	ON or ACTIVE
ACTIVE	REVERSE	OFF or INACTIVE

Binary Output Object

Present_Value of the Binary Output object can be allocated to a bit device and set to the value of that bit device. Present_Value is a binary value.

The following diagram illustrates the concept when a data register is allocated to Present_Value of the Binary Output object and the BACnet device writes the state of the external output.

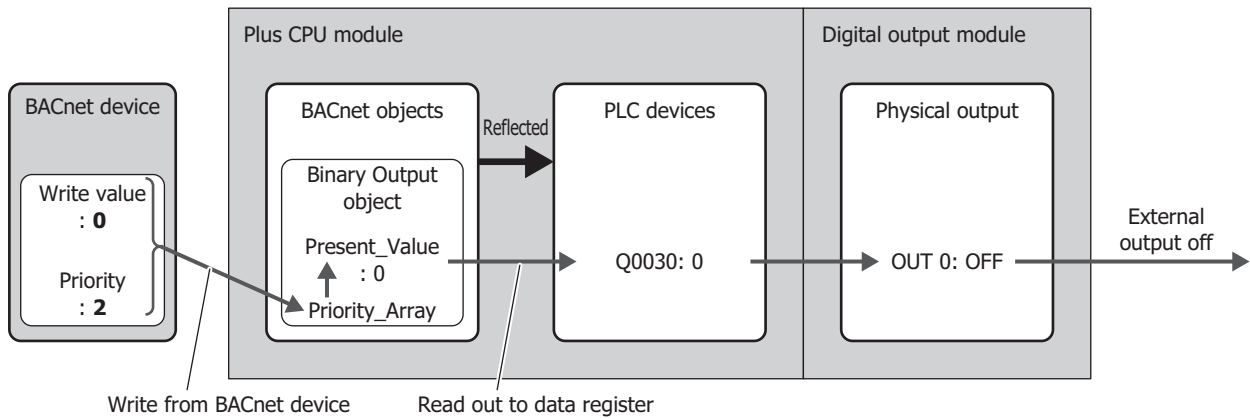

The devices that can be allocated to Present_Value of the Binary Output object are as follows.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	Yes	Yes*1	—	—	—	—	—

*1 Special internal relays cannot be used.

The following table shows Present_Value, Polarity, and the physical state of the output.

Present_Value	Polarity	Physical State of Output
INACTIVE	NORMAL	OFF or INACTIVE
ACTIVE	NORMAL	ON or ACTIVE
INACTIVE	REVERSE	ON or ACTIVE
ACTIVE	REVERSE	OFF or INACTIVE


Binary Value Object

Present_Value of the Binary Value object can be used as Present_Value of both the Binary Input and Binary Output objects. Present_Value is a binary value.

The following diagram illustrates the concept when an internal relay is allocated to Present_Value of the Binary Value object and the office lights are temporarily turned on from off.


For example, when M0000 is allocated to the Present_Value device and D0010 is allocated to the top device for priority and trigger, the devices are allocated as follows: M0000 is the device for reading, M0001 is the device for writing, D0010 is the device for priority, and D0011 is the device for write trigger.

Writing the Value of an Internal Relay to Present_Value from a Ladder Program

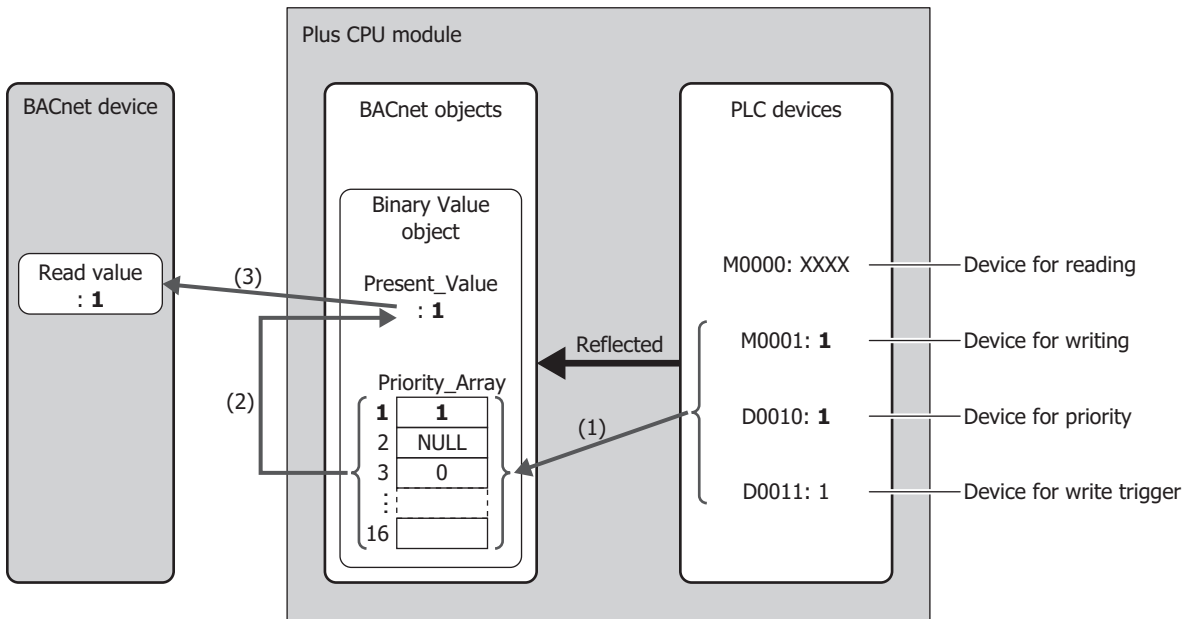

- (1) When the device for write trigger (D0011) is 1, the value of the device for writing (M0001) is written to Priority_Array at the index number stored in the device for priority (D0010).
- (2) The device for write trigger (D0011) is automatically reset to 0.
- (3) Priority_Array with the smallest index number out of all non-NULL values is element 1 (1), so 1 is used as the value of Present_Value.

Writing a Value to Present_Value from the BACnet Device

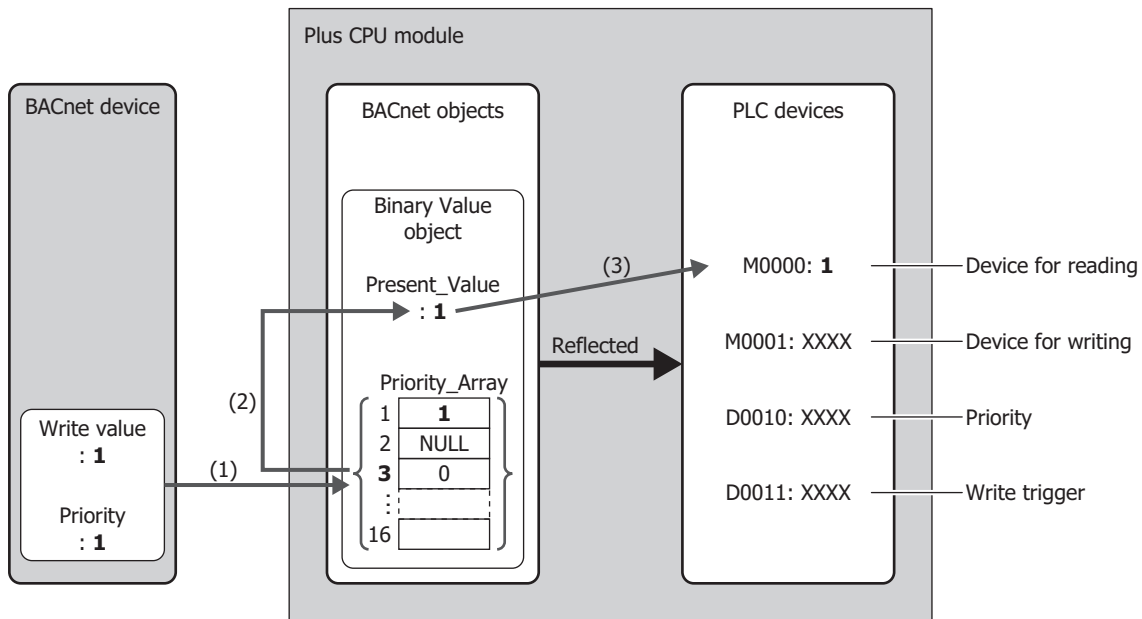

- (1) The BACnet device writes the write value (1) to Priority_Array at the index number indicated by the specified priority (1).
- (2) Priority_Array with the smallest index number out of all non-NULL values is element 1 (1), so 1 is used as the value of Present_Value.
- (3) Present_Value (1) is written to the device for reading (M0000).

Note: Element 1 (1) of Priority_Array is used as the value of Present_Value until it is reset to NULL. When element 1 is reset to NULL, element 3 (0) is used as the value of Present_Value.

For how to write NULL, see "Binary Value Object" on page 15-30 in "(2) Top device for priority and trigger" on page 15-31.

The devices that can be allocated to Present_Value of the Binary Value object are as follows.

Properties	I	Q	M	R	T	C	D	Constant
Present_Value	—	—	Yes*1	—	—	—	—	—

*1 Special internal relays cannot be used.

Internal relays are required for both reading and writing for Present_Value of the Binary Value object handled by the Plus CPU module. Starting from the specified internal relay, 2 internal relays are used.

Device	Read	Write	Total
Internal relay	1	1	2

Status_Flags

This property represents the current status of the object (in alarm, fault, out of service, etc.).

Status_Flags	Value	Logical Value	Condition
IN_ALARM*1	0	FALSE	When obtaining a value where Event State is Normal.
	1	TRUE	Other than above
FAULT	0	FALSE	Other than below
	1	TRUE	When Reliability is present and the no-fault-detected value is not obtained
OVERRIDDEN*1	0	FALSE	Other than below
	1	TRUE	Present_Value and Reliability did not follow the change in physical input
OUT_OF_SERVICE	0	FALSE	When Out_Of_Service is FALSE
	1	TRUE	When Out_Of_Service is TRUE

*1 Always FALSE on the Plus CPU module.

Status_Flags can be read out to a data register.

Properties	I	Q	M	R	T	C	D	Constant
Status_Flags	—	—	—	—	—	—	Yes*1	—

*1 Special data registers cannot be used.

The allocation of flags in the data register (bit assignment) is as follows.

Bit	Flag	Value
Bits 15 to 8	Reserved	Undefined
Bit 7	IN_ALARM	0 (fixed)
Bit 6	FAULT	0 / 1
Bit 5	OVERRIDDEN	0 (fixed)
Bit 4	OUT_OF_SERVICE	0 / 1
Bits 3 to 0	Reserved	Undefined

COV_Increment

This property represents the minimum amount of change in Present_Value.

COV notifications are sent when the value of Present_Value for the COV notification that was last sent changes to a value that is greater than or equal to the value set with COV_Increment. COV_Increment cannot be read out to device. Set the initial value with WindLDR.

Priority_Array

Priority_Array is a read-only property representing the array that stores the priority values.

Of the 16 elements in the array (element 1 to element 16), the value stored in Priority_Array with the smallest index number out of all non-NULL values is used as the value of Present_Value. If all values stored in Priority_Array are NULL, Relinquish_Default is used as Present_Value.

Relinquish_Default

Relinquish_Default is the default value used as Present_Value when all values stored in Priority_Array are NULL.

Polarity

This property represents the relationship between the physical state of the input/output and the logical state indicated by Present_Value in the Binary Input and Binary Output objects.

Polarity	Physical State of Input/Output	Present_Value	Physical State of Device
NORMAL	OFF/ INACTIVE	INACTIVE	Not running
NORMAL	ON/ ACTIVE	ACTIVE	Running
REVERSE	ON/ ACTIVE	INACTIVE	Not running
REVERSE	OFF/ INACTIVE	ACTIVE	Running

Out_Of_Service

Out_Of_Service is the property that represents whether or not Present_Value and the physical input/output have been unbound.

If Out_Of_Service is TRUE, the object is out of service.

Properties	Value	Logical Value	Condition
Out_Of_Service	0	FALSE	In service (Present_Value and the physical input/output are bound.)
	1	TRUE	Out of service (Present_Value and the physical input/output are unbound.)

Out_Of_Service can be read out to an internal relay, and the status of an internal relay can be written as Out_Of_Service.

Properties	I	Q	M	R	T	C	D	Constant
Out_Of_Service	—	—	Yes*1	—	—	—	—	—

*1 Special internal relays cannot be used.

Note: Out_Of_Service = TRUE is used for simulations.

Reliability

This property represents the reliability of the object property.

The following table shows the definition of Reliability for each object type.

Yes: Valid, No: Invalid

Definition	Value	Analog Input	Analog Output	Analog Value	Binary Input	Binary Output	Binary Value
no-fault-detected	0	Yes	Yes	Yes	Yes	Yes	Yes
no-sensor	1	Yes	No	No	Yes	No	No
over-range	2	Yes	No	Yes	No	No	No
under-range	3	Yes	No	Yes	No	No	No
open-loop	4	Yes	Yes	No	Yes	Yes	No
shorted-loop	5	Yes	Yes	No	Yes	Yes	No
no-output	6	No	Yes	No	No	Yes	No
unreliable-other	7	Yes	Yes	Yes	Yes	Yes	Yes
process-error	8	No	No	No	No	No	No
multi-state-fault	9	No	No	No	No	No	No
configuration-error	10	No	No	No	No	No	No
-- enumeration value 11 is reserved for a future addendum	11	Yes	Yes	No	Yes	Yes	Yes
communication-failure	12	Yes	Yes	Yes	Yes	Yes	Yes
member-fault	13	No	No	No	No	No	No
monitored-object-fault	14	No	No	No	No	No	No
tripped	15	No	No	No	No	No	No

Reliability can be read out to a data register, and the value of a data register can be written as Reliability.

Properties	I	Q	M	R	T	C	D	Constant
Reliability	—	—	—	—	—	—	Yes*1	—

*1 Special data registers cannot be used.

System_Status

Indicates the physical status and logical status of the Plus CPU module.

Parameter	Value
OPERATIONAL	0
OPERATIONAL_READ_ONLY	1
DOWNLOAD_REQUIRED	2
DOWNLOAD_IN_PROGRESS	3
NON_OPERATIONAL	4
BACKUP_IN_PROGRESS	5

System_Status of the Plus CPU module is fixed as OPERATIONAL.

Firmware_Revision

This property is set with the system firmware version of the Plus CPU module.

Application_Software_Version

Set information about the application, such as the modification date of the created ladder program, as a fixed string with WindLDR.

Protocol_Services_Supported

This property represents the types of services that are supported by the Plus CPU module.

Protocol_Object_Types_Supported

This property represents the types of objects that are supported by the Plus CPU module.

Object_List

This property represents the list of created objects.

16: ETHERNET/IP COMMUNICATION

This chapter describes the EtherNet/IP communication function.

Overview

The Plus CPU module supports EtherNet/IP (scanner*¹) communication.

EtherNet/IP stands for "Ethernet Industrial Protocol", which is an industrial multi-vendor network that uses Ethernet.

The Plus CPU module works as a scanner in EtherNet/IP communication and communication can be performed with devices that are compatible with EtherNet/IP communication.


EtherNet/IP communication also uses standard Ethernet technologies, which allows networks to be built that include various Ethernet-compatible devices. The Plus CPU module has an adapter*¹ function in addition to a scanner function which also allows it to work as an adapter in EtherNet/IP communication.

*¹ In EtherNet/IP communication, the master side is called the scanner and the slave side is called the adapter. In general, an EtherNet/IP device that has a function to be given a request to open a CIP connection is called an adapter, and an EtherNet/IP device that also combines a function to give a request to open a CIP connection is called a scanner.

*² In this manual, a device that is compatible with EtherNet/IP communication is subsequently called an EtherNet/IP device.


Multi-Vendor Network between EtherNet/IP Devices

You can build a multi-vendor network between EtherNet/IP devices.

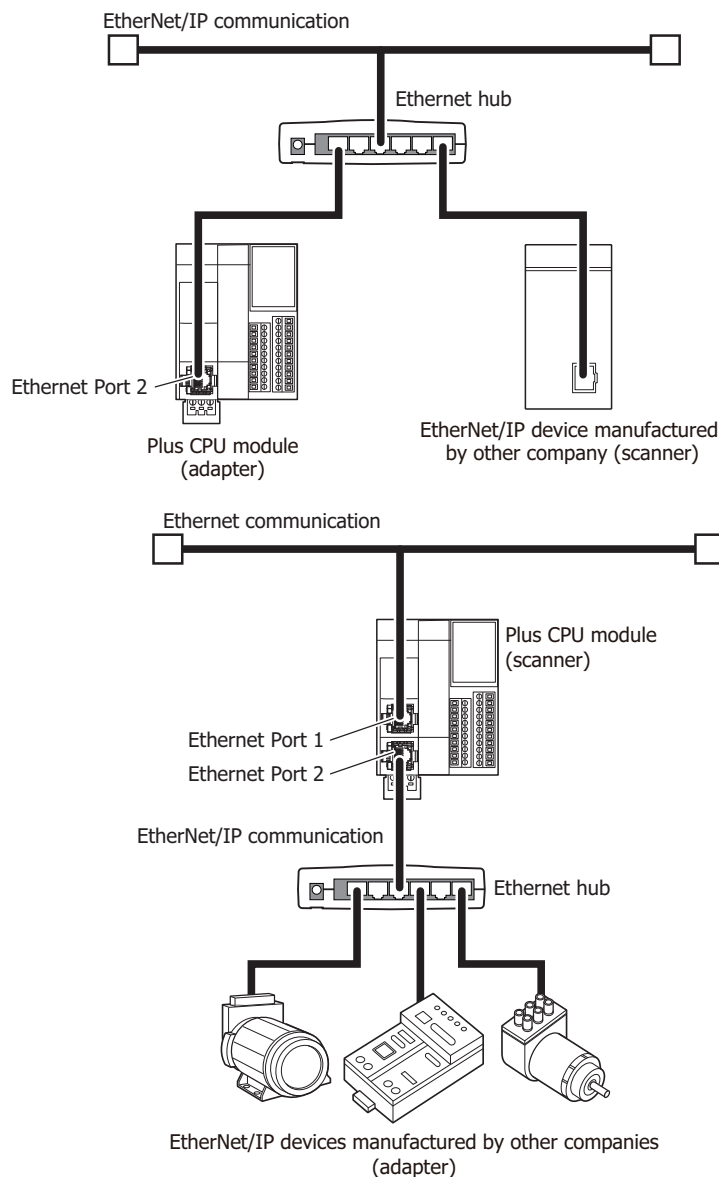

Network That Mixes General-Purpose Ethernet Devices

You can build a network that mixes EtherNet/IP devices and general-purpose Ethernet devices.

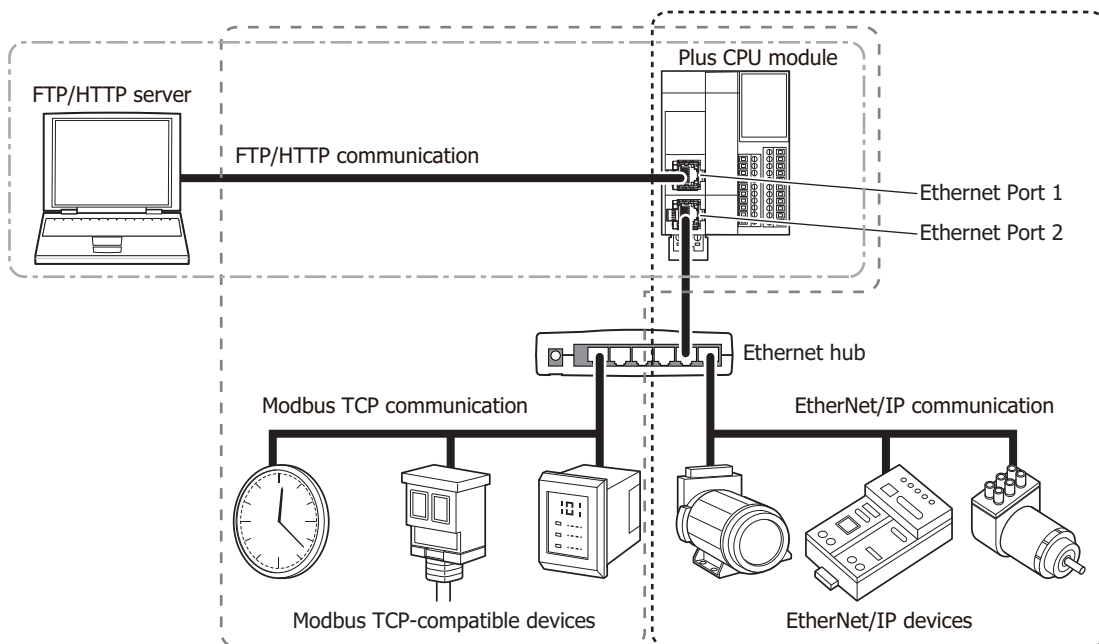

Note: When EtherNet/IP communication and other Ethernet communications are performed simultaneously on the same network, data may no longer be transmitted or received at the intended timing, depending on the load status. In this situation, build the network using an Ethernet switch that supports the QoS function and adjust the priority of data that flows on the network.

Communication Ports Used in EtherNet/IP

Supported models and communication ports are as follows.

Communication port	All-in-One CPU module			CAN J1939 All-in-One CPU module	Plus CPU module	
	16-I/O type	24-I/O Type	40-I/O Type		Plus 16-I/O type	Plus 32-I/O Type
Ethernet Port 1	—	—	—	—	—	—
Ethernet Port 2	—	—	—	—	Yes	Yes
HMI-Ethernet Port	—	—	—	—	—	—

EtherNet/IP Specifications

Module		Plus CPU module	
Supported Port		Ethernet Port 2	
I/O Message Communication Function	Number of CIP connections		32* ¹
	CIP connection points	Number of settings	8
		Predefined	Instance ID 198 (for Input Only output) Instance ID 199 (for Listen Only output)
	RPI (communication cycle)		10 to 10,000 ms (in 1 ms increments)
	CIP connection type		Input Only/Exclusive Owner/Listen Only
	Trigger of send		Cyclic/COS (change of state)* ²
	Maximum data size per CIP connection		504 bytes or 1,444 bytes* ³ , * ⁴
	I/O message communication allowable bandwidth	504 bytes/packet	600pps
1,444 bytes/packet		200pps	
Multicast filter function* ⁵		Available (Multicast filter function)	
Explicit Message Communication Function	Class 3 (connection type)	Server	Number of CIP connections: 32* ⁶
		Client	Not supported
	UCMM	Server	Number of simultaneous executions: 32
		Client	Not supported

*1 The maximum number of connections is 32 in total with the CIP connections used in the class 3 (connection type) explicit message communication function.

*2 Communication can be performed with EtherNet/IP devices that output data with the Change Of State (transmit data when there is a change of state) method.

*3 For 1,444 bytes, the EtherNet/IP device must support Large Forward Open (CIP option specification).

*4 Make the total data size within 5,776 bytes for one CIP connection.

*5 With IGMP client function (igmpv2), you can filter an unnecessary multicast packet using an Ethernet switch corresponding to IGMP Snooping.

*6 The maximum number of connections is 32 in total with the CIP connections used in I/O message communication function.

EtherNet/IP

Supported Standards

EtherNet/IP communication in the Plus CPU module supports the following standards.

- EtherNet/IP

Vendor ID

The vendor ID is 159.

Device Profile

EtherNet/IP communication in the Plus CPU module supports the scanner.

Objects

EtherNet/IP communication in the Plus CPU module supports the following objects.

Object Name	Class Code
Identity	01H
Message Router	02H
Assembly	04H
Connection Manager	06H
TCP/IP Interface	F5H
Ethernet Link	F6H

For details on objects, see "Objects" on page 16-41.

Function

The Plus CPU module provides the following functions as an EtherNet/IP device scanner.

- I/O message communication (originator/target) function (page 16-5)
- Explicit message communication (server) function (page 16-10)
- Data and device binding function (page 16-11)


I/O Message Communication Function

This section describes the I/O message communication function and how to use it.

■ What Is I/O Message Communication?

I/O message communication is a function that allows EtherNet/IP devices to cyclically read and write data with each other. The target unit for reading/writing data is called a CIP connection point. CIP tag names and instance IDs are assigned to CIP connection points. In I/O message communication, an EtherNet/IP device reads/writes data by specifying the CIP tag name or instance ID of a CIP connection point.

Conceptual Diagram of I/O Message Communication

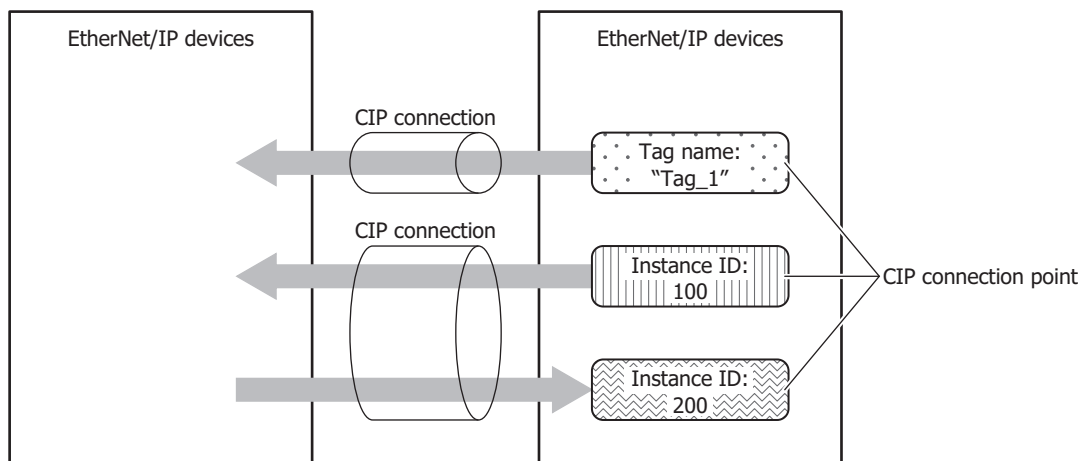

■ What Is a CIP Connection?


A CIP connection is a virtual communication line between EtherNet/IP devices. In I/O message communication, one device sends a request to open a CIP connection to the CIP connection point of the other device, and when successful, data is read and written. The side that sends the request to open the CIP connection is called the originator. The side that receives the request is called the target. The Plus CPU module can be the originator and the target. The Plus CPU module can open 32 CIP connections at the same time.

■ Types of CIP Connections

There are the following three types of CIP connections. Exclusive Owner can transmit and receive data. Input Only and Listen Only can only receive data.


(1) Exclusive Owner

This CIP connection cyclically transmits data from the target to the originator (1) and cyclically transmits data from the originator to the target (2). The CIP connection point is specified as a CIP tag name or an instance ID. Communication is performed at the cycle (RPI) specified when the CIP connection is opened. Data can be transmitted and received when the originator opens the connection.

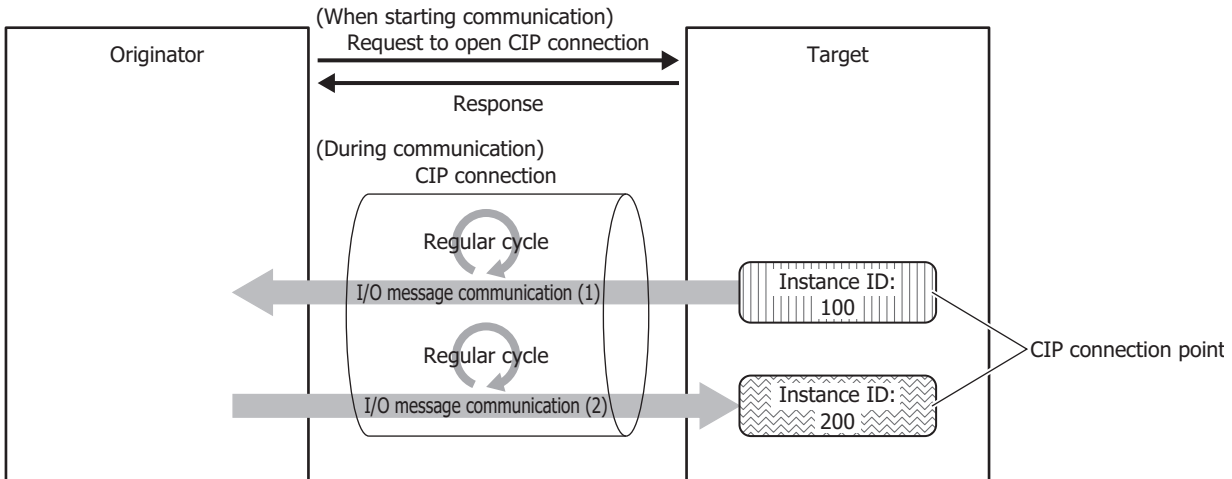

(2) Input Only

This CIP connection cyclically transmits data from the target to the originator (1). The CIP connection point is specified as a CIP tag name or an instance ID. Communication is performed at the cycle (RPI) specified when the CIP connection is opened. In order for the target to perform alive monitoring of the originator, a heartbeat that does not include data is cyclically transmitted from the originator to the target. The originator specifies the Input Only instance ID (198) on the target as the destination for the heartbeat. The heartbeat is transmitted at the specified cycle (RPI).

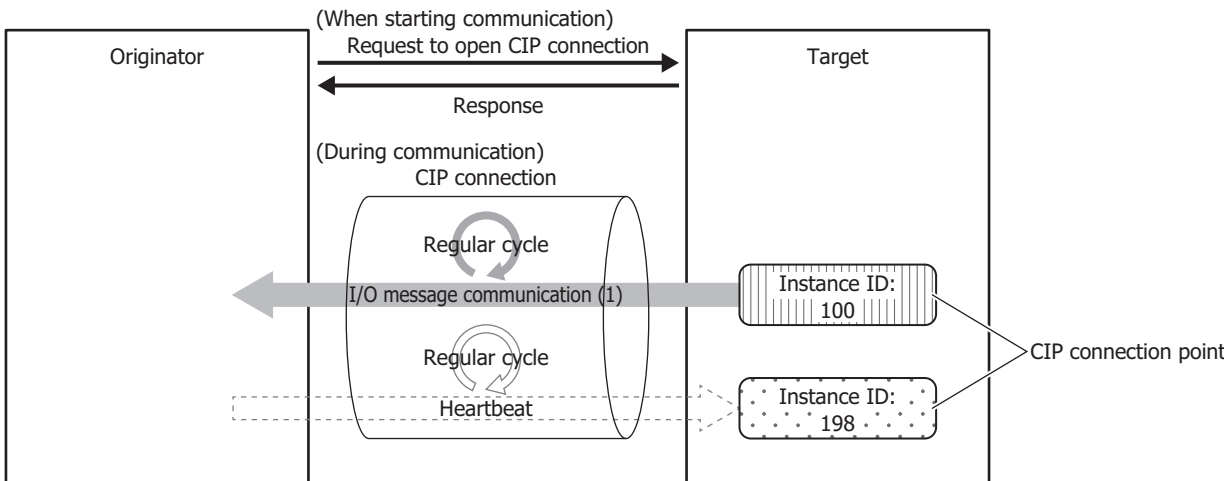


Notes:

- For Input Only, when setting the CIP connection point of the input data to receive from the target as an instance ID, set the CIP connection point of the heartbeat to transmit to the target as an instance ID too.
- For Input Only, when setting the CIP connection point of the input data to receive from the target as a CIP tag name, a CIP tag name of the CIP connection point of the output data to transmit to the target does not exist and is not set.
- The heartbeat is always performed in Input Only.

(3) Listen Only


This CIP connection cyclically receives data for originators from a target that already has a multicast type CIP connection using Exclusive Owner or Input Only opened. Set this connection type to simultaneously receive data when the target transmits that data by multicast to other originators. The CIP connection point is specified as an instance ID. Communication is performed at the cycle (RPI) specified when the CIP connection is opened. In order for the target to perform alive monitoring of the originator, a heartbeat that does not include data is cyclically transmitted from the originator to the target. The originator specifies the Listen Only instance ID (199) on the target as the destination for the heartbeat. The heartbeat is transmitted at the specified cycle (RPI).

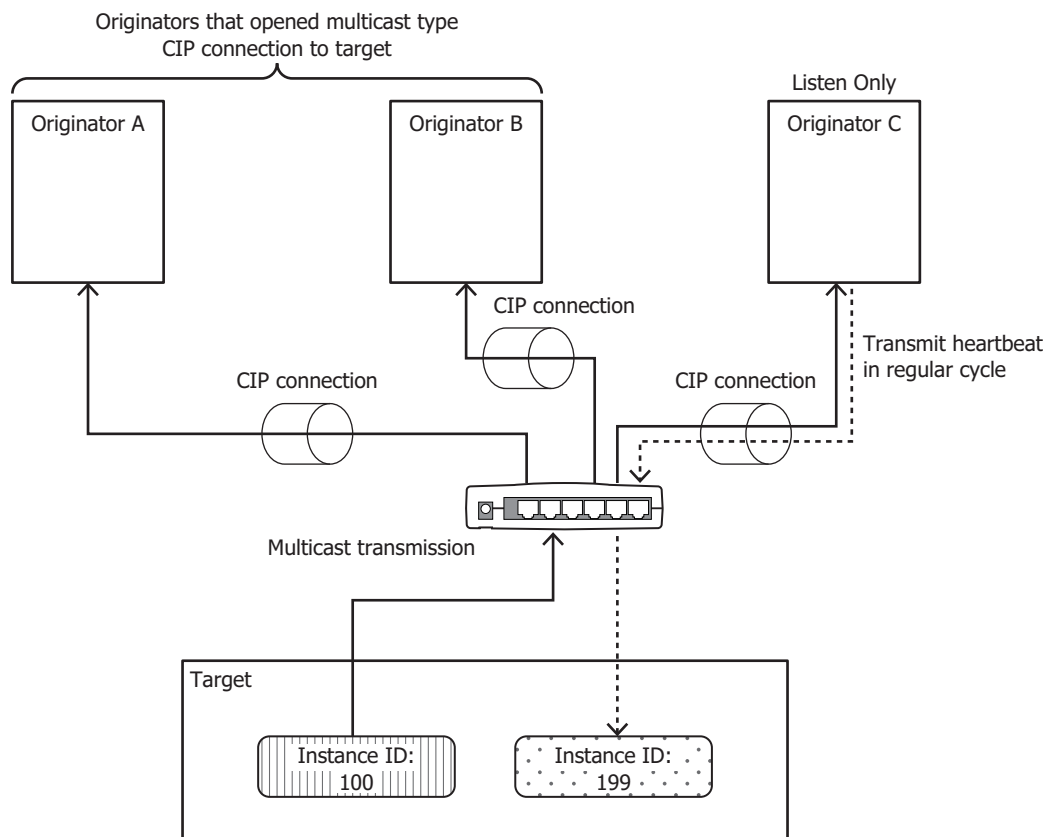**Notes:**

- For Listen Only, when setting the CIP connection point of the input data to receive from the target as an instance ID, set the CIP connection point of the output data to transmit to the target as an instance ID too.
- The heartbeat is always performed in Listen Only.
- You can use an Ethernet switch that supports IGMP snooping to filter unnecessary multicast packets. In this case, please install the originator that supports the IGMP client function and IGMP Querier (routers, etc.) to periodically send the IGMP query. Without IGMP Querier, the originator will not be able to receive multicast packets after a period of time.

16: ETHERNET/IP COMMUNICATION


A Listen Only CIP connection can be opened only when a multicast type CIP connection is opened. When the CIP connection between the target and originator that opened a multicast type CIP connection using Exclusive Owner or Input Only is disconnected, the multicast transmissions from the target to originators that opened Listen Only CIP connections are stopped.

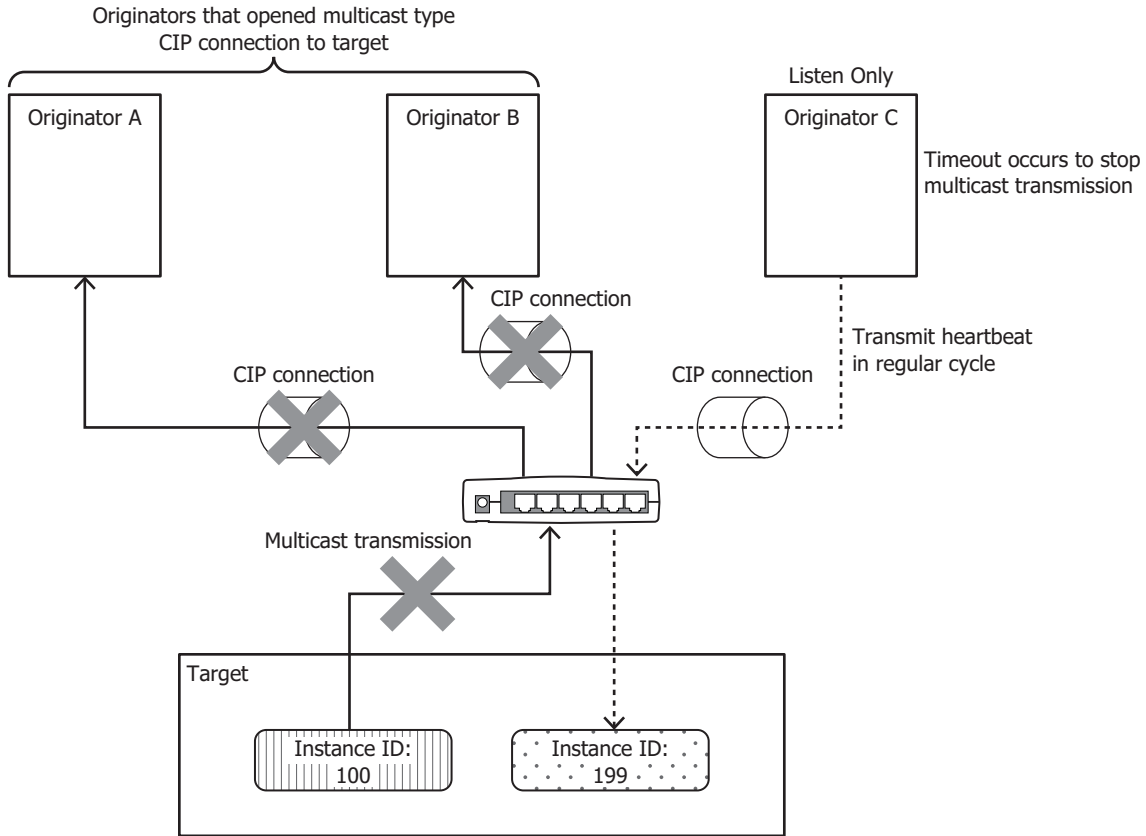

I/O Message Communication (Target) Function

A function where the Plus CPU module is the target with CIP connection points and originators cyclically read and write data. A maximum of 8 CIP connection points can be defined.


The originator sends a request to open a CIP connection to the CIP connection point of the Plus CPU module, and when successful, the CIP connection point data is read and written. The Plus CPU module first writes the values of data registers to the I/O data buffer*1 and then transmits the data to the originator. Data received from the originator is also first written to the I/O data buffer and then stored in data registers.

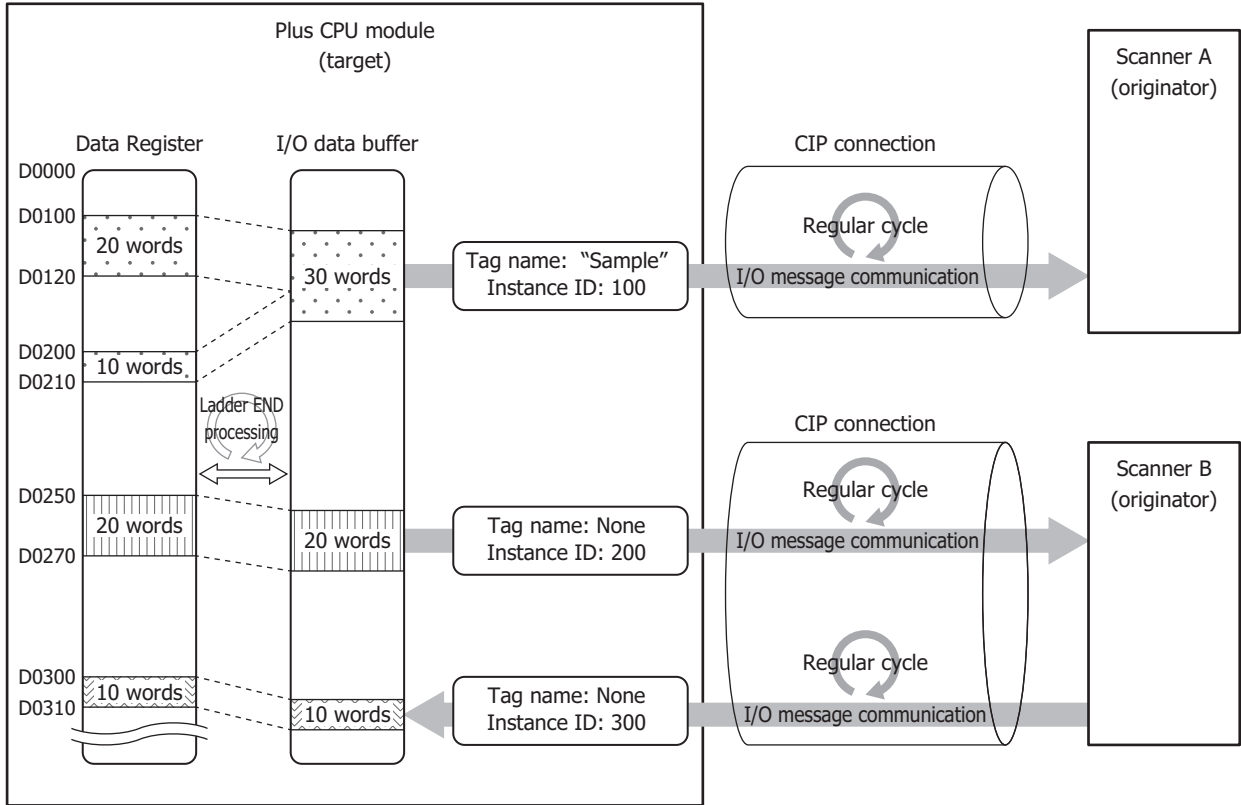

*1 The I/O data buffer is a buffer inside the Plus CPU module that stores the data to transmit and receive in I/O message communication. For details on the I/O data buffer and data register binding, see "Data and Device Binding Function" on page 16-11.

I/O Message Communication (Originator) Function


A function where the Plus CPU module cyclically reads and writes data of the CIP connection points of targets. When the EtherNet/IP Communication Bit (M8460) is turned on, the Plus CPU module sends a request to open the CIP connections to the CIP connection point of targets registered to the scan list*1. When successful*2, the CIP connection point data is read and written. The Plus CPU module first writes the data received from the target to the I/O data buffer*3 inside the Plus CPU module and then stores the data in data registers. The values of data registers are also first written to the I/O data buffer and then transmitted to the target.

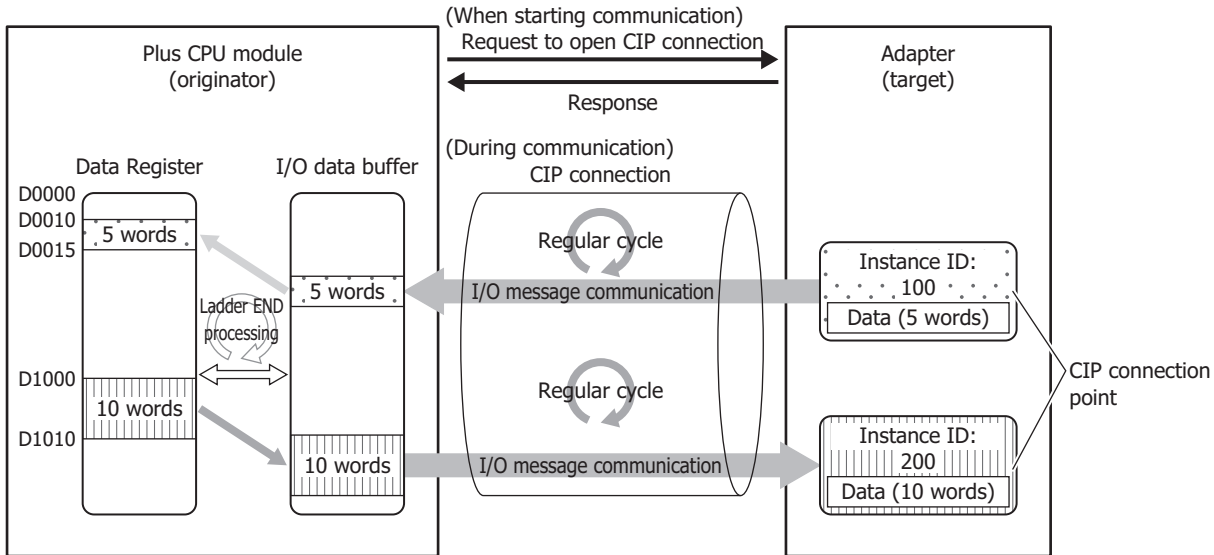

- *1 The scan list is a list of CIP connections the Plus CPU module opens as the originator. The list of configured targets or CIP connections is displayed in the EtherNet/IP tree area on the **EtherNet/IP Settings** dialog box. For details, see "EtherNet/IP Tree Area" on page 16-20.
- *2 If opening a CIP connection fails, opening the CIP connection continues being retried until successful. During I/O message communication, if I/O messages from the target cannot be received even after the specified timeout elapses, a new CIP connection is automatically reopened. If opening the new CIP connection fails, opening the CIP connection continues being retried until successful.
- *3 The I/O data buffer is a buffer inside the Plus CPU module that stores the data to transmit and receive in I/O message communication. For details on the I/O data buffer and data register binding, see "Data and Device Binding Function" on page 16-11.

Explicit Message Communication (Server) Function

This function allows the services that correspond to Plus CPU module objects*1 to be executed from other EtherNet/IP devices.

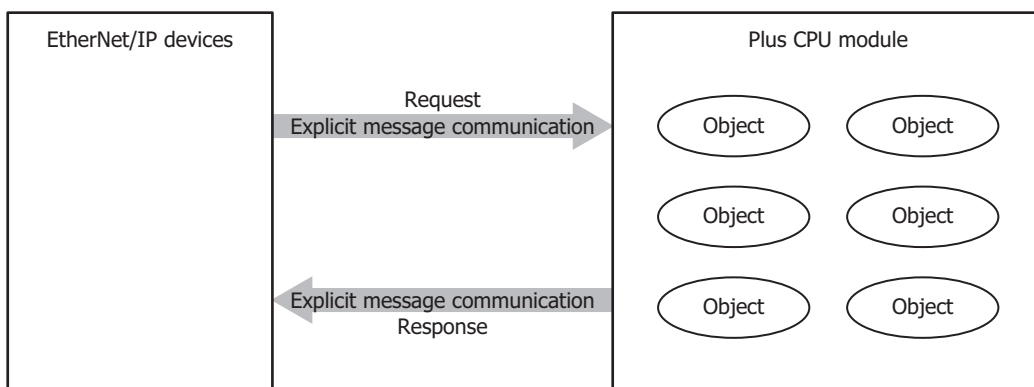


- *1 Objects are the abstraction of functions and data of EtherNet/IP devices.

Data and Device Binding Function

The Plus CPU module assigns IN data*1 and OUT data*2 set on the scan list and in CIP connection points to the I/O data buffer in the Plus CPU module.


The Plus CPU module first writes the data received from the other device in I/O message communications to the I/O data buffer (1) and then stores the data in data registers (2). The values stored in data registers are also first written to the I/O data buffer (3) and then transmitted to the other device (4). The processing to reflect data between the I/O data buffer and data registers is performed in the END processing of the ladder program.

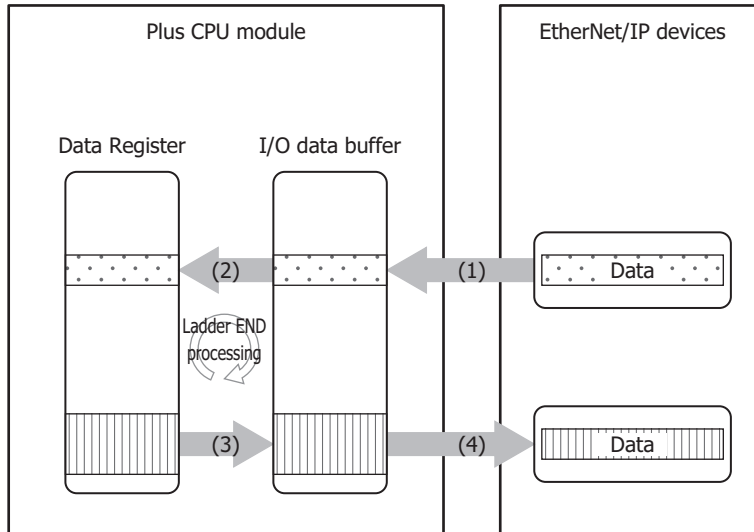

*1 IN data is received by the originator from the target in I/O message communication.

*2 OUT data is transmitted to the target from the originator in I/O message communication.

For example, to have the Plus CPU module (originator) cyclically read and write the CIP connection point data of the target, the data received from the target is first written to the I/O data buffer and then stored in the data registers. The values of data registers are also first written to the I/O data buffer and then transmitted to the target.

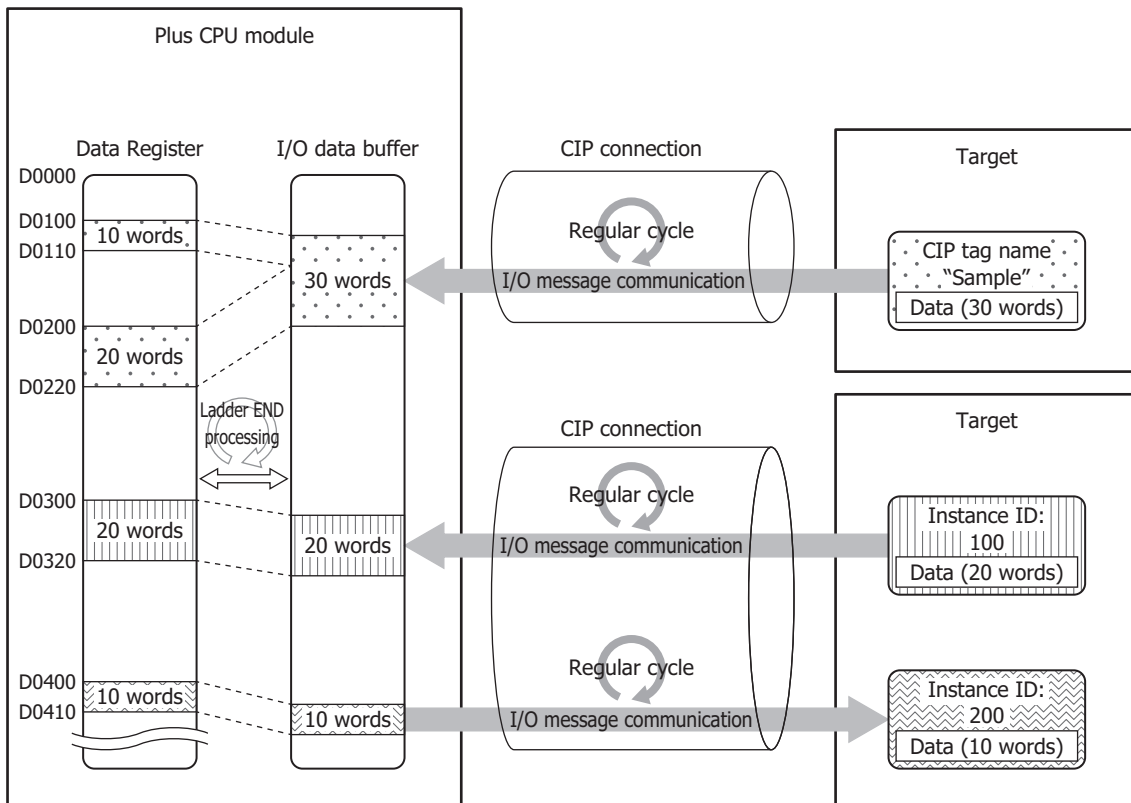

■ Refresh Limit Count

The size of data that can be reflected between the I/O data buffer and data registers in END processing one time is a maximum of 400 words. This size can be set as the refresh limit count between 1 and 400 words. For example, if the refresh limit count is set to 400 words, a maximum of 256 words of data are reflected from the I/O data buffer to data registers and a maximum of 256 words of data are reflected from data registers to the I/O data buffer in END processing one time. When IN data and OUT data are set that exceeded the refresh limit count, the processing is split into multiple portions of END processing. When the refresh limit count is increased, the amount of data that is reflected in the END processing increases, so the scan time of the ladder program becomes longer. Adjust the value according to the target system.

Note: I/O message communication is performed more frequently. If the values received from an EtherNet/IP device change in an amount of time shorter than the scan time, those changes may not be reflected in the data registers.

EtherNet/IP Communication Operations

Special Devices Used in EtherNet/IP Communication

These tables show the special data registers and special internal relay used in EtherNet/IP communication.

Special Data Register	Description		R/W
D8790	EtherNet/IP Operation Status	This special data register stores the operating status of EtherNet/IP communication. 0000h: Stopped 0100h: Preparing to go online 0200h: Online 0300h: Restarting 0F00h: Stopped by error	R
D8791	EtherNet/IP Error Information	This special data register stores error information that has occurred in EtherNet/IP communication. 0000h: Normal 0800h: Timeout waiting for link 8000h: Timeout waiting for communication to start 8100h: Timeout waiting for communication to stop This special data register is reset to 0 when EtherNet/IP communication is preparing to go online ((D8790)=0100h). If multiple errors occur in EtherNet/IP communication, the error information for the error that last occurred is stored.	R

Special internal relay	Description		R/W
M8460	EtherNet/IP Communication Bit	This special internal relay permits or prohibits EtherNet/IP communication. OFF: Prohibit EtherNet/IP communication ON: Permit EtherNet/IP communication If M8460 is changed from off to on during the RUN status, the Plus CPU module establishes CIP connections with the other devices and starts EtherNet/IP communication. If M8460 is turned off, the CIP connections are disconnected and EtherNet/IP communication is stopped. When changing from run to stop, M8460 is automatically turned off.	R/W

Notes:

- To resume EtherNet/IP communication when EtherNet/IP Operation Status (D8790) is stopped by an error, first turn off M8460 and wait for EtherNet/IP Operation Status (D8790) to become stopped, and then turn on M8460.
- When the Plus CPU module power is on and when starting to run, the EtherNet/IP Communication Bit (M8460) is off. To start EtherNet/IP communication, turn on M8460 in the ladder program or download and run a user program in which the **Turn ON EtherNet/IP Communication bit automatically** check box has been selected on the **EtherNet/IP Settings** dialog box.

Basic Operation

This chapter describes the basic operation of EtherNet/IP communication.

Starting and Stopping EtherNet/IP Communication

When the EtherNet/IP Communication Bit (M8460) is changed from off to on during the RUN status, the Plus CPU module establishes CIP connections to the targets or CIP connection points registered to the scan list and starts EtherNet/IP communication (starts cyclic data exchange by I/O message communication).

When the EtherNet/IP Communication Bit (M8460) is turned off, EtherNet/IP communication stops (I/O message communication stops and all CIP connections are disconnected). When changing from run to stop, EtherNet/IP Communication Bit (M8460) is automatically turned off.

Operation during EtherNet/IP Communication


The I/O data buffer held in the Plus CPU module corresponds with data registers and data is reflected between the two in the END processing of the ladder program.

The processing to reflect data between the I/O data buffer and data registers and I/O message communication between the Plus CPU module and EtherNet/IP device is not synchronized.

Note: I/O message communication is performed more frequently, so if the values received from an EtherNet/IP device change in an amount of time shorter than the scan time, those changes may not be reflected in the data registers.


When the Plus CPU module (Target) Transmits Data to the Originator (Input)

For example, when the value stored in D1000 is transmitted to the originator, the value stored in D1000 is reflected to the I/O data buffer in the END processing of the ladder program immediately before the data is transmitted (1). Then the data in the I/O data buffer is transmitted to the target in I/O message communication immediately afterward (2).

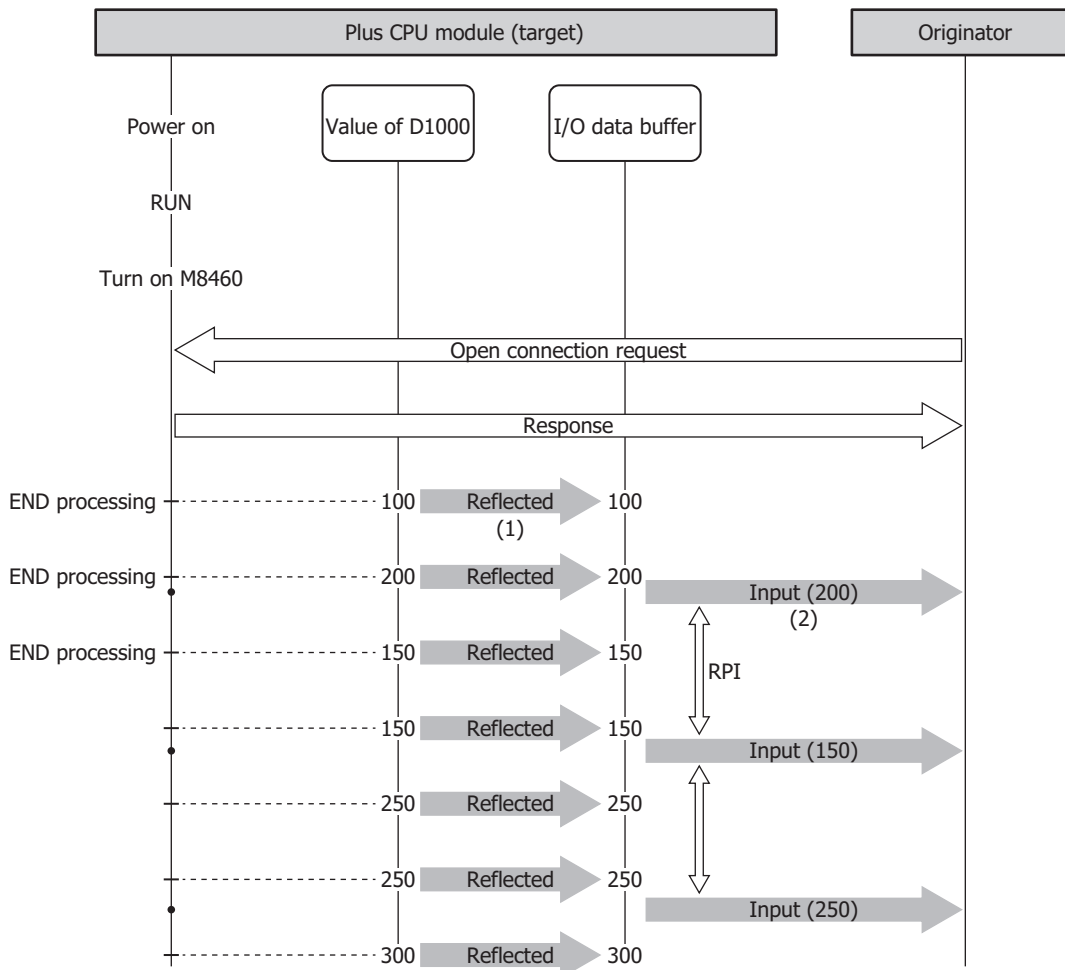


When the Plus CPU module (Target) Receives Data from the Originator (Output)

For example, when the data received from the originator is stored in D1000, the Plus CPU module writes the data received from the originator in I/O message communication to the I/O data buffer (1). Then the data in the I/O data buffer is reflected to the data registers in the END processing of the ladder program immediately after the data was received (2).

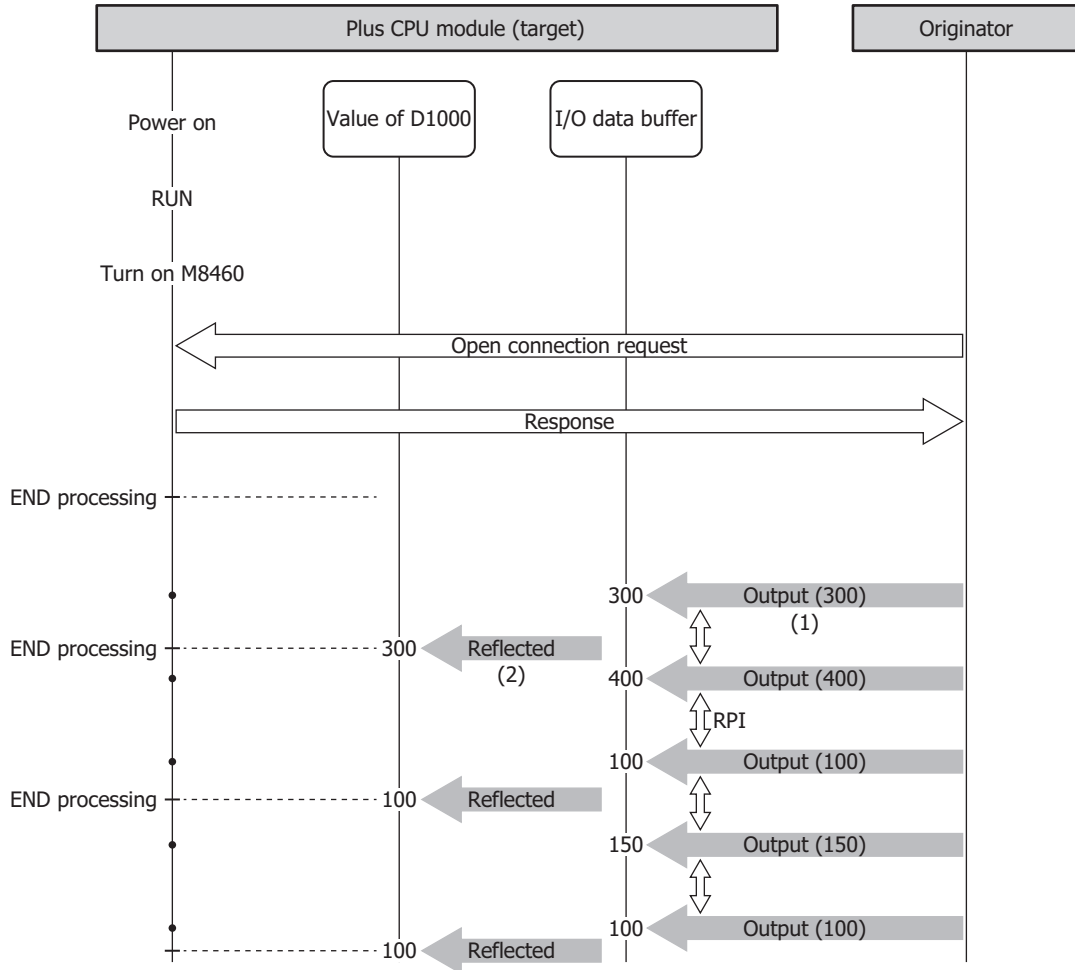


When the Plus CPU module (Originator) Transmits Data from the Target (Output)

For example, when the value stored in D1000 is transmitted to the target, the value stored in D1000 is reflected to the I/O data buffer in the END processing of the ladder program immediately before the data is transmitted (1). Then the data in the I/O data buffer is transmitted to the target in I/O message communication immediately afterward (2).

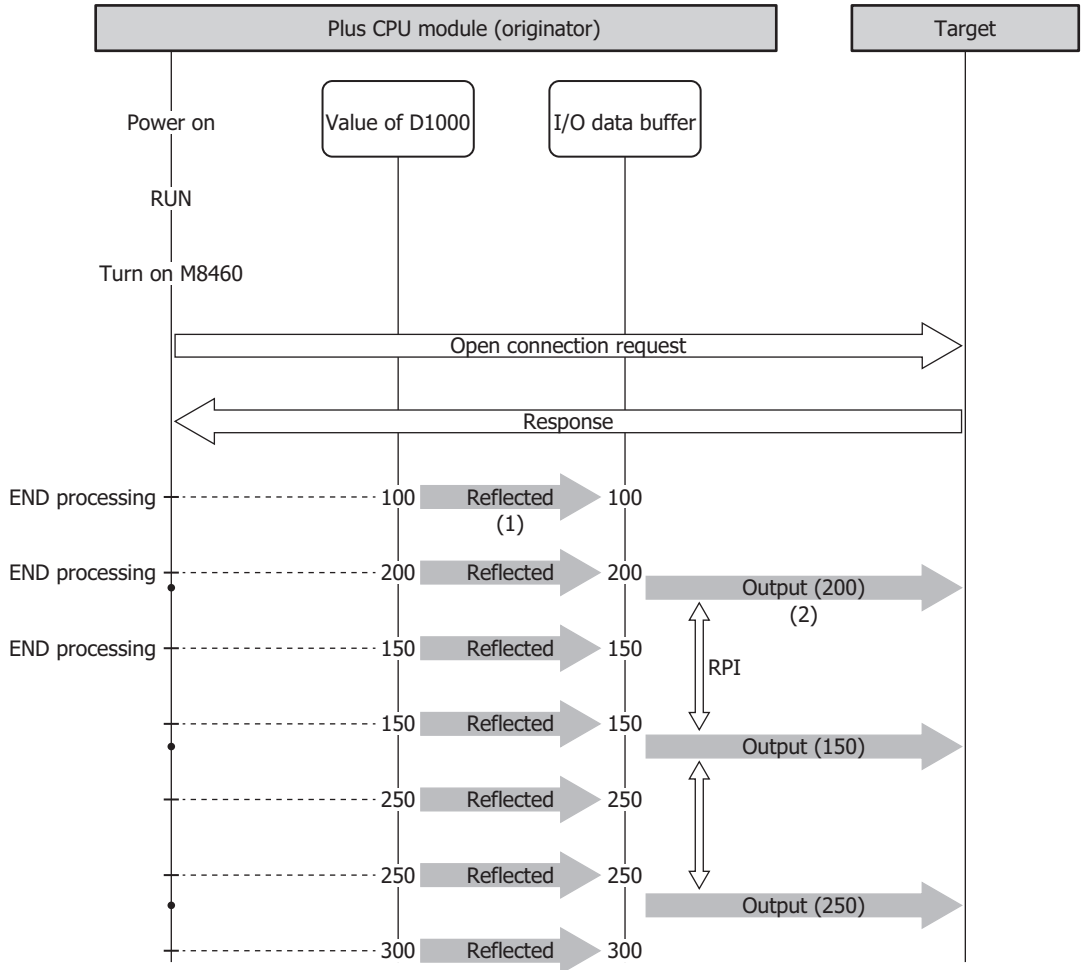

When the Plus CPU module (Originator) Receives Data from the Target (Input)

For example, when the data received from the target is stored in D1000, the Plus CPU module writes the data received from the target in I/O message communication to the I/O data buffer (1). Then the data in the I/O data buffer is reflected to the data registers in the END processing of the ladder program immediately after the data was received (2).

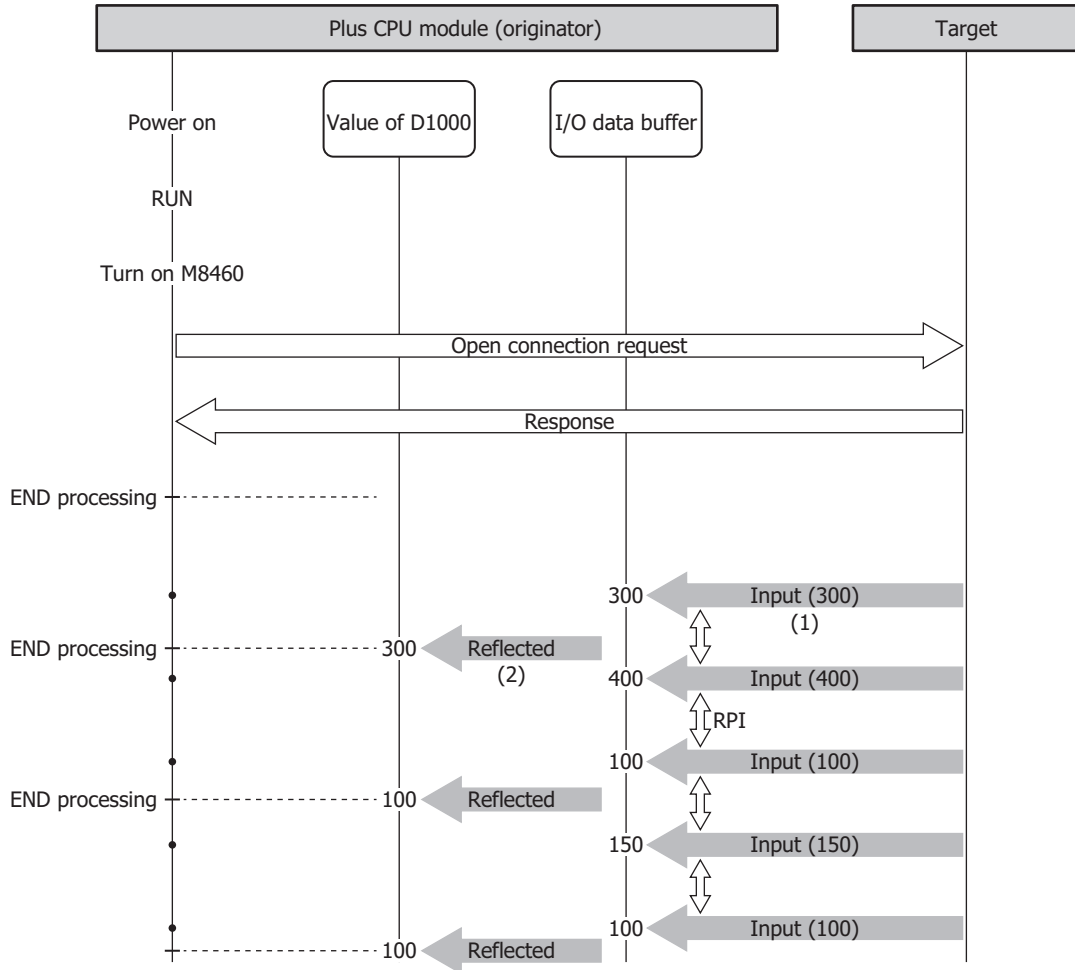

Operations during RUN and STOP

This table shows the status of EtherNet/IP communication during RUN and STOP.


RUN/STOP Status	M8460 Status	EtherNet/IP Communication
STOP	OFF	Stopped
	ON	
RUN	OFF	Start
	OFF -> ON	Communicating
	ON -> OFF	End

EtherNet/IP Communication Settings


The EtherNet/IP communication settings are configured on the **EtherNet/IP Settings** dialog box. This section describes the **EtherNet/IP Settings** tab and the settings according to usage method.

• **Procedure to display the EtherNet/IP Settings dialog box**

1. On the **Configuration** tab, in the **Function Area Settings** group, click **Ethernet Port 2**.
The **Function Area Settings** dialog box is displayed.

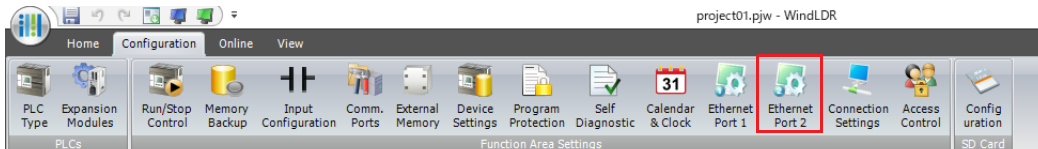

2. Under EtherNet/IP settings, select the **Enable EtherNet/IP** check box and click **Configure**.
The **EtherNet/IP Settings** dialog box is displayed.

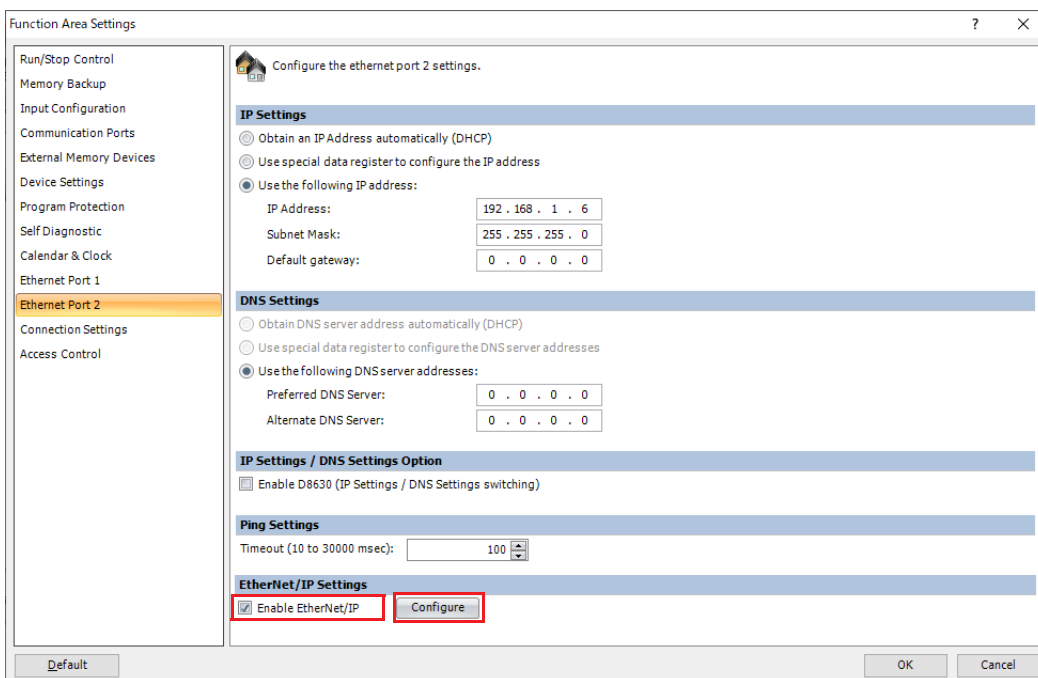

Overview of EtherNet/IP Settings

The settings required to perform EtherNet/IP communication and the related settings dialog boxes in WindLDR are as follows.

Description	Required Settings	WindLDR Settings Dialog Box	Available Functions
Perform EtherNet/IP communication	Basic settings for EtherNet/IP communication	EtherNet/IP settings	Common to EtherNet/IP communication
Using the Plus CPU module as a target	CIP connection point settings <ul style="list-style-type: none"> • CIP tag name or instance ID settings • Device allocations 	CIP connection point settings	I/O message communication (target) function
Using the Plus CPU module as an originator	Create scan list <ul style="list-style-type: none"> • Target settings • CIP connection settings 	Target settings CIP connection settings	I/O message communication (originator) function

EtherNet/IP Settings Dialog Box

The **EtherNet/IP Settings** dialog box is composed of the following three areas.

(1) EtherNet/IP Tree Area (page 16-20)

This area displays the list of configured CIP connection points, targets, and CIP connections.

(2) Parameter Setting Area (page 16-22)


This area displays details on the node selected in the EtherNet/IP tree area.

(3) Information View Area (page 16-30)

This area displays the details of errors if there are errors in content set on the **EtherNet/IP Settings** dialog box.


(4) EDS Management Area (page 16-31)

This area displays the list of EDS files that imported to your PC.

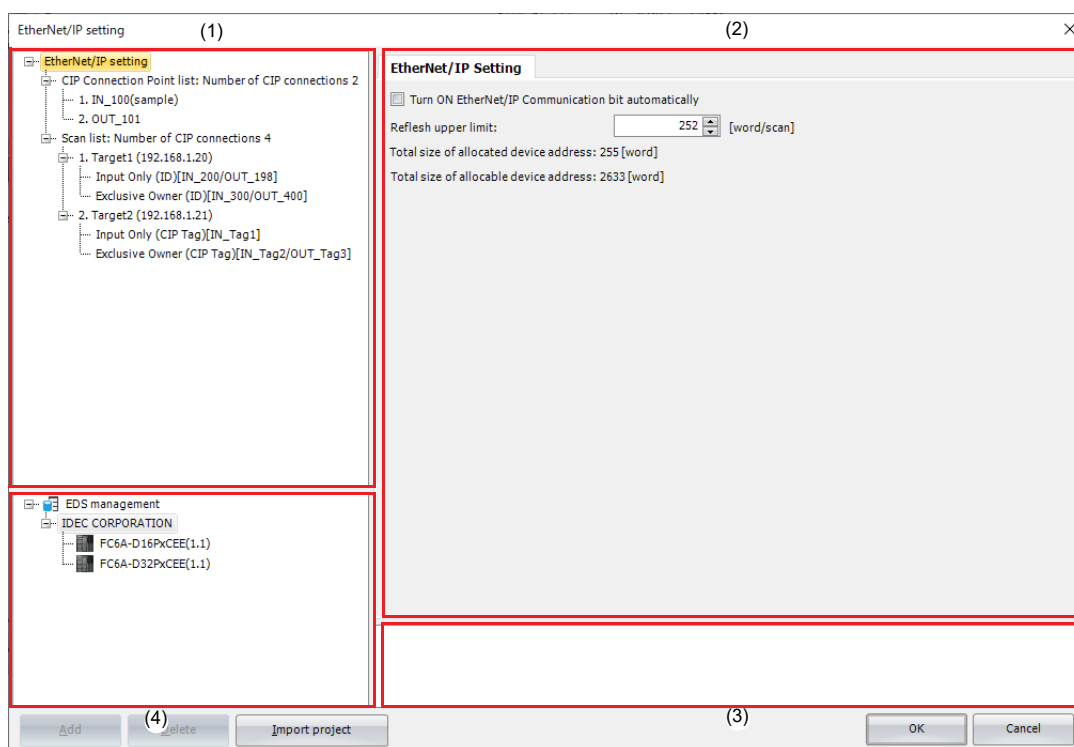

EtherNet/IP Tree Area

This area displays the list of configured CIP connection points, targets, and CIP connections.

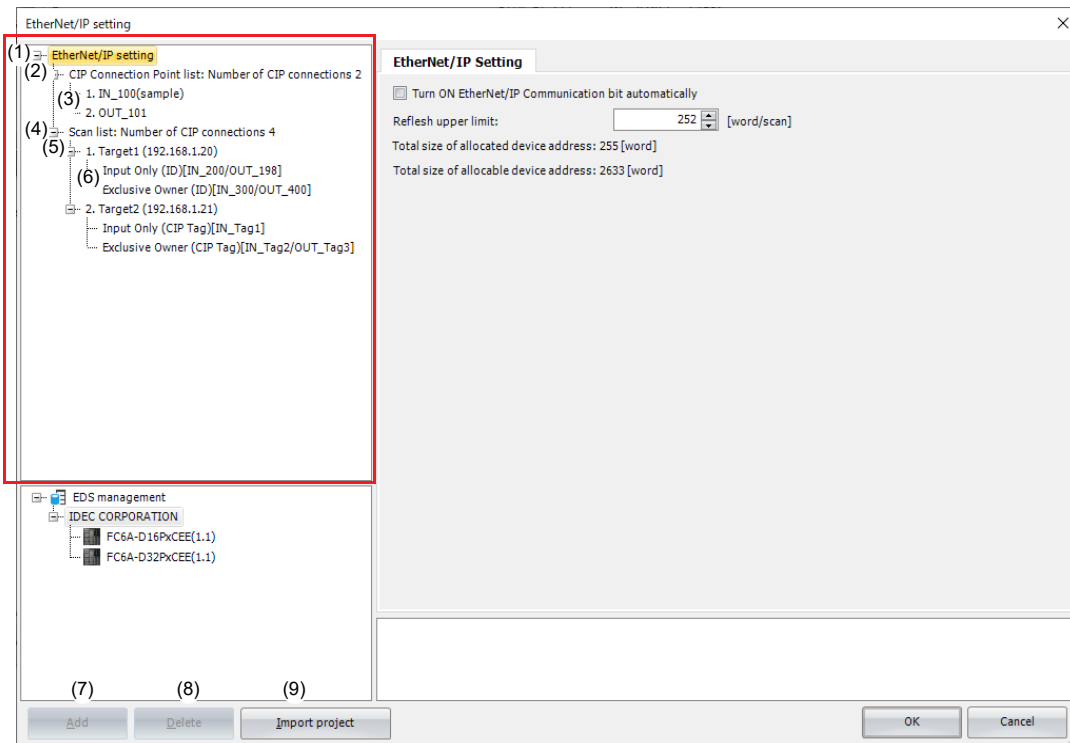

(1) Ethernet Net/IP Settings node

When the **EtherNet/IP Settings** node is selected and expanded, the list of configured CIP Connection Point and Scan list is displayed.

(2) CIP Connection Point List node

Displays the number of CIP connection points. When the **CIP Connection Point List** node is expanded, the list of configured CIP connection points is displayed.

(3) CIP Connection Point node

Displays the CIP tag name and instance ID of a configured CIP Connection Point.

(4) Scan List node

Displays the number of CIP Connections. When the **Scan List** node is expanded, the list of configured targets is displayed.

(5) Target node

Displays the node name and IP address of a configured target. When a **Target** node is selected and expanded, the list of configured CIP connections is displayed.

(6) CIP Connection node

Displays the CIP connection name and connection point of a configured CIP connection.

(7) Add button

Adds a new node according to the node selected in the EtherNet/IP tree area. You can also add a node from the menu displayed when right-clicking the node.

(8) Delete button

Deletes the node selected in the EtherNet/IP tree area. You can also delete a node from the menu displayed when right-clicking the node.

(9) Import project button

Imports only the EtherNet/IP settings from a WindLDR project file.

This section describes the operation of the context menu displayed by right-clicking each node in the EtherNet/IP tree area.

Node	Context menu	Operation
EtherNet/IP Settings	—	—
CIP connection point list	Add CIP Connection Point Setting	Add one CIP connection point.
	Delete All CIP Connection Point Setting	Delete all CIP connection points.
CIP connection point	Add CIP Connection Point Setting	Add one CIP connection point.
	Delete Selected CIP Connection Point Setting	Deletes the selected CIP connection point.
Scan list	Add Target	Add one target.
	Delete All Target	Delete all targets.
Target	Add CIP Connection	Add one CIP connection.
	Delete Selected Target	Deletes the selected target.
	Import the EDS file into 'EDS management'	Import the EDS file of the selected target to the EDS Management area. Once you import the EDS file, you can use it in other projects.
CIP connection	Add CIP Connection	Add one CIP connection.
	Delete Selected CIP Connection	Deletes the selected CIP connection.

Parameter Setting Area


This area displays details on the node selected in the EtherNet/IP tree area.

When the EtherNet/IP Settings node is selected

Select the **EtherNet/IP Settings** node in the EtherNet/IP tree area. The **EtherNet/IP Setting** tab is displayed in the parameter settings area.

■ EtherNet/IP Setting tab

Configure the basic settings for performing EtherNet/IP communication.

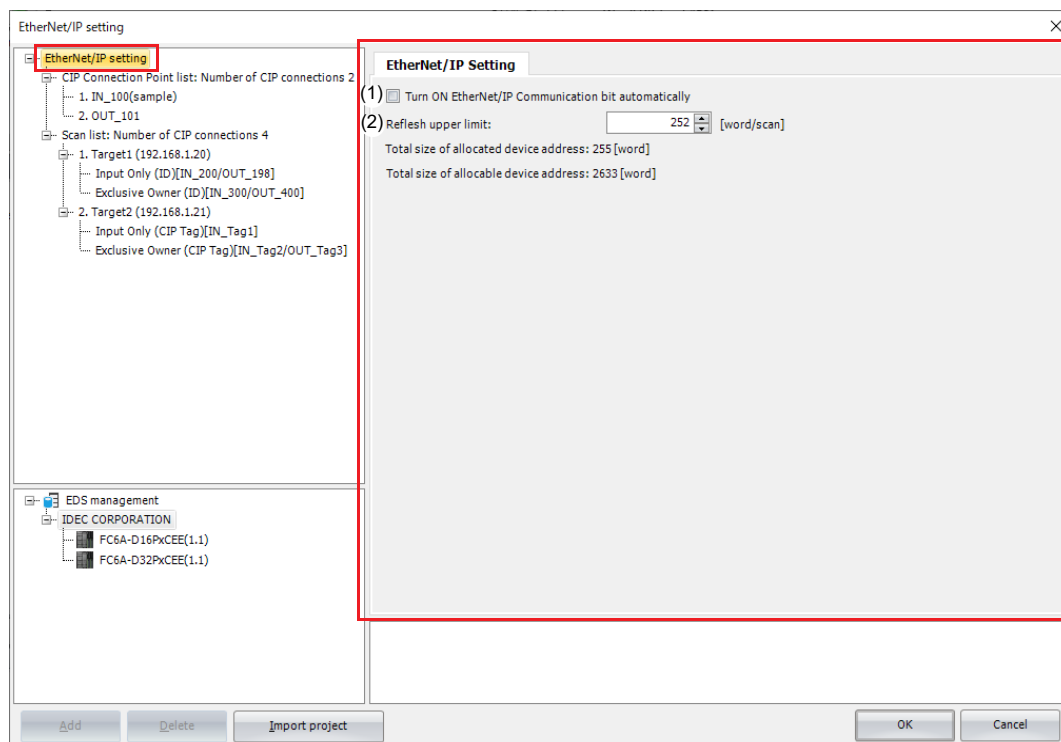

(1) Turn ON EtherNet/IP Communication bit automatically

Sets whether to automatically turn on the EtherNet/IP Communication Bit (M8460) when changing from stop to run. The check box is cleared by default. When the check box is cleared, the EtherNet/IP Communication Bit does not turn on automatically.

Setting Method	Description
Selected	The EtherNet/IP Communication Bit (M8460) turns on automatically when changing from stop to run. When EtherNet/IP Communication Bit (M8460) is turned on, the Plus CPU module performs EtherNet/IP communication with the other devices according to the content registered on the scan list.
Cleared	The EtherNet/IP Communication Bit (M8460) does not turn on automatically.

(2) Refresh upper limit


Sets the maximum size of data that can be reflected between the I/O data buffer and data registers in END processing one time. The refresh upper limit is set between 1 and 400 words per scan. The default value is 252 words per scan. The maximum size of data to write from the I/O data buffer to the data registers and the maximum size of data to write from the data registers to the I/O data buffer in END processing one time are half of the refresh upper limit.

When the CIP Connection Point List node is selected

Select the **CIP Connection Point List** node in the EtherNet/IP tree area. The **CIP Connection Point List** tab is displayed in the parameter settings area.

■ **CIP Connection Point List tab**

This tab displays the list of configured CIP connection points. The CIP tag, instance ID, and type can be changed. Double-click a device allocation cell. The **CIP Connection Point List** tab is displayed and you can move to the relevant cell for device allocation.

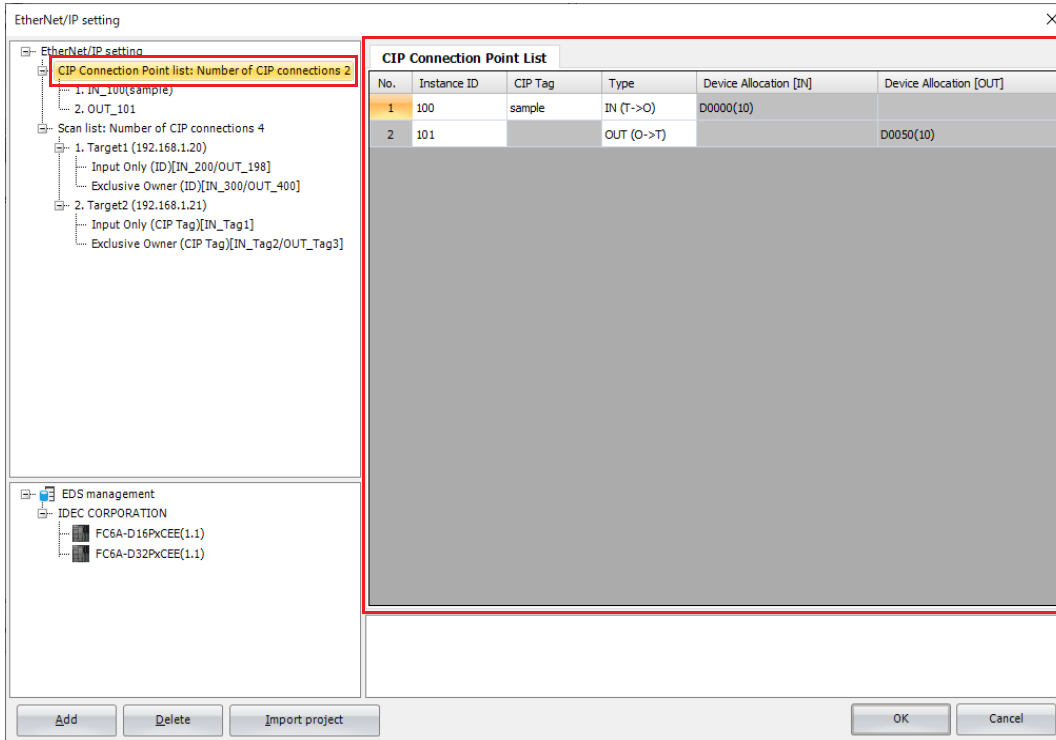


When the CIP Connection Point node is selected

Select a **CIP Connection Point** node in the EtherNet/IP tree area. The **CIP Connection Point Setting** tab is displayed in the parameter settings area.

■CIP Connection Point Setting tab

Configure the CIP connection point on this tab.

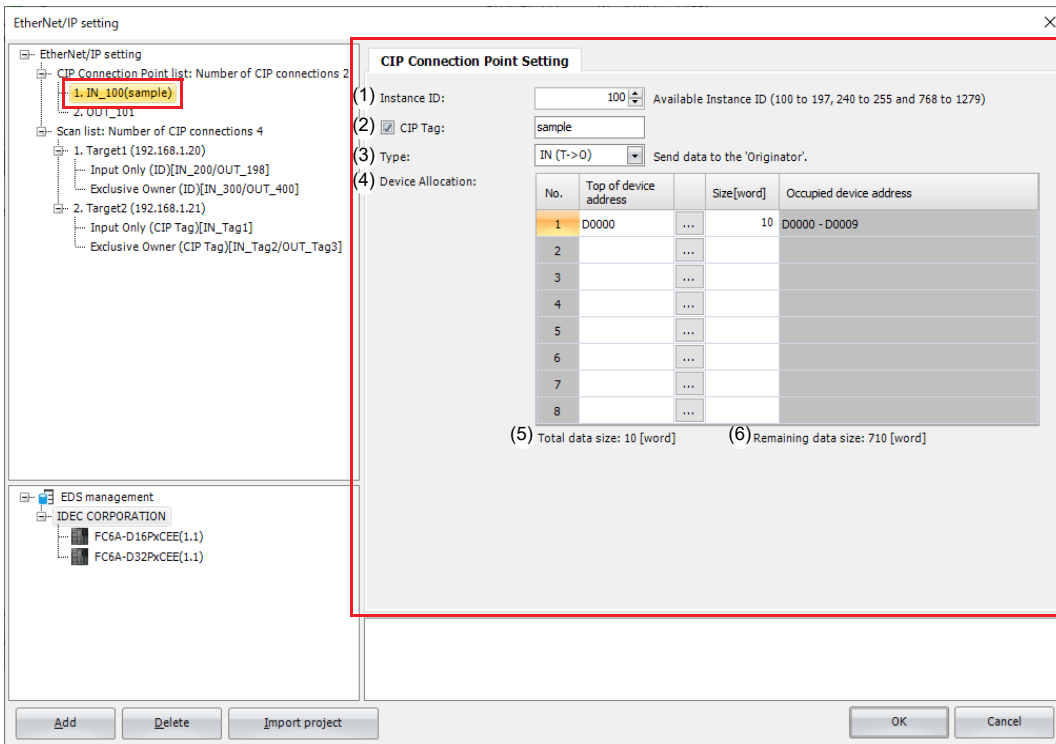

(1) Instance ID

Sets the instance ID. When the Plus CPU module (target) performs I/O message communication with another scanner device (originator) that cannot handle CIP tag names, the originator sets the CIP connection for this instance ID. Set the instance ID between 100 and 1,279. The default value is 100. Set this value so that it is not duplicated by other CIP connections.

Note: Certain instance IDs cannot be used between 100 and 1,279. Set the value to one of the available values displayed in WindLDR.

(2) CIP Tag

Sets the CIP tag name. Up to 64 bytes can be set. The other scanner device (originator) sets the CIP connection for this tag name and performs I/O message communication with the Plus CPU module (target). Select this check box and a CIP tag can be set.

(3) Type

Sets the direction of the data to handle in I/O message communication. This item can be set from the following two types. The default value is "IN (T->O)".

Setting	Description
IN (T->O)	The target (Plus CPU module) transmits data to the originator.
OUT (O->T)	The target (Plus CPU module) receives data from the originator.

(4) Device Allocation

Sets the data registers that store the data to receive or transmit in I/O message communication. Starting from the set data register, data registers are used in only the amount set by the data size. Set the data size between 1 and 720. The default value is 1. Set the first data register so that the device range is not exceeded.

(5) Total data size

Displays the total data size of data registers used in I/O message communication.

(6) Remaining data size


Displays the remaining data size of data that can be used (720 bytes minus the total value of data registers that are used).

When the Scan List node is selected

Select the **Scan List** node in the EtherNet/IP tree area. The **CIP Connection Setting List** tab is displayed in the parameter settings area.

■ CIP Connection Setting List tab

This tab displays the list of configured CIP connections. The node name, IP address, CIP connection name, CIP connection point, and RPI can be changed. Double-click a device allocation cell. The **CIP Connection Setting** tab is displayed and you can move to the relevant cell for device allocation.

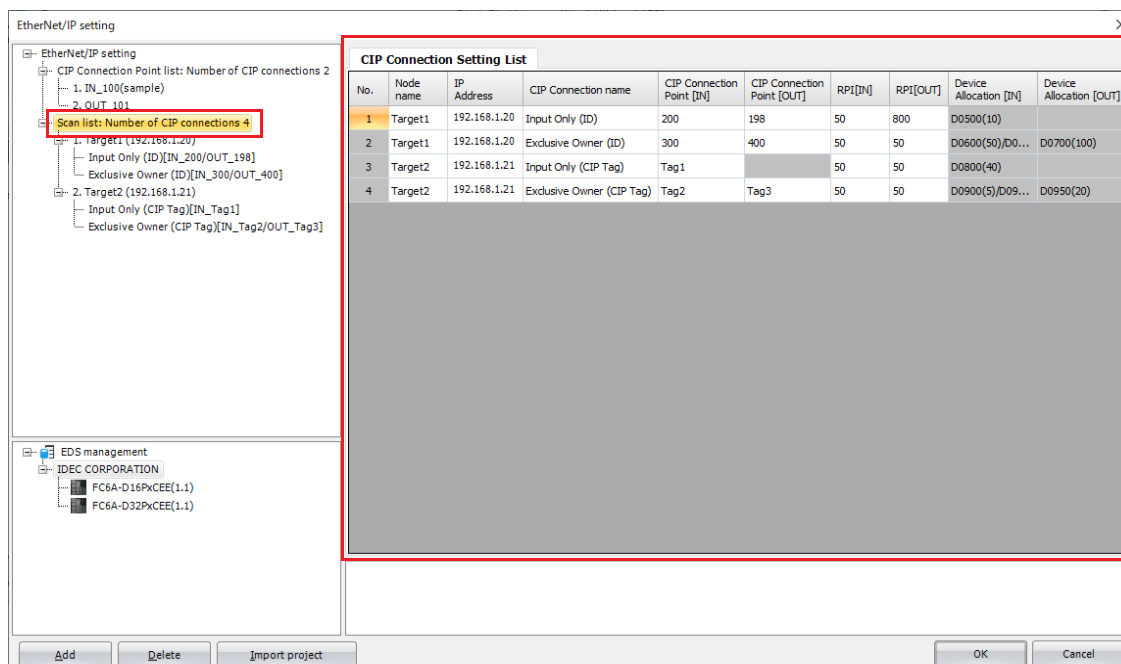


When the Target node is selected

Select a **Target** node in the EtherNet/IP tree area. The **CIP Connection Setting List** and **Target Setting** tabs are displayed in the parameter settings area.


■ CIP Connection Setting List tab

This tab displays the list of CIP connections of the configured target. The CIP connection name, CIP connection point, and RPI (communication cycle) can be changed on this tab.

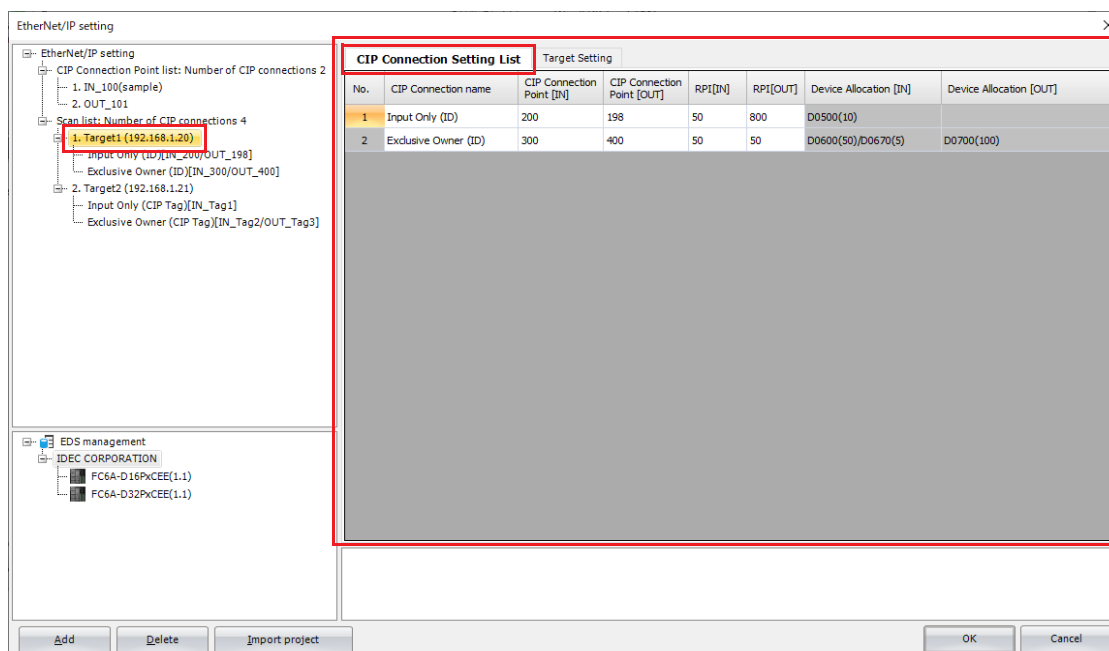

Target Setting tab

Configure the target device settings on this tab.

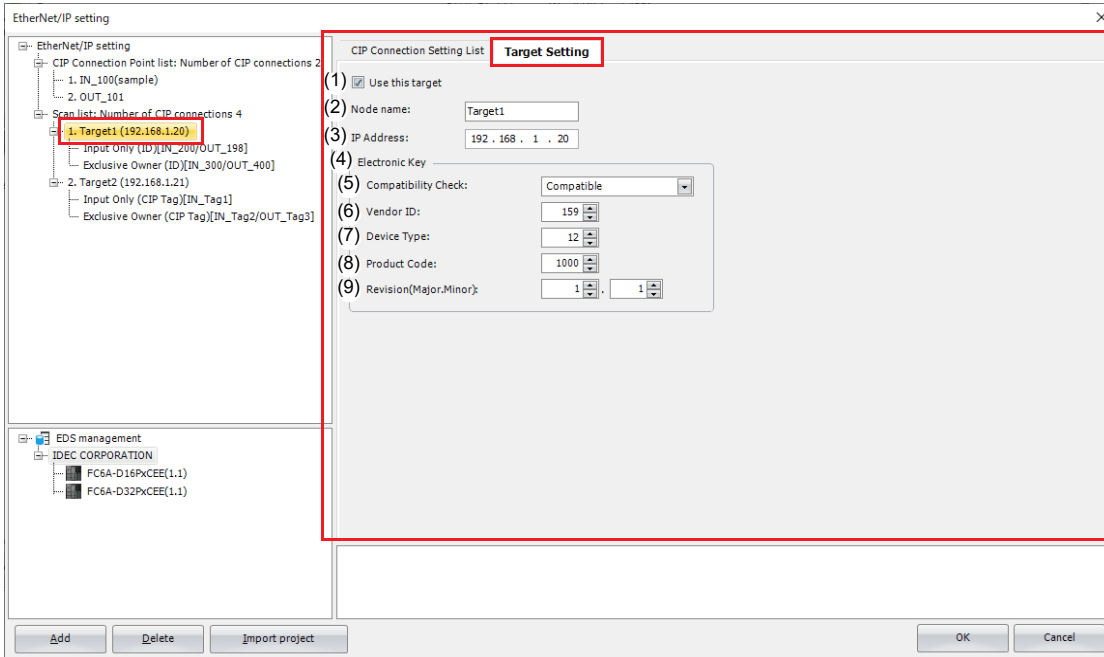

(1) Use this target

Enables or disables the CIP connections in the scan list by target. If the CIP connection is enabled, the Plus CPU module performs I/O message communication with the target when the EtherNet/IP Communication Bit (M8460) is turned on. If the CIP connection is disabled, the Plus CPU module does not perform I/O message communication. Select this check box to enable the CIP connection.

(2) Node name

Sets the node name of the target. The set node name is displayed on the scan list. Up to 30 bytes can be set.

(3) IP Address

Sets the IP address of the target.

(4) Electronic Key

Checks if the target registered to the scan list matches the EtherNet/IP device that is actually connected according to the compatibility check settings when the CIP connection is opened. I/O message communication is allowed with only a verified and matched EtherNet/IP device. If a device does not match, the Plus CPU module does not perform I/O message communication with the EtherNet/IP device.

(5) Compatibility Check

Sets the method for the compatibility check from the following three types.

Compatibility Check	Description
Disabled	Electronic key verification is not performed.
Compatibility	I/O message communication is allowed with only a target that satisfies all of the following conditions. <ul style="list-style-type: none"> The settings and the actual vendor ID, device type, and product code match The actual major revision and minor revision are larger than the settings
Complete Match	I/O message communication is performed with only a target that matches all of the set electronic key.

(6) Vendor ID

Sets the vendor ID of the EtherNet/IP device. Set this item between 0 and 65,535.

(7) Device Type

Sets the device type of the EtherNet/IP device. Set this item between 0 and 65,535.

(8) Product Code

Sets the product code of the EtherNet/IP device. Set this item between 0 and 65,535.

(9) Revision (Major, Minor)

Sets the major revision and minor revision of the EtherNet/IP device.


Revision	Range
Major revision	0 to 127
Minor revision	0 to 255

When the CIP Connection node is selected

Select a **CIP Connection** node in the EtherNet/IP tree area. The **CIP Connection Setting** tab is displayed in the parameter settings area.

■ CIP Connection Setting tab

Configure the CIP connection of the target on this tab.

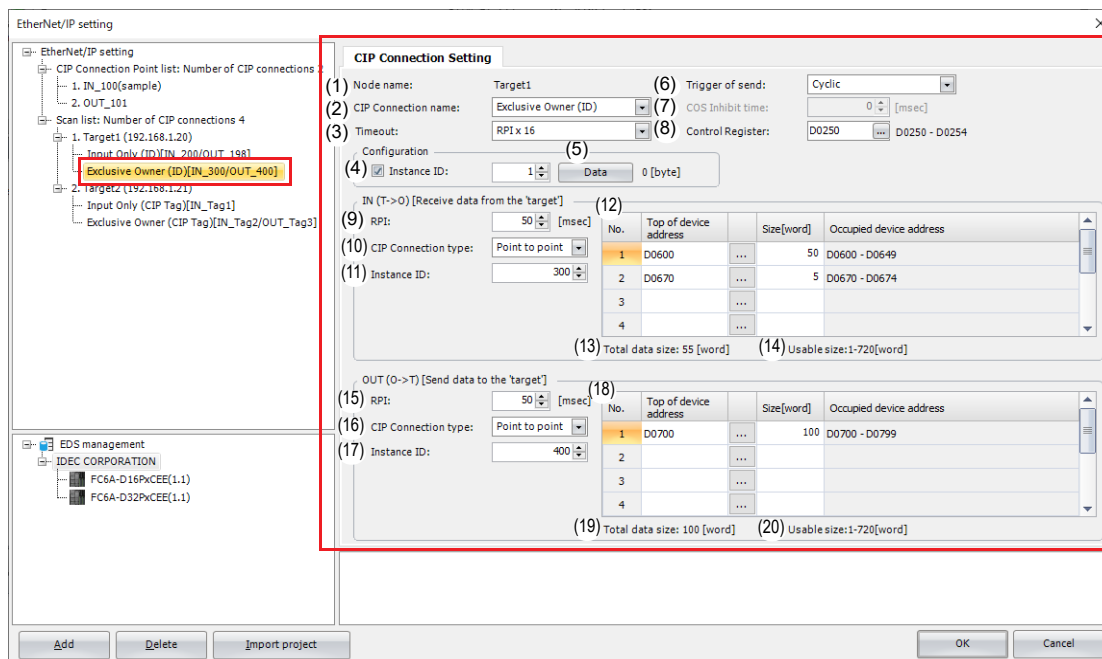

(1) Node name

Displays the node name that was set on the **Target Setting** tab. Configure the CIP connection of the target with this node name.

(2) CIP Connection name

Sets the CIP connection name of the target with the node name (1). This item can be set from the following five types.

Setting	Description
Exclusive Owner (ID)	Set this name when the Plus CPU module transmits and receives data with the target. For Exclusive Owner (ID), set the CIP connection point of the target as an instance ID.
Exclusive Owner (CIP Tag)	For Exclusive Owner (CIP Tag), set the CIP connection point of the target as a CIP tag name. The Plus CPU module specifies the CIP connection point of the target as a CIP tag name or an instance ID and performs I/O message communication with the target.
Input Only (ID)	Set this name when the Plus CPU module receives data from the target only. For Input Only (ID), set the CIP connection point of the target as an instance ID.
Input Only (CIP Tag)	For Input Only (CIP Tag), set the CIP connection point of the target as a CIP tag name. The Plus CPU module specifies the CIP connection point of the target as a CIP tag name or an instance ID and performs I/O message communication with the target.
Listen Only (ID)	When other originators and a target have opened a CIP connection as Exclusive Owner or Input Only and that target is transmitting data by multicast, set this name to have the Plus CPU module receive that data. For Listen Only (ID), the CIP connection point of the target is specified as an instance ID.

Note: The Plus CPU module cannot specify a Listen Only CIP connection as a CIP tag name.

(3) Timeout

Sets the timeout for I/O message communication. The Plus CPU module and target both monitor the time interval to receive data. The setting range is an integer multiple (x4, x8, x16, x32, x64, x128, x256, or x512) of the RPI ((9), (15)). The default value is RPI x 16.

(4) Instance ID

Sets the instance ID of the target Configuration. Select this check box and the instance ID can be set. Set the instance ID between 1 and 65,535. The default value is 1.

16: ETHERNET/IP COMMUNICATION

(5) Data

Sets the data for the target Configuration. When the Plus CPU module opens a CIP connection, it also transmits the Configuration instance ID to the target. A 0 to 400 byte parameter can be set in hexadecimal depending on the specification of the target.

Note: If the EDS file of the EtherNet/IP device added to the scan list defines the parameter information related to opening a CIP connection, click the **Data** button to display the list of the parameters. This parameter can be changed.

(6) Trigger of send

Sets the method for the Plus CPU module to transmit the data to the target. This item can be set from the following two types. The default value is "Cyclic".

Setting	Description
Cyclic	The Plus CPU module and target transmit data at the set RPI (communication cycle) (9).
Change Of State (COS)	The Plus CPU module and target transmit data at the set RPI (communication cycle) (9) or when a value changes.

(7) COS Inhibit time

Sets the time from when a value changes to when the transmission occurs when Change Of State (COS) is selected for the trigger of send (6). The Plus CPU module does not transmit the data until the set time has elapsed from when the change in value was detected.

Note: A change in a value means a change in the data in the I/O data buffer held in the Plus CPU module. Data is reflected from the data registers to the I/O data buffer in the END processing.

(8) Control Register

Sets the data registers that will be used by the CIP connection.

Device Address	Item		Description
Starting number+0	Bit 0	Connection Status	ON: Connected and communicating status OFF: Not connected status (during retries, etc.)
	Bits 1 to 15	Reserved	
Starting number+1	Reserved		
Starting number+2			
Starting number+3			
Starting number+4			

Configure the parameters related to the input direction (target -> Plus CPU module (originator)) of I/O message communication in (9) to (14).

(9) RPI

Sets the communication cycle of the input direction (target -> originator) when the Plus CPU module (originator) is performing I/O message communication with the target. The range that can be set is 10 to 10,000 ms. The default value is 50 ms.

(10) CIP Connection type

Sets the method for the Plus CPU module (originator) to receive data transmitted from the target. This item can be set from the following two types. The default value is "Point to point".

Setting	Description
Point to point	Set this type when the Plus CPU module receives data from the target on a one-to-one basis.
Multicast	Set this type when multiple originators including the Plus CPU module receive data from one target. In this case, please set the timeout (3) and RPI (9) so that the IN (T->O) timeout period exceeds 250 ms.

(11) Instance ID/CIP Tag

Sets the CIP connection point of the target. Set the instance ID or CIP tag name of the target according to the CIP connection name. This item can be set from the following five types.

CIP Connection Name	CIP Connection Point	Range
Exclusive Owner (ID)	Instance ID	1 to 65,535
Exclusive Owner (CIP Tag)	CIP tag name	UTF-8, 64 bytes maximum (including string terminator)
Input Only (ID)	Instance ID	1 to 65,535
Input Only (CIP Tag)	CIP tag name	UTF-8, 64 bytes maximum (including string terminator)
Listen Only (ID)	Instance ID	1 to 65,535

(12) Device Allocation (IN (T->O))

Sets the data registers in which the Plus CPU module (originator) stores data that is received from the target. The data can be allocated to multiple data registers in word units. A maximum of 8 areas can be set.

The total size of the areas to allocate is 720 words maximum. Starting from the set data register, data registers are used in only the amount set by the data size. Set the data size between 1 and 720. The default value is 1. Set the first data register so that the device range is not exceeded.

(13) Total data size (IN (T->O))

Displays the total data size of data registers used in the device allocations (IN (T->O)) (12).

(14) Remaining data size (IN (T->O))

Displays the remaining data size of data that can be used (720 bytes minus the total value of data registers that are used).

Configure the parameters related to the output direction (Plus CPU module (originator) -> target) of I/O message communication in (15) to (20).

(15) RPI

Sets the communication cycle of the output direction (originator -> target) when the Plus CPU module (originator) is performing I/O message communication with the target. The range that can be set is 10 to 10,000 ms. The default value is 50 ms.

This RPI is the heartbeat cycle when Input Only or Listen Only is set for the CIP connection name. The value of the RPI for IN (T->O) data multiplied by 16 is automatically set, but it can be changed.

(16) CIP Connection type

Sets the method for the Plus CPU module (originator) to transmit data to the target. Only "Point to point" can be set.

Setting	Description
Point to point	Set this type when the Plus CPU module transmits data from the target on a one-to-one basis.

(17) Instance ID/CIP Tag

Sets the CIP connection point of the target. Set the instance ID or CIP tag name of the target according to the CIP connection name. This item can be set from the following five types.

CIP Connection Name	CIP Connection Point	Range
Exclusive Owner (ID)	Instance ID	1 to 65,535
Exclusive Owner (CIP Tag)	CIP tag name	UTF-8, 64 bytes maximum (including string terminator)
Input Only (ID)	Instance ID	1 to 65,535 ^{*1}
Input Only (CIP Tag)	CIP tag name	Setting not required
Listen Only (ID)	Instance ID	1 to 65,535 ^{*2}

*1 Set the instance ID for an Input Only target.

*2 Set the instance ID for a Listen Only target.

(18) Device Allocation (OUT (O->T))

Sets the data registers in which the Plus CPU module (originator) stores data to transmit to the target. The data can be allocated to multiple data registers in word units. A maximum of 8 areas can be set.

The total size of the areas to allocate is 720 words maximum. Starting from the set data register, data registers are used in only the amount set by the data size. Set the data size between 1 and 720. The default value is 1. Set the first data register so that the device range is not exceeded.

(19) Total data size (OUT (O->T))


Displays the total data size of data registers used in the device allocations (OUT (O->T)) (18).

(20) Remaining data size (OUT (O->T))

Displays the remaining data size of data that can be used (720 bytes minus the total value of data registers that are used).


Information View Area

This area displays the details of errors if there are errors in content set on the **EtherNet/IP Settings** dialog box. Click on the details of an error to display the location with the error.

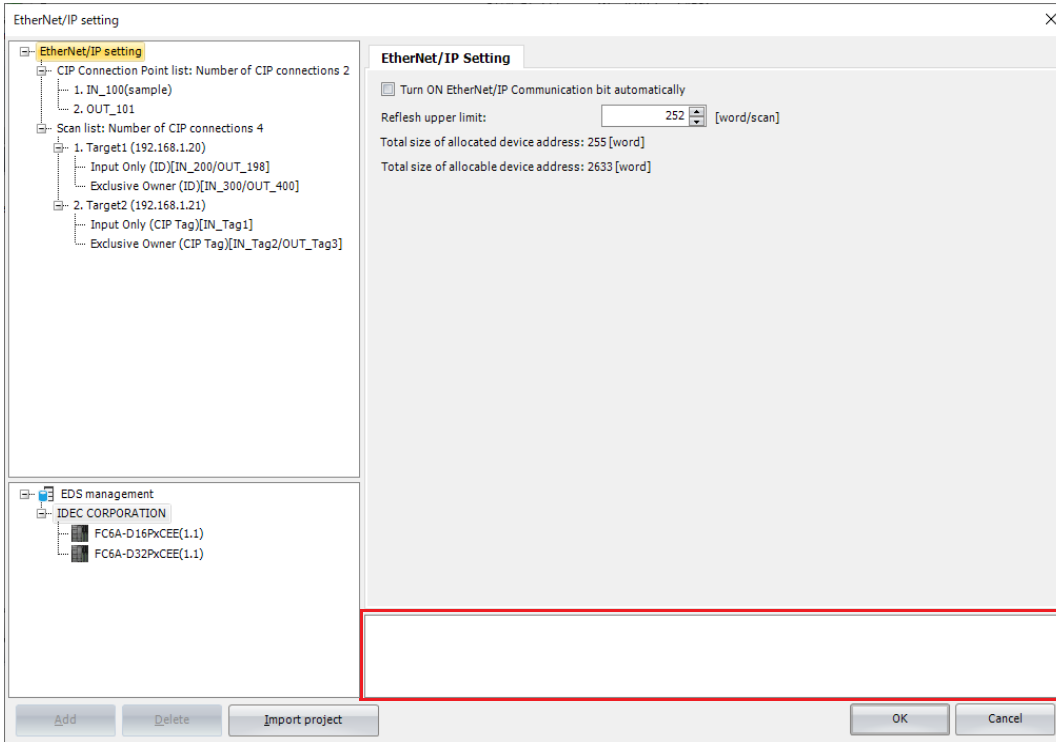

EDS Management Area

Display a list of EtherNet/IP devices set in the imported EDS files.

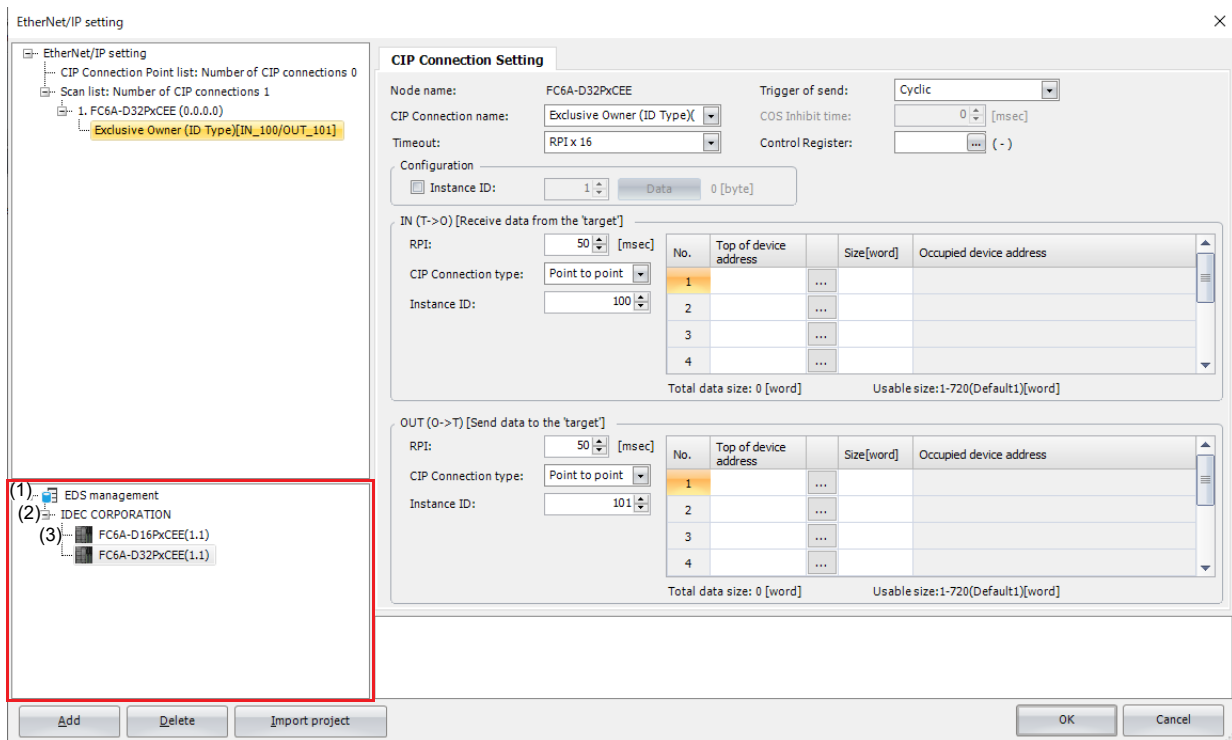

(1) EDS Management node

Select the **EDS Management** node and expand it to display a list of EtherNet/IP device information set in the imported EDS file.

(2) Vendor node

Display the vendor name of the EtherNet/IP device set in the imported EDS file.

(3) Device node

Display the name of the EtherNet/IP device set in the imported EDS file and its revision.

This section describes the operation of the context menu displayed by right-clicking each node in the **EDS Management** area.

Node	Context menu	Operation
EDS Management	Import	Import the EDS files.
Vendor	Delete the EDS files of selected vendor	Delete the EDS file of selected vendor.
Device	Export	Outputs the EDS file of the selected EtherNet/IP device with text format.
	Open	Open the EDS file of the selected EtherNet/IP device.
	Delete	Deletes the EDS file of the selected EtherNet/IP device.
	Add to scan list	Adds the selected EtherNet/IP device to the scan list.

Notes:

- You can add the selected EtherNet/IP device to the scan list by dragging and dropping it onto the scan list in the EtherNet/IP tree area with the **Device** node selected.
- The imported EDS file is saved in the PC, so the next time WindLDR is started, the information of EtherNet/IP devices configured in the EDS file will be listed in the **EDS Management** area.
- EDS files for EtherNet/IP devices of our products are imported from the beginning in WindLDR version 8.18.0 or later.
- If you use the device with an imported EDS file, the CIP connection name will be displayed in the EDS file.

Flow of EtherNet/IP Communication Settings

Basic Settings for EtherNet/IP Communication

Select the **EtherNet/IP Setting** node*¹ in the EtherNet/IP tree area. The **EtherNet/IP Setting** tab is displayed in the parameter settings area. Configure the basic settings for performing EtherNet/IP communication on this tab. For details, see "When the EtherNet/IP Settings node is selected" on page 16-22.

*¹ For details on the **EtherNet/IP Setting** node, see "EtherNet/IP Tree Area" on page 16-20.

Using the Plus CPU module as a Target

This section describes the settings required to use the Plus CPU module as a target.

A CIP connection point must be configured when the Plus CPU module (target) transmits and receives data with another scanner device (originator).

CIP Connection Point Settings

In the settings for the Plus CPU module to transmit and receive data with the originator, configure the data registers for storing communication data, data size, input and output direction of data, and other settings.

Select a **CIP Connection Point** node*¹ in the EtherNet/IP tree area. The **CIP Connection Point Setting** tab is displayed in the parameter settings area. Configure the CIP connection point on this tab. For details, see "When the CIP Connection Point node is selected" on page 16-24.

*¹ For details on the **CIP Connection Point** node, see "EtherNet/IP Tree Area" on page 16-20.

Using the Plus CPU module as an Originator

This section describes the settings required to use the Plus CPU module as an originator.

You must configure the settings for the target device that performs I/O message communication with the Plus CPU module and the CIP connection settings. These settings can be easily set using the EDS file generally provided by each maker. See "Creating Scanlists Using EDS Files" on page 16-32.

Target Settings

Configure the target device settings, such as the IP address of the target that performs I/O message communication with the Plus CPU module.

Select a **Target** node*¹ in the EtherNet/IP tree area. The **Target Setting** tab is displayed in the parameter settings area.

Configure the target device settings on this tab. For details, see "When the Target node is selected" on page 16-25.

*¹ For details on the **Target** node, see "EtherNet/IP Tree Area" on page 16-20.

CIP Connection Settings

In the settings for the Plus CPU module to transmit and receive data with the target, configure the CIP connection name, CIP connection type, data registers for storing communication data, data size, RPI (communication cycle) for I/O message communication, and the other settings for each target.

Select a **CIP Connection** node*¹ in the EtherNet/IP tree area. The **CIP Connection Setting** tab is displayed in the parameter settings area. Configure the CIP connection settings on this tab. For details, see "When the CIP Connection node is selected" on page 16-27.

*¹ For details on the **CIP Connection** node, see "EtherNet/IP Tree Area" on page 16-20.


Creating Scanlists Using EDS Files

The Plus CPU module can easily set the target device settings and CIP connection settings for sending and receiving targets and data using the EDS (Electric Data Sheets) file. The EDS files define information specific to EtherNet/IP devices such as the vendor name, data sending and receiving settings, and parameter specifications. The EDS files are created and provided by the vendor of each EtherNet/IP device. You can obtain the EDS file from the vendor's website etc.


This section describes how to import an EDS file and create a scan list.

• **Operation procedure**


1. In the **EDS Management** area, right-click the **EDS Management** node and click **Import**.

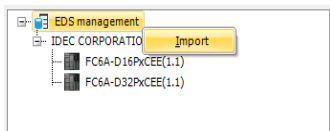


The **Open** dialog box is displayed.

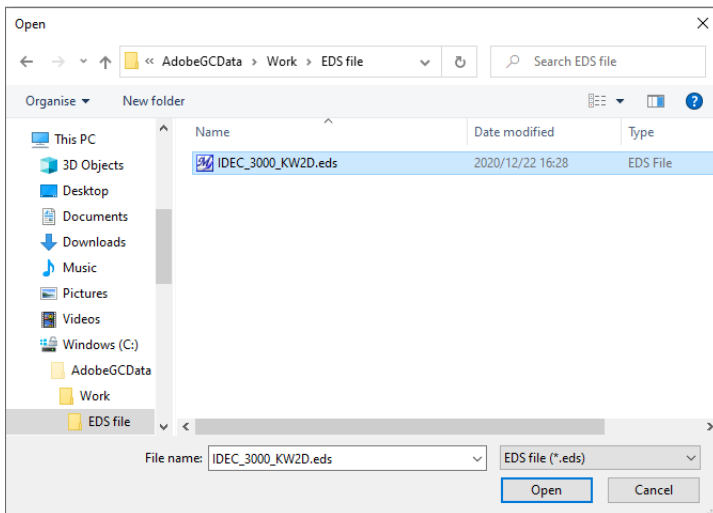

2. Select the EDS file and click the **Open** button.
The selected EDS file is imported into the **EDS Management** area.

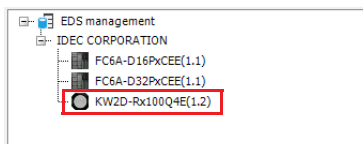


3. In the **EDS Management** area, right-click the **EDS Management** node and click **Add to Scan List**.

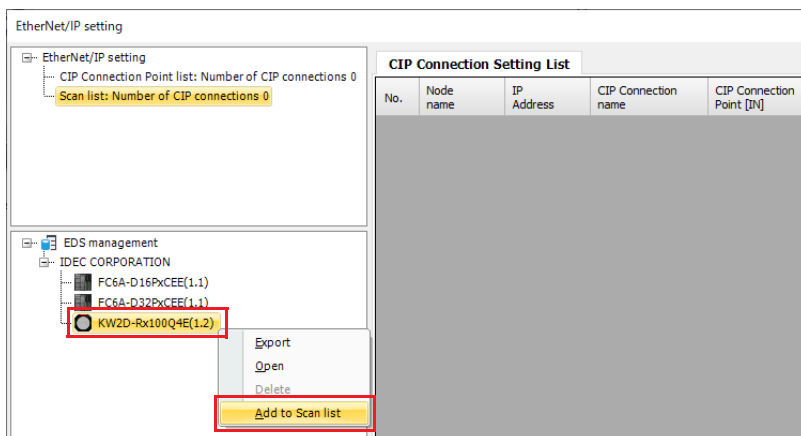


The settings of the selected EDS file are added to the scan list.

16: ETHERNET/IP COMMUNICATION

4. Select the **Target** node in the EtherNet/IP tree area and set the IP address on the **Target Settings** tab. Also, check the settings on the **Target Settings** tab and change the settings if necessary.

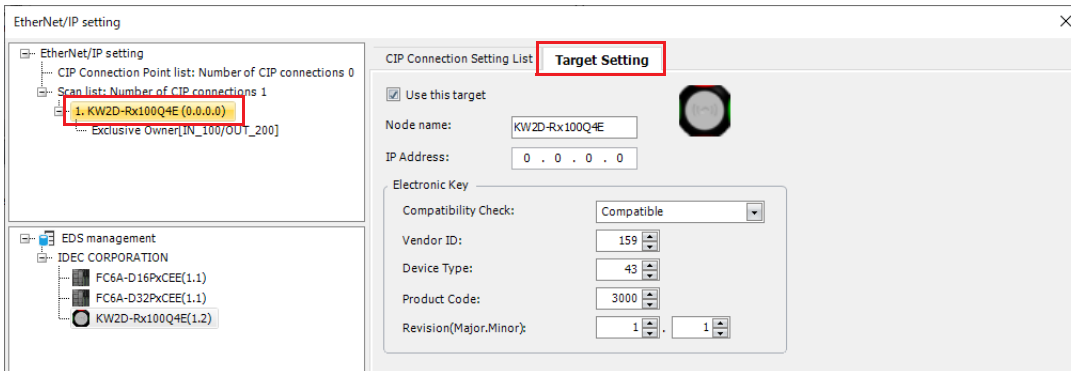

5. Select the **CIP Connections** node in the EtherNet/IP tree area and set the timeouts, control registers and device assignments on the **CIP Connection Settings** tab. Also, check the settings on the **CIP Connection Settings** tab and change the settings if necessary.

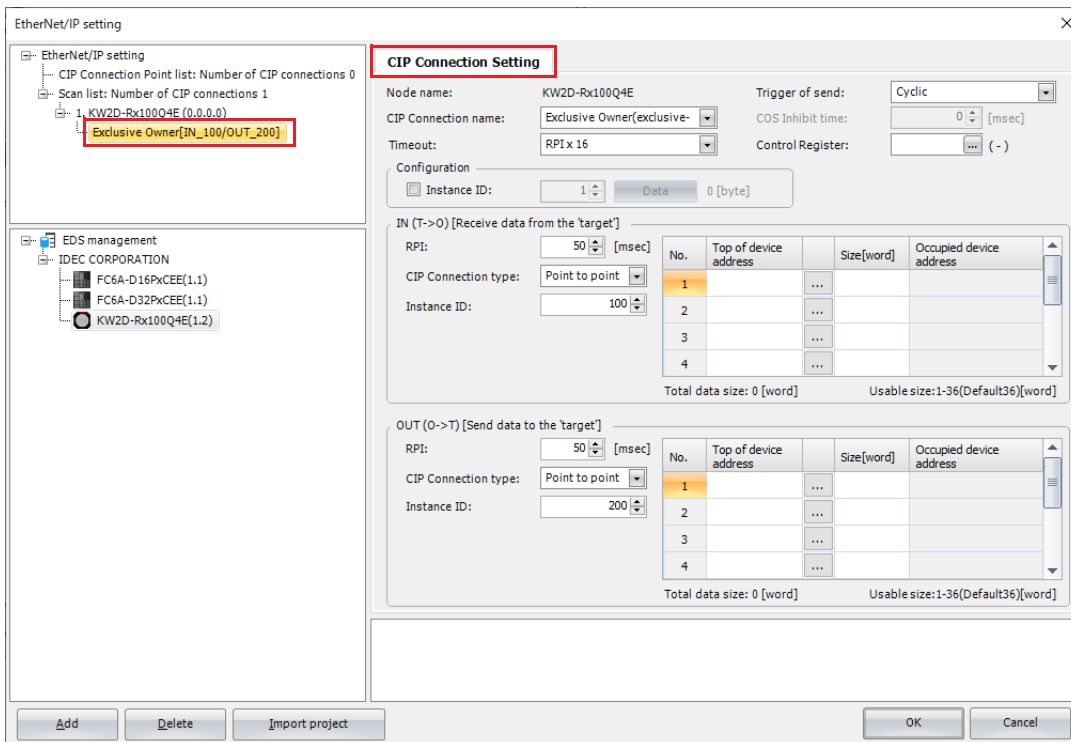

6. Click the **OK** button.

This concludes configuring the scan list creation.


Note: EDS files are prepared by each EtherNet/IP device manufacturer. Please contact each EtherNet/IP device manufacturer for how to obtain the EDS file.

Examples of EtherNet/IP Settings

Using the Plus CPU module as a Target

This section describes an example of the settings for connecting to an originator with the Plus CPU module as the target.

System configuration diagram

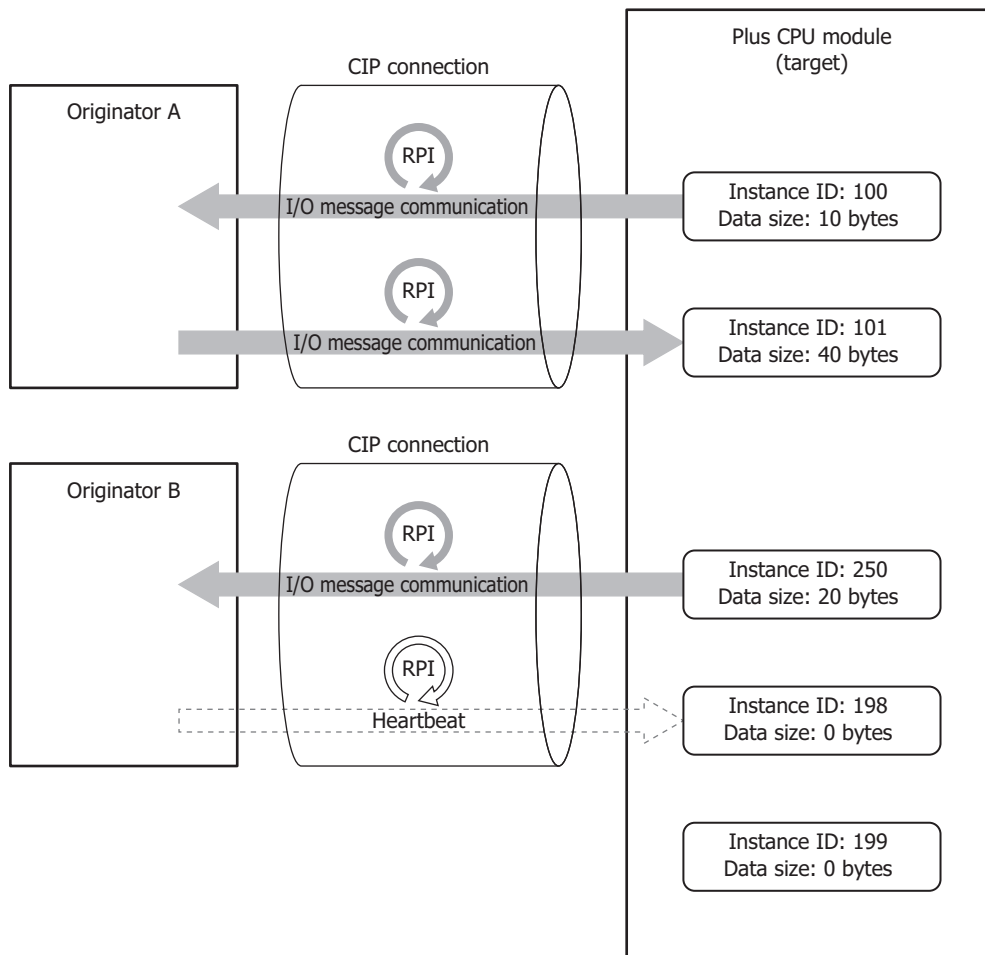

Specifications to set for the Plus CPU module

Configure a CIP connection point to read and write from Originator A and B using the Plus CPU module as a target.

CIP Connection Point			Data Register for Storing Data
Input & Output Type	Instance ID	Data Size	
Input	100	10 bytes (5 words)	D0500
Output	101	40 bytes (20 words)	D0600
Input	250	20 bytes (10 words)	D0700
Output (for Input Only)	198 (fixed by system)	0 bytes	—
Output (for Listen Only)	199 (fixed by system)	0 bytes	—

16: ETHERNET/IP COMMUNICATION

Settings

Configure the CIP connection point settings for the Plus CPU module.

■ Plus CPU module CIP Connection Point Settings

The Plus CPU module (target) transmits the CIP connection point (instance ID: 100) data stored in data registers to the originator.

CIP Connection Point Setting

Instance ID: 100 Available Instance ID (100 to 197, 240 to 255 and 768 to 1279)

CIP Tag: AssemblyIN_1

Type: IN (T->O) Send data to the 'Originator'.

No.	Top of device address	Size[word]	Occupied device address
1	D0500	5	D0500 - D0504
2			
3			
4			
5			
6			
7			
8			

Total data size: 5 [word] Remaining data size: 715 [word]

Settings		Description
1.	CIP tag	"AssemblyIN_1"
	Instance ID	100
	Type	IN (T->O)
	Device allocations	D0500 to D0504 (5 words)

The Plus CPU module (target) receives the CIP connection point (instance ID: 101) data from the originator and stores it in data registers.

CIP Connection Point Setting

Instance ID: 101 Available Instance ID (100 to 197, 240 to 255 and 768 to 1279)

CIP Tag: AssemblyOUT_1


Type: OUT (O->T) Receive data from the 'Originator'.

No.	Top of device address	Size[word]	Occupied device address
1	D0600	20	D0600 - D0619
2			
3			
4			
5			
6			
7			
8			

Total data size: 20 [word] Remaining data size: 700 [word]

Settings		Description
2.	CIP tag	"AssemblyOUT_1"
	Instance ID	101
	Type	OUT (O->T)
	Device allocations	D0600 to D0619 (20 words)

The Plus CPU module (target) transmits the CIP connection point (instance ID: 200) data stored in data registers to the originator.

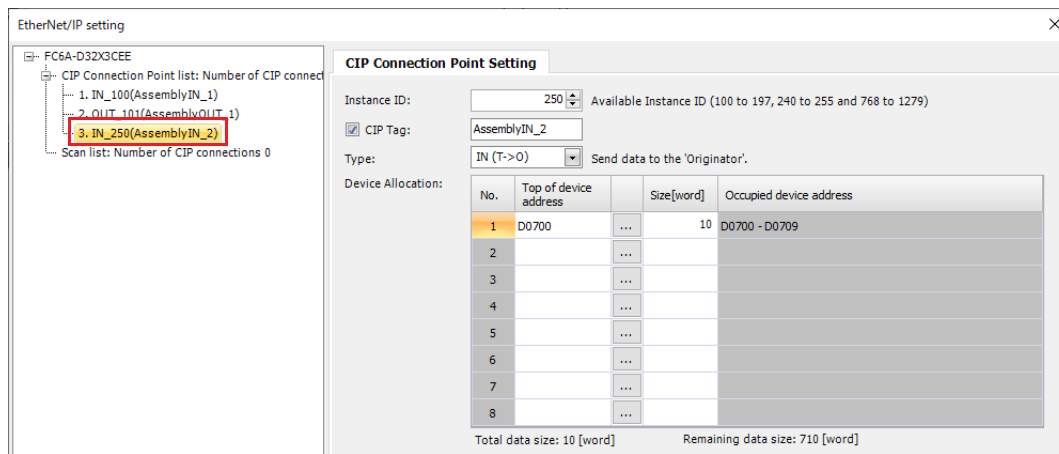

	Settings	Description
3.	CIP tag	"AssemblyIN_2"
	Instance ID	250
	Type	IN (T->O)
	Device allocations	D0700 to D0709 (10 words)


Note: The RPI and CIP connection type, such as Exclusive Owner, are specified by the originator when it opens the CIP connection.

This concludes configuring the settings.

Using the Plus CPU module as an Originator

This section describes an example of the settings for connecting to a target with the Plus CPU module as the originator.

System configuration diagram

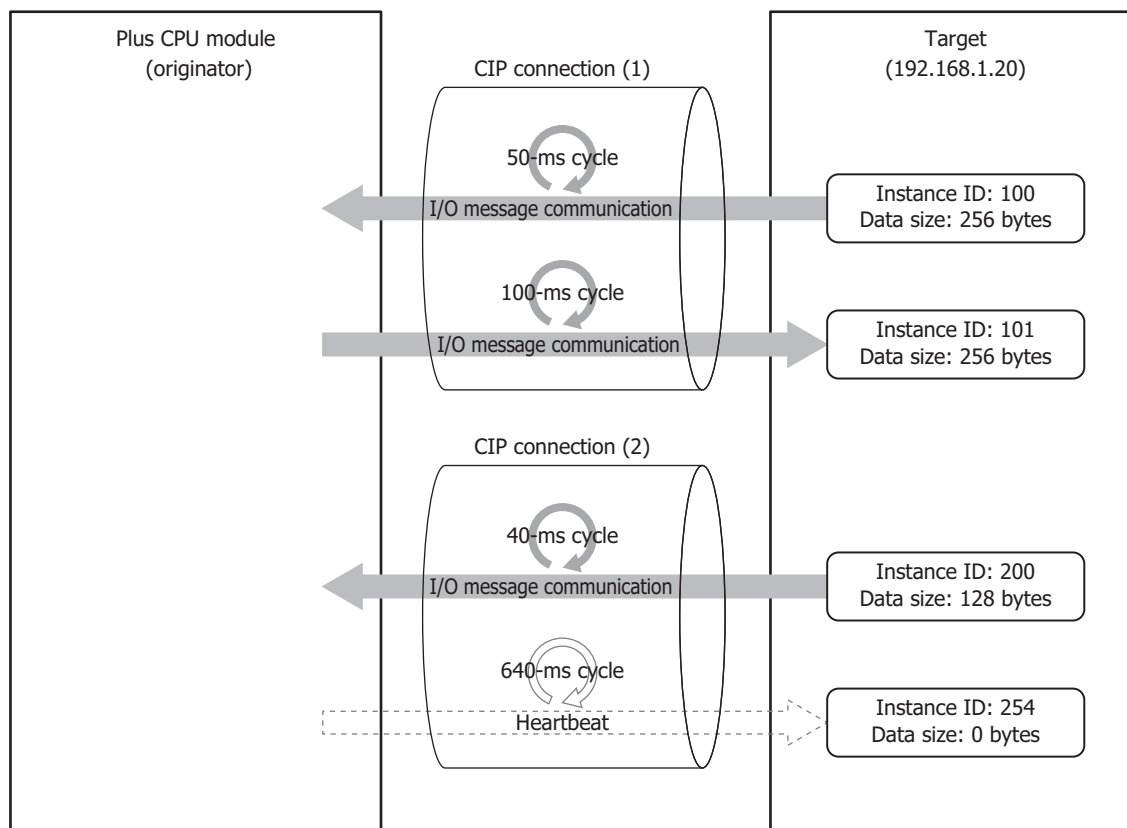

Specifications of destination target

IP Address	192.168.1.20			
CIP Connection Point	The following table shows the CIP connection point of the target that Plus CPU module connects to as the originator.			
	CIP connection	Type	Instance ID	Data Size
	CIP connection (1)	Configuration	1	0 bytes
		Input	100	256 bytes (128 words)
		Output	101	256 bytes (128 words)
	CIP connection (2)	Configuration	1	0 bytes
		Input	200	128 bytes (64 words)
Output (Heartbeat)		254	0 bytes	

Settings

Configure the target device and CIP connection settings.

■ Plus CPU module Scan List Settings (Target Device Settings)

The screenshot shows the 'EtherNet/IP setting' dialog box with the 'Target Setting' tab active. In the left-hand tree view, '1. SampleTarget (192.168.1.20)' is highlighted. The main area displays the following settings:

- Use this target
- Node name: SampleTarget
- IP Address: 192.168.1.20
- Electronic Key:
 - Compatibility Check: Disable
 - Vendor ID: 1
 - Device Type: 1
 - Product Code: 1
 - Revision(Major.Minor): 1 . 1

Settings	Description
Use this target	Enable
Node name	SampleTarget
IP Address	192.168.1.20
Electronic Key	Compatibility Check
	Disable

■ Plus CPU module Scan List Settings (CIP Connection Settings)

CIP connection (1)

The Plus CPU module (originator) sends a request to open the CIP connection to the CIP connection point (instance ID: 100 and 101), and when successful, receives data from the target every 50 ms and transmits data to the target every 100 ms.

The screenshot shows the 'EtherNet/IP setting' dialog box with the 'CIP Connection Setting' tab active. In the left-hand tree view, '1. SampleTarget (192.168.1.20)' is expanded, and 'Exclusive Owner (ID)[IN_100/OUT_101]' is selected. The main area displays the following settings:

- Node name: SampleTarget
- CIP Connection name: Exclusive Owner (ID)
- Trigger of send: Cyclic
- COS Inhibit time: 0 [msec]
- Timeout: RPI x 16
- Control Register: D0500
- Configuration:
 - Instance ID: 1 [Data] 0 [byte]
- IN (T->O) [Receive data from the target]:
 - RPI: 50 [msec]
 - CIP Connection type: Point to point
 - Instance ID: 100
 - Table:

No.	Top of device address	Size[word]	Occupied device address
1	D0000	128	D0000 - D0127
2
3
 - Total data size: 128 [word] Remaining data size: 592 [word]
- OUT (O->T) [Send data to the target]:
 - RPI: 100 [msec]
 - CIP Connection type: Point to point
 - Instance ID: 101
 - Table:

No.	Top of device address	Size[word]	Occupied device address
1	D0200	128	D0200 - D0327
2
3
 - Total data size: 128 [word] Remaining data size: 592 [word]

Settings	Description
CIP Connection Name	Exclusive Owner (ID)
Trigger of send	Cyclic
Timeout	RPI x 16
Control registers	D0500
Configuration	Instance ID
	Data
	1
	0 bytes

16: ETHERNET/IP COMMUNICATION

Settings		Description
IN (T->O)	RPI	50 ms
	CIP connection type	Point to point
	Instance ID	100
	Device allocations	D0000 to D0127 (128 words)
OUT (O->T)	RPI	100 ms
	CIP connection type	Point to point
	Instance ID	101
	Device allocations	D0200 to D0327 (128 words)

CIP connection (2)

Set Input Only for the CIP connection name when data is not transmitted to the target. The Plus CPU module (originator) sends a request to open the CIP connection to the CIP connection point (instance ID: 200 and 254), and when successful, receives data from the target every 40 ms. The heartbeat, not data, is sent to the target every 640 ms.

Settings		Description
CIP Connection Name		Input Only (ID)
Trigger of send		Cyclic
Timeout		RPI x 16
Control registers		D1100
Configuration	Instance ID	1
	Data	0 bytes
IN (T->O)	RPI	40 ms
	CIP connection type	Point to point
	Instance ID	200
	Device allocations	D1000 to D1063 (64 words)
OUT (O->T)	RPI	640msec
	CIP connection type	Point to point
	Instance ID	254

This concludes configuring the settings.

Objects

Identity Object

Class

■ Class Services

Supports Get_Attribute_Single (0EH) and Get_Attributes_All (01H).

ID	Services
0EH	Get_Attribute_Single
01H	Get_Attributes_All

■ Class Attributes (Instance ID: 0)

ID	Access	Name	Data Type
1	Get	Revision	UINT
2	Get	Max Instance	UINT
3	Get	Number of Instances	UINT
6	Get	Maximum ID Number Class Attributes	UINT
7	Get	Maximum ID Number Instance Attributes	UINT

Instance

■ Instance Services

Supports Get_Attribute_Single (0EH), Get_Attributes_All (01H), and Reset service (05H).

ID	Services
0EH	Get_Attribute_Single
01H	Get_Attributes_All
05H	Reset

■ Instance Attributes (Instance ID: 1)

ID	Access	Name	Data Type	Description	Attribute Value
1	Get	Vendor ID	UINT	Vendor identification number	159
2	Get	Device Type	UINT	General device type	14 (Programmable Logic Controller)
3	Get	Product Code	UINT	Product identification code	*1
4	Get	Revision	STRUCT	Revision of Identity object	System software version
		Major Revision	USINT	Major revision	
		Minor Revision	USINT	Minor revision	
5	Get	Status	WORD	Current status of device	
6	Get	Serial Number	UDINT	Serial number	
7	Get	Product Name	SHORT-STRING	Product name	*1

*1 Attribute values differ for each product.

	FC6A-D16R1CEE, FC6A-D16R4CEE	FC6A-D16P1CEE, FC6A-D16P4CEE	FC6A-D16K1CEE, FC6A-D16K4CEE	FC6A-D32P1CEE, FC6A-D32P4CEE	FC6A-D32K1CEE, FC6A-D32K4CEE
Product Code	2000	2010	2020	2030	2040
Product Name	FC6A-D16RxCEE	FC6A-D16PxCEE	FC6A-D16KxCEE	FC6A-D32PxCEE	FC6A-D32KxCEE

Message Router Object

Class

■ **Class Services**

ID	Services
0EH	Get_Attribute_Single

■ **Class Attributes (Instance ID: 0)**

ID	Access	Name	Data Type
1	Get	Revision	UINT
2	Get	Max Instance	UINT
3	Get	Number of Instances	UINT
6	Get	Maximum ID Number Class Attributes	UINT
7	Get	Maximum ID Number Instance Attributes	UINT

Instance

■ **Instance Services**

ID	Services
0EH	Get_Attribute_Single

■ **Instance Attributes (Instance ID: 1)**

ID	Access	Name	Data Type
1	Get	Object_list	STRUCT
	Get	Number	UINT
	Get	Classes	Array of UINT
2	Get	Number Available	UINT

Assembly Object**Class****■ Class Services**

ID	Services
0EH	Get_Attribute_Single

■ Class Attributes (Instance ID: 0)

ID	Access	Name	Data Type
1	Get	Revision	UINT

Instance**■ Instance Services**

ID	Services
0EH	Get_Attribute_Single
10H	Set_Attribute_Single

■ Instance Attributes**(1) Originator -> Target**

ID	Access	Name	Data Type
3	Get/Set	Data	Array of BYTE
4	Get	Size	UINT

(2) Target -> Originator

ID	Access	Name	Data Type
3	Get	Data	Array of BYTE
4	Get	Size	UINT

Connection Manager Object**Class****■ Class Services**

There are no class services.

■ Class Attributes

There are no class attributes.

Instance**■ Instance Services**

ID	Services
54H	Forward_Open
5BH	Large_Forward_Open
4EH	Forward_Close

■ Instance Attributes

There are no instance attributes.

TCP/IP Interface Object

Class

■ **Class Services**

ID	Services
0EH	Get_Attribute_Single

■ **Class Attributes**

ID	Access	Name	Data Type
1	Get	Revision	UINT
2	Get	Max Instance	UINT
3	Get	Num Instances	UINT
6	Get	Maximum ID Number Class Attributes	UINT
7	Get	Maximum ID Number Instance Attributes	UINT

Instance

■ **Instance Services**

ID	Services
0EH	Get_Attribute_Single
10H	Set_Attribute_Single

■ **Instance Attributes**

ID	Access	Name	Data Type
1	Get	Status	DWORD
2	Get	Configuration Capability	DWORD
3	Get	Configuration Control	DWORD
4	Get	Physical Link Object	STRUCT
		Path size	UINT
		Path	EPATH
5	Get	Interface Configuration	STRUCT
		IP Address	UDINT
		Network Mask	UDINT
		Gateway Address	UDINT
		Name Server	UDINT
		Name Server 2	UDINT
6	Get	Host Name	STRING
13	Get/Set	Encapsulation Inactivity Timeout	UINT

Ethernet Link Object

Configures and reads Ethernet communication settings. Also reads the status of Ethernet communication.

Class**■ Class Services**

ID	Services
0EH	Get_Attribute_Single

■ Class Attributes

ID	Access	Name	Data Type
1	Get	Revision	UINT
2	Get	Max Instance	UINT
3	Get	Num Instances	UINT

Instance**■ Instance Services**

Supports Get_Attribute_Single (0EH) and Get_Attributes_All (01H).

ID	Services
0EH	Get_Attribute_Single
01H	Get_Attributes_All

■ Instance Attributes

ID	Access	Name	Data Type
1	Get	Interface Speed	UDINT
2	Get	Interface Flags	DWORD
3	Get	Physical Address	Array of 6 USINTs
11	Get	Interface Capability	STRUCT
		Capability Bits	DWORD
		Speed/Duplex Options	STRUCT
		Speed/Duplex Array Count	USINT
		Speed/Duplex Array	Array of STRUCT
		Interface Speed	UINT
		Interface Duplex Mode	USINT

17:MQTT COMMUNICATION


This chapter describes MQTT communication in the Plus CPU module.

Overview

The Plus CPU module supports MQTT communication.

MQTT is a lightweight and easy-to-scale protocol used to send and receive data. You can accomplish the following by using MQTT communication.


- Collect data from remote equipment to check its operating status
- Receive notification when remote equipment has errors
- Start and stop remote equipment, and change the setting values

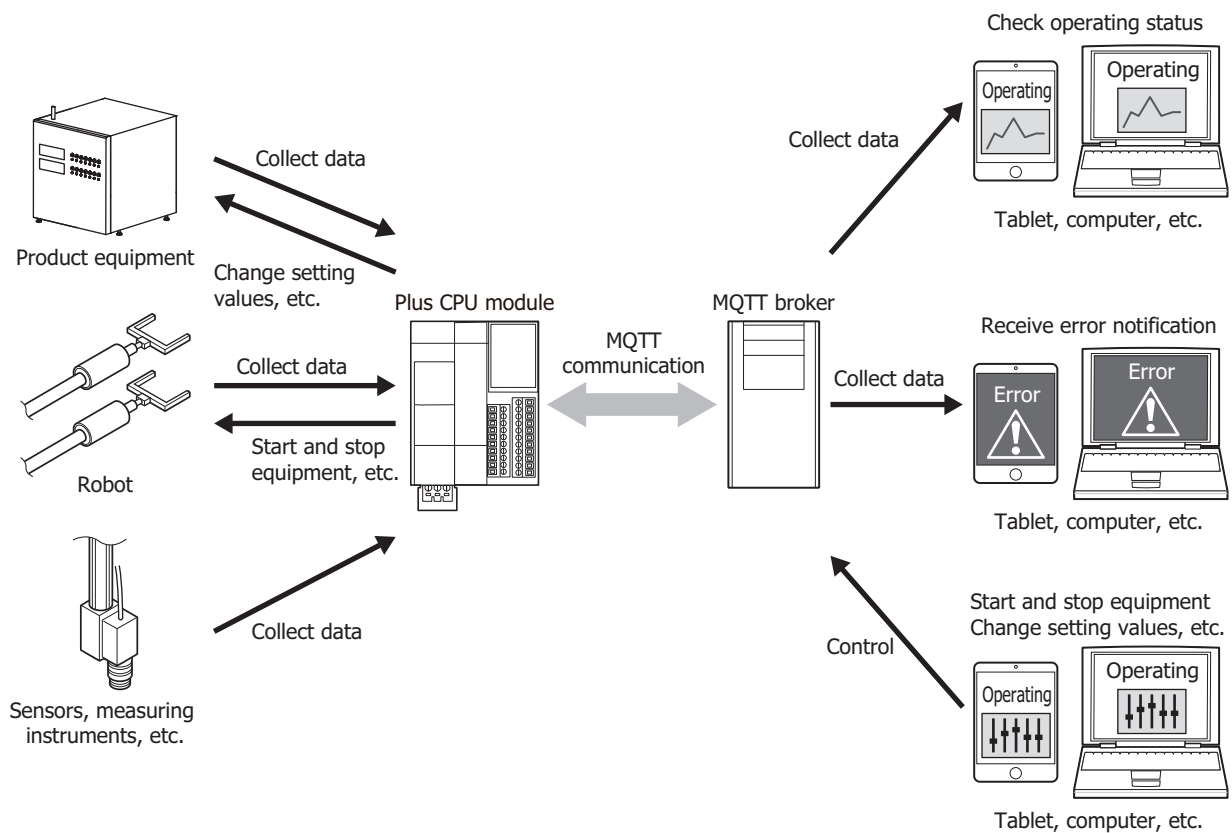

17: MQTT COMMUNICATION

The Plus CPU module can communicate with a broker as a client (publisher and subscriber) in MQTT communication. For details on MQTT communication and descriptions of general terms used in MQTT communication, refer to the MQTT specifications published by OASIS (Organization for the Advancement of Structured Information Standards).

An MQTT network is composed of brokers, publishers, and subscribers. A subscriber connects to a broker and registers the topic to subscribe to. A publisher connects to a broker and transmits packets that include a topic and data to the broker. A broker refers to the topic inside a packet and transmits that packet to the subscribers that are subscribed to that topic, and those subscribers receive the data in that packet.

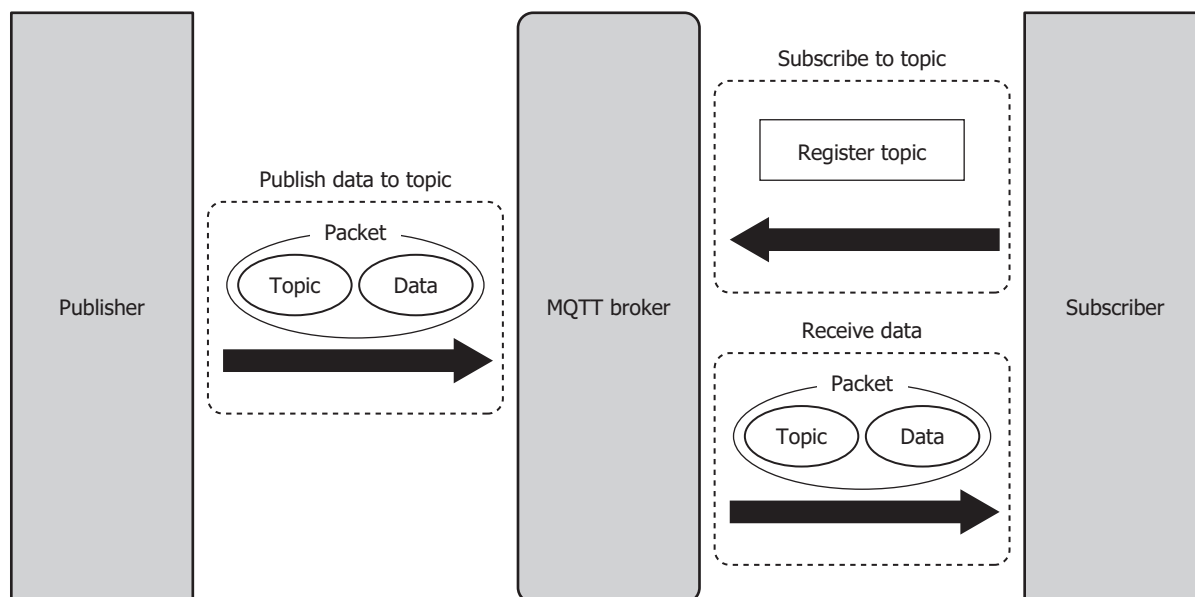

Notes:

- A subscriber registering the topic to subscribe to with the broker is called "subscribing to a topic".
- A publisher transmitting packets that include a topic and data to a broker is called "publishing to a topic".
- The packets that are exchanged in MQTT communication are called MQTT packets.
- Topics are information that differentiate types of data. A publisher transmits data by adding the topic that corresponds to the type of data to transmit. A subscriber can receive only the data it needs by subscribing to the topic that corresponds to the type of data to receive.

Supported Models and Communication Ports

Supported models and communication ports are as follows.

Communication Port	All-in-One CPU module			CAN J1939 All-in-One CPU module	Plus CPU module	
	16-I/O Type	24-I/O Type	40-I/O Type		Plus 16-I/O Type	Plus 32-I/O Type
Ethernet Port 1	—	—	—	—	Yes	Yes
Ethernet Port 2	—	—	—	—	—	—
HMI-Ethernet Port	—	—	—	—	—	—

MQTT communication cannot be used with serial communication ports 1 to 33.

Standard Specifications

The standard specifications are as follows.

Module		Plus CPU module
Communication Port		Ethernet port 1
Applicable Standards		MQTT Version 3.1.1
Standard Specifications	Host Name	128 bytes maximum
	Authentication	Supported
	Account Name	128 bytes maximum
	Password	496 bytes maximum
	SSL/TLS	Supported
	Client ID	128 bytes maximum
	Keep Alive	5 to 65,535 s
	QoS	0, 1, and 2
	Topic	256 bytes maximum
Publish Specifications	Data Format	JSON format, 32 KB maximum (publisher), 8 KB maximum (subscriber)
	Retain	Supported
Subscribe Specifications	Will	Not supported
	Wildcards (# and +)	Supported
	Persistent Session	Not supported

Supported MQTT Broker and Cloud Services

Basic operations (connecting, publishing, and subscribing) are confirmed using the following MQTT broker and cloud services. (As of July 2022)

- Mosquitto
- AWS IoT Core (Amazon.com) (port number 8883)*1
- Azure IoT Hub (azure.microsoft.com) (port number 8883)*1

You can use services supported by both the Plus CPU module and the above MQTT broker or cloud services. However, AWS IoT Core and Azure IoT Hub may not be able to connect due to changes in cloud service specifications.

The Plus CPU module also supports the following connection methods with MQTT broker and cloud services.

■ Connect to a general purpose MQTT broker

Connect the Plus CPU module to a general purpose MQTT broker.

■ Connect to AWS IoT Core

Connect the Plus CPU module that have been registered to AWS IoT Core in advance to it.

■ Connect to Azure IoT Hub using SAS

Connect the Plus CPU module that have been registered to Azure IoT Hub in advance to it using Shared Access Signature (SAS). SAS token is used to connect the Plus CPU module to the Azure IoT Hub.

■ Connect to Azure IoT Hub using X.509 certificate

Connect the Plus CPU module that have been registered to Azure IoT Hub in advance to it using X.509 certificate. X.509 certificate is specified as the device certificate (client certificate).


■ Connect to Azure IoT Hub via DPS

You can register Plus CPU module to Azure IoT Hub via Device Provisioning Service (DPS) and connect to Azure IoT Hub. SAS token is used to connect the Plus CPU module to the DPS and Azure IoT Hub.

*1 A connection cannot be made to port number 443 in AWS IoT Core (Amazon.com) / Azure IoT Hub (azure.microsoft.com).

17: MQTT COMMUNICATION

The flow from connecting to DPS to connecting to Azure IoT Hub is shown in the figure below.

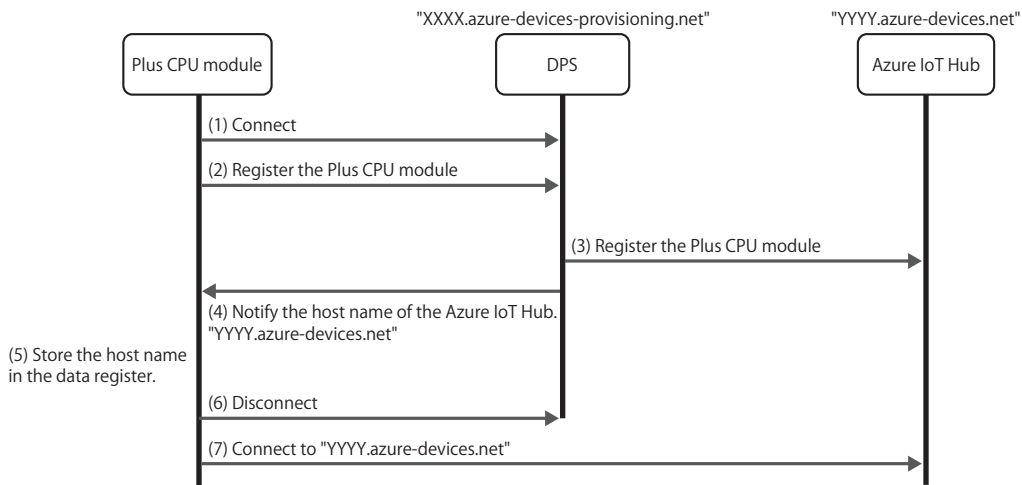

- (1) The Plus CPU module connects to DPS.
- (2) The Plus CPU module is registered to DPS.
- (3) DPS registers the Plus CPU module to Azure IoT Hub.
- (4) DPS notifies the Plus CPU module of the host name of the Azure IoT Hub to which the Plus CPU module connects.
- (5) The Plus CPU module stores the host name in the data register.
- (6) The Plus CPU module disconnects from DPS.
- (7) The Plus CPU module connects to the Azure IoT Hub with the host name stored in the data registers in (5).

Note: If the Plus CPU module connects again to DPS to which the Plus CPU module is already registered, the Plus CPU module may be registered to another Azure IoT Hub depending on the re-provision settings of the enrollment group of DPS. For more information, see the Azure IoT Hub Device Provisioning Service documentation.


MQTT Communication Settings

The MQTT communication settings are configured on the **MQTT Settings** dialog box. This section describes the **MQTT Settings** dialog box and the settings according to usage method.

• Procedure to display the MQTT Settings dialog box


1. On the **Configuration** tab, in the **Function Area Settings** group, click **Ethernet Port 1**.

The **Function Area Settings** dialog box is displayed.

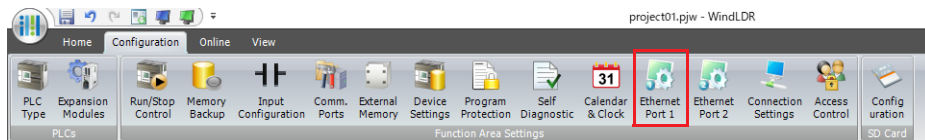

2. Under MQTT settings, click **Configure**.

The **MQTT Settings** dialog box is displayed.

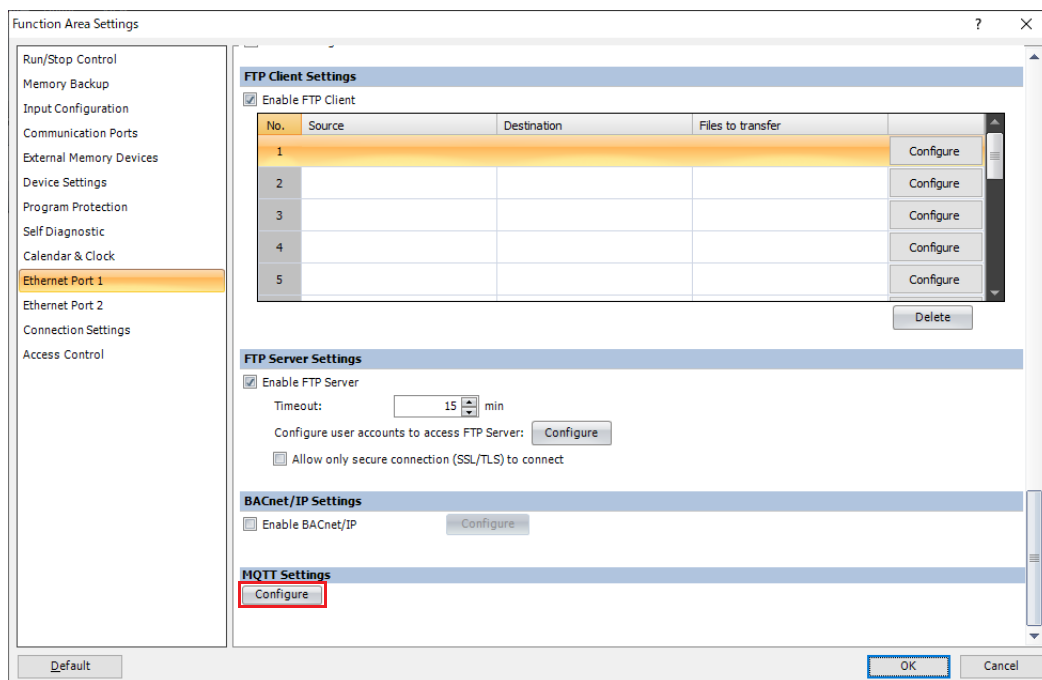

MQTT Settings Dialog Box

Set the MQTT broker or cloud service to which Plus CPU module connects and how the Plus CPU module connects.

(1) Enable MQTT

Specifies whether to enable MQTT.

(2) Cloud Service Name

Sets the name of the cloud service to connect to.

Cloud Service Name	Description
General purpose	Connect the Plus CPU module to a general purpose MQTT broker. For details, see "Connect to a general purpose MQTT broker" on page 17-7.
AWS IoT Core	Connect the Plus CPU module to AWS IoT Core. For details, see "Connect to AWS IoT Core" on page 17-12.
Azure IoT Hub	Connect the Plus CPU module to Azure IoT Hub. For details, see "MQTT Connection Method" on page 17-6.

MQTT Settings

Select **Enable MQTT** in the **MQTT Settings** dialog box to display the **MQTT Settings** tab.

Configure the basic settings for performing MQTT communication on this tab.

■ MQTT Connection Method


Only when **Azure IoT Hub** is set as the **Cloud Service Name**, **MQTT Connection Method** group appears so that you can set the connection method to Azure IoT Hub. The connection method can be set from the following three types.

MQTT Connection Method	Description
Connect directly to Azure IoT Hub	Use Shared Access Signatures (SAS) Connect to Azure IoT Hub using SAS. For details, see "Connect to Azure IoT Hub using SAS" on page 17-17.
	Use X.509 certificates Connect to Azure IoT Hub using X.509 certificates. For details, see "Connect to Azure IoT Hub using X.509 certificates" on page 17-22.
Connect to Azure IoT Hub via DPS	Connect to Azure IoT Hub via DPS. For details, see "Connect to Azure IoT Hub via DPS" on page 17-26.


Connect to a general purpose MQTT broker

■ MQTT Basic Settings

When the **Specify with SD memory card** check box is cleared

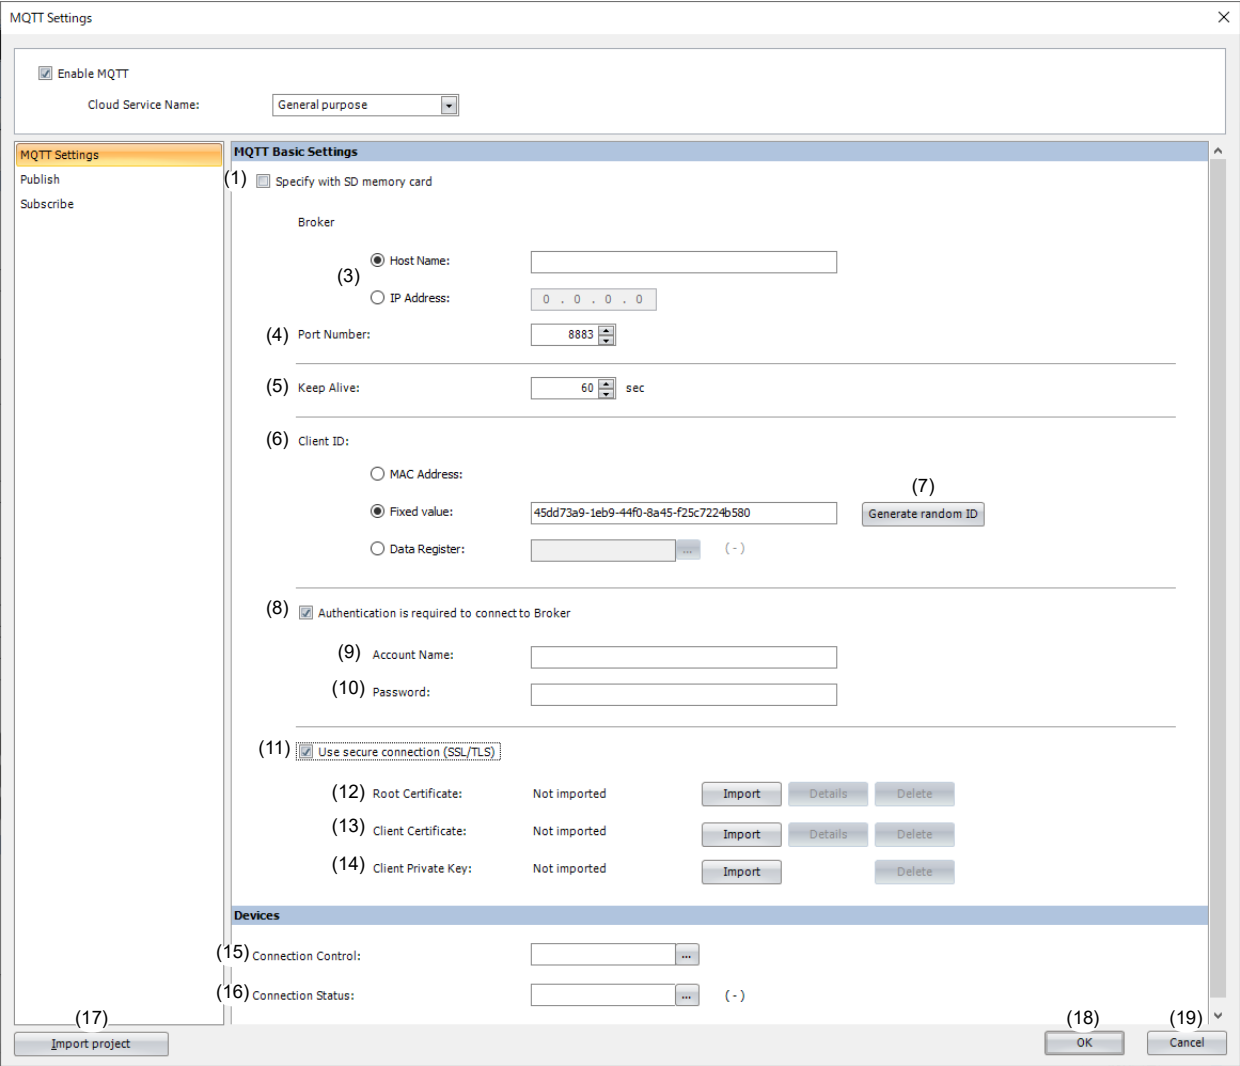

When the **Specify with SD memory card** check box is selected

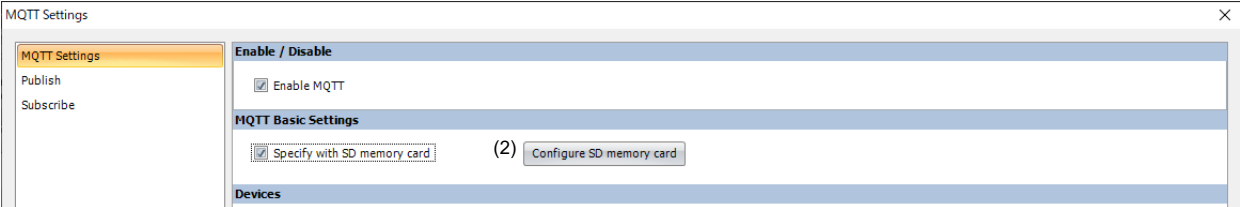

(1) Specify with SD memory card

Specifies whether to write the basic settings for MQTT communication to the Plus CPU module by using an SD memory card. When the **Specify with SD memory card** check box is selected, (2) is displayed and (3) to (14) are hidden. In this case, configure the details on the **SD Memory Card** dialog box. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the "FC6A Series MICROSmart User's Manual".

(2) Configure SD Memory Card

Opens the **SD Memory Card** dialog box. This item is displayed only when the **Specify with SD memory card** check box is selected. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(3) Host Name/IP Address

Sets the host name or IP address of the broker. The maximum length of the host name is 128 characters. Only alphanumeric characters and the symbol (-) can be used.

(4) Port Number

Sets the port number of the broker. 1883 is normally used for MQTT and 8883 is normally used for MQTT over TLS. Set the port number between 0 and 65,535. The default value is 1883. If 0 is specified for the port number, port number 1883 is used if the **Use secure connection (SSL/TLS)** (11) check box is cleared, and port number 8883 is used if that check box is selected.

(5) Keep Alive

Sets the time interval to execute a connection check for the broker when a connection is made to the broker. If the set time interval or longer continues without the Plus CPU module exchanging a packet, a connection check is performed with the broker. The range that can be set is 5 to 65,535 s. The default value is 60 s.

(6) Client ID

Sets the client ID. The client ID can be set from the following three types.

Client ID	Description
MAC address	Sets the MAC address of Ethernet port 1 on the Plus CPU module.*1
Fixed value	Sets any character string. The maximum length of the client ID is 128 characters. Only alphanumeric characters and symbols can be used.
Data Register	Sets the data registers for storing the client ID. The value is read in order from the upper byte of the specified data register, treated as character data, and used as the client ID.*2 Starting from the specified data register, 64 continuous words of data registers are used.*3 Specify the first data register so that the device range is not exceeded. Only alphanumeric characters and symbols can be used as the client ID.

*1 When the MAC address is 12-34-56-78-9A-BC (D8324=0012h, D8325=0034h, D8326=0056h, D8327=0078h, D8328=009Ah, D8329=00BCh), the client ID is "123456789ABC".


*2 For example, when D0000 is specified and the following values are stored in each data register, the client ID is "client_1234".

Data register	Stored Value	
	Upper Byte	Lower Byte
D0000	"c"=63h	"l"=6Ch
D0001	"i"=69h	"e"=65h
D0002	"n"=6Eh	"t"=74h
D0003	"_"=5Fh	"1"=31h
D0004	"2"=32h	"3"=33h
D0005	"4"=34h	00h

*3 When the character string to be set is shorter than 128 bytes (64 words), add the terminating character NULL (00h) as the end of the character string. The data from the upper byte of the specified data register up to the data right before the terminating character NULL (00h) is treated as character data and used as the client ID.

Notes:

- When setting the client ID with the data register, the MOVC instruction can be used to store a character string in the data registers. For details on MOVC instruction, see Chapter 5 "MOVC (Move Characters)" in the "FC6A Series MICROSmart Ladder Programming Manual".
- When the Connection Control (15) is changed from off to on, the client ID stored inside the Plus CPU module is updated. For example, when the client ID is set in the data registers (D0000 to D0063), the client ID is updated at the following timing.

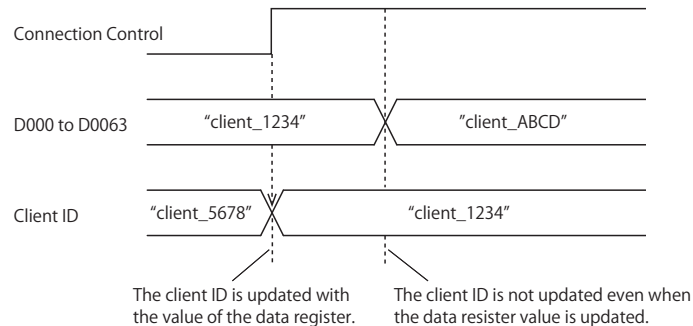**(7) Generate random ID**

When the **Client ID** (6) is set as a fixed value, click this button to generate a random identifier as client ID.

(8) Authentication is required to connect to Broker

Sets whether to perform authentication using an account name and password when connecting to the broker. If the check box is selected, authentication is performed using an account name and password when connecting to the broker. The check box is cleared by default.

(9) Account Name / (10) Password

Sets the account name and password when the **Authentication is required to connect to Broker** check box is selected. The maximum length of the account name is 128 characters, and the maximum length of the password is 496 characters. Only alphanumeric characters and symbols can be used.

(11) Use secure connection (SSL/TLS)

Select this check box when SSL/TLS communication is required with the destination broker. The check box is cleared by default.

(12) Root Certificate

When the **Use secure connection (SSL/TLS)** check box is selected, you can click **Import** button and import a root certificate (pem or crt file with a size less than 2 KB (after conversion to der file)) of the server certificate to use when performing SSL/TLS communication with the broker. WindLDR converts pem and crt files to der files. When a pem file contains multiple root certificates, WindLDR converts each of the first two root certificates to a der file. Click **Details** button to display the **Certificate Information** dialog box that shows the root certificate of the imported server certificate. Click **Delete** button to delete the imported certificate.

(13) Client Certificate

When the **Use secure connection (SSL/TLS)** check box is selected, you can click **Import** button and import a client certificate (pem or crt file with a size less than 2 KB (after conversion to der file)) to use when performing SSL/TLS communication with the broker. Click **Details** button to display the **Certificate Information** dialog box that shows the imported client certificate. Click **Delete** button to delete the imported certificate.

(14) Client Private Key

When the **Use secure connection (SSL/TLS)** check box is selected, you can click **Import** button and import a client private key (RSA encryption, key length 3,072 bits max.) to use when performing SSL/TLS communication with the broker. WindLDR supports the following file formats.

- PKCS#1 format pem file or der file
- PKCS#8 format (unencrypted) pem file or der file

Click **Delete** button to delete the imported private key.

■ Devices

(15) Connection Control

Sets the internal relay used to connect to and disconnect from the broker. When the set internal relay is turned on, a connection is made to the broker. When the set internal relay is turned off, the connection with the broker is disconnected.

Note: When using the data registers to set the client ID (6), the client ID stored inside the Plus CPU module is updated when the connection control is changed from off to on.

(16) Connection Status


Sets the data registers that store the status when connecting to the broker and the error information. Starting from the specified data register, 2 words of data registers are used. Specify the first data register so that the device range is not exceeded.

Storage Destination	Item	Description																																
Starting number+0	Connection Status	Stores the status when connecting to the broker.																																
		<table border="1"> <thead> <tr> <th>Status Code</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>0 (0000h)</td> <td>Initial status (disconnected)</td> </tr> <tr> <td>2 (0002h)</td> <td>Connecting</td> </tr> <tr> <td>4 (0004h)</td> <td>Connected</td> </tr> <tr> <td>8 (0008h)</td> <td>Disconnecting</td> </tr> <tr> <td>16 (0010h)</td> <td>Connection processing error</td> </tr> <tr> <td>32 (0020h)</td> <td>Disconnection processing error</td> </tr> </tbody> </table>	Status Code	Status	0 (0000h)	Initial status (disconnected)	2 (0002h)	Connecting	4 (0004h)	Connected	8 (0008h)	Disconnecting	16 (0010h)	Connection processing error	32 (0020h)	Disconnection processing error																		
		Status Code	Status																															
		0 (0000h)	Initial status (disconnected)																															
		2 (0002h)	Connecting																															
		4 (0004h)	Connected																															
		8 (0008h)	Disconnecting																															
16 (0010h)	Connection processing error																																	
32 (0020h)	Disconnection processing error																																	
Starting number+1	Connection Error Code	Stores information about the error that occurred when connecting to the broker.																																
		<table border="1"> <thead> <tr> <th>Error Code</th> <th>Error Details</th> </tr> </thead> <tbody> <tr> <td>1 (0001h)</td> <td>The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly</td> </tr> <tr> <td>2 (0002h)</td> <td>Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed</td> </tr> <tr> <td>4 (0004h)</td> <td>Invalid client ID format</td> </tr> <tr> <td>16 (0010h)</td> <td>An unknown packet was received</td> </tr> <tr> <td>32 (0020h)</td> <td>An invalid MQTT packet was received</td> </tr> <tr> <td>64 (0040h)</td> <td>Keep alive timeout error</td> </tr> <tr> <td>80 (0050h)</td> <td>Packet could not arrive at destination host</td> </tr> <tr> <td>96 (0060h)</td> <td>MQTT packet receive timeout error</td> </tr> <tr> <td>112 (0070h)</td> <td>TLS error</td> </tr> <tr> <td>256 (0100h)</td> <td>Broker connection refused (unacceptable MQTT protocol version)</td> </tr> <tr> <td>512 (0200h)</td> <td>Broker connection refused (invalid client ID)</td> </tr> <tr> <td>768 (0300h)</td> <td>Broker connection refused (broker unavailable)</td> </tr> <tr> <td>1024 (0400h)</td> <td>Broker connection refused (invalid account name or password)</td> </tr> <tr> <td>1280 (0500h)</td> <td>Broker connection refused (not authorized)</td> </tr> <tr> <td>32768 (8000h)</td> <td>Broker response error</td> </tr> </tbody> </table>	Error Code	Error Details	1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly	2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed	4 (0004h)	Invalid client ID format	16 (0010h)	An unknown packet was received	32 (0020h)	An invalid MQTT packet was received	64 (0040h)	Keep alive timeout error	80 (0050h)	Packet could not arrive at destination host	96 (0060h)	MQTT packet receive timeout error	112 (0070h)	TLS error	256 (0100h)	Broker connection refused (unacceptable MQTT protocol version)	512 (0200h)	Broker connection refused (invalid client ID)	768 (0300h)	Broker connection refused (broker unavailable)	1024 (0400h)	Broker connection refused (invalid account name or password)	1280 (0500h)	Broker connection refused (not authorized)	32768 (8000h)	Broker response error
		Error Code	Error Details																															
		1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly																															
		2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed																															
		4 (0004h)	Invalid client ID format																															
		16 (0010h)	An unknown packet was received																															
		32 (0020h)	An invalid MQTT packet was received																															
		64 (0040h)	Keep alive timeout error																															
		80 (0050h)	Packet could not arrive at destination host																															
		96 (0060h)	MQTT packet receive timeout error																															
		112 (0070h)	TLS error																															
		256 (0100h)	Broker connection refused (unacceptable MQTT protocol version)																															
		512 (0200h)	Broker connection refused (invalid client ID)																															
		768 (0300h)	Broker connection refused (broker unavailable)																															
1024 (0400h)	Broker connection refused (invalid account name or password)																																	
1280 (0500h)	Broker connection refused (not authorized)																																	
32768 (8000h)	Broker response error																																	


Connect to AWS IoT Core

■ MQTT Basic Settings

When the **Specify with SD memory card** check box is cleared

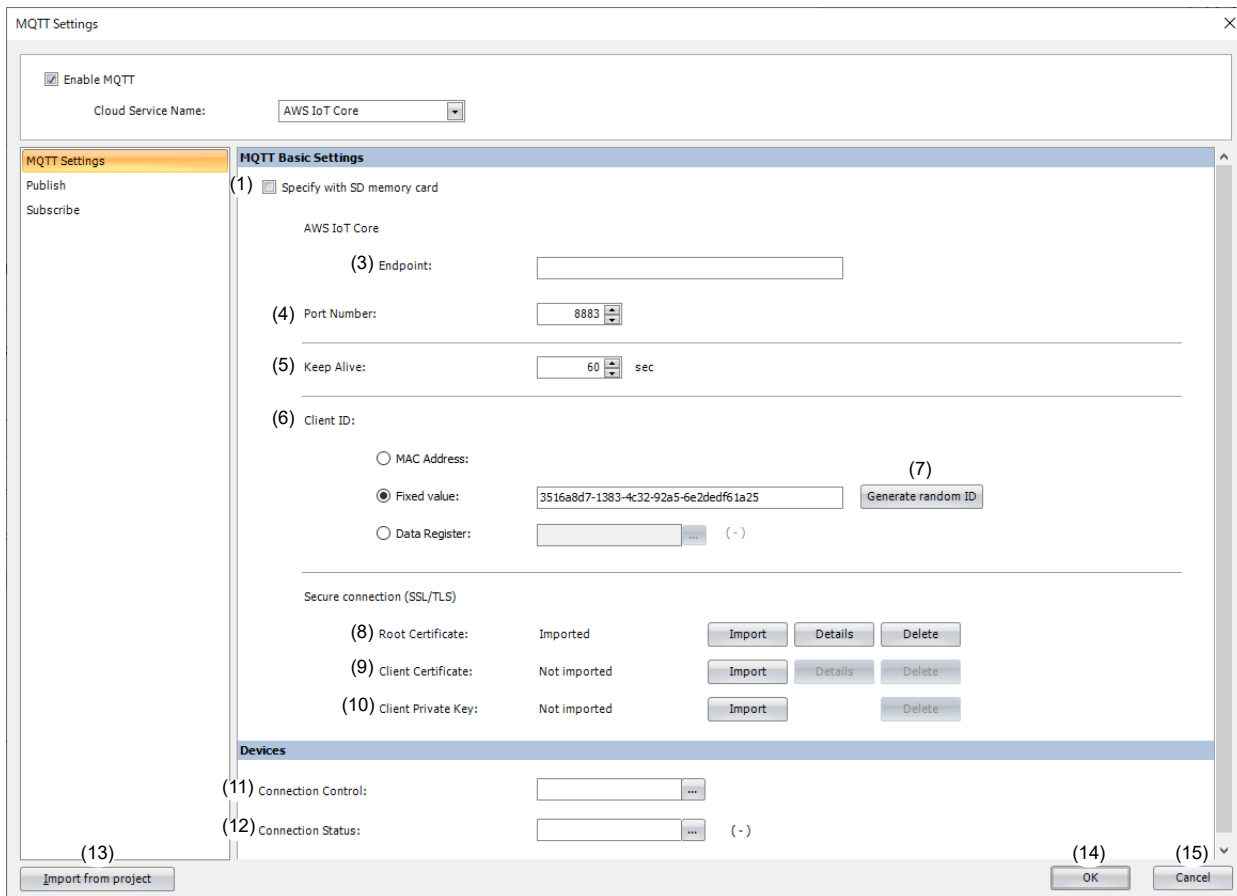

When the **Specify with SD memory card** check box is selected

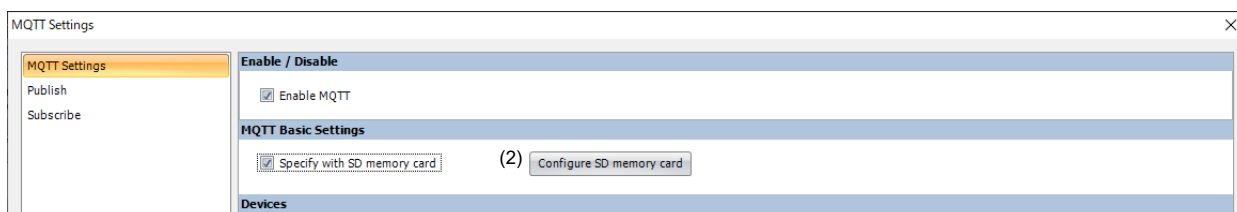

(1) Specify with SD memory card

Specifies whether to write the basic settings for MQTT communication to the Plus CPU module by using an SD memory card. When the **Specify with SD memory card** check box is selected, (2) is displayed and (3) to (10) are hidden. In this case, configure the details on the **SD Memory Card** dialog box. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(2) Configure SD Memory Card

Opens the **SD Memory Card** dialog box. This item is displayed only when the **Specify with SD memory card** check box is selected. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(3) Endpoint

Sets the endpoint of the AWS IoT Core. The maximum length of the endpoint is 128 characters. Only alphanumeric characters and the symbol (-) can be used.

(4) Port Number

Sets the port number of the AWS IoT Core. Set the port number between 0 and 65,535. The default value is 8883 used for AWS IoT Core. If 0 is specified for the port number, port number 8883 is used.

(5) Keep Alive

Sets the time interval to execute a connection check for the AWS IoT Core when a connection is made to the AWS IoT Core. If the set time interval or longer continues without the Plus CPU module exchanging a packet, a connection check is performed with the AWS IoT Core. The range that can be set is 5 to 65,535 s. The default value is 60 s.

(6) Client ID

Sets the client ID. The client ID can be set from the following three types.

Client ID	Description
MAC address	Sets the MAC address of Ethernet port 1 on the Plus CPU module.*1
Fixed value	Sets any character string. The maximum length of the client ID is 128 characters. Only alphanumeric characters and symbols can be used.
Data Register	Sets the data register for storing the client ID. The value is read in order from the upper byte of the specified data register, treated as character data, and used as the client ID.*2 Starting from the specified data register, 64 continuous words of data registers are used.*3 Specify the first data register so that the device range is not exceeded. Only alphanumeric characters and symbols can be used as the client ID.

*1 When the MAC address is 12-34-56-78-9A-BC (D8324=0012h, D8325=0034h, D8326=0056h, D8327=0078h, D8328=009Ah, D8329=00BCh), the client ID is "123456789ABC".


*2 For example, when D0000 is specified and the following values are stored in each data register, the client ID is "client_1234".

Data register	Stored Value	
	Upper Byte	Lower Byte
D0000	"c"=63h	"l"=6Ch
D0001	"i"=69h	"e"=65h
D0002	"n"=6Eh	"t"=74h
D0003	"_"=5Fh	"1"=31h
D0004	"2"=32h	"3"=33h
D0005	"4"=34h	00h

*3 When the character string to be set is shorter than 128 bytes (64 words), add the terminating character NULL (00h) as the end of the character string. The data from the upper byte of the specified data register up to the data right before the terminating character NULL (00h) is treated as character data and used as the client ID.

Notes:

- When setting the client ID with the data register, the MOVC instruction can be used to store a character string in the data registers. For details on MOVC instruction, see Chapter 5 "MOVC (Move Characters)" in the FC6A Series MICROSmart Ladder Programming Manual.
- When the Connection Control (11) is changed from off to on, the client ID stored inside the Plus CPU module is updated. For example, when the client ID is set in the data registers (D0000 to D0063), the client ID is updated at the following timing.

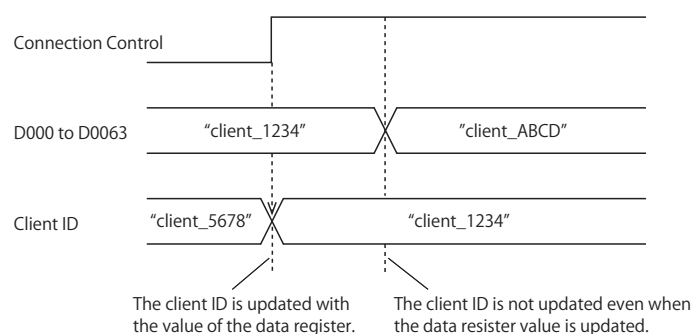**(7) Generate random ID**

When the **Client ID** (6) is set as a fixed value, click this button to generate a random identifier as client ID.

(8) Root Certificate

Click **Import** button to import a root certificate to use when performing SSL/TLS communication with the AWS IoT Core. Files that can be imported are pem or crt files. WindLDR converts pem and crt files to der files. der files that are 2KB or bigger cannot be imported. When a pem file contains multiple root certificates, WindLDR converts each of the first two root certificates to a der file. Click **Details** button to display the **Certificate Information** dialog box that shows the imported root certificate. Click **Delete** button to delete the imported certificate.

(9) Client Certificate

Click **Import** button to import a client certificate to use when performing SSL/TLS communication with the AWS IoT Core. Files that can be imported are pem or crt files. WindLDR converts pem and crt files into der files. der files that are 2KB or bigger cannot be imported. Click **Details** button to display the **Certificate Information** dialog box that shows the imported client certificate. Click **Delete** button to delete the imported certificate.

(10) Client Private Key

Click **Import** button to import a client private key (RSA encryption, key length 3,072 bits max.) to use when performing SSL/TLS communication with the AWS IoT Core. WindLDR supports the following file formats.

- PKCS#1 format pem file or der file
- PKCS#8 format (unencrypted) pem file or der file

Click **Delete** button to delete the imported private key.

■ Devices

(11) Connection Control

Sets the internal relay used to connect to and disconnect from the AWS IoT Core. When the set internal relay is turned on, a connection is made to the AWS IoT Core. When the set internal relay is turned off, the connection with the AWS IoT Core is disconnected.

Note: When using the data registers to set the client ID (6), the client ID stored inside the Plus CPU module is updated when the connection control is changed from off to on.

(12) Connection Status


Sets the data registers that store the status when connecting to the AWS IoT Core and the error information. Starting from the specified data register, 2 words of data registers are used. Specify the first data register so that the device range is not exceeded.

Storage Destination	Item	Description																																
Starting number+0	Connection Status	Stores the status when connecting to the AWS IoT Core.																																
		<table border="1"> <thead> <tr> <th>Status Code</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>0 (0000h)</td> <td>Initial status (disconnected)</td> </tr> <tr> <td>2 (0002h)</td> <td>Connecting</td> </tr> <tr> <td>4 (0004h)</td> <td>Connected</td> </tr> <tr> <td>8 (0008h)</td> <td>Disconnecting</td> </tr> <tr> <td>16 (0010h)</td> <td>Connection processing error</td> </tr> <tr> <td>32 (0020h)</td> <td>Disconnection processing error</td> </tr> </tbody> </table>	Status Code	Status	0 (0000h)	Initial status (disconnected)	2 (0002h)	Connecting	4 (0004h)	Connected	8 (0008h)	Disconnecting	16 (0010h)	Connection processing error	32 (0020h)	Disconnection processing error																		
		Status Code	Status																															
		0 (0000h)	Initial status (disconnected)																															
		2 (0002h)	Connecting																															
		4 (0004h)	Connected																															
		8 (0008h)	Disconnecting																															
16 (0010h)	Connection processing error																																	
32 (0020h)	Disconnection processing error																																	
Starting number+1	Connection Error Code	Stores information about the error that occurred when connecting to the AWS IoT Core.																																
		<table border="1"> <thead> <tr> <th>Error Code</th> <th>Error Details</th> </tr> </thead> <tbody> <tr> <td>1 (0001h)</td> <td>The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly</td> </tr> <tr> <td>2 (0002h)</td> <td>Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed</td> </tr> <tr> <td>4 (0004h)</td> <td>Invalid client ID format</td> </tr> <tr> <td>16 (0010h)</td> <td>An unknown packet was received</td> </tr> <tr> <td>32 (0020h)</td> <td>An invalid MQTT packet was received</td> </tr> <tr> <td>64 (0040h)</td> <td>Keep alive timeout error</td> </tr> <tr> <td>80 (0050h)</td> <td>Packet could not arrive at destination host</td> </tr> <tr> <td>96 (0060h)</td> <td>MQTT packet receive timeout error</td> </tr> <tr> <td>112 (0070h)</td> <td>TLS error</td> </tr> <tr> <td>256 (0100h)</td> <td>AWS IoT Core connection refused (unacceptable MQTT protocol version)</td> </tr> <tr> <td>512 (0200h)</td> <td>AWS IoT Core connection refused (invalid client ID)</td> </tr> <tr> <td>768 (0300h)</td> <td>AWS IoT Core connection refused (AWS IoT Core unavailable)</td> </tr> <tr> <td>1024 (0400h)</td> <td>AWS IoT Core connection refused (invalid account name or password)</td> </tr> <tr> <td>1280 (0500h)</td> <td>AWS IoT Core connection refused (not authorized)</td> </tr> <tr> <td>32768 (8000h)</td> <td>AWS IoT Core response error</td> </tr> </tbody> </table>	Error Code	Error Details	1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly	2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed	4 (0004h)	Invalid client ID format	16 (0010h)	An unknown packet was received	32 (0020h)	An invalid MQTT packet was received	64 (0040h)	Keep alive timeout error	80 (0050h)	Packet could not arrive at destination host	96 (0060h)	MQTT packet receive timeout error	112 (0070h)	TLS error	256 (0100h)	AWS IoT Core connection refused (unacceptable MQTT protocol version)	512 (0200h)	AWS IoT Core connection refused (invalid client ID)	768 (0300h)	AWS IoT Core connection refused (AWS IoT Core unavailable)	1024 (0400h)	AWS IoT Core connection refused (invalid account name or password)	1280 (0500h)	AWS IoT Core connection refused (not authorized)	32768 (8000h)	AWS IoT Core response error
		Error Code	Error Details																															
		1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly																															
		2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed																															
		4 (0004h)	Invalid client ID format																															
		16 (0010h)	An unknown packet was received																															
		32 (0020h)	An invalid MQTT packet was received																															
		64 (0040h)	Keep alive timeout error																															
		80 (0050h)	Packet could not arrive at destination host																															
		96 (0060h)	MQTT packet receive timeout error																															
		112 (0070h)	TLS error																															
		256 (0100h)	AWS IoT Core connection refused (unacceptable MQTT protocol version)																															
		512 (0200h)	AWS IoT Core connection refused (invalid client ID)																															
		768 (0300h)	AWS IoT Core connection refused (AWS IoT Core unavailable)																															
1024 (0400h)	AWS IoT Core connection refused (invalid account name or password)																																	
1280 (0500h)	AWS IoT Core connection refused (not authorized)																																	
32768 (8000h)	AWS IoT Core response error																																	


17: MQTT COMMUNICATION

Notes:

- The following timing chart shows the operations when the Plus CPU module connects to AWS IoT Core.

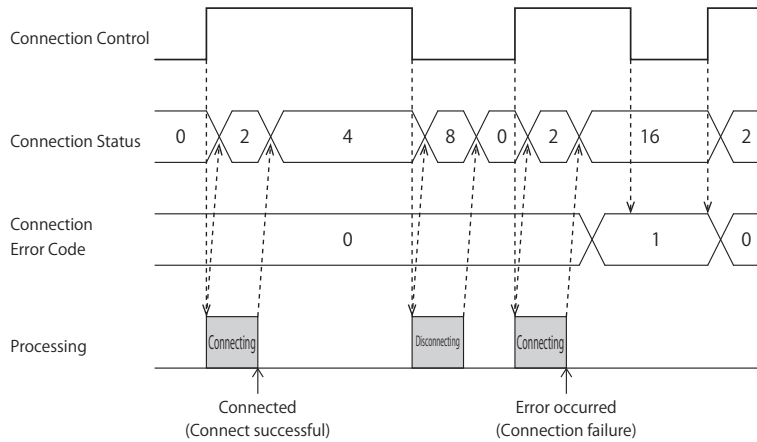

- Connection Error Code 16 (0010h) to 112 (0070h) may occur even when the Plus CPU module is connected to the AWS IoT Core (Connection Status 4 (0004h)).

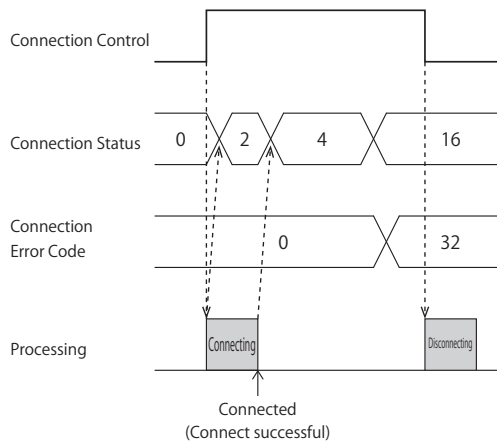

- MQTT communication is not performed while stopped. When switching from run to stop when connected to AWS IoT Core, the Connection Control relay is turned off and disconnected 0 (0000h) is stored in the Connection Status.

(13) Import from project button

Imports only the MQTT settings from a WindLDR project file.

(14) OK button

Click **OK** button to save the settings and close the **MQTT Settings** dialog box.

Note: When using the data registers to set the client ID (6), pressing the **OK** button calculates the size of the topic considering the client ID as 1 byte. If the set topic exceeds 256 bytes, an error will occur.

(15) Cancel button

Click **Cancel** button to close the **MQTT Settings** dialog box without saving the settings.

Connect to Azure IoT Hub using SAS

■ MQTT Connection Method

In the **MQTT Connection Method** group, select **Connect directly to Azure IoT Hub** radio button and set **Use Shared Access Signature (SAS)**.

■ MQTT Basic Settings

When the **Specify with SD memory card** check box is cleared

The screenshot shows the MQTT Settings dialog box. At the top, 'Enable MQTT' is checked and 'Cloud Service Name' is set to 'Azure IoT Hub'. Under 'MQTT Connection Method', 'Connect directly to IoT Hub' is selected, and 'Use Shared Access Signatures (SAS)' is chosen from the dropdown. In the 'MQTT Basic Settings' section, the '(1) Specify with SD memory card' checkbox is unchecked. Below it, the '(3) Connection String' field is empty. The 'Azure IoT Hub' section shows '(4) Host Name' as 'N/A', '(5) Port Number' as '8883', and '(6) Keep Alive' as '60 sec'. The 'Device' section shows '(7) Device ID' as 'N/A'. Under 'Secure connection (SSL/TLS)', '(8) Root Certificate' is 'Imported' with 'Import', 'Details', and 'Delete' buttons. The 'Devices' section shows '(9) Connection Control' and '(10) Connection Status' as empty fields. At the bottom, there are buttons for 'Import from project', 'OK', and 'Cancel'. A '(11)' label is near the 'Import from project' button, and '(12)' and '(13)' labels are near the 'OK' and 'Cancel' buttons respectively.

When the **Specify with SD memory card** check box is selected

The screenshot shows the MQTT Settings dialog box with 'Specify with SD memory card' checked. The 'MQTT Basic Settings' section now includes a '(2) Configure SD memory card' button. The 'Connection String' field and other fields from the previous screenshot are now hidden.

(1) Specify with SD memory card

Specifies whether to write the basic settings for MQTT communication to the Plus CPU module by using an SD memory card. When the **Specify with SD memory card** check box is selected, (2) is displayed and (3) to (8) are hidden. In this case, configure the details on the **SD Memory Card** dialog box. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(2) Configure SD Memory Card

Opens the **SD Memory Card** dialog box. This item is displayed only when the **Specify with SD memory card** check box is selected. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(3) Connection String

Sets the connection string (primary or secondary connection string) assigned to the Plus CPU module in Azure IoT Hub. The connection string includes the Azure IoT Hub host name, device ID and SharedAccessKey. The maximum length of the connection string is 300 characters. Only alphanumeric characters and symbols can be used.

(4) Host Name

The value of HostName in the connection string is displayed. For example, when "HostName=abcd.azure-devices.net", then "abcd.azure-devices.net" is displayed.

(5) Port Number

Sets the port number of the Azure IoT Hub. Set the port number between 0 and 65,535. The default value is 8883 used for Azure IoT Hub. If 0 is specified for the port number, port number 8883 is used.

(6) Keep Alive

Sets the time interval to execute a connection check for the Azure IoT Hub when a connection is made to the Azure IoT Hub. If the set time interval or longer continues without the Plus CPU module sending and receiving, a connection check is performed with the Azure IoT Hub. The range that can be set is 5 to 65,535 s. The default value is 60 s.

(7) Device ID

The value of DeviceId in the connection string is displayed. For example, when "DeviceId=1234", then "1234" is displayed. The device ID is used as the client ID for MQTT communication.

(8) Root Certificate

Click **Import** button to import a root certificate to use when performing SSL/TLS communication with the Azure IoT Hub. Files that can be imported are pem or crt files. WindLDR converts pem and crt files to der files. der files that are 2KB or bigger cannot be imported. When a pem file contains multiple root certificates, WindLDR converts each of the first two root certificates to a der file. Click **Details** button to display the **Certificate Information** dialog box that shows the root certificate of the imported server certificate. Click **Delete** button to delete the imported certificate.

■ Devices

(9) Connection Control

Sets the internal relay used for connecting to and disconnecting from the Azure IoT Hub. Starting from the specified internal relay, 5 bits of internal relays are used. Specify the first internal relay so that the device range is not exceeded.

Storage Destination	Item	Description
Starting number+0	Connection Control*1	When the set internal relay is turned on, a connection is made to the Azure IoT Hub. When the set internal relay is turned off, the connection with the Azure IoT Hub is disconnected.
Starting number+1	Reserved	
Starting number+2	Reserved	
Starting number+3	Reserved	
Starting number+4	Reserved	

*1 When generating the SAS token to connect to the Azure IoT Hub, the current time (UTC) calculated from the clock data of the Plus CPU module is used. If the clock of the Plus CPU module is far off from the actual current time, the Plus CPU module may not be able to connect to the Azure IoT Hub. Configure the clock and clock-related functions of the Plus CPU module.

When acquiring the current time (UTC) from the SNTP server

Refer to the following configuration items to configure the clock and clock-related functions of the Plus CPU module.

Function Name	Overview	Reference
SNTP Settings	Acquires the current time (UTC) from the SNTP server to adjust the clock of the Plus CPU module.	"SNTP Settings" on page 3-11
Time Zone Settings	Configures the difference for each time zone in the region relative to standard time.	Chapter 5 "Time Zone" in the FC6A Series MICROSmart User's Manual
Daylight Savings Time Settings	Configures the daylight saving time period.	Chapter 5 "Daylight Savings Time" in the FC6A Series MICROSmart User's Manual

Note: The clock of the Plus CPU module loses time as time goes on according to accuracy. If more than 6 months have passed since the last time the current time (UTC) was acquired from the SNTP server, the Plus CPU module may not be able to connect to the Azure IoT Hub. Acquire the current time (UTC) from the SNTP server at the appropriate frequency.

When configuring the clock of the Plus CPU module directly

Refer to the following configuration items to configure the clock and clock-related functions of the Plus CPU module.

Function Name	Overview	Reference
Clock Function	Configures the clock of the Plus CPU module using WindLDR or special data registers and special internal relays.	Chapter 5 "Clock Function" in the FC6A Series MICROSmart User's Manual
Time Zone Settings	Configures the difference for each time zone in the region relative to standard time.	Chapter 5 "Time Zone" in the FC6A Series MICROSmart User's Manual
Daylight Savings Time Settings	Configures the daylight saving time period.	Chapter 5 "Daylight Savings Time" in the FC6A Series MICROSmart User's Manual

Note: The clock of the Plus CPU module loses time as time goes on according to accuracy. If more than 6 months have passed since the last time the current time was configured, the Plus CPU module may not be able to connect to the Azure IoT Hub. Configure the current time at the appropriate frequency.

(10) Connection Status

Sets the data registers that store the status when connecting to the Azure IoT Hub and the error information. Starting from the specified data register, 5 words of data registers are used. Specify the first data register so that the device range is not exceeded.


Storage Destination	Item	Description																														
Starting number+0	Connection Status	Stores the status when connecting to the Azure IoT Hub.																														
		<table border="1"> <thead> <tr> <th>Status Code</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>0 (0000h)</td> <td>Initial status (disconnected)</td> </tr> <tr> <td>2 (0002h)</td> <td>Connecting</td> </tr> <tr> <td>4 (0004h)</td> <td>Connected</td> </tr> <tr> <td>8 (0008h)</td> <td>Disconnecting</td> </tr> <tr> <td>16 (0010h)</td> <td>Connection processing error</td> </tr> <tr> <td>32 (0020h)</td> <td>Disconnection processing error</td> </tr> </tbody> </table>	Status Code	Status	0 (0000h)	Initial status (disconnected)	2 (0002h)	Connecting	4 (0004h)	Connected	8 (0008h)	Disconnecting	16 (0010h)	Connection processing error	32 (0020h)	Disconnection processing error																
		Status Code	Status																													
		0 (0000h)	Initial status (disconnected)																													
		2 (0002h)	Connecting																													
		4 (0004h)	Connected																													
		8 (0008h)	Disconnecting																													
		16 (0010h)	Connection processing error																													
32 (0020h)	Disconnection processing error																															
Starting number+1	Connection Error Code	Stores information about the error that occurred when connecting to the Azure IoT Hub.																														
		<table border="1"> <thead> <tr> <th>Error Code</th> <th>Error Details</th> </tr> </thead> <tbody> <tr> <td>1 (0001h)</td> <td>The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly</td> </tr> <tr> <td>2 (0002h)</td> <td>Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed</td> </tr> <tr> <td>16 (0010h)</td> <td>An unknown packet was received</td> </tr> <tr> <td>32 (0020h)</td> <td>An invalid MQTT packet was received</td> </tr> <tr> <td>64 (0040h)</td> <td>Keep alive timeout error</td> </tr> <tr> <td>80 (0050h)</td> <td>Packet could not arrive at destination host</td> </tr> <tr> <td>96 (0060h)</td> <td>MQTT packet receive timeout error</td> </tr> <tr> <td>112 (0070h)</td> <td>TLS error</td> </tr> <tr> <td>256 (0100h)</td> <td>Azure IoT Hub connection refused (unacceptable MQTT protocol version)</td> </tr> <tr> <td>512 (0200h)</td> <td>Azure IoT Hub connection refused (invalid device ID)*1</td> </tr> <tr> <td>768 (0300h)</td> <td>Azure IoT Hub connection refused (Azure IoT Hub unavailable)</td> </tr> <tr> <td>1024 (0400h)</td> <td>Azure IoT Hub connection refused (invalid account name or password)*1*2</td> </tr> <tr> <td>1280 (0500h)</td> <td>Azure IoT Hub connection refused (not authorized)</td> </tr> <tr> <td>32768 (8000h)</td> <td>Azure IoT Hub response error</td> </tr> </tbody> </table>	Error Code	Error Details	1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly	2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed	16 (0010h)	An unknown packet was received	32 (0020h)	An invalid MQTT packet was received	64 (0040h)	Keep alive timeout error	80 (0050h)	Packet could not arrive at destination host	96 (0060h)	MQTT packet receive timeout error	112 (0070h)	TLS error	256 (0100h)	Azure IoT Hub connection refused (unacceptable MQTT protocol version)	512 (0200h)	Azure IoT Hub connection refused (invalid device ID)*1	768 (0300h)	Azure IoT Hub connection refused (Azure IoT Hub unavailable)	1024 (0400h)	Azure IoT Hub connection refused (invalid account name or password)*1*2	1280 (0500h)	Azure IoT Hub connection refused (not authorized)	32768 (8000h)	Azure IoT Hub response error
		Error Code	Error Details																													
		1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly																													
		2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed																													
		16 (0010h)	An unknown packet was received																													
		32 (0020h)	An invalid MQTT packet was received																													
		64 (0040h)	Keep alive timeout error																													
		80 (0050h)	Packet could not arrive at destination host																													
		96 (0060h)	MQTT packet receive timeout error																													
		112 (0070h)	TLS error																													
		256 (0100h)	Azure IoT Hub connection refused (unacceptable MQTT protocol version)																													
		512 (0200h)	Azure IoT Hub connection refused (invalid device ID)*1																													
		768 (0300h)	Azure IoT Hub connection refused (Azure IoT Hub unavailable)																													
		1024 (0400h)	Azure IoT Hub connection refused (invalid account name or password)*1*2																													
1280 (0500h)	Azure IoT Hub connection refused (not authorized)																															
32768 (8000h)	Azure IoT Hub response error																															

*1 Check the value of the DeviceId in the connection string.


*2 Configure the clock and clock-related functions of the Plus CPU module.

Notes:

- The following timing chart shows the operations when the Plus CPU module connects to Azure IoT Hub.

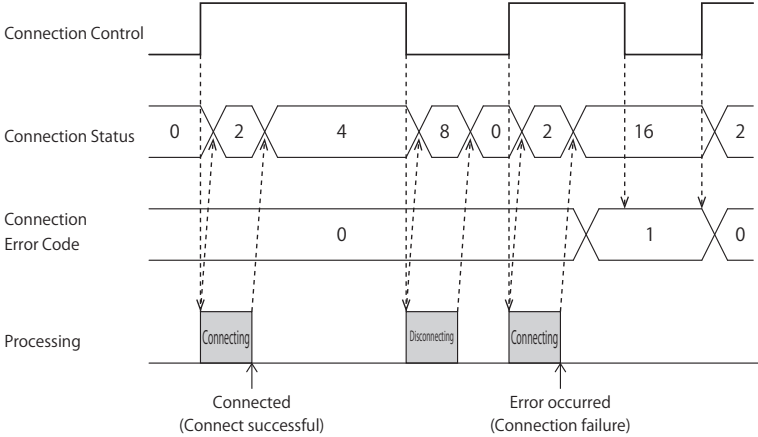

- Connection Error Code 16 (0010h) to 112 (0070h) may occur even when the Plus CPU module is connected to the Azure IoT Hub (Connection Status 4 (0004h)).

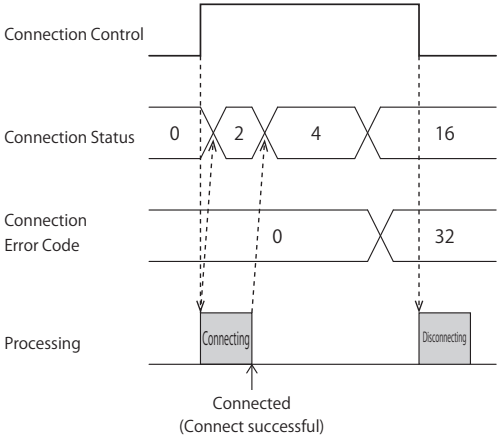

- MQTT communication is not performed while stopped. When switching from run to stop when connected to the Azure IoT Hub, the Connection Control relay is turned off and disconnected 0 (0000h) is stored in the Connection Status.

(17) Import from project button

Imports only the MQTT settings from a WindLDR project file.

(18) OK button

Click **OK** button to save the settings and close the **MQTT Settings** dialog box.

(19) Cancel button

Click **Cancel** button to close the **MQTT Settings** dialog box without saving the settings.


Connect to Azure IoT Hub using X.509 certificates

■MQTT Connection Method


In the **MQTT Connection Method** group, select **Connect directly to Azure IoT Hub** radio button and set **Use X.509 certificates**.

■MQTT Basic Settings

When the **Specify with SD memory card** check box is cleared

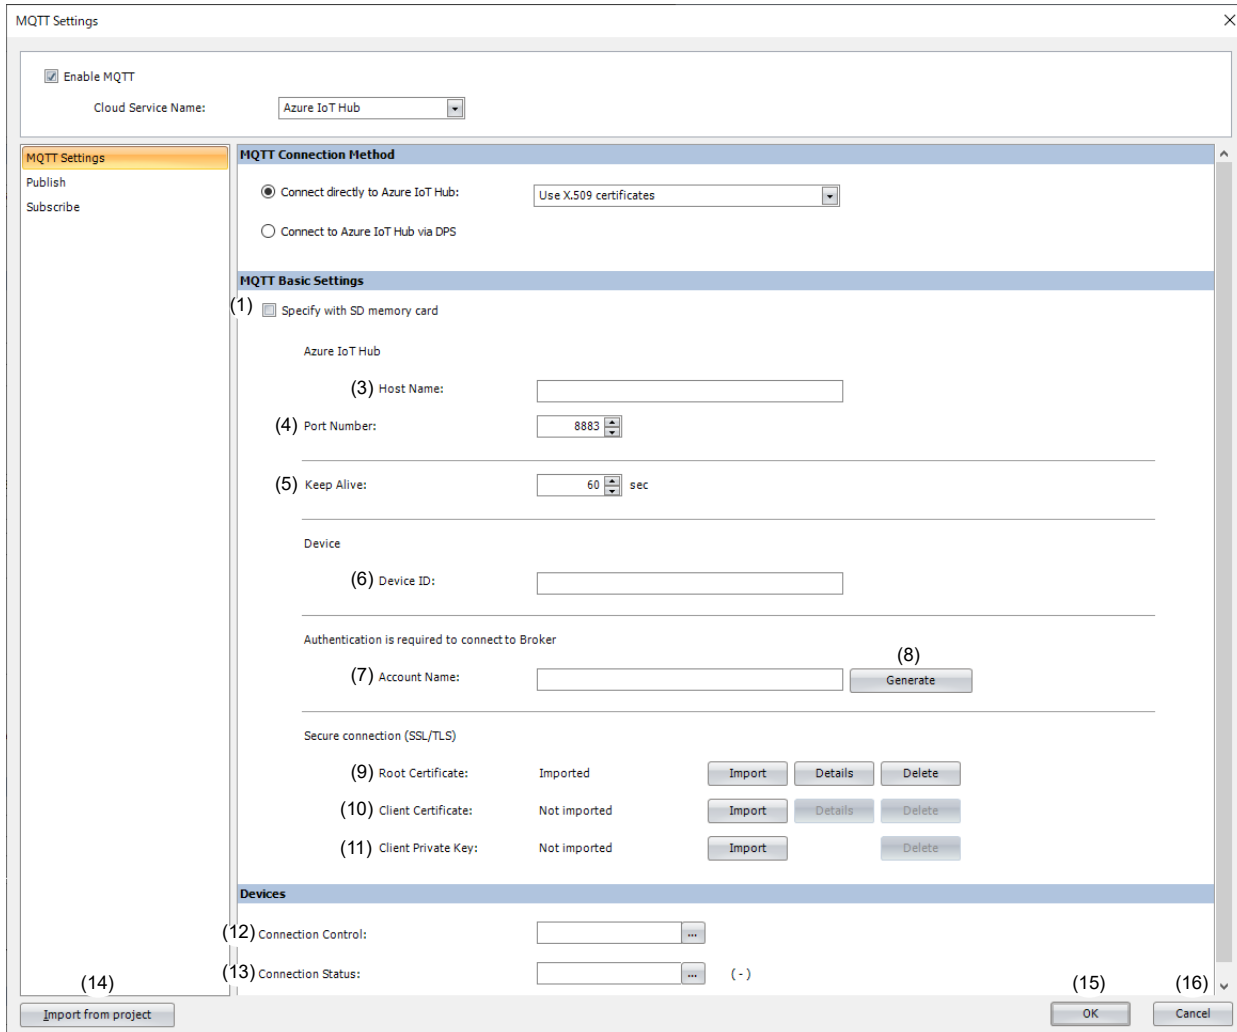

When the **Specify with SD memory card** check box is selected

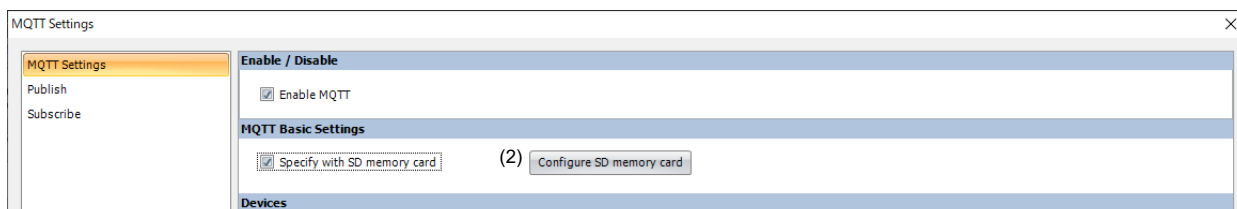

(1) Specify with SD memory card

Specifies whether to write the basic settings for MQTT communication to the Plus CPU module by using an SD memory card. When the **Specify with SD memory card** check box is selected, (2) is displayed and (3) to (11) are hidden. In this case, configure the details on the **SD Memory Card** dialog box. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(2) Configure SD Memory Card

Opens the **SD Memory Card** dialog box. This item is displayed only when the **Specify with SD memory card** check box is selected. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(3) Host Name

Sets the host name of the Azure IoT Hub. The maximum length of the host name is 68 characters. Only alphanumeric characters and the symbol (-) can be used.

(4) Port Number

Sets the port number of the Azure IoT Hub. Set the port number between 0 and 65,535. The default value is 8883 used for Azure IoT Hub. If 0 is specified for the port number, port number 8883 is used.

(5) Keep Alive

Sets the time interval to execute a connection check for the Azure IoT Hub when a connection is made to the Azure IoT Hub. If the set time interval or longer continues without the Plus CPU module sending and receiving, a connection check is performed with the Azure IoT Hub. The range that can be set is 5 to 65,535 s. The default value is 60 s.

(6) Device ID

Sets the device ID of Plus CPU module registered to Azure IoT Hub. The maximum length of the device ID is 128 characters. Only alphanumeric characters and symbols can be used. The device ID is used as the client ID for MQTT communication.

(7) Account Name

Sets the account name used to connect to Azure IoT Hub. The maximum length of the account name is 128 characters. Only alphanumeric characters and symbols can be used.

(8) Generate

Click this button to generate an account name used to connect to the Azure IoT Hub based on the host name and device ID.

(9) Root Certificate

Click **Import** button to import a root certificate to use when performing SSL/TLS communication with the Azure IoT Hub. Files that can be imported are pem or crt files. WindLDR converts pem and crt files to der files. der files that are 2KB or bigger cannot be imported. When a pem file contains multiple root certificates, WindLDR converts each of the first two root certificates to a der file. Click **Details** button to display the **Certificate Information** dialog box that shows the root certificate of the imported server certificate. Click **Delete** button to delete the imported certificate.

(10) Client Certificate

Click **Import** button to import a client certificate to use when performing SSL/TLS communication with the Azure IoT Hub. Files that can be imported are pem or crt files. WindLDR converts pem and crt files into der files. der files that are 2KB or bigger cannot be imported. Click **Details** button to display the **Certificate Information** dialog box that shows the client certificate of the imported server certificate. Click **Delete** button to delete the imported certificate.

(11) Client Private Key

Click **Import** button to import a client private key (RSA encryption, key length 3,072 bits max.) to use when performing SSL/TLS communication with the Azure IoT Hub. WindLDR supports the following file formats.

- PKCS#1 format pem file or der file
- PKCS#8 format (unencrypted) pem file or der file

Click **Delete** button to delete the imported client private key.

■ Devices**(12) Connection Control**

Sets the internal relay used for connecting to and disconnecting from the Azure IoT Hub. Starting from the specified internal relay, 5 bits of internal relays are used. Specify the first internal relay so that the device range is not exceeded.

Storage Destination	Item	Description
Starting number+0	Connection Control	Connects to and disconnects from the Azure IoT Hub. When the specified internal relay is turned on, a connection is made to the Azure IoT Hub. When the specified internal relay is turned off, the connection with the Azure IoT Hub is disconnected.
Starting number+1	Reserved	
Starting number+2	Reserved	
Starting number+3	Reserved	
Starting number+4	Reserved	


(13) Connection Status

Sets the data registers that store the status when connecting to the Azure IoT Hub and the error information. Starting from the specified data register, 5 words of data registers are used. Specify the first data register so that the device range is not exceeded.


Storage Destination	Item	Description																																
Starting number+0	Connection Status	Stores the status when connecting to the Azure IoT Hub.																																
		<table border="1"> <thead> <tr> <th>Status Code</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>0 (0000h)</td> <td>Initial status (disconnected)</td> </tr> <tr> <td>2 (0002h)</td> <td>Connecting</td> </tr> <tr> <td>4 (0004h)</td> <td>Connected</td> </tr> <tr> <td>8 (0008h)</td> <td>Disconnecting</td> </tr> <tr> <td>16 (0010h)</td> <td>Connection processing error</td> </tr> <tr> <td>32 (0020h)</td> <td>Disconnection processing error</td> </tr> </tbody> </table>	Status Code	Status	0 (0000h)	Initial status (disconnected)	2 (0002h)	Connecting	4 (0004h)	Connected	8 (0008h)	Disconnecting	16 (0010h)	Connection processing error	32 (0020h)	Disconnection processing error																		
		Status Code	Status																															
		0 (0000h)	Initial status (disconnected)																															
		2 (0002h)	Connecting																															
		4 (0004h)	Connected																															
		8 (0008h)	Disconnecting																															
16 (0010h)	Connection processing error																																	
32 (0020h)	Disconnection processing error																																	
Starting number+1	Connection Error Code	Stores information about the error that occurred when connecting to the Azure IoT Hub.																																
		<table border="1"> <thead> <tr> <th>Error Code</th> <th>Error Details</th> </tr> </thead> <tbody> <tr> <td>1 (0001h)</td> <td>The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly</td> </tr> <tr> <td>2 (0002h)</td> <td>Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed</td> </tr> <tr> <td>4 (0004h)</td> <td>Invalid device ID format</td> </tr> <tr> <td>16 (0010h)</td> <td>An unknown packet was received</td> </tr> <tr> <td>32 (0020h)</td> <td>An invalid MQTT packet was received</td> </tr> <tr> <td>64 (0040h)</td> <td>Keep alive timeout error</td> </tr> <tr> <td>80 (0050h)</td> <td>Packet could not arrive at destination host</td> </tr> <tr> <td>96 (0060h)</td> <td>MQTT packet receive timeout error</td> </tr> <tr> <td>112 (0070h)</td> <td>TLS error</td> </tr> <tr> <td>256 (0100h)</td> <td>Azure IoT Hub connection refused (unacceptable MQTT protocol version)</td> </tr> <tr> <td>512 (0200h)</td> <td>Azure IoT Hub connection refused (invalid device ID)</td> </tr> <tr> <td>768 (0300h)</td> <td>Azure IoT Hub connection refused (Azure IoT Hub unavailable)</td> </tr> <tr> <td>1024 (0400h)</td> <td>Azure IoT Hub connection refused (invalid account name or password)</td> </tr> <tr> <td>1280 (0500h)</td> <td>Azure IoT Hub connection refused (not authorized)</td> </tr> <tr> <td>32768 (8000h)</td> <td>Azure IoT Hub response error</td> </tr> </tbody> </table>	Error Code	Error Details	1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly	2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed	4 (0004h)	Invalid device ID format	16 (0010h)	An unknown packet was received	32 (0020h)	An invalid MQTT packet was received	64 (0040h)	Keep alive timeout error	80 (0050h)	Packet could not arrive at destination host	96 (0060h)	MQTT packet receive timeout error	112 (0070h)	TLS error	256 (0100h)	Azure IoT Hub connection refused (unacceptable MQTT protocol version)	512 (0200h)	Azure IoT Hub connection refused (invalid device ID)	768 (0300h)	Azure IoT Hub connection refused (Azure IoT Hub unavailable)	1024 (0400h)	Azure IoT Hub connection refused (invalid account name or password)	1280 (0500h)	Azure IoT Hub connection refused (not authorized)	32768 (8000h)	Azure IoT Hub response error
		Error Code	Error Details																															
		1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly																															
		2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed																															
		4 (0004h)	Invalid device ID format																															
		16 (0010h)	An unknown packet was received																															
		32 (0020h)	An invalid MQTT packet was received																															
		64 (0040h)	Keep alive timeout error																															
		80 (0050h)	Packet could not arrive at destination host																															
		96 (0060h)	MQTT packet receive timeout error																															
		112 (0070h)	TLS error																															
		256 (0100h)	Azure IoT Hub connection refused (unacceptable MQTT protocol version)																															
		512 (0200h)	Azure IoT Hub connection refused (invalid device ID)																															
		768 (0300h)	Azure IoT Hub connection refused (Azure IoT Hub unavailable)																															
		1024 (0400h)	Azure IoT Hub connection refused (invalid account name or password)																															
1280 (0500h)	Azure IoT Hub connection refused (not authorized)																																	
32768 (8000h)	Azure IoT Hub response error																																	

Notes:

- The following timing chart shows the operations when the Plus CPU module connects to Azure IoT Hub.

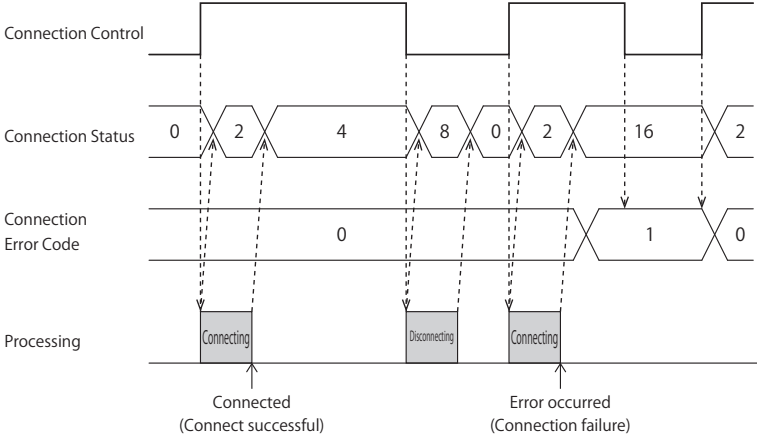

- Connection Error Code 16 (0010h) to 112 (0070h) may occur even when the Plus CPU module is connected to the Azure IoT Hub (Connection Status 4 (0004h)).

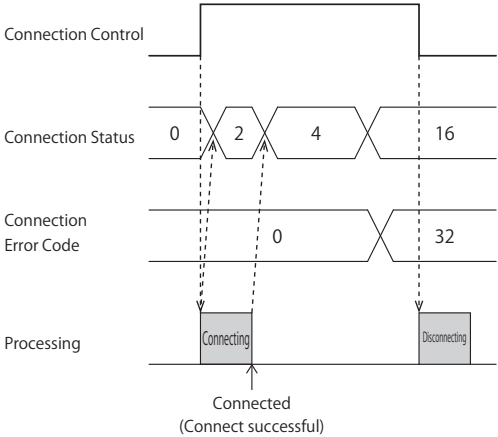

- MQTT communication is not performed while stopped. When switching from run to stop when connected to Azure IoT Hub, the Connection Control relay is turned off and disconnected 0 (0000h) is stored in the Connection Status.

(14) Import from project button

Imports only the MQTT settings from a WindLDR project file.

(15) OK button

Click **OK** button to save the settings and close the **MQTT Settings** dialog box.

(16) Cancel button

Click **Cancel** button to close the **MQTT Settings** dialog box without saving the settings.

17: MQTT COMMUNICATION

Connect to Azure IoT Hub via DPS

■ MQTT Connection Method

In the **MQTT Connection Method** group, select **Connect to Azure IoT Hub via DPS**.

■ MQTT Basic Settings

When the **Specify with SD memory card** check box is cleared

The screenshot shows the 'MQTT Settings' dialog box. At the top, 'Enable MQTT' is checked and 'Cloud Service Name' is set to 'Azure IoT Hub'. The 'MQTT Connection Method' section has 'Connect to Azure IoT Hub via DPS' selected. In the 'MQTT Basic Settings' section, the '(1) Specify with SD memory card' checkbox is unchecked. Below this, the 'Azure IoT Hub' section includes: '(3) Host Name' (empty), '(4) Port Number' (8883), and '(5) Keep Alive' (60 sec). The 'Device' section has '(6) Device ID' set to 'Fixed value' with the value 'b0e010e8-24a4-4df6-8300-40765308f9fd' and a '(7) Generate random ID' button. The 'Device Provisioning Service (DPS)' section includes: '(8) Service endpoint' (empty), '(9) ID Scope' (empty), '(10) Symmetric Key' (empty), and '(11) Port Number' (8883). The 'Secure connection (SSL/TLS)' section has '(12) Root Certificate' set to 'Imported' with 'Import', 'Details', and 'Delete' buttons. The 'Devices' section at the bottom has '(13) Connection Control' (empty) and '(14) Connection Status' (empty). At the bottom of the dialog, there is an '(15) Import from project' button, and '(16) OK' and '(17) Cancel' buttons.

When the **Specify with SD memory card** check box is selected

The screenshot shows the 'MQTT Settings' dialog box with the 'Specify with SD memory card' checkbox selected. The 'MQTT Basic Settings' section now shows a '(2) Configure SD memory card' button next to the checked checkbox. The rest of the dialog box content is the same as in the previous screenshot.

(1) Specify with SD memory card

Specifies whether to write the basic settings for MQTT communication to the Plus CPU module by using an SD memory card. When the **Specify with SD memory card** check box is selected, (2) is displayed and (3) to (12) are hidden. In this case, configure the details on the **SD Memory Card** dialog box. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(2) Configure SD Memory Card

Opens the **SD Memory Card** dialog box. This item is displayed only when the **Specify with SD memory card** check box is selected. For details on the **SD Memory Card** dialog box, see Chapter 11 "SD Memory Card" in the FC6A Series MICROSmart User's Manual.

(3) Host Name

Sets the data register to store the host name (ASCII code) of the Azure IoT Hub got from the DPS. Starting from the specified data register, 64 words of data registers are used. Specify the first data register so that the device range is not exceeded.

(4) Port Number

Sets the port number of the Azure IoT Hub. The same port number as the Device Provisioning Service (DPS) port number (11) is used.

(5) Keep Alive

Sets the time interval to execute a connection check for the Azure IoT Hub when a connection is made to the Azure IoT Hub. If the set time interval or longer continues without the Plus CPU module sending and receiving, a connection check is performed with the Azure IoT Hub. The range that can be set is 5 to 65,535 s. The default value is 60 s.

(6) Device ID

Sets the device ID. Sets the device ID to register to Azure IoT Hub via DPS. The device ID can be set from the following three types and is also used as a client ID for MQTT communication.

Device ID	Description
MAC address	Sets the MAC address of Ethernet port 1 on the Plus CPU module.*1
Fixed value	Sets any character string. The maximum length of the device ID is 128 characters. Only alphanumeric characters and symbols can be used.
Data Register	Sets the data register for storing the device ID. The value is read in order from the upper byte of the specified data register, treated as character data, and used as the device ID.*2 Starting from the specified data register, 64 continuous words of data registers are used.*3 Specify the first data register so that the device range is not exceeded. Only alphanumeric characters and symbols can be used as the device ID.

*1 When the MAC address is 12-34-56-78-9A-BC (D8324=0012h, D8325=0034h, D8326=0056h, D8327=0078h, D8328=009Ah, D8329=00BCh), the device ID is "123456789ABC".


*2 For example, when D0000 is specified and the following values are stored in each data register, the device ID is "device_1234".

Data register	Stored Value	
	Upper Byte	Lower Byte
D0000	"d"=64h	"e"=65h
D0001	"v"=76h	"i"=69h
D0002	"c"=63h	"e"=65h
D0003	"_"=5Fh	"1"=31h
D0004	"2"=32h	"3"=33h
D0005	"4"=34h	00h

*3 When the character string to be set is shorter than 128 bytes (64 words), add the terminating character NULL (00h) as the end of the character string. The data from the upper byte of the specified data register up to the data right before the terminating character NULL (00h) is treated as character data and used as the device ID.

Notes:

- When setting the device ID with the data register, the MOVC instruction can be used to store a character string in the data registers. For details on MOVC instruction, see Chapter 5 "MOVC (Move Characters)" in the FC6A Series MICROSmart Ladder Programming Manual.
- When the Connection Control (13) is changed from off to on, the device ID stored inside the Plus CPU module is updated. For example, when the device ID is set in the data registers (D0000 to D0063), the device ID is updated at the following timing.

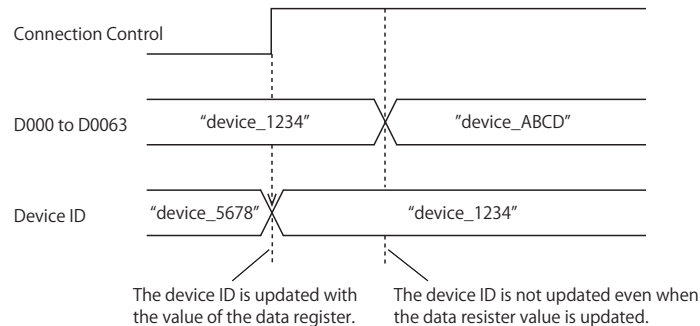

(7) Generate random ID

When the **Device ID** (6) is set as a fixed value, click this button to generate a random identifier for device ID.

(8) Service endpoint

Sets the service endpoint for the DPS. The maximum length of the device ID is 81 characters. Only alphanumeric characters and symbols can be used.

(9) ID Scope

Sets the ID scope of the DPS. The maximum length of the device ID is 11 characters. Only alphanumeric characters can be used.

(10) Symmetric key

Sets the symmetric key (primary or secondary key) of the registration group of the DPS to which the Plus CPU module is registered. The maximum length of the symmetric key is 88 characters. Only alphanumeric characters and symbols can be used.

(11) Port Number

Sets the port number for the Device Provisioning Service (DPS). Set the port number between 0 and 65,535. The default value is 8883 used for DPS. If 0 is specified for the port number, port number 8883 is used.

(12) Root Certificate

Click **Import** button to import a root certificate to use when performing SSL/TLS communication with the DPS and the Azure IoT Hub. Files that can be imported are pem or crt files. WindLDR converts pem and crt files to der files. der files that are 2KB or bigger cannot be imported. When a pem file contains multiple root certificates, WindLDR converts each of the first two root certificates to a der file. Click **Details** button to display the **Certificate Information** dialog box that shows the root certificate of the imported server certificate. Click **Delete** button to delete the imported certificate.

■ Devices

(13) Connection Control

Sets the internal relay used for connecting to and disconnecting from the DPS and Azure IoT Hub. Starting from the specified internal relay, 5 bits of internal relays are used. Specify the first internal relay so that the device range is not exceeded.

Storage Destination	Item	Description
Starting number+0	Connection Control*1	Connects to and disconnects from the DPS and Azure IoT Hub. When Connection Control is turned on, the Plus CPU module connects to the DPS and Azure IoT Hub depending on the status of the DPS connection bit (Starting number+1). When Connection Control is turned off, the connection with the DPS and Azure IoT Hub is disconnected.
Starting number+1	DPS connection bit	Allows connection to the DPS. While DPS connection bit is on, when Connection Control (Starting number+0) is turned on, the Plus CPU module connects to the Azure IoT Hub via DPS.*2 While DPS connection bit is off, when Connection Control (Starting number+0) is turned on, the Plus CPU module connects directly to the Azure IoT Hub with the host name stored in the Host Name (3) without going through DPS.*3
Starting number+2	Reserved	
Starting number+3	Reserved	
Starting number+4	Reserved	

*1 When generating the SAS token to connect to the DPS and Azure IoT Hub, the current time (UTC) calculated from the clock data of the Plus CPU module is used. If the clock of the Plus CPU module is far off from the actual current time, the Plus CPU module may not be able to connect to the DPS and Azure IoT Hub. Configure the clock and clock-related functions of the Plus CPU module.

When acquiring the current time (UTC) from the SNTP server

Refer to the following configuration items to configure the clock and clock-related functions of the Plus CPU module.

Function Name	Overview	Reference
SNTP Settings	Acquires the current time (UTC) from the SNTP server to adjust the clock of the Plus CPU module.	"SNTP Settings" on page 3-11
Time Zone Settings	Configures the difference for each time zone in the region relative to standard time.	Chapter 5 "Time Zone" in the FC6A Series MICROSmart User's Manual
Daylight Savings Time Settings	Configures the daylight saving time period.	Chapter 5 "Daylight Savings Time" in the FC6A Series MICROSmart User's Manual

Note: The clock of the Plus CPU module loses time as time goes on according to accuracy. If more than 6 months have passed since the last time the current time (UTC) was acquired from the SNTP server, the Plus CPU module may not be able to connect to the DPS and Azure IoT Hub. Acquire the current time (UTC) from the SNTP server at the appropriate frequency.

When configuring the clock of the Plus CPU module directly

Refer to the following configuration items to configure the clock and clock-related functions of the Plus CPU module.

Function Name	Overview	Reference
Clock Function	Configures the clock of the Plus CPU module using WindLDR or special data registers and special internal relays.	Chapter 5 "Clock Function" in the FC6A Series MICROSmart User's Manual
Time Zone Settings	Configures the difference for each time zone in the region relative to standard time.	Chapter 5 "Time Zone" in the FC6A Series MICROSmart User's Manual
Daylight Savings Time Settings	Configures the daylight saving time period.	Chapter 5 "Daylight Savings Time" in the FC6A Series MICROSmart User's Manual

Note: The clock of the Plus CPU module loses time as time goes on according to accuracy. If more than 6 months have passed since the last time the current time was configured, the Plus CPU module may not be able to connect to the DPS and Azure IoT Hub. Configure the current time at the appropriate frequency.

*2 At this time, the host name of the Azure IoT Hub got from the DPS is stored in the data register set in the **Host Name** (3).

*3 When the device ID is changed, connect to the DPS again to register the Plus CPU module.

17: MQTT COMMUNICATION

(14) Connection Status

Sets the data registers that store the status when connecting to the DPS and Azure IoT Hub and the error information. Starting from the specified data register, 5 words of data registers are used. Specify the first data register so that the device range is not exceeded.


Storage Destination	Item	Description																																												
Starting number+0	Connection Status	Stores the status when connecting to the DPS and Azure IoT Hub.																																												
		<table border="1"> <thead> <tr> <th>Status Code</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>0 (0000h)</td> <td>Initial status (disconnected)</td> </tr> <tr> <td>2 (0002h)</td> <td>Azure IoT Hub connecting</td> </tr> <tr> <td>4 (0004h)</td> <td>Azure IoT Hub connected</td> </tr> <tr> <td>8 (0008h)</td> <td>Azure IoT Hub disconnecting</td> </tr> <tr> <td>16 (0010h)</td> <td>Azure IoT Hub connection processing error</td> </tr> <tr> <td>32 (0020h)</td> <td>Azure IoT Hub disconnection processing error</td> </tr> <tr> <td>512 (0200h)</td> <td>DPS connecting</td> </tr> <tr> <td>1024 (0400h)</td> <td>DPS connected</td> </tr> <tr> <td>2048 (0800h)</td> <td>DPS disconnecting</td> </tr> <tr> <td>4096 (1000h)</td> <td>DPS connection processing error</td> </tr> <tr> <td>8192 (2000h)</td> <td>DPS disconnection processing error</td> </tr> </tbody> </table>	Status Code	Status	0 (0000h)	Initial status (disconnected)	2 (0002h)	Azure IoT Hub connecting	4 (0004h)	Azure IoT Hub connected	8 (0008h)	Azure IoT Hub disconnecting	16 (0010h)	Azure IoT Hub connection processing error	32 (0020h)	Azure IoT Hub disconnection processing error	512 (0200h)	DPS connecting	1024 (0400h)	DPS connected	2048 (0800h)	DPS disconnecting	4096 (1000h)	DPS connection processing error	8192 (2000h)	DPS disconnection processing error																				
		Status Code	Status																																											
		0 (0000h)	Initial status (disconnected)																																											
		2 (0002h)	Azure IoT Hub connecting																																											
		4 (0004h)	Azure IoT Hub connected																																											
		8 (0008h)	Azure IoT Hub disconnecting																																											
		16 (0010h)	Azure IoT Hub connection processing error																																											
		32 (0020h)	Azure IoT Hub disconnection processing error																																											
		512 (0200h)	DPS connecting																																											
		1024 (0400h)	DPS connected																																											
		2048 (0800h)	DPS disconnecting																																											
4096 (1000h)	DPS connection processing error																																													
8192 (2000h)	DPS disconnection processing error																																													
Starting number+1	Connection Error Code	Stores information about the error that occurred when connecting to the DPS and Azure IoT Hub.																																												
		<table border="1"> <thead> <tr> <th>Error Code</th> <th>Error Details</th> </tr> </thead> <tbody> <tr> <td>1 (0001h)</td> <td>The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly</td> </tr> <tr> <td>2 (0002h)</td> <td>Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed</td> </tr> <tr> <td>4 (0004h)</td> <td>Invalid device ID format</td> </tr> <tr> <td>8 (0008h)</td> <td>The host name of the Azure IoT Hub stored in the data register is incorrect.</td> </tr> <tr> <td>16 (0010h)</td> <td>An unknown packet was received</td> </tr> <tr> <td>32 (0020h)</td> <td>An invalid MQTT packet was received</td> </tr> <tr> <td>64 (0040h)</td> <td>Keep alive timeout error</td> </tr> <tr> <td>80 (0050h)</td> <td>Packet could not arrive at destination host^{*1}</td> </tr> <tr> <td>96 (0060h)</td> <td>MQTT packet receive timeout error</td> </tr> <tr> <td>112 (0070h)</td> <td>TLS error</td> </tr> <tr> <td>256 (0100h)</td> <td>Azure IoT Hub connection refused (unacceptable MQTT protocol version)</td> </tr> <tr> <td>512 (0200h)</td> <td>Azure IoT Hub connection refused (invalid device ID)</td> </tr> <tr> <td>768 (0300h)</td> <td>Azure IoT Hub connection refused (broker unavailable)</td> </tr> <tr> <td>1024 (0400h)</td> <td>Azure IoT Hub connection refused (invalid account name or password)</td> </tr> <tr> <td>1280 (0500h)</td> <td>Azure IoT Hub connection refused (not authorized)^{*2*3*4}</td> </tr> <tr> <td>4352 (1100h)</td> <td>DPS connection refused (unacceptable MQTT protocol version)</td> </tr> <tr> <td>4608 (1200h)</td> <td>DPS connection refused (invalid device ID)</td> </tr> <tr> <td>4864 (1300h)</td> <td>DPS connection refused (DPS unavailable)</td> </tr> <tr> <td>5120 (1400h)</td> <td>DPS connection refused (invalid account name or password)</td> </tr> <tr> <td>5376 (1500h)</td> <td>DPS connection refused (not authorized)^{*2*3*4}</td> </tr> <tr> <td>32768 (8000h)</td> <td>Azure IoT Hub / DPS response error</td> </tr> </tbody> </table>	Error Code	Error Details	1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly	2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed	4 (0004h)	Invalid device ID format	8 (0008h)	The host name of the Azure IoT Hub stored in the data register is incorrect.	16 (0010h)	An unknown packet was received	32 (0020h)	An invalid MQTT packet was received	64 (0040h)	Keep alive timeout error	80 (0050h)	Packet could not arrive at destination host ^{*1}	96 (0060h)	MQTT packet receive timeout error	112 (0070h)	TLS error	256 (0100h)	Azure IoT Hub connection refused (unacceptable MQTT protocol version)	512 (0200h)	Azure IoT Hub connection refused (invalid device ID)	768 (0300h)	Azure IoT Hub connection refused (broker unavailable)	1024 (0400h)	Azure IoT Hub connection refused (invalid account name or password)	1280 (0500h)	Azure IoT Hub connection refused (not authorized) ^{*2*3*4}	4352 (1100h)	DPS connection refused (unacceptable MQTT protocol version)	4608 (1200h)	DPS connection refused (invalid device ID)	4864 (1300h)	DPS connection refused (DPS unavailable)	5120 (1400h)	DPS connection refused (invalid account name or password)	5376 (1500h)	DPS connection refused (not authorized) ^{*2*3*4}	32768 (8000h)	Azure IoT Hub / DPS response error
		Error Code	Error Details																																											
		1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly																																											
		2 (0002h)	Authentication information was not downloaded from the SD memory card or reading the downloaded authentication information failed																																											
		4 (0004h)	Invalid device ID format																																											
		8 (0008h)	The host name of the Azure IoT Hub stored in the data register is incorrect.																																											
		16 (0010h)	An unknown packet was received																																											
		32 (0020h)	An invalid MQTT packet was received																																											
		64 (0040h)	Keep alive timeout error																																											
		80 (0050h)	Packet could not arrive at destination host ^{*1}																																											
		96 (0060h)	MQTT packet receive timeout error																																											
		112 (0070h)	TLS error																																											
		256 (0100h)	Azure IoT Hub connection refused (unacceptable MQTT protocol version)																																											
		512 (0200h)	Azure IoT Hub connection refused (invalid device ID)																																											
		768 (0300h)	Azure IoT Hub connection refused (broker unavailable)																																											
		1024 (0400h)	Azure IoT Hub connection refused (invalid account name or password)																																											
		1280 (0500h)	Azure IoT Hub connection refused (not authorized) ^{*2*3*4}																																											
		4352 (1100h)	DPS connection refused (unacceptable MQTT protocol version)																																											
		4608 (1200h)	DPS connection refused (invalid device ID)																																											
		4864 (1300h)	DPS connection refused (DPS unavailable)																																											
5120 (1400h)	DPS connection refused (invalid account name or password)																																													
5376 (1500h)	DPS connection refused (not authorized) ^{*2*3*4}																																													
32768 (8000h)	Azure IoT Hub / DPS response error																																													

Storage Destination	Item	Description
Starting number+2	Reserved	
Starting number+3	Reserved	
Starting number+4	Reserved	


- *1 Check the host name of the DPS service endpoint or Azure IoT Hub.
- *2 Check the **Service endpoint** (8), **ID Scope** (9) and **Symmetric Key** (10).
- *3 Configure the clock and clock-related functions of the Plus CPU module.
- *4 Check if the Plus CPU module is registered in the DPS and Azure IoT Hub. Reconnect to the DPS if necessary.

Notes:

- The following timing chart shows the operations when the Plus CPU module connects to DPS and Azure IoT Hub.

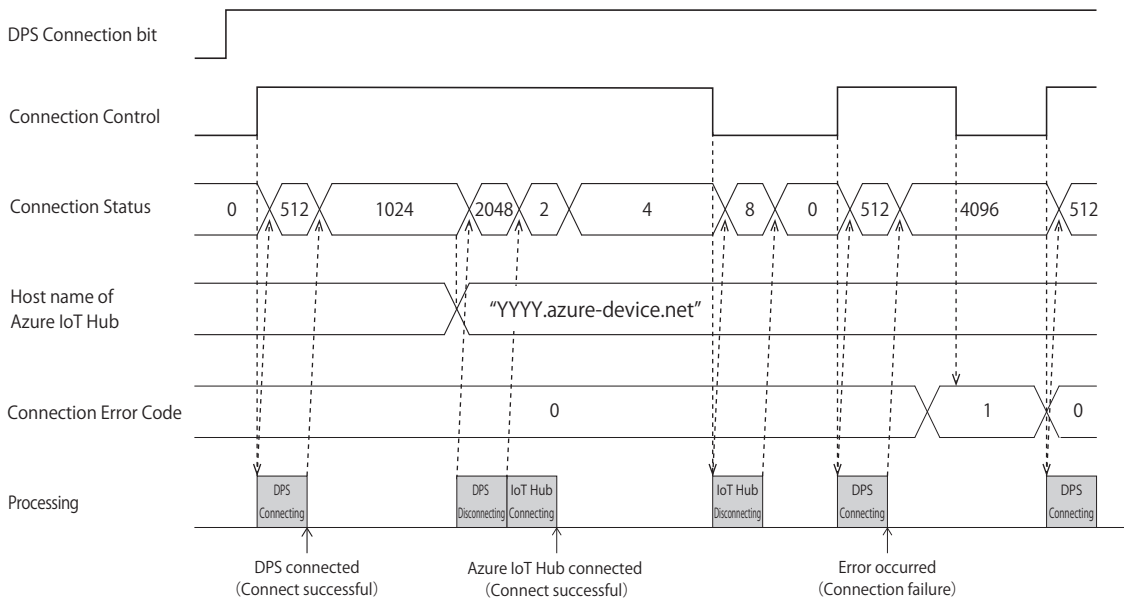


- The following timing chart shows the operations when the Plus CPU module connects directly to the Azure IoT Hub when the DPS Connection bit is off.

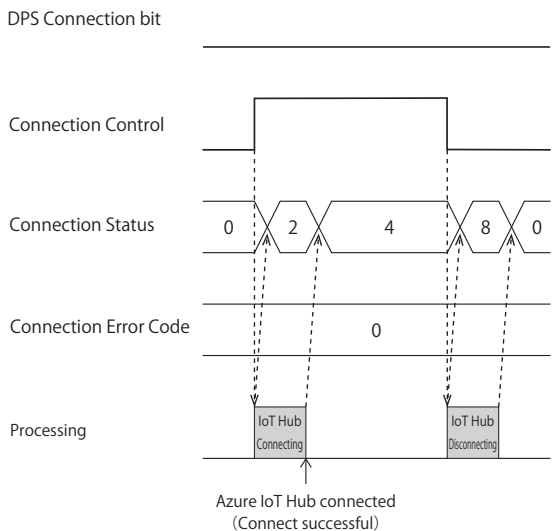

17: MQTT COMMUNICATION

- Connection Error Code 16 (0010h) to 112 (0070h) may occur even when the Plus CPU module is connected to the Azure IoT Hub (Connection Status 4 (0004h)).

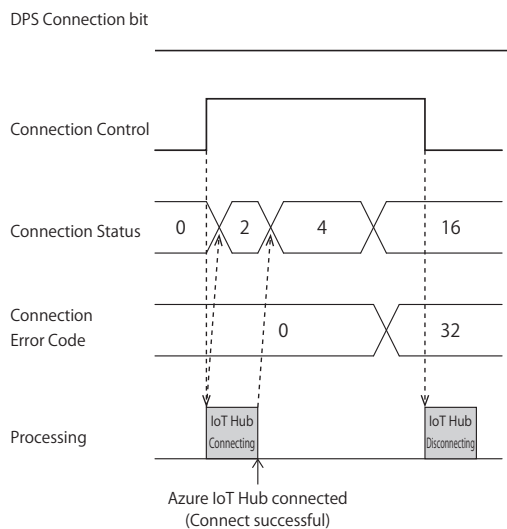

- MQTT communication is not performed while stopped. When switching from run to stop when connected to Azure IoT Hub, the Connection Control relay is turned off and disconnected 0 (0000h) is stored in the Connection Status.

(15) Import from project button

Imports only the MQTT settings from a WindLDR project file.

(16) OK button


Click **OK** button to save the settings and close the **MQTT Settings** dialog box.

(17) Cancel button

Click **Cancel** button to close the **MQTT Settings** dialog box without saving the settings.

Publish

Select **Publish** in the **MQTT Settings** dialog box to display the **Publish** tab. Configure the settings for publishing on this tab.

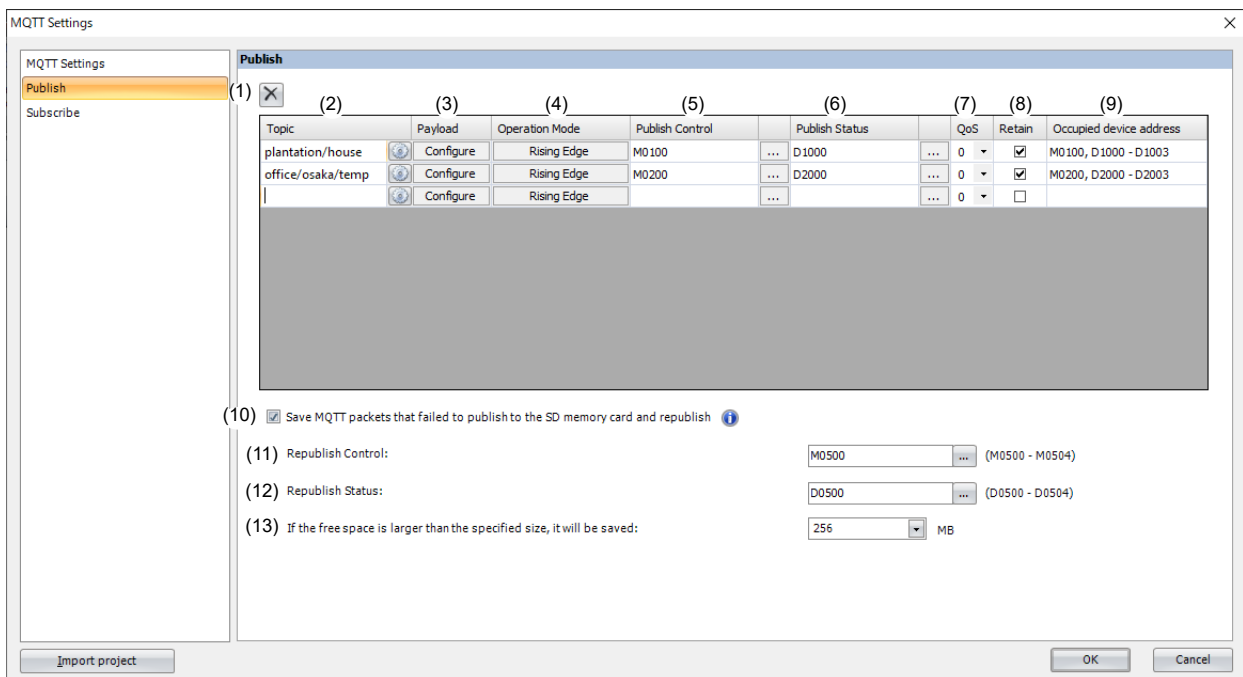

(1) button

Deletes the settings for the selected row.

(2) Topic

Sets the topic. The topic can be set as a UTF-8 string up to 256 bytes.

Click button to display the **Topic** dialog box. For details, see "Topic Dialog Box" on page 17-41.

Note:

- A maximum of 10 topics can be set.
- When the **Publish Control** (5) is changed from off to on, the topic set in the **Topic** dialog box is generated. When the generated topic is invalid, you cannot publish to the topic. For details on the error, see the **Publish Status** (6).
- The client ID containing special characters (/, +, or #) cannot be used.

(3) Payload

Sets the data in the payload. Click **Configure** to display the **Payload** dialog box. For details, see "Payload Dialog Box" on page 17-43.

(4) Operation Mode

Sets the operation mode. Click **Operation Mode** to display the **Operation Mode Settings** dialog box. For details, see "Operation Mode Settings Dialog Box" on page 17-37.

(5) Publish Control

Sets the internal relay to publish data for the topic. When the set internal relay is turned on, the data is published for the topic according to **Operation Mode** (4).

(6) Publish Status

Sets the data registers that store the status when publishing. Starting from the specified data register, 4 words of data registers are used. Specify the first data register so that the device range is not exceeded.

Storage Destination	Item	Description																
Starting number+0	Publish Status	Stores the status when publishing.																
		<table border="1"> <thead> <tr> <th>Status Code</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>0 (0000h)</td> <td>Initial status</td> </tr> <tr> <td>2 (0002h)</td> <td>Publishing</td> </tr> <tr> <td>4 (0004h)</td> <td>Publish completed</td> </tr> <tr> <td>16 (0010h)</td> <td>Publish error</td> </tr> </tbody> </table>	Status Code	Status	0 (0000h)	Initial status	2 (0002h)	Publishing	4 (0004h)	Publish completed	16 (0010h)	Publish error						
		Status Code	Status															
		0 (0000h)	Initial status															
		2 (0002h)	Publishing															
4 (0004h)	Publish completed																	
16 (0010h)	Publish error																	
Starting number+1	Publish Error Code	Stores information about the error that occurred when publishing.																
		<table border="1"> <thead> <tr> <th>Error Code*1</th> <th>Error Details</th> </tr> </thead> <tbody> <tr> <td>1 (0001h)</td> <td>The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly</td> </tr> <tr> <td>2 (0002h)</td> <td>Published when the Connection Status was 0 (0000h) (disconnected)</td> </tr> <tr> <td>4 (0004h)</td> <td>Topic format is invalid or the Plus CPU module tries to publish a topic whose size is greater than 256 bytes</td> </tr> <tr> <td>5 (0005h)</td> <td>Attempted to publish JSON data larger than 32,768 bytes</td> </tr> <tr> <td>7 (0007h)</td> <td>$\pm\infty$ (\pminfinity) or a non-numeric value was published when the data type was float, or a string with a character encoding other than UTF-8 was published when the data type was string</td> </tr> <tr> <td>96 (0060h)</td> <td>MQTT packet receive timeout error</td> </tr> <tr> <td>32768 (8000h)</td> <td>Broker response error</td> </tr> </tbody> </table>	Error Code*1	Error Details	1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly	2 (0002h)	Published when the Connection Status was 0 (0000h) (disconnected)	4 (0004h)	Topic format is invalid or the Plus CPU module tries to publish a topic whose size is greater than 256 bytes	5 (0005h)	Attempted to publish JSON data larger than 32,768 bytes	7 (0007h)	$\pm\infty$ (\pm infinity) or a non-numeric value was published when the data type was float, or a string with a character encoding other than UTF-8 was published when the data type was string	96 (0060h)	MQTT packet receive timeout error	32768 (8000h)	Broker response error
		Error Code*1	Error Details															
		1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly															
		2 (0002h)	Published when the Connection Status was 0 (0000h) (disconnected)															
		4 (0004h)	Topic format is invalid or the Plus CPU module tries to publish a topic whose size is greater than 256 bytes															
		5 (0005h)	Attempted to publish JSON data larger than 32,768 bytes															
		7 (0007h)	$\pm\infty$ (\pm infinity) or a non-numeric value was published when the data type was float, or a string with a character encoding other than UTF-8 was published when the data type was string															
96 (0060h)	MQTT packet receive timeout error																	
32768 (8000h)	Broker response error																	
Starting number+2	Transmitted data byte count	Stores the size of the transmitted data in bytes when Publish Status was 4 (0004h).																
Starting number+3	Publish Error ID	Stores the ID*2 of the error that occurred when the Publish Error Code is 7 (0007h).																

*1 When the Publish Error Code is a value other than 4 (0004h) to 7 (0007h), the Connection Control relay is turned off. When the Publish Error Code is 4 (0004h) to 7 (0007h), the states of the Publish Control and Connection Control relays are kept.

*2 The ID is assigned on the **Payload** dialog box to identify each element. For details, see "Payload Dialog Box" on page 17-43.

(7) QoS

Sets the QoS between 0 and 2. The default value is 0.

(8) Retain

Enables or disables Retain. When the check box is selected, Retain is enabled. The check box is cleared by default.

(9) Occupied device address

The occupied device addresses are displayed when the Publish Control and Publish Status devices are set.

(10) Save MQTT packets that failed to publish to the SD memory card and republish

Sets whether MQTT packets that failed to be published are saved to the SD memory card and published again. When this check box is selected, the Plus CPU module publishes again according to the status of the **Republish Control** (11).

Notes:

- MQTT packets that failed to publish are saved to the SD memory card as data to be published again. Publishing the republish data is called republishing.
- When republishing, set **QoS** (7) to 1 or 2. When **QoS** (7) is set to 0, the MQTT packet is not saved to the SD memory card as republish data because an error does not occur even if there is no response from the MQTT broker.
- The publishing process and subscribing process "Subscribe" on page 17-38 takes priority over the republishing process.
- If the client ID is changed, the republish data saved with the old client ID is deleted.

(11) Republish Control

Sets the internal relay used for republishing. Starting from the specified internal relay, 5 bits of internal relays are used. Specify the first internal relay so that the device range is not exceeded.

Storage Destination	Item	Description
Starting number+0	Republish permitted	This bit permits republishing. When this bit is on and the republish data is saved in the SD memory card, it is republished.*1*2*3 When this bit is off, even if the republish data is saved in the SD memory card, it is not republished.
Starting number+1	Republish data save permitted	This bit permits saving republish data to the SD memory card. When this bit is on, MQTT packets that failed to be published*4 are saved to the SD memory card as republish data.*5 When this bit is off, MQTT packets are not saved to the SD memory card if publishing fails.
Starting number+2	Reserved	
Starting number+3	Reserved	
Starting number+4	Reserved	

*1 Republish data stored in the SD memory card is republished in no particular order. Set a timestamp in the payload if necessary.

*2 After republishing succeeded, until the republish data stored in the SD memory card is deleted, if the SD memory card is removed or the Plus CPU module is turned off, the republish data may not be deleted from the SD memory card. In this case, the next time the Plus CPU module connects with the MQTT broker, it republishes the republish data that could not be deleted.

*3 The next republishing process is executed at least 200 ms after the republishing process has completed. The time required for the republishing process and the time from completion of republishing process to next republishing process are longer in the following situations.

- When using other functions (Recipe function, FTP Server/Client function, etc.) and instructions (DLOG or TRACE instruction, etc.) that access the SD memory card
- When executing publishing or subscribing process

*4 When the Publish Error Code (6) is 4 (0004h) to 7 (0007h), MQTT packets cannot be generated because the topic or payload is invalid. In this case, the republish data is not saved to the SD memory card.

*5 After publishing failed, until the republish data is saved to the SD memory card, if the SD memory card is removed or the Plus CPU module is turned off, the republish data may not be saved to the SD memory card.

Note: When inserting or removing the SD memory card, turn off the Republish permitted and Republish data save permitted bits.

(12) Republish Status

Sets the data registers that stores the status when saving republish data or republishing. Starting from the specified data register, 5 words of data registers are used. Specify the first data register so that the device range is not exceeded.

Storage Destination	Item	Description																		
Starting number+0	Republish Status	Stores the status when saving republish data or republishing.																		
		<table border="1"> <thead> <tr> <th>Status Code</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>0 (0000h)</td> <td>Initial status</td> </tr> <tr> <td>1 (0001h)</td> <td>No republish data</td> </tr> <tr> <td>2 (0002h)</td> <td>Republishing</td> </tr> <tr> <td>4 (0004h)</td> <td>Republish completed</td> </tr> <tr> <td>16 (0010h)</td> <td>Republish error*1</td> </tr> <tr> <td>512 (0200h)</td> <td>Republish data being saved</td> </tr> <tr> <td>1024 (0400h)</td> <td>Republish data saving completed</td> </tr> <tr> <td>2048 (0800h)</td> <td>Republish data saving error*1</td> </tr> </tbody> </table>	Status Code	Status	0 (0000h)	Initial status	1 (0001h)	No republish data	2 (0002h)	Republishing	4 (0004h)	Republish completed	16 (0010h)	Republish error*1	512 (0200h)	Republish data being saved	1024 (0400h)	Republish data saving completed	2048 (0800h)	Republish data saving error*1
		Status Code	Status																	
		0 (0000h)	Initial status																	
		1 (0001h)	No republish data																	
		2 (0002h)	Republishing																	
		4 (0004h)	Republish completed																	
		16 (0010h)	Republish error*1																	
		512 (0200h)	Republish data being saved																	
		1024 (0400h)	Republish data saving completed																	
2048 (0800h)	Republish data saving error*1																			
Starting number+1	Republish Error Code	Stores information about the error that occurred when saving republish data or republishing.*2																		
		<table border="1"> <thead> <tr> <th>Error Code</th> <th>Error Details</th> </tr> </thead> <tbody> <tr> <td>3 (0003h)</td> <td>Republish data cannot be stored because the client ID is not stored inside the Plus CPU module*3*6</td> </tr> <tr> <td>8 (0008h)</td> <td>Republish data cannot be generated because the topic or payload is invalid*3</td> </tr> <tr> <td>16 (0010h)</td> <td>SD memory card has not been inserted*3</td> </tr> <tr> <td>17 (0011h)</td> <td>Free space on the SD memory card is smaller than the specified size*3</td> </tr> <tr> <td>18 (0012h)</td> <td>Republish data cannot be saved due to read/write error on the SD memory card*3</td> </tr> <tr> <td>19 (0013h)</td> <td>Cannot republish due to read/write error on the SD memory card*4</td> </tr> <tr> <td>96 (0060h)</td> <td>MQTT packet receive timeout error*4*5</td> </tr> <tr> <td>32768 (8000h)</td> <td>Broker response error*4*5</td> </tr> </tbody> </table>	Error Code	Error Details	3 (0003h)	Republish data cannot be stored because the client ID is not stored inside the Plus CPU module*3*6	8 (0008h)	Republish data cannot be generated because the topic or payload is invalid*3	16 (0010h)	SD memory card has not been inserted*3	17 (0011h)	Free space on the SD memory card is smaller than the specified size*3	18 (0012h)	Republish data cannot be saved due to read/write error on the SD memory card*3	19 (0013h)	Cannot republish due to read/write error on the SD memory card*4	96 (0060h)	MQTT packet receive timeout error*4*5	32768 (8000h)	Broker response error*4*5
		Error Code	Error Details																	
		3 (0003h)	Republish data cannot be stored because the client ID is not stored inside the Plus CPU module*3*6																	
		8 (0008h)	Republish data cannot be generated because the topic or payload is invalid*3																	
		16 (0010h)	SD memory card has not been inserted*3																	
		17 (0011h)	Free space on the SD memory card is smaller than the specified size*3																	
		18 (0012h)	Republish data cannot be saved due to read/write error on the SD memory card*3																	
		19 (0013h)	Cannot republish due to read/write error on the SD memory card*4																	
96 (0060h)	MQTT packet receive timeout error*4*5																			
32768 (8000h)	Broker response error*4*5																			
Starting number+2	Reserved																			
Starting number+3	Reserved																			
Starting number+4	Reserved																			

- *1 The next time republishing or when the republish data is saved, the republish status is updated.
- *2 The next time republishing fails or when saving republish data fails, the republish error code is updated.
- *3 This error occurs when saving republish data to the SD memory card. In this case, the republish status is 2048 (0800h).
- *4 This error occurs when republishing. In this case, the republish status is 16 (0010h).
- *5 When the republish error code is 96 (0060h) to 32768 (8000h), the connection control is turned off.
- *6 Change the Connection Control (Starting number+0) from off to on to store the client ID.

Note: Republish data that fails to republish is not deleted from the SD memory card.


(13) If the free space is larger than the specified size, it will be saved

Sets the amount of free space (64MB /128MB /256MB /512MB /1024MB) on the SD memory card required when saving republish data. The default value is 256 MB.

When the free space on the SD memory card is larger than the specified size, MQTT packets that failed to be published are saved as republish data. When the free space on the SD memory card is less than the specified size, MQTT packets are not saved as republish data even if the publish fails.

Operation Mode Settings Dialog Box

Set the operation mode when publishing on the **Operation Mode Settings** dialog box.

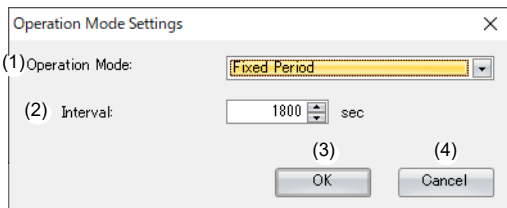

(1) Operation Mode

Sets the operation mode when publishing.

Operation Mode	Description
Rising Edge	When the Publish Control relay is changed from off to on, the data is published for the specified topic. When publishing is complete, the Publish Control relay is automatically turned off.
Fixed Period	When the Publish Control relay is on, the data is published to the specified topic at the cycle set for Interval (2). When the Publish Control relay is turned off, publishing is ended.

(2) Interval

Sets the time interval from immediately after publish processing starts to the start of the next publish processing between 1 and 3,600 s.

The default value is 60 s. If the previous publish processing has not completed when the next publish processing is to start, the start of the next publish processing is delayed.

(3) OK button


Click **OK** button to set the operation mode and interval.

(4) Cancel button

Click **Cancel** button and the operation mode and interval are not saved.

Subscribe

Select **Subscribe** in the **MQTT Settings** dialog box to display the **Subscribe** tab. Configure the settings for subscribing on this tab.

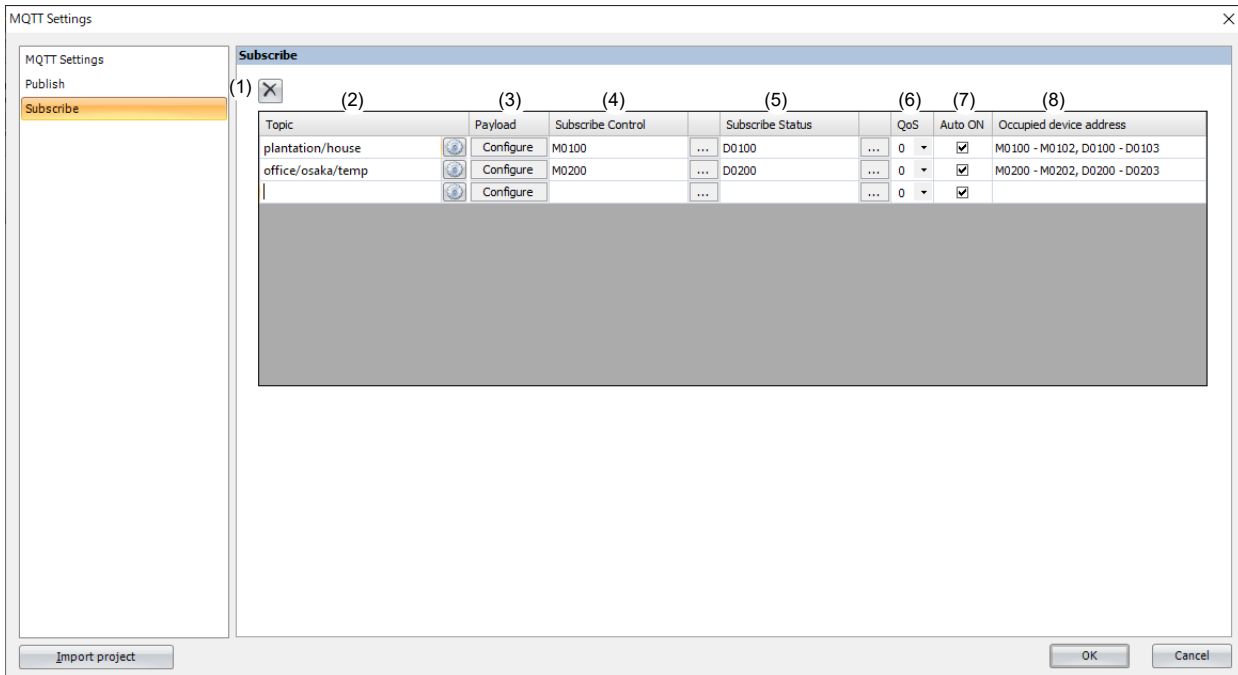

(1) button

Deletes the settings for the selected row.

(2) Topic

Sets the topic. The topic can be set as a UTF-8 string up to 256 bytes. Wildcards (# and +) can also be set.

Click button to display the **Topic** dialog box. For details, see "Topic Dialog Box" on page 17-41.

Note:

- A maximum of 10 topics can be set.
- When the **Subscribe Control** (4) is changed from off to on, the topic set in the **Topic** dialog box is generated. When the generated topic is invalid, you cannot subscribe to the topic. For details on the error, see the **Subscribe Status** (5).
- The client ID containing special characters (/, +, or #) cannot be used.

(3) Payload


Sets the data in the payload. Click **Configure** to display the **Payload** dialog box. For details, see "Payload Dialog Box" on page 17-43.

(4) Subscribe Control

Sets the internal relay used to subscribe to a topic. Starting from the specified internal relay, 3 bits of internal relays are used. Specify the first internal relay so that the device range is not exceeded.

Storage Destination	Item	Description
Starting number+0	Subscribe Control	When on, a subscription is made to the specified topic. When off, the subscription is canceled.
Starting number+1	Data reception completion flag	This relay turns on when data was received normally (Subscribe Status remains 4 (0004)). To detect when the data is next received, turn this relay off in the ladder program.
Starting number+2	All data storage flag	This relay turns on when data was received normally (Subscribe Status remains 4 (0004)) and values were stored in all devices set on the Payload dialog box.

Note: Do not use the SOTU (single output up) instruction or the SOTD (single output down) instruction in combination with the Data reception completion flag input. It may not be possible to recognize when data is received if these instructions are used in combination with the Data reception completion flag input.

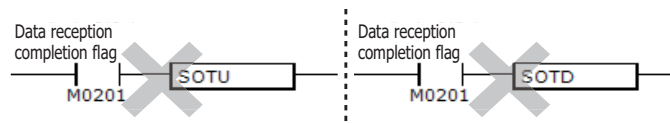

(5) Subscribe Status

Sets the data registers that store the status when subscribing to a topic. Starting from the specified data register, 4 words of data registers are used. Specify the first data register so that the device range is not exceeded.

Storage Destination	Item	Description																				
Starting number+0	Subscribe Status	<p>Stores the Subscribe Status.</p> <table border="1"> <thead> <tr> <th>Status Code</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>0 (0000h)</td> <td>Initial status</td> </tr> <tr> <td>2 (0002h)</td> <td>Subscribing</td> </tr> <tr> <td>4 (0004h)</td> <td>Subscribed (If the Subscribe Error Code is 5 (0005h) to 8 (0008h), the status is 20 (0014h).)</td> </tr> <tr> <td>8 (0008h)</td> <td>Unsubscribing</td> </tr> <tr> <td>16 (0010h)</td> <td>Subscribe error</td> </tr> <tr> <td>32 (0020h)</td> <td>Unsubscribe error</td> </tr> </tbody> </table>	Status Code	Status	0 (0000h)	Initial status	2 (0002h)	Subscribing	4 (0004h)	Subscribed (If the Subscribe Error Code is 5 (0005h) to 8 (0008h), the status is 20 (0014h).)	8 (0008h)	Unsubscribing	16 (0010h)	Subscribe error	32 (0020h)	Unsubscribe error						
Status Code	Status																					
0 (0000h)	Initial status																					
2 (0002h)	Subscribing																					
4 (0004h)	Subscribed (If the Subscribe Error Code is 5 (0005h) to 8 (0008h), the status is 20 (0014h).)																					
8 (0008h)	Unsubscribing																					
16 (0010h)	Subscribe error																					
32 (0020h)	Unsubscribe error																					
Starting number+1	Subscribe Error Code	<p>Stores information about the error that occurred in subscribing.</p> <table border="1"> <thead> <tr> <th>Error Code*1</th> <th>Error Details</th> </tr> </thead> <tbody> <tr> <td>1 (0001h)</td> <td>The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly</td> </tr> <tr> <td>2 (0002h)</td> <td>Subscribed or unsubscribed when the Connection Status was 0 (0000h) (disconnected)</td> </tr> <tr> <td>4 (0004h)</td> <td>Topic format is invalid or the Plus CPU module tries to subscribe to a topic whose size is greater than 256 bytes</td> </tr> <tr> <td>5 (0005h)</td> <td>The size of the received data or the number of elements is out of range</td> </tr> <tr> <td>6 (0006h)</td> <td>The received data is not in the JSON format</td> </tr> <tr> <td>7 (0007h)</td> <td>A value was received that is out of range for the data type</td> </tr> <tr> <td>8 (0008h)</td> <td>Values were not stored to all devices set on the Payload dialog box</td> </tr> <tr> <td>96 (0060h)</td> <td>MQTT packet receive timeout error</td> </tr> <tr> <td>32768 (8000h)</td> <td>Broker response error</td> </tr> </tbody> </table>	Error Code*1	Error Details	1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly	2 (0002h)	Subscribed or unsubscribed when the Connection Status was 0 (0000h) (disconnected)	4 (0004h)	Topic format is invalid or the Plus CPU module tries to subscribe to a topic whose size is greater than 256 bytes	5 (0005h)	The size of the received data or the number of elements is out of range	6 (0006h)	The received data is not in the JSON format	7 (0007h)	A value was received that is out of range for the data type	8 (0008h)	Values were not stored to all devices set on the Payload dialog box	96 (0060h)	MQTT packet receive timeout error	32768 (8000h)	Broker response error
Error Code*1	Error Details																					
1 (0001h)	The Ethernet cable is disconnected or broken and the Plus CPU module cannot connect to the network properly																					
2 (0002h)	Subscribed or unsubscribed when the Connection Status was 0 (0000h) (disconnected)																					
4 (0004h)	Topic format is invalid or the Plus CPU module tries to subscribe to a topic whose size is greater than 256 bytes																					
5 (0005h)	The size of the received data or the number of elements is out of range																					
6 (0006h)	The received data is not in the JSON format																					
7 (0007h)	A value was received that is out of range for the data type																					
8 (0008h)	Values were not stored to all devices set on the Payload dialog box																					
96 (0060h)	MQTT packet receive timeout error																					
32768 (8000h)	Broker response error																					
Starting number+2	Received data byte count	Stores the size of the received data in bytes.																				
Starting number+3	Subscribe Error ID	<p>Stores the ID*2 of the error that occurred first when one of the following errors occurs.</p> <ul style="list-style-type: none"> An element does not exist in the received JSON data that matches the depth level, name, and format of the ID set on the Payload dialog box A value was received that is out of range for the data type 																				

*1 When the Subscribe Error Code is a value other than 4 (0004h) to 8 (0008h), the Connection Control relay is turned off. When the Subscribe Error Code is 4 (0004h) to 8 (0008h), the states of the Subscribe Control and Connection Control relays are kept.

*2 The ID is assigned on the **Payload** dialog box to identify each element. For details, see "Payload Dialog Box" on page 17-43.

17: MQTT COMMUNICATION

(6) QoS

Sets the QoS between 0 and 2. The default value is 0.

(7) Auto ON

Sets whether to automatically turn on the Subscribe Control relay immediately after the Plus CPU module connects to the broker. If the check box is selected, the Subscribe Control relay is turned on immediately after connecting to the broker. The check box is selected by default.

(8) Occupied device address

The occupied device addresses are displayed when the Subscribe Control and Subscribe Status devices are set.


Topic Dialog Box

Use this dialog box to configure the topic.

If when the **Topic** dialog box was opened from the **Publish** tab, configure the topic to publish.

If when the **Topic** dialog box was opened from the **Subscribe** tab, configure the topic to subscribe.

Configure the string that composes the topic on each line. If you use multiple lines to configure a topic, the topic is a string consisting of the setting values of each line concatenated with "/" in number order.

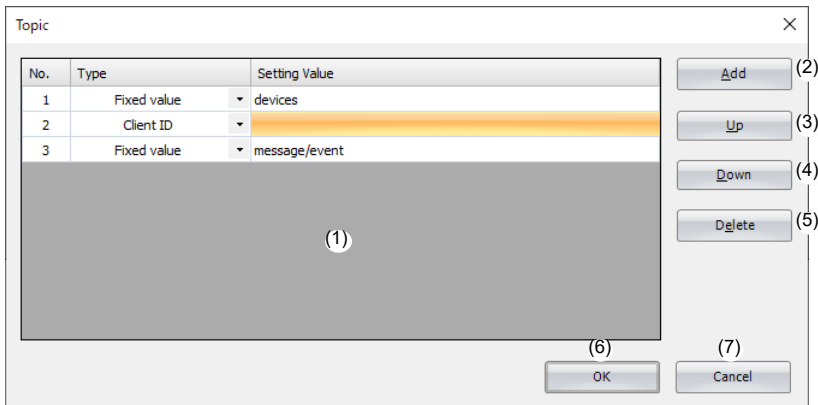

(1) List of Settings

Displays the settings in this list.

- No. : Displays the number (1 to 10) that identifies each row.
- Type : Displays the type of string that composes the topic.

Type	Description
Fixed value	Sets any character string.
Client ID/ Device ID	The client ID or device ID set in the MQTT Basic Settings group of the MQTT Settings tab is set.

Setting Value : Displays the setting value according to the type.

(2) Add button

Adds one line to the bottom.

(3) Up button

Swaps the selected row and the row above it in List of Settings.

(4) Down button

Swaps the selected row and the row below it in List of Settings.

(5) Delete button

Deletes the selected row in List of Settings.

(6) OK button

Click **OK** button to save the settings and close the **Topic** dialog box.

(7) Cancel button

Click **Cancel** button to close the Topic dialog box without saving the settings.

17: MQTT COMMUNICATION

Note:

- One topic can be set with up to ten character strings (No.1 to No.10).
- Depending on the system software version of the Plus CPU module, how to configure a topic is different.

System software	How to configure a topic
Less than version 2.10	Configure a topic with only one fixed value
Version 2.10 or later	Other than the above

Example of configuring a topic with only one fixed value:

Topic		
No.	Type	Setting Value
1	Fixed value	devices/message/event

Example of configuring a topic with multiple fixed values:

Topic		
No.	Type	Setting Value
1	Fixed value	devices
2	Fixed value	message/event

Payload Dialog Box

Use this dialog box to configure the data inside the payload in JavaScript Object Notation (JSON) format.

If the **Payload** dialog box was opened from the **Publish** tab, configure the content of the JSON data to transmit. If the **Payload** dialog box was opened from the **Subscribe** tab, configure what values are stored in what devices for the JSON data that was received.

ID	Name	Format	Data Type	Data
1	(root)	Object (3)		
2	Plastic greenhouse (North)	Object (5)		
3	Temperature (Lower) (°C)	Value	Float (F)	D0510-D0511
4	Temperature (Upper) (°C)	Value	Float (F)	D0512-D0513
5	Humidity (Lower) (%)	Value	Float (F)	D0514-D0515
6	Humidity (Upper) (%)	Value	Float (F)	D0516-D0517
7	CO2 Level (Lower) (ppm)	Value	Float (F)	D0518-D0519
8	Plastic greenhouse (South)	Object (5)		
9	Temperature (Lower) (°C)	Value	Float (F)	D0610-D0611
10	Temperature (Upper) (°C)	Value	Float (F)	D0612-D0613
11	Humidity (Lower) (%)	Value	Float (F)	D0614-D0615
12	Humidity (Upper) (%)	Value	Float (F)	D0616-D0617
13	CO2 Level (Lower) (ppm)	Value	Float (F)	D0618-D0619
14	Timestamp	Value	Timestamp (T)	1606368016

(2) Size: 482 bytes (32768 bytes max.)

(3) Number of IDs: 14 (800 max.)

(4) Depth: 3 (10 max.)

(5) New Object (6) New Array (7) New Value (8) Edit (9) Delete (10)

(11) Up (12) Down (13) Import JSON Text (14) Export JSON Text (15) OK (16) Cancel

(1) List of Settings

Displays the settings in this list.

- ID : Displays the number that identifies each row.
- Name : Displays the name of each ID.
- Format : Displays the format of each ID (object, array, or value). Also displays the number of child elements for an object and array.
- Data Type : Displays the data type of each value. If the data type is string (S), the size is also displayed.
- Data : Displays a fixed value or device address. For a device address, the range of device addresses that is occupied is also displayed.

Note: The name of ID 1 is "(root)". The names of child elements in an array are a sequential number starting from 0.

(2) Size

Displays the maximum size of the JSON data set in the list of settings. The maximum size is 32,768 bytes when the **Payload** dialog box is opened from the **Publish** tab and 8,192 bytes when the **Payload** dialog box is opened from the **Subscribe** tab.

(3) Number of IDs

Displays the number of IDs. The maximum number is 800 when the **Payload** dialog box is opened from the **Publish** tab and 200 when the **Payload** dialog box is opened from the **Subscribe** tab.

(4) Depth

Displays the current nesting depth of the JSON data set in the list of settings. The maximum value is 10.

Note: Depth level 1 is called the root.

(5) New Object button

Adds an object to the end of the object or array selected in the list of settings. If the list of settings is empty, the object is added to the root.

(6) New Array button

Adds an array to the end of the object or array selected in the list of settings. If the list of settings is empty, the array is added to the root.

(7) Batch menu

Adds a value with continuous devices as child elements. Click this button to display the **Batch** dialog box. For details, see "Batch Dialog Box" on page 17-47.

(8) New Value button

Adds a value to the end of the object or array selected in the list of settings. If the list of settings is empty, the value is added to the root. Click this button to display the **New Value** dialog box. For details, see "New Value or Edit Dialog Box" on page 17-45.

(9) Edit button

Click this button to display the **Edit** dialog box. For details, see "New Value or Edit Dialog Box" on page 17-45.

(10) Delete button

Deletes the ID selected in the list of settings according to the format as follows.

Selected ID Format	Operation
Object	Deletes the selected object and its child elements.
Array	Deletes the selected array and its child elements.
Value	Deletes the selected value.

(11) Up button

Swaps the ID selected in the list of settings with the ID above it at the same depth.

(12) Down button

Swaps the ID selected in the list of settings with the ID below it at the same depth.

(13) Import JSON Text button

Click this button to display the **Import JSON Text** dialog box. For details, see "Import JSON Text Dialog Box" on page 17-48.

(14) Export JSON Text button

Click this button to display the **Export JSON Text** dialog box. For details, see "Export JSON Text Dialog Box" on page 17-49.

(15) OK button


Saves the settings and closes the **Payload** dialog box.

(16) Cancel button

Click **Cancel** button and the settings are not saved.

New Value or Edit Dialog Box

This dialog box is used to edit an object or array. It is also used to add or edit a value.

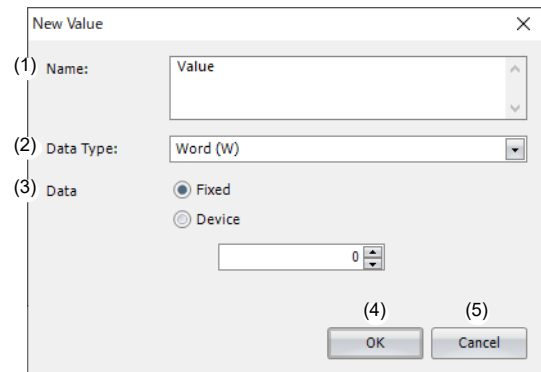

(1) Name

Displays or sets the name of the value. The name can be set as a UTF-8 string up to 255 bytes.

(2) Data Type

Sets the data type of the value. This item is displayed only when adding or editing a value. The ranges of data that can be handled as each data type are as follows.

Data Type	Range
Word (W)	0 to 65,535
Integer (I)	-32,768 to 32,767
Double word (D)	0 to 4,294,967,295
Long (L)	-2,147,483,648 to 2,147,483,647
Float (F)	Range that can be handled as a single-precision 32-bit floating point number*1 However, ±∞ (±infinity) and non-numeric values are excluded.
Boolean (B)	true (1) or false (0)
String (S)	Character encoding: UTF-8 Maximum size: 1,023 bytes
Timestamp (T)*2	Time Zone: Use the setting in Calendar & Clock*3, UTC+14 to UTC-12 Format*4: Local Time, UTC, UNIX time

*1 See Chapter 3 "Data Types for Advanced Instructions" in the FC6A Series MICROSmart Ladder Programming Manual.

*2 Displayed only if the **Payload** dialog box was opened from the **Publish** tab.

*3 Use the time zone set in the **Calendar & Clock** tab of the **Function Area Settings** dialog box.

*4 For an explanation of the formats, see the following table.

	Format	Description
Local Time (s)	YYYYMMDDThhmmss+/-hhmm	Local time in ISO 8601 basic format / extended format
	YYYY-MM-DDThh:mm:ss+/-hh:mm	
Local Time (ms)	YYYYMMDDThhmmssSSS+/-hhmm	
	YYYY-MM-DDThh:mm:ss.SSS+/-hh:mm	
UTC (s)	YYYYMMDDThhmmssZ	UTC in ISO 8601 basic format / extended format
	YYYY-MM-DDThh:mm:ssZ	
UTC (ms)	YYYYMMDDThhmmssSSSZ	
	YYYY-MM-DDThh:mm:ss.SSSZ	
UNIX Time (s)		The elapsed time in seconds (excluding leap seconds) from January 1, 1970 (UTC+0)
UNIX Time (ms)		The elapsed time in milliseconds (excluding leap seconds) from January 1, 1970 (UTC+0)

*5 When Local Time (ms), UTC (ms) or UNIX Time (ms) is specified, the ms digit is always 000.

For example, when the "YYYY-MM-DDThh:mm:ss.SSS+/-hh:mm" of "Local time (ms)" is selected in the format, 2022-05-11T08:30:05.000+09:00 is displayed.

Note: The time zone can be adjusted in 15 minute increments using D8413 (Time Zone Offset). For details, see "Adjusting the time zone (D8413)" on page 3-12.

(3) Data

Sets the data of the value. This item is displayed only when adding or editing a value.

Data Type	Setting Method	Description
Word (W) / Integer (I) / Double word (D) / Long (L) / Float (F)	Fixed	Set a numeric value. The range of the numeric value that can be set depends on the data type.
	Device	Set a data register.*1
Boolean (B)	Fixed	Set true or false.
	Device	Set an internal relay.
String (S)	Fixed	Set a string.
	Device	Set a data register and size (in bytes) in a range between 1 and 1,023.*2
Timestamp (T)*3	—	Set the time zone and format.

*1 If the data type is D (double word), L (long), or F (float), 2 words of data registers are used starting from the specified data register.

*2 An address of the set size is used with the set data register as the starting address.

*3 Displayed only if the **Payload** dialog box was opened from the **Publish** tab.

(4) OK button


Click **OK** button to add the value to the list of settings or save the edited content.

(5) Cancel button

Click **Cancel** button and the value is not added or the edits are not saved.

Batch Dialog Box

Use this dialog box to add an array and its child elements (values).

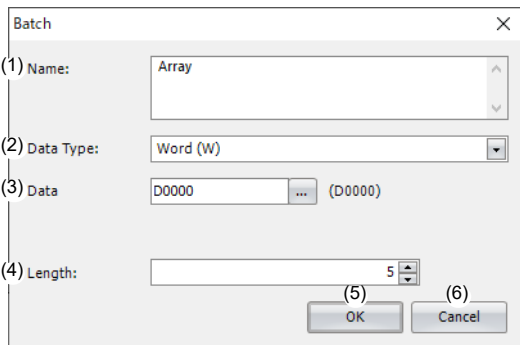

(1) Name

Displays or sets the name of the array to add. The name can be set as a UTF-8 string up to 255 bytes.

(2) Data Type

Sets the data type of the child elements (values) of the array.

Data Type	Range
Word (W)	0 to 65,535
Integer (I)	-32,768 to 32,767
Double word (D)	0 to 4,294,967,295
Long (L)	-2,147,483,648 to 2,147,483,647
Float (F)	Range that can be handled as a single-precision 32-bit floating point number* ¹ However, ±∞ (±infinity) and non-numeric values are excluded.
Boolean (B)	true (1) or false (0)
String (S)	Character encoding: UTF-8 Maximum size: 1,023 bytes

*1 See Chapter 3 "Data Types for Advanced Instructions" in the FC6A Series MICROSmart Ladder Programming Manual.

(3) Data

Sets the data of the child elements (values) of the array.

Data Type	Setting Method	Description
Word (W) / Integer (I) / Double word (D) / Long (L) / Float (F)	Device	Set a data register.* ¹
Boolean (B)		Set an internal relay.
String (S)		Set a data register and size (in bytes) in a range between 1 and 1,023.* ²

*1 If the data type is D (double word), L (long), or F (float), 2 words of data registers are used starting from the specified data register.

*2 An address of the set size is used with the set data register as the starting address.

(4) Length

Sets the number of child elements (values) in the array. The length can be set up to the number of remaining available IDs. The default value is 1.

(5) OK button


Click **OK** button to add the array.

(6) Cancel button

Click **Cancel** button and the array is not added.

Import JSON Text Dialog Box

Use this dialog box to set the JSON text to import.

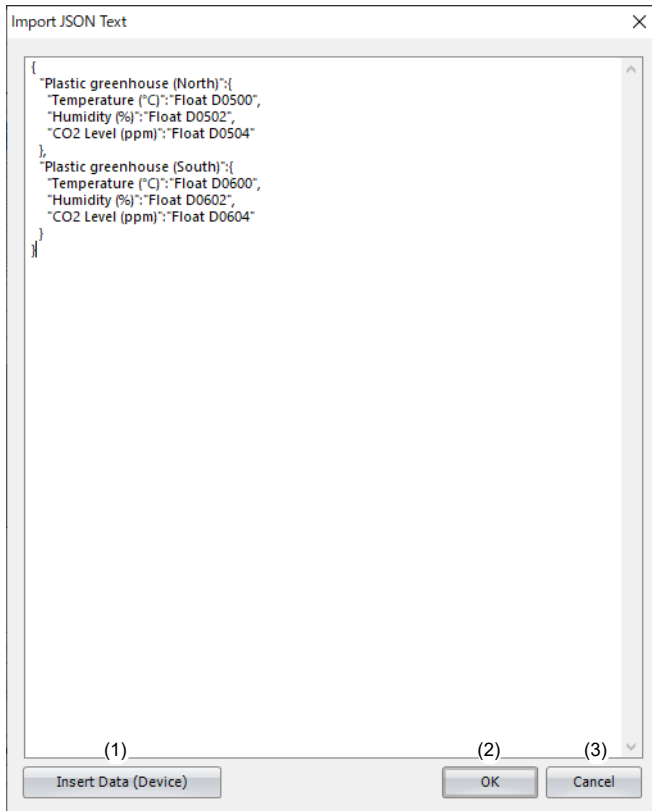

(1) Insert Data (Device)

Opens the **Insert Data (Device)** dialog box.

(2) OK button

Applies the contents of the text to the list of settings on the **Payload** dialog box.

Notes:

If a data type and device are specified in the value portion of the key and value pairs in the JSON text, the text is converted to a device when imported.

Example: { "key" : "Word D100" }

The data type of ID 2 is Word (W) and the Device is D0100.

{ "key" : "String D200 10" }

The data type of ID 2 is String (S) and the Device is D0200. The Size is 10 bytes.

{ "Timestamp" : "Timestamp UTC+0 UnixTime" }

The data type of ID 2 is Timestamp (T), the Time Zone is UTC+0, and the Format is UNIX Time.

(3) Cancel button

Returns to the **Payload** dialog box without applying the contents of the text to the list of settings on the **Payload** dialog box.

Export JSON Text Dialog Box

Outputs the payload configured in the **Payload** dialog box in JSON format text.



(1) Copy to Clipboard

Copies the text to the clipboard.

(2) Save File


Saves the text in text format (.txt).

(3) Cancel button

Closes the **Export JSON Text** dialog box.

Insert Data (Device) Dialog Box

Use this dialog box to create a string that specifies a device and data type.

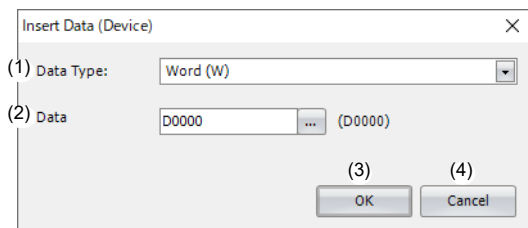

(1) Data Type

Sets the data type of the data (device) to insert.

Data Type	Range
Word (W)	0 to 65,535
Integer (I)	-32,768 to 32,767
Double word (D)	0 to 4,294,967,295
Long (L)	-2,147,483,648 to 2,147,483,647
Float (F)	Range that can be handled as a single-precision 32-bit floating point number* ¹ However, $\pm\infty$ (\pm infinity) and non-numeric values are excluded.
Boolean (B)	true (1) or false (0)
String (S)	Character encoding: UTF-8 Maximum size: 1,023 bytes

*1 See Chapter 3 "Data Types for Advanced Instructions" in the FC6A Series MICROSmart Ladder Programming Manual.

(2) Data

Sets the data of the data (device) to insert.

Data Type	Setting Method	Description
Word (W) / Integer (I) / Double word (D) / Long (L) / Float (F)	Device	Set a data register.* ¹
Boolean (B)		Set an internal relay.
String (S)		Set a data register and size (in bytes) in a range between 1 and 1,023.* ²

*1 If the data type is D (double word), L (long), or F (float), 2 words of data registers are used starting from the specified data register.

*2 An address of the set size is used with the set data register as the starting address.

(3) OK button

Creates a string from the set data type and data and inserts that at the cursor position in the **Import JSON Text** dialog box.

(4) Cancel button

Cancels inserting the data (device) and returns to the **Import JSON Text** dialog box.


Publishing to a Topic

The Plus CPU module publishes data according to the **Operation Mode** setting on the **Operation Mode Settings** dialog box. For details, see "Operation Mode Settings Dialog Box" on page 17-37.

When the Operation Mode Is Set to Rising Edge

After the Plus CPU module connects to the broker and when the Publish Control relay is changed from off to on, the data is published to the specified topic and the status is stored in Publish Status.

If publishing was successful, status 4 (0004h) is stored in Publish Status and the Publish Control relay is turned off. If publishing fails, status 16 (0010h) is stored in Publish Status, the error code is stored in Publish Error Code, and the Publish Control relay is turned off. When there is an error other than error code 7 (0007h), the Connection Control relay is also turned off. When the error is error code 7 (0007h), the states of the Publish Control and Connection Control relays are kept.

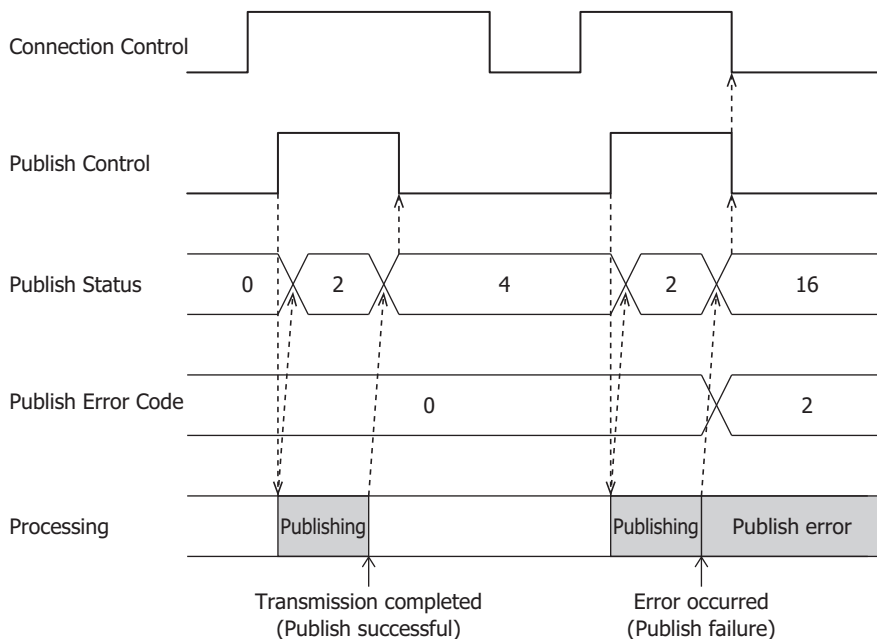

Notes:

- Do not keep the Publish Control relay always on in the ladder program. If publishing was successful, status 4 (0004h) is stored in Publish Status and the Publish Control relay is turned off. If a ladder program keeps the Publish Control relay always on, the data will be published repeatedly. Be careful as this may result in extremely high packet communication fees.
- When turning off the Publish Control relay in the ladder program, publishing may not execute if the Publish Control relay is turned off when the status is a value other than status 2 (0002h).

When Publish Status is status 2 (0002h), do not change the values of devices set on the **Payload** dialog box. Change the values when Publish Status is a value other than status 2 (0002h).

17: MQTT COMMUNICATION

Operation Example

Operation

- Temperature, humidity, and CO₂ concentration are measured at two locations (north and south) in a greenhouse for strawberry cultivation.
- If the measured temperature, humidity, and/or CO₂ concentration are outside the following ranges, the values are published to the topic "plantation/house".

Item	Range
Temperature	15.0 to 25.0°C
Humidity	60.0 to 80.0%
CO ₂ concentration	400.0 ppm or higher

Settings

Configure the basic settings on the **MQTT Settings** tab in the **MQTT Settings** dialog box, and then configure the following items on the other tabs.

Tabs	Item	Description
MQTT Settings tab	Connection Control	M0000
	Connection Status	D0000
Publish tab	Topic	"plantation/house"
	Payload dialog box settings	Refer to the following screenshot
	Operation Mode	Rising Edge
	Publish Control	M0100
	Publish Status	D1000
	QoS	0
	Retain	Disabled

Payload dialog box settings


The screenshot shows the 'Payload' dialog box with a table of data items. The table has columns for ID, Name, Format, Data Type, and Data. The data is organized into a tree structure with two main branches: 'Plastic greenhouse (North)' and 'Plastic greenhouse (South)'. Each branch contains 'Temperature (°C)', 'Humidity (%)', and 'CO2 Level (ppm)'. A 'Timestamp' entry is also present at the bottom of the list.

ID	Name	Format	Data Type	Data
1	(root)	Object (3)		
2	Plastic greenhouse (North)	Object (3)		
3	Temperature (°C)	Value	Float (F)	D0500-D0501
4	Humidity (%)	Value	Float (F)	D0502-D0503
5	CO2 Level (ppm)	Value	Float (F)	D0504-D0505
6	Plastic greenhouse (South)	Object (3)		
7	Temperature (°C)	Value	Float (F)	D0600-D0601
8	Humidity (%)	Value	Float (F)	D0602-D0603
9	CO2 Level (ppm)	Value	Float (F)	D0604-D0605
10	Timestamp	Value	Timestamp (T)	1606734424

Size: 276 bytes (32768 bytes max.)
 Number of IDs: 10 (800 max.)
 Depth: 3 (10 max.)

Buttons: New Object, New Array, New Value, Edit, Delete, Up, Down, Import JSON Text, Export JSON Text, OK, Cancel

Ladder Program

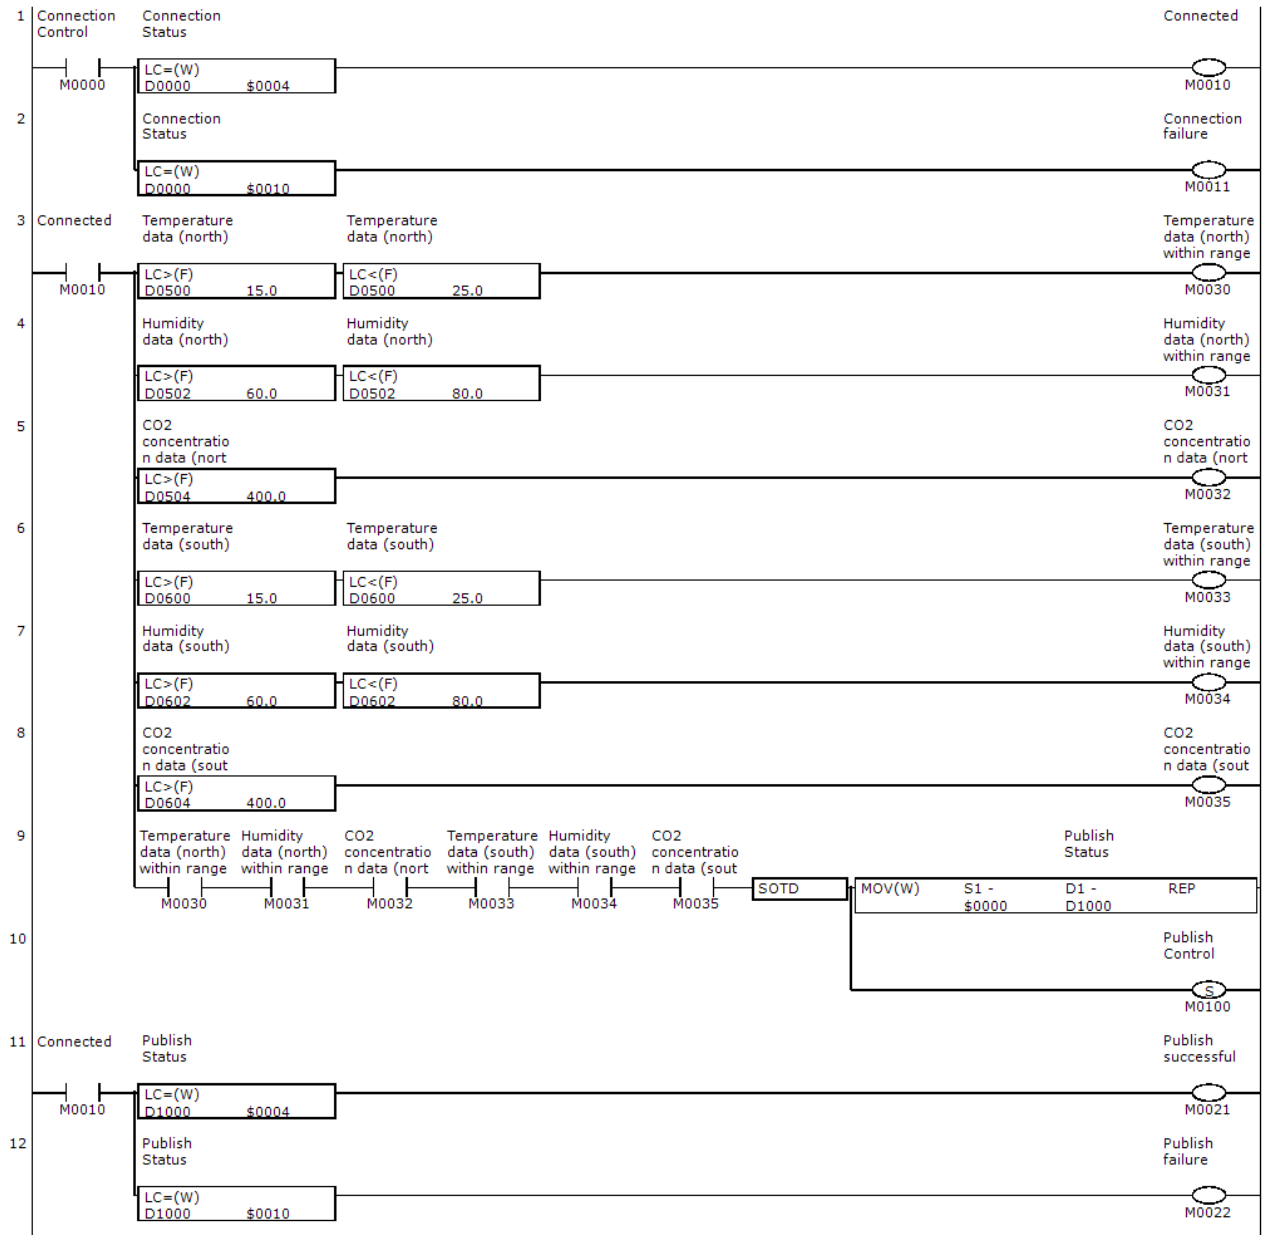

17: MQTT COMMUNICATION

Device Address	Comment
M0000	Connection Control
M0010	Connected
M0011	Connection failure
M0021	Publish successful
M0022	Publish failure
M0030	Temperature data (north) within range
M0031	Humidity data (north) within range
M0032	CO2 concentration data (north) within range
M0033	Temperature data (south) within range
M0034	Humidity data (south) within range
M0035	CO2 concentration data (south) within range
M0100	Publish Control


Device Address	Comment
D0000	Connection Status
D0500	Temperature data (north)
D0502	Humidity data (north)
D0504	CO2 concentration data (north)
D0600	Temperature data (south)
D0602	Humidity data (south)
D0604	CO2 concentration data (south)
D1000	Publish Status

Ladder Line	Description												
1	When M0000 is turned on, connecting to the broker is started. When M0010 is on, a connection was made to the broker.												
2	When a connection cannot be made to the broker, M0011 is turned on.												
3 to 8	When M0010 is on (a connection was made to the broker), if the temperature, humidity, and CO ₂ concentration measured at two locations (north and south) in the greenhouse are within the setting range, M0030 to M0035 are turned on.												
9 and 10	When M0010 is on (a connection was made to the broker), if either temperature, humidity, or CO ₂ concentration is outside the setting range, the relevant internal relay (M0030 to M0035) changes from on to off. At this time, 0 (0000h) is stored in D1000 and Publish Status is cleared. Then M0100 is turned on and the data is published for the topic. (When publishing is complete, M0100 is automatically turned off.)												
11	<p>When publishing was successful, M0021 is turned on.</p> <p>When the conditions are the same as those in the following table, the device values are: (D0500, D0501) = 18.5, (D0502, D0503) = 55.5, (D0504, D0505) = 410.1, (D0600, D0601) = 26.1, (D0602, D0603) = 64.5, and (D0604, D0605) = 420.2.</p> <table border="1"> <thead> <tr> <th>Item</th> <th>Inside Greenhouse (North)</th> <th>Inside Greenhouse (South)</th> </tr> </thead> <tbody> <tr> <td>Temperature</td> <td>18.5°C</td> <td>26.1°C</td> </tr> <tr> <td>Humidity</td> <td>55.5%</td> <td>64.5%</td> </tr> <tr> <td>CO₂ concentration</td> <td>410.1 ppm</td> <td>420.2 ppm</td> </tr> </tbody> </table> <p>If the current time data for the internal clock (D8008 to D8014) is 9:05:46 on December 9, 2020 and the value of D8413 (Time Zone Offset) is 0, the JSON data to transmit is as follows.</p> <pre>{ "Plastic greenhouse (North)": { "Temperature (°C)": 18.5, "Humidity (%)": 55.5, "CO2 Level (ppm)": 410.1 }, "Plastic greenhouse (South)": { "Temperature (°C)": 26.1, "Humidity (%)": 64.5, "CO2 Level (ppm)": 420.2 }, "Timestamp": 1607504746 }</pre> <p>At this time, 224 is stored in D1002 (Transmitted data byte count).</p>	Item	Inside Greenhouse (North)	Inside Greenhouse (South)	Temperature	18.5°C	26.1°C	Humidity	55.5%	64.5%	CO ₂ concentration	410.1 ppm	420.2 ppm
Item	Inside Greenhouse (North)	Inside Greenhouse (South)											
Temperature	18.5°C	26.1°C											
Humidity	55.5%	64.5%											
CO ₂ concentration	410.1 ppm	420.2 ppm											
12	When publishing fails, M0022 is turned on.												

When the Operation Mode Is Set to Fixed Period

After the Plus CPU module connects to the broker and when the Publish Control relay is on, the data is published for the specified topic at the cycle set by **Interval** (2) and the status is stored in Publish Status. When the Publish Control relay is turned off, publishing is ended. At this time, status 0 (0000h) is stored in Publish Status.

If publishing fails, status 16 (0010h) is stored in Publish Status, the error code is stored in Publish Error Code, and the Publish Control relay is turned off. When there is an error other than error code 7 (0007h), the Connection Control relay is also turned off. When the error is error code 7 (0007h), the states of the Publish Control and Connection Control relays are kept.

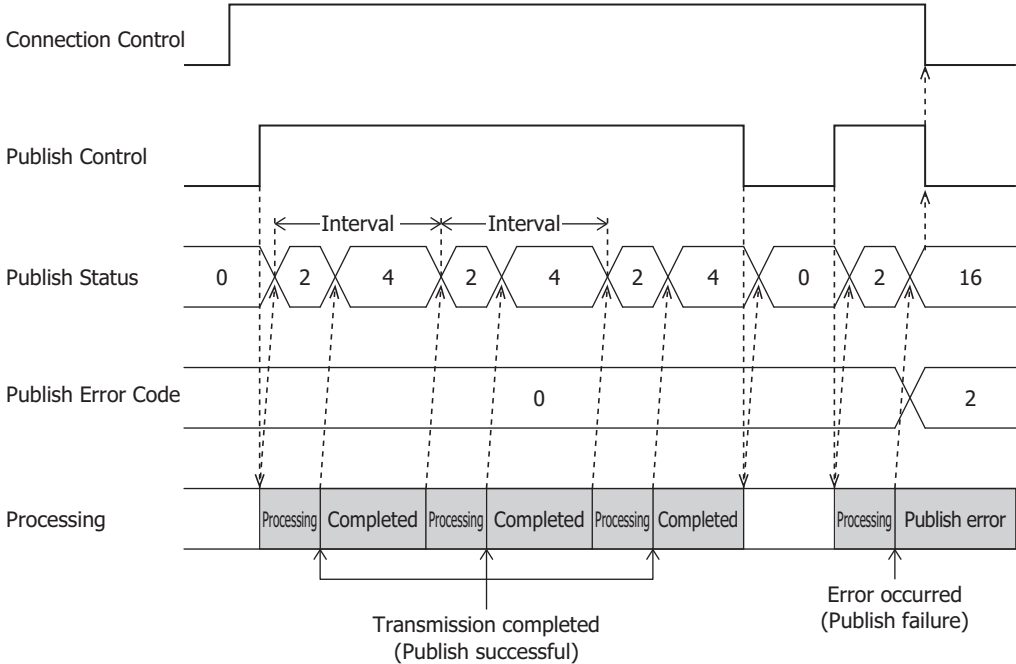

Note: When Publish Status is status 2 (0002h), do not change the values of devices set on the **Payload** dialog box. Change the values when Publish Status is a value other than status 2 (0002h).

Operation Example

Operation


- Temperature, humidity, and CO₂ concentration are measured every 30 minutes at two locations in a greenhouse for strawberry cultivation and published to the topic "plantation/house".
- The status inside the greenhouse is checked from a remote location.

Settings


Configure the basic settings on the **MQTT Settings** tab in the **MQTT Settings** dialog box, and then configure the following items on the other tabs.

Tabs	Item	Description
MQTT Settings tab	Connection Control	M0000
	Connection Status	D0000
Publish tab	Topic	"plantation/house"
	Payload dialog box settings	Refer to the following screenshot
	Operation Mode	Operation mode: Fixed Period
		Interval: 1,800 s
	Publish Control	M0100
	Publish Status	D1000
	QoS	1
Retain	Disabled	

Payload dialog box settings

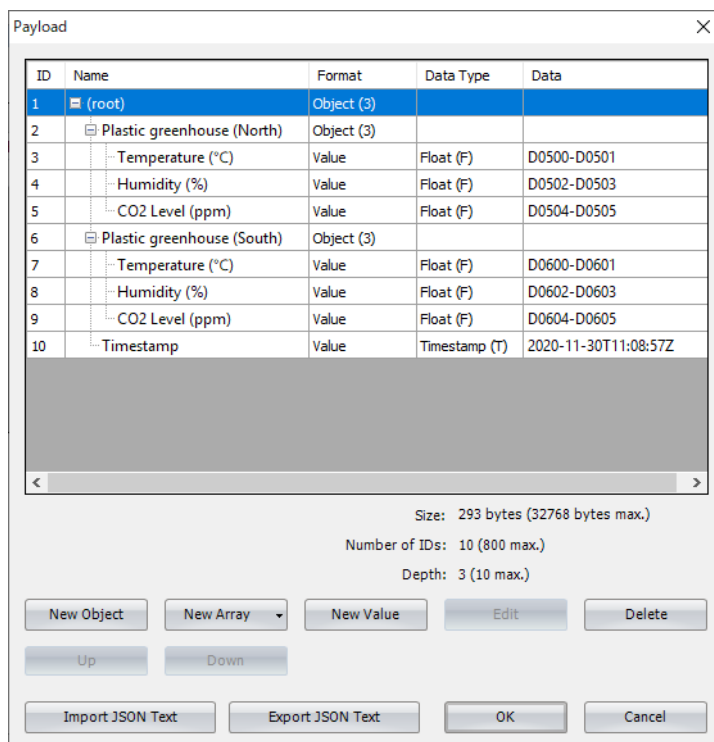

Ladder Program

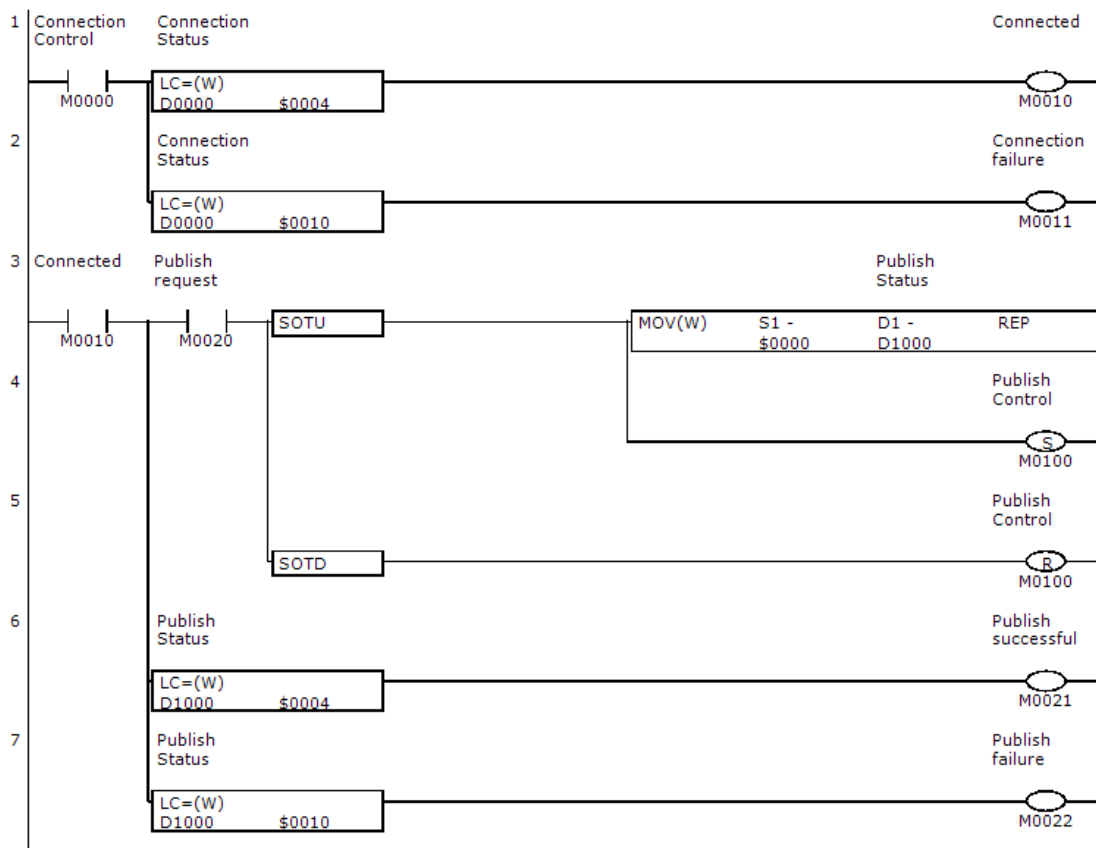

Device Address	Comment
M0000	Connection Control
M0010	Connected
M0011	Connection failure
M0020	Publish request
M0021	Publish successful
M0022	Publish failure
M0100	Publish Control

Device Address	Comment
D0000	Connection Status
D0500	Temperature data (north)
D0502	Humidity data (north)
D0504	CO2 concentration data (north)
D0600	Temperature data (south)
D0602	Humidity data (north)
D0604	CO2 concentration data (north)
D1000	Publish Status

17: MQTT COMMUNICATION


Ladder Line	Description												
1	When M0000 is turned on, connecting to the broker is started. When M0010 is on, a connection was made to the broker.												
2	When a connection cannot be made to the broker, M0011 is turned on.												
3	When M0010 is on (a connection was made to the broker) and M0020 is changed from off to on, 0 (0000h) is stored in D1000 and Publish Status is cleared.												
4	M0100 is turned on and the data is published for the topic every 1,800 s (30 m).												
5	When M0020 is turned off, publishing is ended.												
5	<p>When publishing was successful, M0021 is turned on.</p> <p>When the conditions are the same as those in the following table, the device values are: (D0500, D0501) = 20.5, (D0502, D0503) = 60.5, (D0504, D0505) = 410.1, (D0600, D0601) = 26.1, (D0602, D0603) = 64.5, and (D0604, D0605) = 420.2.</p> <table border="1"> <thead> <tr> <th>Item</th> <th>Inside Greenhouse (North)</th> <th>Inside Greenhouse (South)</th> </tr> </thead> <tbody> <tr> <td>Temperature</td> <td>20.5°C</td> <td>26.1°C</td> </tr> <tr> <td>Humidity</td> <td>60.5%</td> <td>64.5%</td> </tr> <tr> <td>CO₂ concentration</td> <td>410.1 ppm</td> <td>420.2 ppm</td> </tr> </tbody> </table> <p>If the current time data for the internal clock (D8008 to D8014) is 10:42:08 on November 9, 2020 and the value of D8413 (time zone offset) is 0, the JSON data to transmit is as follows.</p> <pre>{ "Plastic greenhouse (North)": { "Temperature (°C)": 18.5, "Humidity (%)": 55.5, "CO2 Level (ppm)": 410.1 }, "Plastic greenhouse (South)": { "Temperature (°C)": 26.1, "Humidity (%)": 64.5, "CO2 Level (ppm)": 420.2 }, "Timestamp": "2020-11-09T10:42:08Z" }</pre> <p>At this time, 236 is stored in D1002 (Transmitted data byte count).</p>	Item	Inside Greenhouse (North)	Inside Greenhouse (South)	Temperature	20.5°C	26.1°C	Humidity	60.5%	64.5%	CO ₂ concentration	410.1 ppm	420.2 ppm
Item	Inside Greenhouse (North)	Inside Greenhouse (South)											
Temperature	20.5°C	26.1°C											
Humidity	60.5%	64.5%											
CO ₂ concentration	410.1 ppm	420.2 ppm											
12	When publishing fails, M0022 is turned on.												

Subscribing to a Topic

Subscribing and Unsubscribing

After the Plus CPU module connects to the broker and when the Subscribe Control relay is changed from off to on, the specified topic is subscribed to and the status is stored in Subscribe Status.

When the subscription is successful, status 4 (0004h) is stored in Subscribe Status. When data is published from the broker for the specified topic in this state, the data reception completion flag is turned on and the length of received data is stored in Received data byte count in bytes. For how the received data is processed, see "Storing the Contents of Received JSON Data in Devices" on page 17-62.

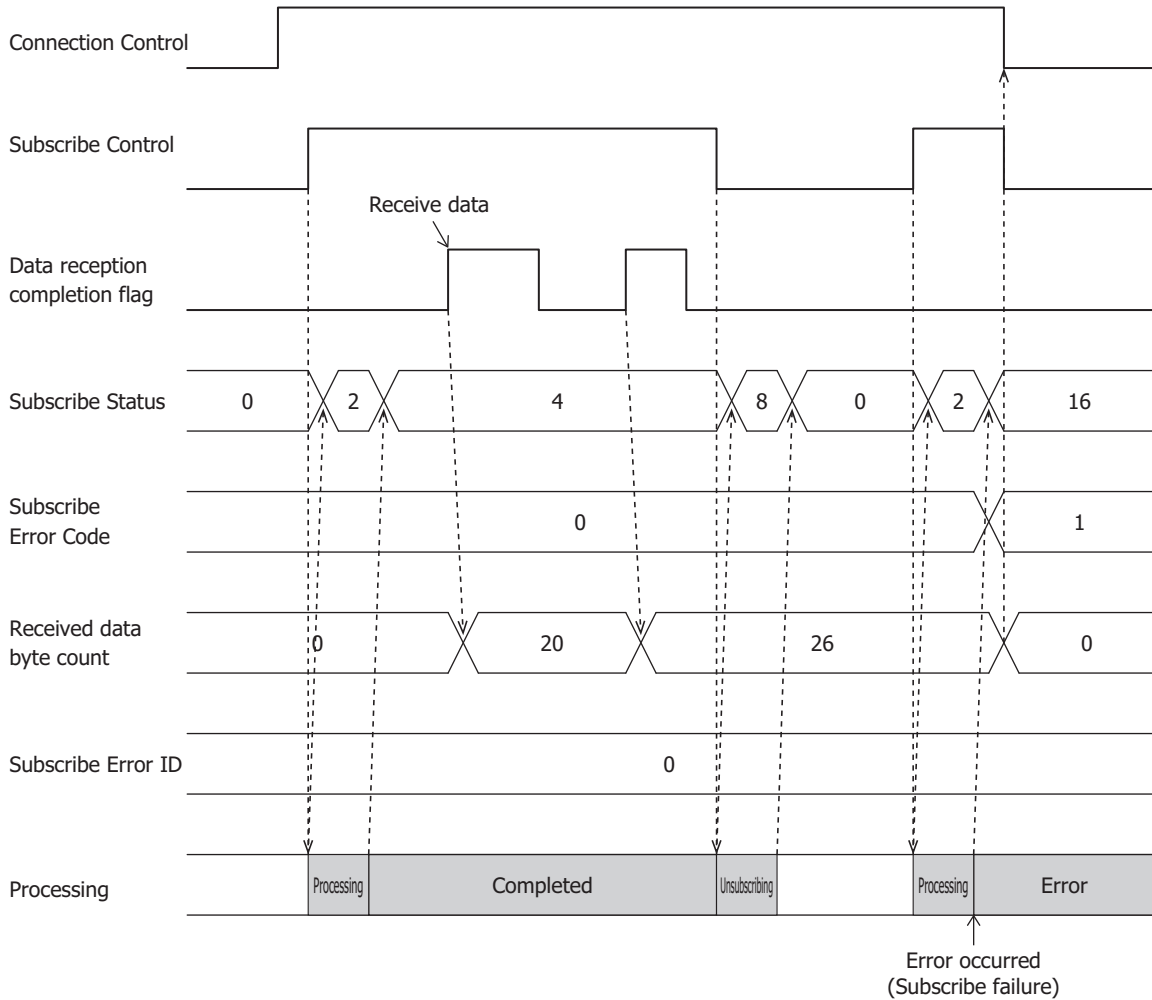

17: MQTT COMMUNICATION

Operation Example

Operation

- Temperature, humidity, and CO₂ concentration in a greenhouse for strawberry cultivation are managed.
- An administrator publishes the upper/lower limit values of temperature and humidity and the lower limit value of CO₂ concentration in a greenhouse to the topic "plantation/house" from a remote location.
- The Plus CPU module subscribes to the topic "plantation/house" and operates with settings published by the administrator.

Settings

Configure the basic settings on the **MQTT Settings** tab in the **MQTT Settings** dialog box, and then configure the following items on the other tabs.

Tabs	Item	Description
MQTT Settings tab	Connection Control	M0000
	Connection Status	D0000
Subscribe tab	Topic	"plantation/house"
	Payload dialog box settings	Refer to the following screenshot
	Subscribe Control	M0100
	Subscribe Status	D1000
	QoS	1
	Auto ON	Enabled

Payload dialog box settings


The screenshot shows the 'Payload' dialog box with a table of data and control buttons. The table has columns for ID, Name, Format, Data Type, and Data. The data is organized into a tree structure with two main objects: 'Plastic greenhouse (North)' and 'Plastic greenhouse (South)'. Each object contains five properties: Temperature (Lower) (°C), Temperature (Upper) (°C), Humidity (Lower) (%), Humidity (Upper) (%), and CO2 Level (Lower) (ppm). The 'Data' column contains values like 'D0510-D0511' for the first temperature property of the North greenhouse.

ID	Name	Format	Data Type	Data
1	(root)	Object (2)		
2	Plastic greenhouse (North)	Object (5)		
3	Temperature (Lower) (°C)	Value	Float (F)	D0510-D0511
4	Temperature (Upper) (°C)	Value	Float (F)	D0512-D0513
5	Humidity (Lower) (%)	Value	Float (F)	D0514-D0515
6	Humidity (Upper) (%)	Value	Float (F)	D0516-D0517
7	CO2 Level (Lower) (ppm)	Value	Float (F)	D0518-D0519
8	Plastic greenhouse (South)	Object (5)		
9	Temperature (Lower) (°C)	Value	Float (F)	D0610-D0611
10	Temperature (Upper) (°C)	Value	Float (F)	D0612-D0613
11	Humidity (Lower) (%)	Value	Float (F)	D0614-D0615
12	Humidity (Upper) (%)	Value	Float (F)	D0616-D0617
13	CO2 Level (Lower) (ppm)	Value	Float (F)	D0618-D0619

Size: 459 bytes (8192 bytes max.)
 Number of IDs: 13 (200 max.)
 Depth: 3 (10 max.)

Buttons: New Object, New Array, New Value, Edit, Delete, Up, Down, Import JSON Text, Export JSON Text, OK, Cancel

Ladder Program

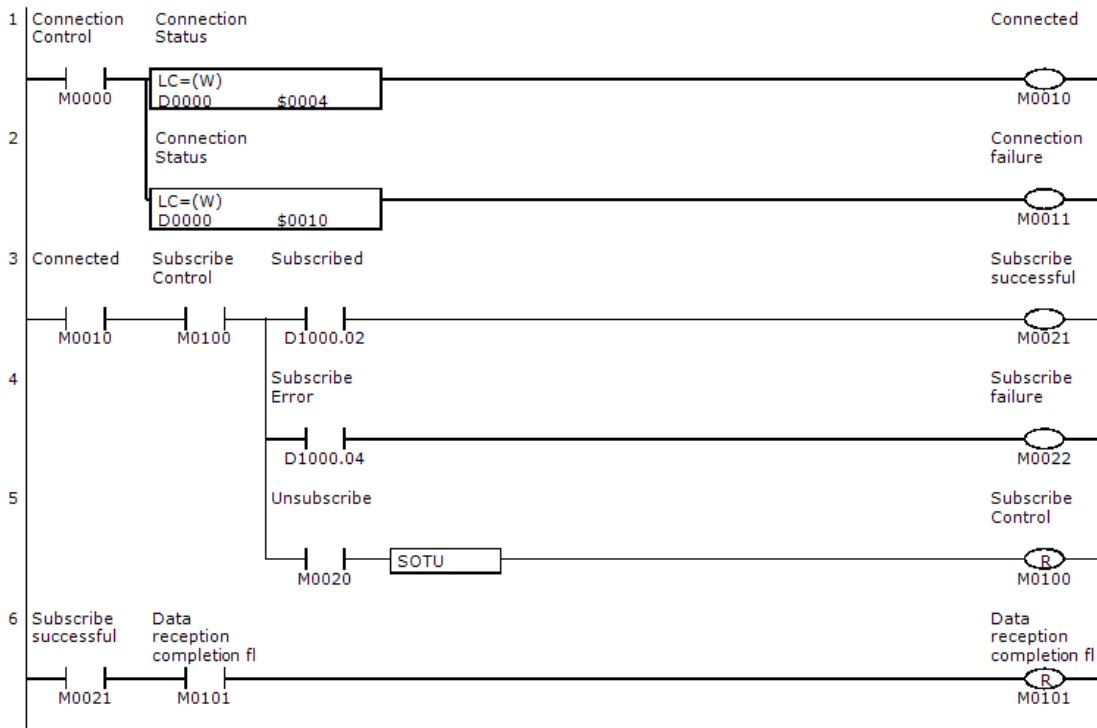

Device Address	Comment
M0000	Connection Control
M0010	Connected
M0011	Connection failure
M0020	Unsubscribe
M0021	Subscribe successful
M0022	Subscribe failure
M0100	Subscribe Control
M0101	Data reception completion flag

Device Address	Comment
D0000	Connection Status
D0510	Lower limit value of temperature data (north)
D0512	Upper limit value of temperature data (north)
D0514	Lower limit value of humidity data (north)
D0516	Upper limit value of humidity data (north)
D0518	Lower limit value of CO2 concentration data (north)
D0610	Lower limit value of temperature data (south)
D0612	Upper limit value of temperature data (south)
D0614	Lower limit value of humidity data (south)
D0616	Upper limit value of humidity data (south)
D0618	Lower limit value of CO2 concentration data (south)
D1000	Subscribe Status

Ladder Line	Description
1	When M0000 is turned on, connecting to the broker is started. When M0010 is on, a connection was made to the broker.
2	When a connection cannot be made to the broker, M0011 is turned on.
3	When M0010 is turned on (when connecting to the broker), M0100 is automatically turned on, and the topic is subscribed to. When subscribing was successful, M0021 is turned on.
4	When subscribing fails, M0022 is turned on.
5	When M0020 is turned on, the subscription is canceled.
6	When data is received, M0101 is turned off.

Storing the Contents of Received JSON Data in Devices

Received JSON data and IDs set on the **Payload** dialog box are searched in order from the beginning of the list. If an element exists in the received JSON data that matches the depth level, name, and format of an ID set on the **Payload** dialog box and the value of that element is within the range of the data type for that ID, then that value is stored in the device.

Notes:

- If an element does not exist in the received JSON data that matches the depth level, name, and format of an ID set on the **Payload** dialog box, then the corresponding ID is stored in Subscribe Error ID.
- If an element exists in the received JSON data that matches the depth level, name, and format of an ID set on the **Payload** dialog box and the value of that element is outside the range of the data type for that ID, then error code 7 (0007h) is stored in Subscribe Error Code and the ID with the error is stored in Subscribe Error ID.

Example

- The Plus CPU module controls two production lines in a factory.
- When the Plus CPU module receives setting values, it performs processing according those setting values. There are multiple setting values, but only setting values with changes are actually received.

This example explains the processing when the **Payload** dialog box is set as shown in the following screenshot.

Payload Dialog Box

ID	Name	Format	Data Type	Data
(1) 1	(root)	Object (2)		
(2) 2	production line1	Object (1)		
3	settings	Object (3)		
4	production count	Value	Word (W)	D0100
5	conveyor1 speed	Value	Word (W)	D0101
6	conveyor2 speed	Value	Word (W)	D0102
(3) 7	production line2	Object (1)		
(4) 8	settings	Object (3)		
(5) 9	production count	Value	Word (W)	D0200
(6) 10	conveyor1 speed	Value	Word (W)	D0201
(7) 11	conveyor2 speed	Value	Word (W)	D0202

Received JSON Data

Ladder Line Number	Description
1	{
2	"production line2" :{
3	"settings":{
4	"conveyor1 speed":50
5	}
6	}
7	}

Processing Flow

- (1) The first to seven lines of the received JSON data are enclosed in curly brackets. This matches the settings for ID 1 on the **Payload** dialog box, so ID 2 is searched for next.
- (2) ID 2 does not exist in the received JSON data, so the search for ID 2 and its child elements is skipped and 2 (0002h) is stored in Subscribe Error ID.
- (3) The second to sixth lines of the received JSON data are enclosed in curly brackets and set with the name "production line2". This matches the settings for ID 7, so ID 8 is searched for next.
- (4) The third to fifth lines of the received JSON data are enclosed in curly brackets and set with the name "settings". This matches the settings for ID 8, so ID 9 is searched for next.
- (5) ID 9 does not exist in the received JSON data, so it is skipped. ID 10 is searched for next.

- (6) The name "conveyor1 speed" on the fourth line of the received JSON data matches the name of ID 10 and the value of this element (50) is within the range of word (W), so 50 is stored in D0201.
- (7) ID 11 does not exist in the received JSON data, so it is skipped and 0 (0000h) is stored in Subscribe Error Code.

18:MC PROTOCOL COMMUNICATION

Introduction


This chapter describes the MC protocol communication for the FC6A Series MICROSmart.

Overview

MC protocol is an abbreviation for MELSEC communication protocol, and a protocol for communicating with devices that support the MC protocol (hereinafter referred to as MC protocol compatible devices) such as PLC manufactured by Mitsubishi Electric Corporation. As a client of MC protocol communication, the Plus CPU module can read and write device values of MC protocol compatible devices. For details on the MC protocol, see the MELSEC Communication Protocol Reference Manual.

Access Range

The network configuration for MC protocol communication is shown below. The Plus CPU module can communicate with MC protocol compatible devices (connected stations) that support QnA-compatible 3E frame. The Plus CPU module cannot communicate with other MC protocol compatible devices (other stations) connected to the connected station (multidrop connection).

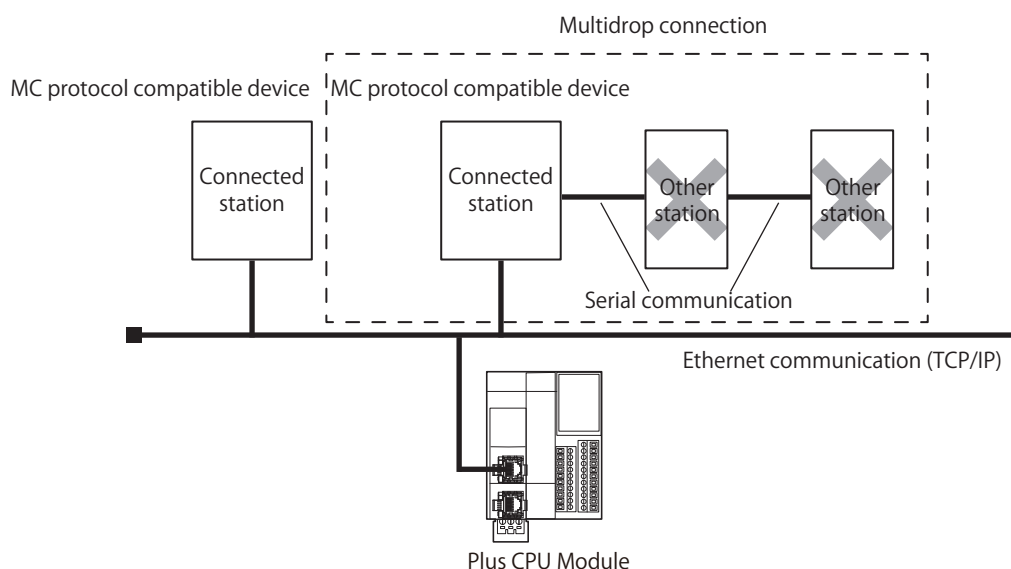

Standard Specifications


The standard specifications are as follows.

Module	Plus CPU module
Communication Port	Ethernet port 1 and 2
Supported frame	QnA-compatible 3E frame
Supported Commands and Sub Commands	Batch read in word units (command: 0401, subcommand: 0000) Batch read in bit units (command: 0401, subcommand: 0001) Batch write in word units (command: 1401, subcommand: 0000) Batch write in bit units (command: 1401, subcommand: 0001)
Supported Code	Binary code
Number of connections	16 maximum*1

*1 You can connect up to 255 servers to a connection.

MC protocol communication via Ethernet Communication

Plus CPU module can be used as MC protocol communication client using Ethernet port 1 or 2, and up to 16 connections can be assigned to MC protocol communication clients. Each connection can communicate with multiple MC protocol compatible devices (1 to 255 devices).

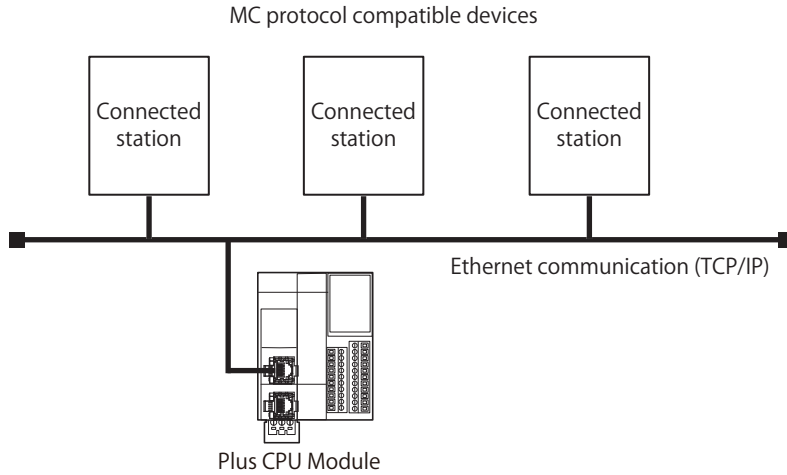


Note: The Plus CPU module can communicate with MC protocol compatible devices that support QnA-compatible 3E frames (binary code).

MC Protocol Communication Settings


The MC protocol communication settings are configured on the **MC Protocol Client** dialog box. This section describes the **MC Protocol Client** dialog box and its settings.

Procedure to display the MC Protocol Client dialog box

1. On the **Configuration** tab, in the **Function Area Settings** group, click **Connection Settings**. The **Function Area Settings** dialog box is displayed.

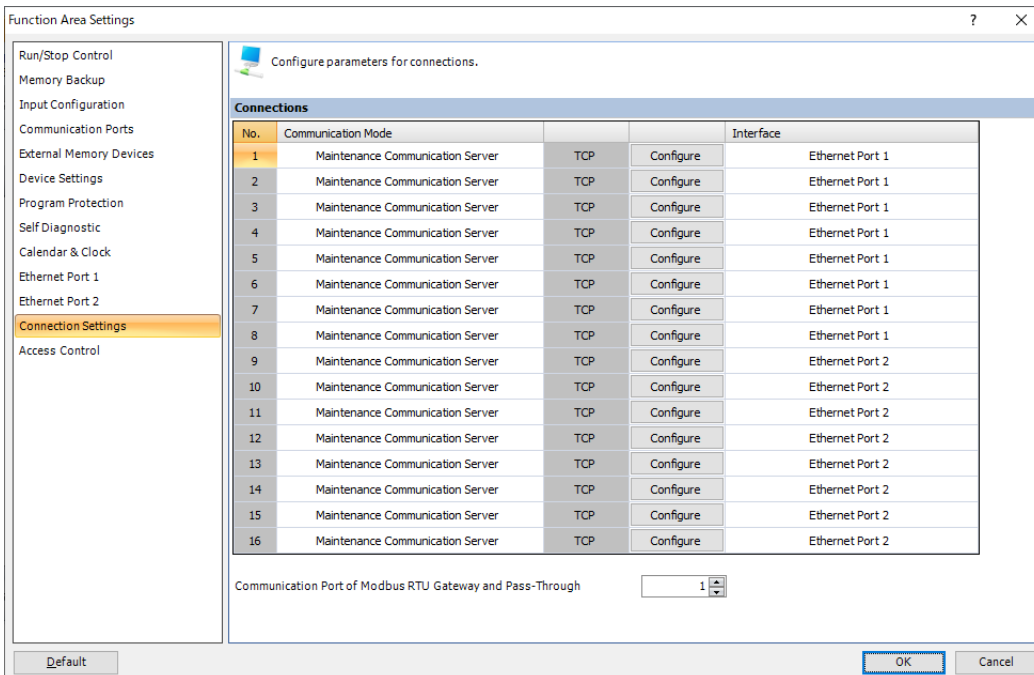


2. Click **Communication Mode** of the connection number to be used, and select **MC Protocol Client**.

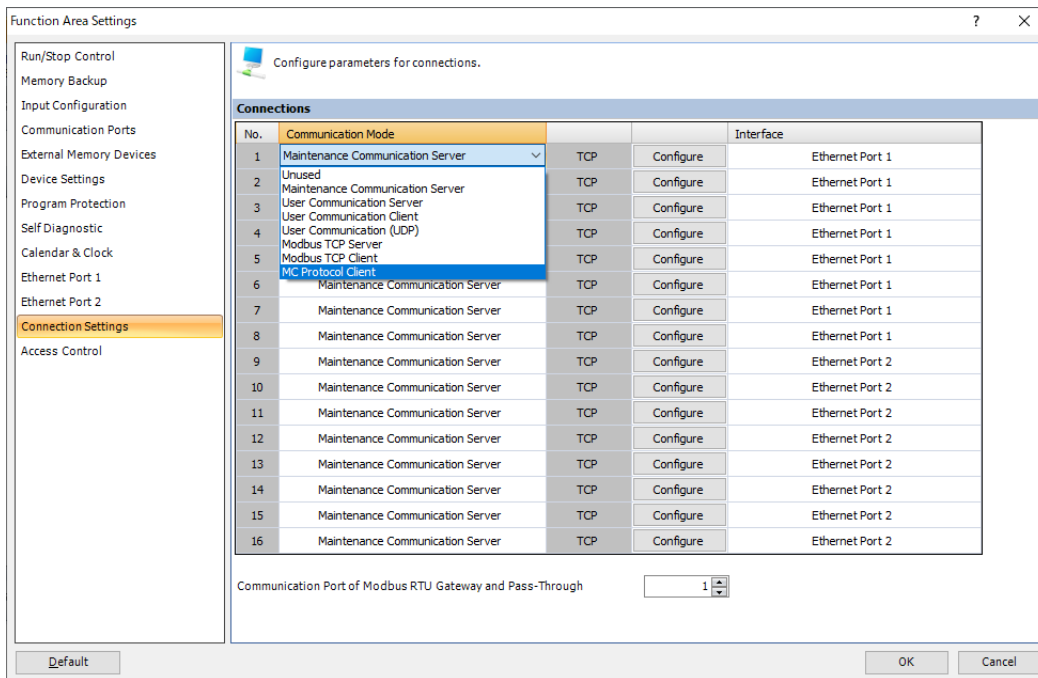

The **MC Protocol Client** dialog box is displayed.

MC Protocol Client Dialog Box

Configure the settings for performing MC protocol communication on **MC Protocol Client** dialog box.

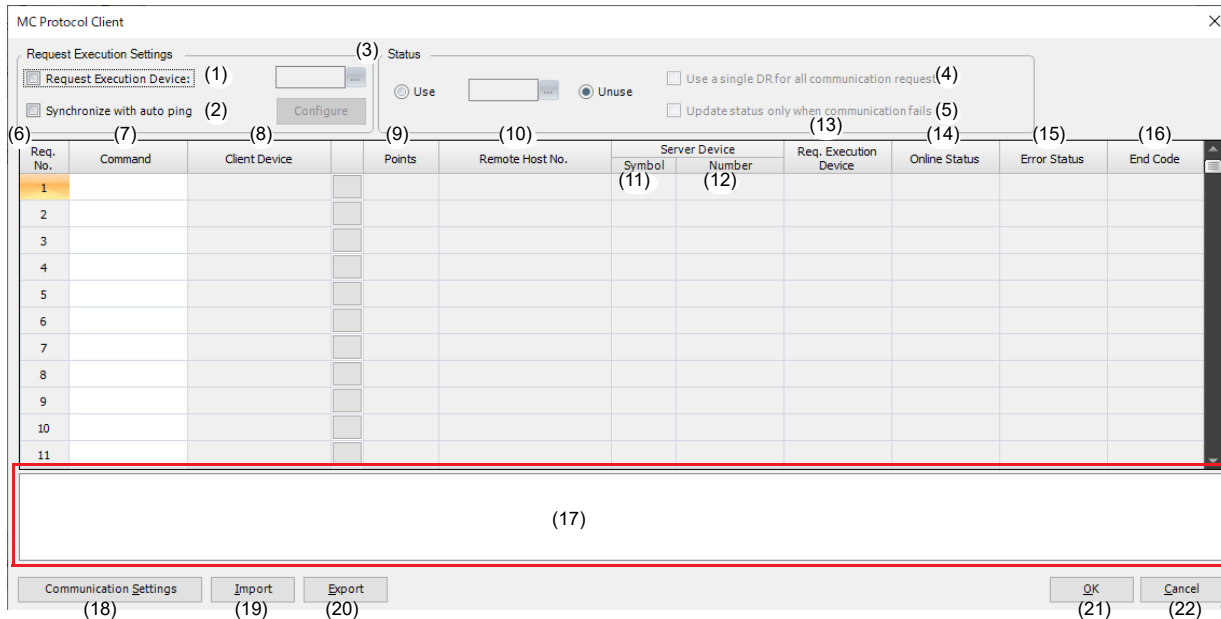

Note: The table in the center of the MC Protocol Client dialog box is called the request table. Each row in the request table is called a request.

(1) Request Execution Device

The execution of the request of the Plus CPU module is controlled by on/off of the request execution device.

When the request execution device changes from off to on, the Plus CPU module sends a request after the time set in "(2) Transmission Wait Time" on page 18-11 has elapsed. After sending the request and receiving the response, the corresponding request execution device is automatically turned off.

If the Plus CPU module cannot receive the response, the Plus CPU module retries after the time set in "(1) Receive Timeout" on page 18-11 has elapsed. After the CPU modules retries twice the corresponding request execution device is automatically turned off. This series of processing is called request execution. When a normal response is received, the execution of the request is successful. If an abnormal response is received, or if the response cannot be received even after the retries, the execution of the request is failed.

The Plus CPU module does not send a request when the request execution device is off.

The request execution device can be configured with an internal relay or data register. Devices are assigned in order of request number to the requests registered in the request table, starting with the configured device. When a data register is configured in the request execution device, the request execution device is assigned in order of request number, starting with the least significant bit of the data register.

Request Execution Device	Description
Unused (The check box is cleared)	The requests registered in the request table are repeatedly executed in order of request number.
Used (The check box is selected)	For the requests registered in the request table, the request execution devices are allocated in order of request number, starting with the device set as the request execution device. When you turn on the request execution devices allocated to the requests you want to execute, corresponding requests are executed.

Precautions for Changing Device Values

Do not change the read device value and write device value until the request execution device is automatically turned off. You may not be able to read or write the device value before the change.

Note: When multiple request execution devices are turned from off to on at the same time, the request with the nearest request number from the request being executed is executed. The request is processed one by one. When execution is completed (successful or failed), the next request is processed.

(2) Synchronize with auto ping

Whether to execute the requests can be controlled with the results of the auto ping. This function is convenient when you want to execute MC protocol communication with multiple remote hosts with minimum delay even when some of those hosts do not respond due to some reasons.

Synchronize with auto ping	Description
Do not synchronize with auto ping (The check box is cleared)	The requests registered in the request table are repeatedly executed in order of request number.
Synchronize with auto ping (The check box is selected)	Remote host to which automatic ping is enabled: When the online status (internal relay to store the result of the sent ping) is on, the corresponding request is executed. Remote hosts that are not subject to automatic ping: The corresponding requests are executed regardless of the status of the online status.


To perform MC protocol communication, register the MC protocol compatible device to communicate with as a remote host in the remote host list. When the Synchronize with auto ping check box is selected, the **Configure** button is displayed. Click **Configure** to display the **Remote Host List** dialog box and register the remote host. For details on the remote host list, see "Remote Host List" on page 3-21.

This section describes the request processing when the synchronization with the auto ping is enabled and disabled.

Example of System Configuration

Setting Details

Request Execution Device:Unused

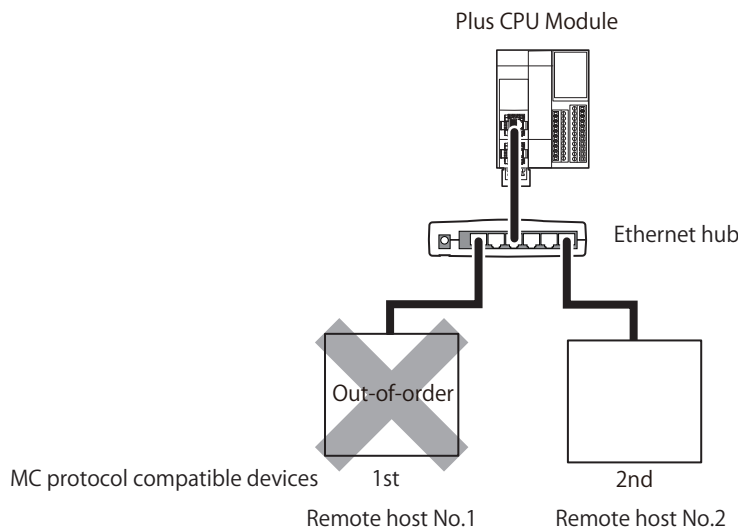


When the synchronization is enabled (Synchronize with auto ping check box is cleared).

Requests are executed in order of request number.

Request Number	Remote Host Number	Execution of Request
1	1	Execute
2	2	Execute

Request processing timing chart

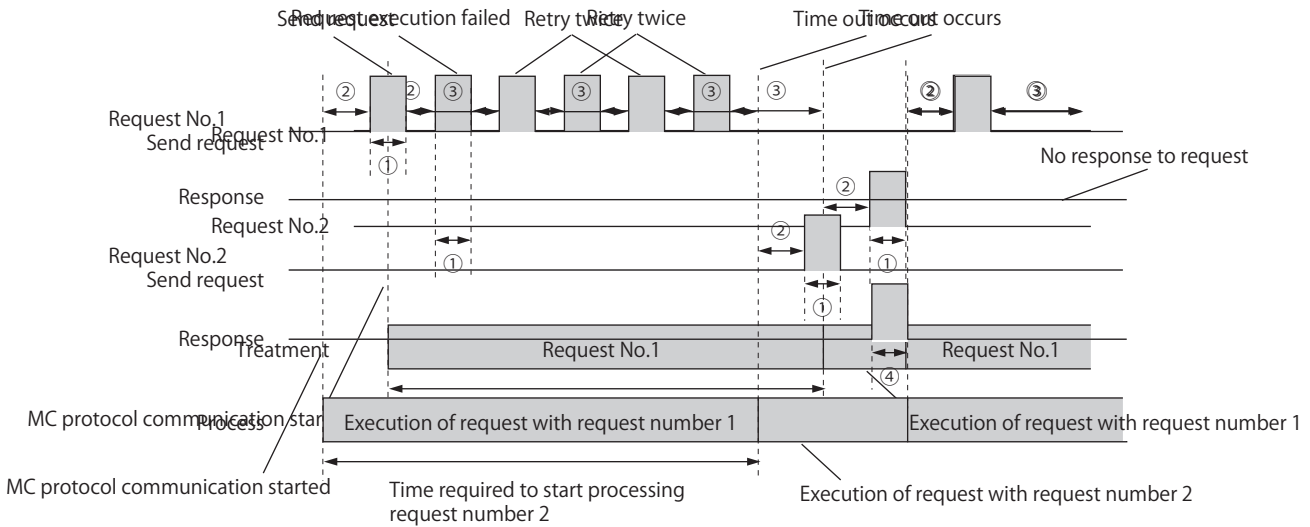

- ① Send request
- ② Waiting time for sending a request from the start of execution of the request to sending the request
- ③ After the time set in **Receive Timeout** has elapsed, the request will retry.
- ④ Response


When the synchronization is disabled (Synchronize with auto ping check box is selected)

Requests for the online remote hosts are executed.

Request Number	Remote Host Number	Online Status ^{*1}	Execution of Request
1	1	off	Execute
2	2	on	Execute

*1 The online status is an internal relay that stores the result of the sent ping. For details on the online status, see "(14) Online Status" on page 18-10

Request processing timing chart

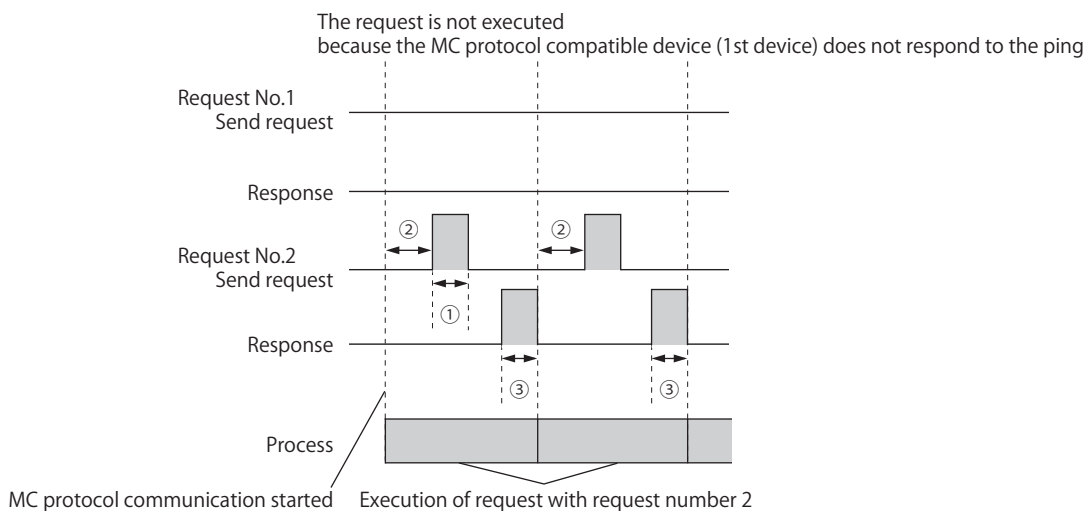

- ① Send request
- ② Waiting time for sending a request from the start of execution of the request to sending the request
- ③ Response

Note: This function is effective when you want to execute MC protocol communication with multiple remote hosts with minimum delay even when some of those hosts do not respond due to some reasons. The time required to process a request for a non-responding remote host is three times as long as the time set in **Receive Timeout** in the **Communication Settings** dialog box. See "Auto Ping Function" on page 3-23.

(3) Status

Sets whether to store the error status and end code in the device when the request is executed. If you want to store the error status and end code in the device, select **Use** and set the data register. Two words of data registers are used per request.

Note: When the maximum number (255) of requests is created, the data register is allocated as shown in the table below.

Device Address	Contents	R/W
Starting Number+0	Status of Request No.1	Error Status
Starting Number+1		End Code
Starting Number+2	Status of Request No.2	Error Status
Starting Number+3		End Code
...
Starting Number+508	Status of Request No.255	Error Status
Starting Number+509		End Code

Error Status

The remote host number is stored in the upper byte and the error code is stored in the lower byte.

Error Status (Hexadecimal)	
High-order byte	Low-order byte
Remote host number	Error code

Details on the error code are as follows.

Error Code (Hexadecimal)	Contents	Detail
0x04	Abnormal exit	The End Code of data received from MC protocol compatible device is not 0x0000 (Normal exit)
0x16	Timeout error	There is no response from the MC protocol compatible device.

End code

Stores the end code of MC protocol communication. For details on the end code, see the manual of the MC protocol compatible device which the Plus CPU module communicates with.

Note: If an error occurs during MC protocol communication, such as when the Ethernet cable is disconnected or the power of the MC protocol compatible device is turned off, a Timeout error will occur and the error code will be 0x16. At this time, the data read from the MC protocol compatible device right before the error occurs is kept in the device configured in "(8) Client Device" on page 18-8. If you want to clear the data on this device, write 0 to the device.

(4) Use a single DR for all communication requests

When **Use** is selected in **Status**, configure the data register to store the error status and end code.

The details are as follows.

Use a single DR for all communication requests	Description
Unused (The check box is cleared)	Stores the error status and end code for each request. 2 words of data registers are used per request, and the maximum of 510 words are used starting with the data register set in Status .
Used (The check box is selected)	Stores the error status and end code of the latest executed request. 2 words of data registers are used, starting with the data register set in Status .

(5) Update status only when communication fails

When **Update status only when communication fails** check box is selected, the Plus CPU module updates the status (error status and end code) of the request only when the request fails to execute. When this check box is cleared, the Plus CPU module updates the status of all requests.

18: MC PROTOCOL COMMUNICATION

(6) Request Number

The number of each request (1 to 255).

Note: When using the Request Execution Device or Status, the devices are automatically allocated in order of request number, starting with the configured device. If you delete the requests in the request table or change the order of the requests, the Request Execution Device and Error Status allocation will be updated, which may cause inconsistency with the device used in the user program. If you change the request table, check your user program carefully.

(7) Command

Select the command that the Plus CPU module transmits to the MC protocol compatible devices from the following.

Command	Description
04010000 Read in word units	The Plus CPU module reads the word device value for the number of points specified in Points from the device specified in Symbol and Number , and stores it in the devices for the number of points starting with Client Device .
04010001 Read in bit units	The Plus CPU module reads the bit device value for the number of points specified in Points from the device specified in Symbol and Number , and stores it in the devices for the number of points starting with Client Device .
14010000 Write in word units	The Plus CPU module writes the word device value for the number of points specified in Points from Client Device to the word devices for the number of points specified in Points from the device specified in Symbol and Number .
14010001 Write in bit units	The Plus CPU module writes the bit device value for the number of points specified in Points from Client Device to the bit devices for the number of points specified in Points from the device specified in Symbol and Number .

(8) Client Device

Configure the device of the Plus CPU module. The device types that can be configured differ depending on the **Command** settings. The details are as follows.

Command	Input (I)	Output (Q)	Internal Relay (M)	Special Internal Relay (M)	Data Register (D)	Special Data Register (D)
04010000 Read in word units	No	No	No	No	Yes	No
04010001 Read in bit units	No	No	Yes	No	No	No
14010000 Write in word units	Yes	Yes	Yes	No	Yes	No
14010001 Write in bit units	Yes	Yes	Yes	No	No	No

Note: Configure the **Client Device** within the range of the device.

(9) Points

Configure the number of data to be read or written in the range of 1 to 512.

(10) Remote Host Number

Configure the IP address and port number of the MC protocol compatible device which the Plus CPU module communicates with.

The table on which you can register and manage target communication devices (remote hosts) on the network is called the remote host list. For details on the remote host list, see "Remote Host List" on page 3-21.

Note: Request execution order and connection intermittent time

The time required to disconnect and establish the connection may change depending on the order in which the requests are executed. When you execute a request, the Plus CPU module connects to the remote host and sends the request. The connection is maintained until the next request is executed. If the remote host of the next request to be executed and the remote host of the current connection are the same, the request is sent while maintaining the connection. If the remote host is different, the Plus CPU module disconnects the connection, connects to the remote host of the next request to be executed, and sends the request. By executing the requests communicating with the same remote host consecutively, you can save the time required to disconnect and establish the connection. For example, when the remote host tables ① and ② as shown in the table below are processed without using a request execution device, the remote host table ① can save the time required for disconnecting and establishing the connection.

Remote Host Table ①	
Request Number	Remote Host Number
1	1
2	1
3	2
4	2



Only when request numbers 1 and 3 are executed, the existing connection is disconnected and a new connection is established.



The time required to disconnect and establish the connection can be saved.

Remote Host Table ②	
Request Number	Remote Host Number
1	1
2	2
3	1
4	2



Every time a request for each request number is executed, the existing connection is disconnected and the new one is established.



It takes time to disconnect and establish connections.

(11) Server Device Symbol

(12) Server Device Number

Configure the device symbol and device number of the MC protocol compatible device.

Symbol

The devices that can be configured differ depending on the **Command** settings. The details are as follows.

Command	Input (X)	Output (Y)	Internal Relay (M)	Special Internal Relay (SM)	Data Register (D)	Special Data Register (SD)
04010000 Read in word units	Yes	Yes	Yes	Yes	Yes	Yes
04010001 Read in bit units	Yes	Yes	Yes	Yes	No	No
14010000 Write in word units	No	No	No	No	Yes	No
14010001 Write in bit units	Yes	Yes	Yes	No	No	No

Number

The valid range of the **Server Device Number** differs depending on the **Symbol** setting. The details are as follows.

Symbol	Number
Input (X)	0000 to FFFFFFF ^{*1}
Output (Y)	0000 to FFFFFFF ^{*1}
Internal Relay (M)	0 to 16,777,215
Special Internal Relay (SM)	0 to 16,777,215
Data Register (D)	0 to 16,777,215
Special Data Register (SD)	0 to 16,777,215

*1 Configure in hexadecimal.

Note: The **Number** that can be configured depends on each MC protocol compatible device. Check the manual of the MC protocol compatible device, and configure the **Number** so that it does not exceed the range of the device.

(13) Request Execution Device

The request execution device assigned to each request number is displayed.

This is only done if the **Request Execution Device** check box is selected.

Note: If you delete the requests in the request table or change the order of the requests, the Request Execution Device allocation will be updated, which may cause inconsistency with the device used in the user program. If you change the request table, check your user program carefully.

(14) Online Status

When the **Synchronize with auto ping** check box is selected, the internal relay allocated to **Online Status** of each remote host in the **Auto Ping Settings** dialog box is displayed. For details see "Auto Ping Function" on page 3-23.

(15) Error Status

(16) End Code

Data registers that stores the error status and end code assigned to each request number are displayed. It is displayed only when you select **Use** for the **Status**.

Note: If the **Use a single DR for all communication requests** check box is cleared, and you delete the requests in the request table or change the order of the requests, the Error Status and end code allocation will be updated, which may cause inconsistency with the device used in the user program. If you change the request table, check your user program carefully.

(17) Error information display area

If there is an error in the configured settings in the **MC Protocol Client** dialog box, the content of the error will be displayed.

(18) Communication Settings button

Click **Communication Settings** button to open the **Communication Settings** dialog box. For details see "Communication Settings Dialog Box" on page 18-11.

(19) Import button

Import the contents of the request table.

(20) Export button

Export the contents of the request table.

You can edit the contents of the request table in bulk or import it into another WindLDR project.

(21) OK button


Save your settings and close the **MC Protocol Client** dialog box.

(22) Cancel button

Closes the **MC Protocol Client** dialog box without saving the settings.

Communication Settings Dialog Box

Configure the detailed settings for performing MC protocol communication on this dialog box.

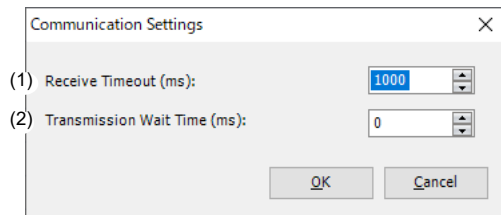

(1) Receive Timeout

Specify the wait time for a response to be returned after the Plus CPU module sends data to the MC protocol compatible device. Specify this wait time (300 to 25,500 ms) in 100 ms increments.

(2) Transmission Wait Time

Specify the wait time from completing a request to executing the next request in the range of 0 ms to 5,000 ms.

MC protocol client Operation

Request processing and communication are independent, and each request in the request table is repeatedly executed in END processing in order of the request numbers. The communication between the Plus CPU module and MC protocol compatible device are performed in asynchronous with the user program execution. Whether the request is executed or not depends on the combination of the following settings. The details are as follows.

Settings		Synchronize with auto ping		
		Unused	Synchronize with auto ping	
			Auto Ping transmission target	Auto Ping transmission non-target
Request Execution Device	Unused	Requests are executed.	When the online status of a request is on, the request is executed. When it is off, the request is not executed.	Requests are executed.
	Use	When the request execution device of a request is on, the request is executed. Otherwise, the requests is not executed.	When both the online status and the request execution device of a request are on, the request is executed. Otherwise, the request is not executed.	When the request execution device of a request is on, the request is executed. Otherwise, the requests is not executed.

When the execution of a request is completed, the request with the next request number is executed. The request completes with one of the following conditions.

- When **Request Execution Device** is used, the request is completed when the request execution device turned on to execute the request is automatically turned off.
- When **Use** is selected in **Status**, the request is completed when the value of the data register that stores the error status is updated.

When the request is executed successfully (Received a normal response)

The request error code (0x00) and end code (0x0000) are written, and once the time configured in **Transmission Wait Time** has elapsed, the next request is executed. The error code and end code are written only when **Use** is selected in **Status** and the **Update status only when communication fails** check box is cleared.

When the request execution is failed

Values other than 0x0000 are written to the request error code and end code. The error code and end code are written only when **Use** is selected in **Status**. In the following cases, the next request is executed after the time configured in **Transmission Wait Time** has elapsed.

- When an abnormal response is received
- When a response (normal response or abnormal response) cannot be received and all retries fail even after retrying twice.

Notes:

- When the **Request Execution Device** check box is selected, the corresponding request execution device is automatically turned off after executing the request. If you want to send the request all the time, always turn on the corresponding request execution device with an OUT instruction in the user program.
- When an error occurs, the request execution device is automatically turned off after two retries fail.
- If the remote host number (host number 1) set in a request is different from the remote host number (host number 2) set in the request previously executed, the Plus CPU module disconnects the connection with the remote host with the host number 2 and execute the next request. If the host number 1 set in the request is the same as the host number 2 set in the request previously executed, the connection is maintained and the next request is executed.

Used Special Devices

Special devices used in the MC protocol communication are as follows.

Special Data Registers

Device Address	Function	Description	R/W
D8278	Communication Mode Information (Connections 1 to 4)	Indicates the communication mode of connections 1 through 4.	R
D8279	Communication Mode Information (Connections 5 to 8)	Indicates the communication mode of connections 5 through 8.	R
D8760	Communication Mode Information (Connections 9 to 12)	Indicates the communication mode of connections 9 through 12.	R
D8761	Communication Mode Information (Connections 13 to 16)	Indicates the communication mode of connections 13 through 16.	R

For details of the allocation of connections in the device (bit assignment), see "Special Data Register Device Addresses" on page 2-17.

INDEX

- A**
- ADD-2comp 5-58
 - address map 6-9, 6-27
 - Advanced instruction
 - ERXD 5-23
 - ETXD 5-23
 - RXD 5-10
 - TXD 5-2
 - Allocation of receive cancel flags for ERXD (user communication receive over Ethernet) instructions 5-50
 - Allow Access by IP Address 4-9, 6-30
 - Analog Input Object
 - Object 15-34
 - Present_Value Settings 15-21
 - Properties 15-45
 - Analog Output Object
 - Object 15-35
 - Present_Value Settings 15-23
 - Properties 15-46
 - Analog Value Object
 - Object 15-36
 - Present_Value Settings 15-25
 - Properties 15-47
 - Application_Software_Version 15-56
 - ASCII
 - character code table 5-53
 - Assembly Object 16-43
 - Attached File Editor 12-16
 - authentication e-mail 12-7
- B**
- BACnet Communication 1-12, 1-14
 - BACnet/IP 15-1
 - BACnet/IP Operation 15-11
 - BACnet/IP settings 15-13
 - Bar graph
 - Horizontal 13-41
 - Bar graph (vertical) 13-40
 - Batch Dialog Box 17-47
 - batch monitor 13-30
 - Baud Rate (bps) 4-5, 4-14
 - BCC (block check character) 5-6, 5-19
 - BIBB 15-4
 - Binary Input Object
 - Object 15-37
 - Present_Value Settings 15-27
 - Properties 15-50
 - Binary Output Object
 - Object 15-38
 - Present_Value Settings 15-29
 - Properties 15-51
 - Binary Value Object
 - Object 15-39
 - Present_Value Settings 15-30
 - Properties 15-52
 - Bluetooth Communication Cartridge 1-4
 - Bluetooth communication cartridge settings 9-4
 - Bluetooth device settings 9-7
 - Borrow 2-9
 - busy control 5-36
- C**
- cable 5-54
 - Carry/ 2-9
 - Carry/Borrow 2-9
 - CGI
 - writing device data 13-59
 - character set e-mail 12-10
 - Checking operation of user web pages 13-49
 - client user communication 5-43
 - Communication Adapter Information 2-30
 - communication completion relay M8080 7-7
 - communication format 6-15
 - Communication Interfaces 1-3
 - communication parameters 5-55, 5-56
 - Communication Ports 3-2
 - Communication Settings 3-1, 6-6
 - Comparing BCC Codes 5-20
 - Connection Manager Object 16-43
 - Connection Status 3-15
 - Constant for Verification 5-17
 - control
 - signal option DSR D8105/D8205 5-35
 - signal option DTR D8106/D8206 5-37
 - signal status D8104/D8204 5-32
 - Control signal status 2-32
 - conversion type 5-5, 5-12
 - COV_Increment 15-54
 - CRC-16 5-58, 6-14
 - Creating user web pages 13-46
 - custom monitor 13-31
 - cyclic redundancy checksum 5-58, 6-14
- D**
- D1 (Destination 1) 5-8, 5-21
 - D2 (Destination 2) 5-8
 - D2+0 (Receive Status) 5-21
 - D2+1 (Receive Digits (Bytes)) 5-21
 - D2+1 (Transmit Digits (Bytes)) 5-9
 - Data Bits 4-5, 4-14
 - data link
 - with other PLCs 7-11
 - data link communication 7-1
 - bit flag M8006 7-7
 - error 7-5
 - error code 7-5
 - error M8005 7-7
 - initialize flag M8007 7-7
 - stop flag M8007 7-7
 - Data link Specifications 8-1
 - data refresh 7-11
 - data register for transmit/receive data 7-4
 - decimal symbol
 - e-mail 12-10
 - delimiter 5-13
 - Device 2-1
 - Device Object
 - Object 15-40
 - Download
 - user program 4-1
 - DSR

- control signal status 5-34
- DTR
 - control signal status 5-34
- E**
 - EDS file 16-32
 - e-mail
 - data register 12-15
 - decimal symbol 12-10
 - error code 12-2
 - general settings 12-6
 - text encoding 12-10
 - e-mail address group 12-12
 - e-mail editor 12-13
 - end delimiter 5-16
 - error code
 - data link communication 7-5
 - e-mail 12-2
 - ERXD 5-43
 - Ethernet Link Object 16-45
 - ethernet user communication 3-21
 - EtherNet/IP Communication 16-1
 - EtherNet/IP Communication Settings 16-18
 - ETXD 5-43
 - Explicit Message Communication (Server) Function 16-10
- F**
 - Firmware_Revision 15-56
 - Foreign device function 15-10
 - Function code 6-7, 6-27, 6-32
- H**
 - host name 3-21
- I**
 - I/O Message Communication Function 16-5
 - Identity Object 16-41
 - Import JSON Text Dialog Box 17-48
 - Insert Data (Device) Dialog Box 17-50
 - instruction
 - ERXD 5-43
 - ETXD 5-43
 - PING 11-1
 - user communication 5-1
 - IP Addresses 3-21, 4-9
- J**
 - J1939 Communication 8-1
- L**
 - lcd monitor 13-32
 - line control signals RS232C 5-32
 - Local Host Port No. 4-9, 4-18, 6-30
 - longitudinal redundancy check 5-58
 - LRC 5-58
- M**
 - Maintenance Communication 1-9
 - via Ethernet Port 4-7
 - via USB Port 4-3
 - maintenance communication 4-1
 - Maintenance communication over Bluetooth 4-6, 4-15
 - Maintenance communication via a communication cartridge (port 2 to 33) 4-12
 - Maintenance communication via port 1 4-4
 - master station 7-8
 - MC Protocol Communication
 - Command 18-8
 - Dialog Box 18-4
 - Error Status 18-7
 - Exit code 18-7
 - Remote Host Number 18-9
 - Server Device Name 18-10
 - Server Device Number 18-10
 - Message Length 6-32
 - Message Router Object 16-42
 - Metacharacter format
 - Word device 13-38
 - Modbus
 - ASCII 5-58
 - Communication 1-11, 6-1, 18-1
 - via RS-232C/RS-485 6-2
 - master request table 6-5
 - RTU 5-58, 6-14
 - Modbus RTU Slave 6-13
 - Modbus TCP
 - client 3-21, 6-22
 - client specifications 6-22
 - communication error 6-22
 - communication format 6-30
 - Communication via Ethernet Communication 6-21
 - error status 6-26
 - function code 6-25
 - remote host number 6-26
 - request execution device 6-26
 - server 6-27
 - server specifications 6-27
 - Monitor function 13-38
 - Monitor/change
 - device values 4-1
 - MQTT Communication 1-14, 17-1
 - MQTT Communication Settings 17-5
 - MQTT settings 17-6
 - MQTT Settings Dialog Box 17-6
- N**
 - Network settings 3-3
 - New Value or Edit Dialog Box 17-45
- O**
 - Object 15-33
 - Object and Device Binding Function 15-5
 - Object List 15-32
 - Object Settings 15-20
 - Object_List 15-56
 - Objects 16-41
 - Operation Mode Settings Dialog Box 17-37
 - Optional Cartridge Information 2-30
 - Out_Of_Service 15-55
- P**
 - Parity 4-5, 4-14
 - Payload Dialog Box 17-43
 - PING
 - error code 11-2
 - instruction 11-1
 - PLC status 13-29
 - Polarity 15-54
 - Port 1
 - Data link Communication 1-11
 - Modbus Communication 1-11
 - User Communication 1-10
 - port number 3-21
 - Present_Value 15-41
 - Present_Value Settings 15-21
 - Priority_Array 15-54
 - programming
 - data link using WindLDR 7-8

- Modbus master using WindLDR 6-5, 18-2
 - Modbus slave using WindLDR 6-13
 - RXD instruction using WindLDR 5-29
 - special data register 5-54
 - TXD instruction using WindLDR 5-26
 - user communication using WindLDR 5-25
 - Protocol ID 6-32
 - Protocol_Object_Types_Supported 15-56
 - Protocol_Services_Supported 15-56
 - Publish 17-33
 - Publishing to a Topic 17-51
- R**
- Read device data function 13-45
 - Read Property Function 15-6
 - receive 5-10
 - completion output 5-10
 - digits 5-12
 - format 5-10, 5-11
 - status 5-10, 5-21
 - timeout 5-16, 5-21, 5-25
 - Receive Timeout (ms) 4-5, 4-9, 4-14
 - Reliability 15-55
 - Relinquish_Default 15-54
 - Remote Bluetooth Device List 9-6
 - remote host list 3-21
 - repeat cycles 5-6, 5-12
 - request table 6-6
 - RS232C communication cartridge 1-4
 - RS232C DSR Control Signal Status 2-33
 - RS232C DTR Output Control Signal Option 2-35
 - RS485 communication cartridge 1-4
 - RUN mode control signal status 5-34
 - RXD 5-10
- S**
- Serial Communication Module 1-3
 - Services 15-3
 - Setting
 - List 3-1
 - Skip 5-18
 - Slave Number 4-5, 4-14
 - slave station
 - communication completion relay M8080-M8116 7-7
 - communication completion relay M8117 7-7
 - SNTP settings 3-11
 - special data register
 - e-mail 12-3
 - for RS232C line control signals 5-32
 - Special data register device addresses 2-17
 - special internal relay
 - for data link communication 7-7
 - for receive instruction cancel flag 5-22
 - Special internal relay device addresses 2-4
 - specifications
 - data link 7-1
 - Modbus RTU master communication 6-3
 - user communication mode 5-24
 - start delimiter 5-13
 - multi-byte 5-14
 - status code
 - transmit 5-8
 - Status_Flags 15-54
 - Stop Bits 4-5, 4-14
 - STOP mode control signal status 5-34
- T**
- Subscribe 17-38
 - Subscribed COV (COV) function 15-7
 - Subscribing to a Topic 17-59
 - system setup
 - data link 7-3
 - System_Status 15-56
- T**
- table ASCII character code 5-53
 - TCP/IP Interface Object 16-44
 - text encoding
 - e-mail 12-10
 - Transaction ID 6-32
 - transmit 5-2
 - bytes 5-5
 - data 5-4
 - digits 5-5
 - Trend graph 13-43
 - TXD 5-2
- U**
- Unit ID 6-32
 - Unsubscribed COV (COVU) function 15-9
 - Upload
 - user programs 4-1
 - User
 - Communication 1-10
 - cancel flag 5-44, 5-47
 - constant 5-17
 - error code 5-52
 - server 5-47
 - via Ethernet Communication 5-40
 - via Serial Communication 5-24
 - protocol 5-25
 - User account settings 9-12, 10-5
 - User communication (UDP) 5-50
 - User communication via serial communication (Bluetooth) 5-39
 - User web page tree operations 13-33
- W**
- Web Page Editor 13-46
 - web server 13-1
 - batch monitor 13-30
 - custom monitor 13-31, 13-32
 - PLC status 13-29
 - Web server settings 10-4
 - WindLDR
 - programming
 - data link 7-8
 - Modbus
 - master 6-5, 18-2
 - slave 6-13
 - RXD instruction 5-29
 - TXD instruction 5-26
 - user communication 5-25
 - Write device data function 13-45
 - Write Property Function 15-6

IDEC CORPORATION

 www.idec.com

Head Office 6-64, Nishi-Miyahara-2-Chome, Yodogawa-ku, Osaka 532-0004, Japan

USA	IDEC Corporation	Singapore	IDEC Izumi Asia Pte. Ltd.	China	IDEC (Shanghai) Corporation	Japan	IDEC Corporation
EMEA	APEM SAS	Thailand	IDEC Asia (Thailand) Co., Ltd.		IDEC Izumi (H.K.) Co., Ltd.		
		India	IDEC Controls India Private Ltd.	Taiwan	IDEC Taiwan Corporation		

Specifications and other descriptions in this manual are subject to change without notice.
Information in this manual is current as of September, 2022.
2021 IDEC Corporation, All Rights Reserved.

B-1730(16)

